

SpaceLogic Room Controllers

SE8650 Modbus Integration Guide

Roof Top Unit (RTU), Heat Pump and Indoor Air Quality (IAQ)

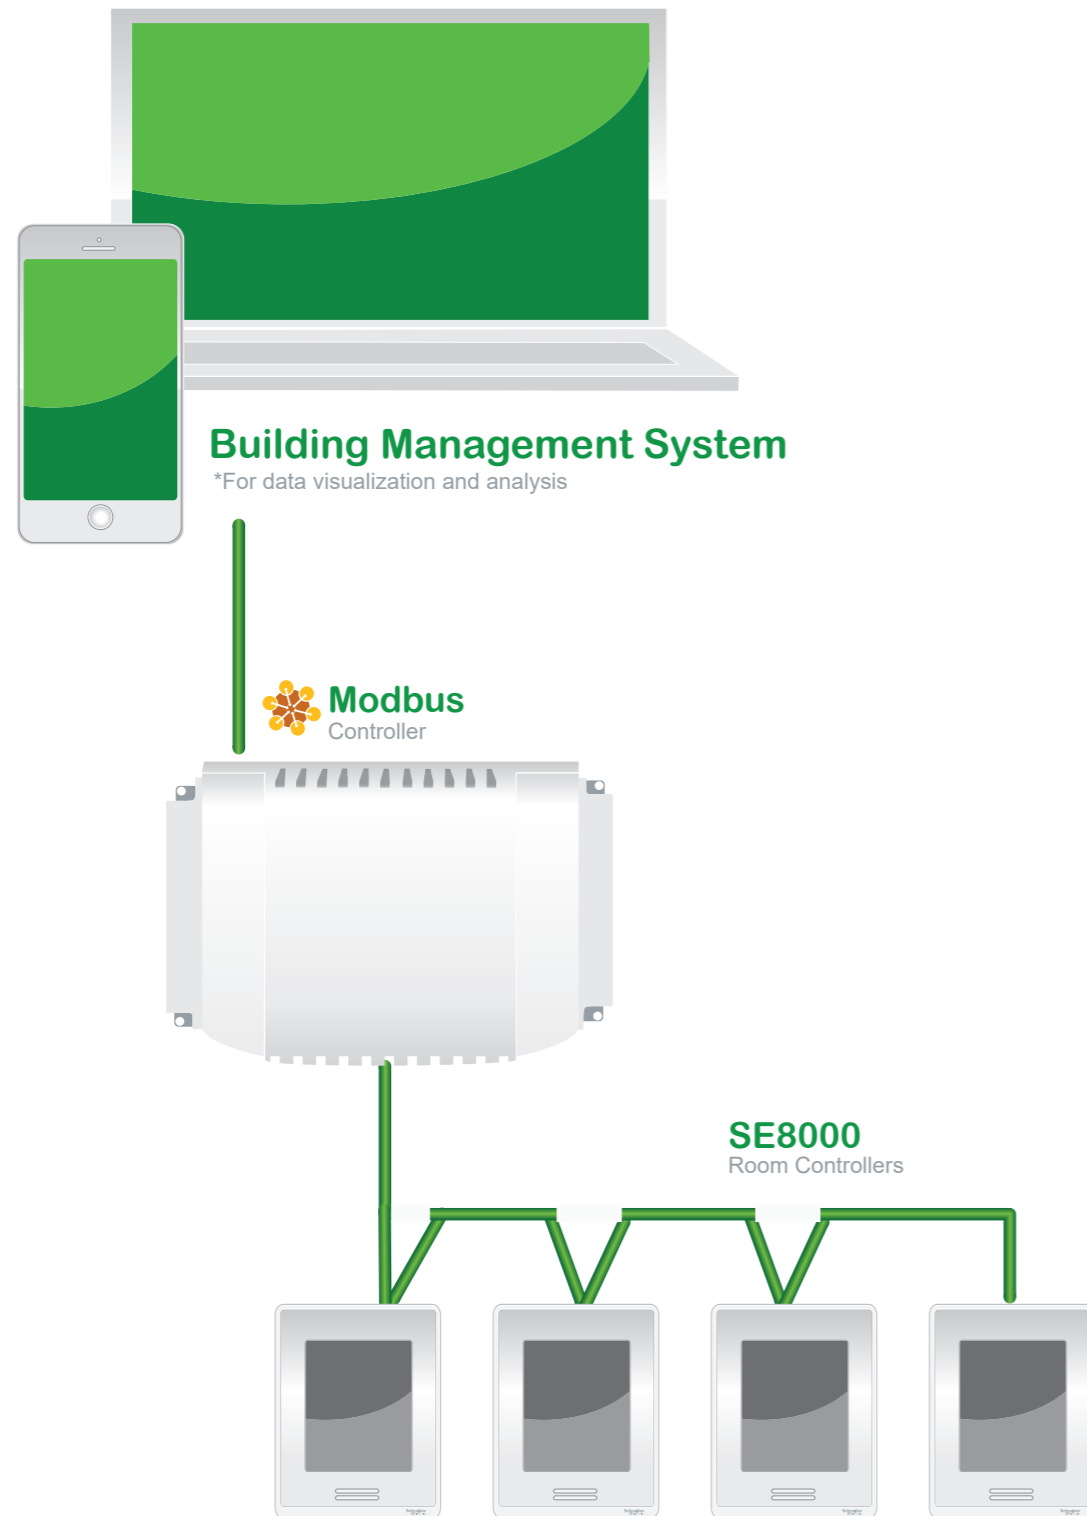


TABLE OF CONTENTS

Introduction.....	2
Modbus Specifications	2
Modbus Specific Read-Only Points.....	2
Configuration	3
Mapping	3
General Modbus Functions	4
1000+ Modbus Address Functions	5
3000+ Modbus Address Functions	6
4000+ Modbus Address Functions	15
5000+ Modbus Address Functions	26

INTRODUCTION

Modbus is an application-layer messaging protocol which is independent of the physical network layer. A Modbus serial line can be integrated into Modbus TCP networks, using simple gateways.

MODBUS SPECIFICATIONS

The SpaceLogic SE8650 Room Controller acts as a Modbus slave by using its RS485 port. As BACnet and Modbus use the same RS485 port, a setup menu allows switching between the two protocols.

MODBUS SPECIFIC READ-ONLY POINTS

The below points serve to identify the version Numbers for all SE8650 Room Controllers.

Modbus point type	Description	Modbus functions available	Modbus Register	Modbus Address
16-bit Input	Hardware Revision	4	9001	39001
16-bit Input	Software Version Major	4	9002	39002
16-bit Input	Software Version Minor	4	9003	39003
16-bit Input	Software Version Revision	4	9004	39004
16-bit Input	Software Version Build	4	9005	39005
16-bit Input	Model Number	4	9006	39006

CONFIGURATION

Modbus Network

COM address: 254

Network units: SI

Baud rate: 19200

Parity: None

Navigation icons: Back, Forward, Home, Down, Up

- Modbus ID is the same as already defined in COM address for BACnet & ZigBee
- Network units can be changed to SI or Imperial
- The baudrate can be: 4800 / 9600 / 19200 / 38400 / 57600
- The data bits are always 8
- The parity can be: none, odd or even. In case of parity odd or even, 1 stop bit is used, otherwise 2 stop bits are used

Configuration Parameters Default Value	Significance and Adjustments
Comm address Room Controller networking address Default value: 254 Range: 0 to 254	Communication Address Default value of 254 disables Modbus communication for the Room Controller.
Network units Default value: Imperial	Measurement Units Imperial: network units shown as Imperial units. SI: network units shown as International Metric units.
Baud rate Default value: Auto	Baud Rate Auto: automatically detects baud rate. Other choices: (115200, 76800, 57600, 38400, 19200, and 9600).
Parity Default value: None	Parity Parity checking of the data character frame (Even, Odd, or no parity (None)).

MAPPING

The mapping is directly based on database IDs.

The correspondence is the following:

function 1, register 1 (Modbus addr 1)	<=> DB id 0x6000 (BOs)
function 1/5, register 5001 (Modbus addr 5001)	<=> DB id 0x4000 (BVs)
function 2, register 1 (Modbus addr 10001)	<=> DB id 0x5000 (BIs)
function 4, register 1 (Modbus addr 30001)	<=> DB id 0x3000 (AHVs)
function 4, register 1001 (Modbus addr 31001)	<=> DB id 0x7000 (AIs)
function 4, register 5001 (Modbus addr 35001)	<=> DB id 0xC000 (MSIs)
function 3/6, register 1 (Modbus addr 40001)	<=> DB id 0x1000 (MVs)
function 3/6, register 4001 (Modbus addr 44001)	<=> DB id 0x2000 (AVs)
function 3, register 8001 (Modbus addr 48001)	<=> DB id 0x8000 (AOs)
function 3, register 9001 (Modbus addr 49001)	<=> DB id 0x9000 (AHOs)

A special range of addresses is used to identify the device: function 4, register 9001 (Modbus addr 39001)

GENERAL MODBUS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
UO10 Binary Output	2	2	1	0	1	0=Off, 1=On
BO1 Auxiliary Binary Output	7	7	1	0	1	0=Off, 1=On
UO11 Binary Output	8	8	1	0	1	0=Off, 1=On
UO12 Binary Output	9	9	1	0	1	0=Off, 1=On
G Fan Status	10	10	1	0	1	0=Off, 1=On
Y1 Status	11	11	1	0	1	0=Off, 1=On
Y2 Status	12	12	1	0	1	0=Off, 1=On
W1 Status	13	13	1	0	1	0=Off, 1=On
W2/OB Status	14	14	1	0	1	0=Off, 1=On

1000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
UI16 Binary Input	1	10001	2	0	1	0=Activated, 1=Not activ.
UI17 Binary Input	2	10002	2	0	1	0=Activated, 1=Not activ.
UI19 Binary Input	6	10006	2	0	1	0=Activated, 1=Not activ.
UI20 Binary Input	7	10007	2	0	1	0=Activated, 1=Not activ.
UI22 Binary Input	8	10008	2	0	1	0=Activated, 1=Not activ.
UI23 Binary Input	9	10009	2	0	1	0=Activated, 1=Not activ.
UI24 Binary Input	10	10010	2	0	1	0=Activated, 1=Not activ.

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Room Temperature	1	30001	4	-40°F(-40°C)	122°F(50°C)	Fahrenheit/Celsius
UI22 Supply Temperature	3	30003	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
Room Humidity	4	30004	4	0	100	Percent Relative Humidity
UI20 Remote Temperature	6	30006	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
CO2 Level	7	30007	4	0	5000	Parts per Million
Airflow Level	8	30008	4	0	20000	Cubic Feet per Minute
UI19 Analog Input	9	30009	4	0	10	Voltage
Outdoor Temperature	10	30010	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
UI24 Analog Input	11	30011	4	0	10	Voltage
UI24 Temperature	12	30012	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
UI16 Analog Input	13	30013	4	0	10	Voltage
UI17 Analog Input	14	30014	4	0	10	Voltage
UI20 Analog Input	15	30015	4	0	10	Voltage
UI22 Analog Input	16	30016	4	0	10	Voltage
UI23 Analog Input	17	30017	4	0	10	Voltage
UI16 Analog Temperature	18	30018	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
UI17 Analog Temperature	19	30019	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
UI19 Analog Temperature	20	30020	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
UI20 Analog Temperature	21	30021	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
UI22 Analog Temperature	22	30022	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
UI23 Analog Temperature	23	30023	4	-40°F(-40°C)	180°F(82°C)	Fahrenheit/Celsius
Light Sensor Level	1002	31002	4	0	30000	
Relative Humidity Raw Value	1004	31004	4	0	1000	Percent Relative Humidity

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
UI20 Raw Value	1005	31005	4	0	4095	
UI19 Raw Value	1006	31006	4	0	4095	
UI23 Raw Value	1007	31007	4	0	4095	
UI22 Raw Value	1008	31008	4	0	4095	
UI24 Raw Value	1009	31009	4	0	4095	
Wireless Device 1 - Temperature	1026	31026	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 2 - Temperature	1027	31027	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 3 - Temperature	1028	31028	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 4 - Temperature	1029	31029	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 5 - Temperature	1030	31030	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 6 - Temperature	1031	31031	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 7 - Temperature	1032	31032	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 8 - Temperature	1033	31033	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 9 - Temperature	1034	31034	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 10 - Temperature	1035	31035	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Effective Setpoint	1040	31040	4	40°F(4°C)	100°F(38°C)	Fahrenheit/Celsius
Paired ZigBee Devices	1041	31041	4	0	20	
RH Temperature Raw Value	1042	31042	4	-400	1220	
UI16 Raw Value	1043	31043	4	0	4095	
UI17 Raw Value	1044	31044	4	0	4095	
Therm. Raw Value	1045	31045	4	-400	1220	
SH Therm. Raw Value	1046	31046	4	-400	1220	
Wi-Fi Network Signal Strength	1058	31058	4	0	100	Percent

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Wi-Fi Module Boot Count	1059	31059	4	0	32767	
Wireless Device 11 - Temperature	1061	31061	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 12 - Temperature	1062	31062	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 13 - Temperature	1063	31063	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 14 - Temperature	1064	31064	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 15 - Temperature	1065	31065	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 16 - Temperature	1066	31066	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 17 - Temperature	1067	31067	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 18 - Temperature	1068	31068	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 19 - Temperature	1069	31069	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 20 - Temperature	1070	31070	4	-40°F(-40°C)	185°F(85°C)	Fahrenheit/Celsius
Wireless Device 1 - Humidity	1071	31071	4	0	100	Percent Relative Humidity
Wireless Device 2 - Humidity	1072	31072	4	0	100	Percent Relative Humidity
Wireless Device 3 - Humidity	1073	31073	4	0	100	Percent Relative Humidity
Wireless Device 4 - Humidity	1074	31074	4	0	100	Percent Relative Humidity
Wireless Device 5 - Humidity	1075	31075	4	0	100	Percent Relative Humidity
Wireless Device 6 - Humidity	1076	31076	4	0	100	Percent Relative Humidity
Wireless Device 7 - Humidity	1077	31077	4	0	100	Percent Relative Humidity
Wireless Device 8 - Humidity	1078	31078	4	0	100	Percent Relative Humidity
Wireless Device 9 - Humidity	1079	31079	4	0	100	Percent Relative Humidity
Wireless Device 10 - Humidity	1080	31080	4	0	100	Percent Relative Humidity
Wireless Device 11 - Humidity	1081	31081	4	0	100	Percent Relative Humidity
Wireless Device 12 - Humidity	1082	31082	4	0	100	Percent Relative Humidity

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Wireless Device 13 - Humidity	1083	31083	4	0	100	Percent Relative Humidity
Wireless Device 14 - Humidity	1084	31084	4	0	100	Percent Relative Humidity
Wireless Device 15 - Humidity	1085	31085	4	0	100	Percent Relative Humidity
Wireless Device 16 - Humidity	1086	31086	4	0	100	Percent Relative Humidity
Wireless Device 17 - Humidity	1087	31087	4	0	100	Percent Relative Humidity
Wireless Device 18 - Humidity	1088	31088	4	0	100	Percent Relative Humidity
Wireless Device 19 - Humidity	1089	31089	4	0	100	Percent Relative Humidity
Wireless Device 20 - Humidity	1090	31090	4	0	100	Percent Relative Humidity
Wireless Device 1 - CO2	1091	31091	4	0	5000	Parts per Million
Wireless Device 2 - CO2	1092	31092	4	0	5000	Parts per Million
Wireless Device 3 - CO2	1093	31093	4	0	5000	Parts per Million
Wireless Device 4 - CO2	1094	31094	4	0	5000	Parts per Million
Wireless Device 5 - CO2	1095	31095	4	0	5000	Parts per Million
Wireless Device 6 - CO2	1096	31096	4	0	5000	Parts per Million
Wireless Device 7 - CO2	1097	31097	4	0	5000	Parts per Million
Wireless Device 8 - CO2	1098	31098	4	0	5000	Parts per Million
Wireless Device 9 - CO2	1099	31099	4	0	5000	Parts per Million
Wireless Device 10 - CO2	1100	31100	4	0	5000	Parts per Million
Wireless Device 11 - CO2	1101	31101	4	0	5000	Parts per Million
Wireless Device 12 - CO2	1102	31102	4	0	5000	Parts per Million
Wireless Device 13 - CO2	1103	31103	4	0	5000	Parts per Million
Wireless Device 14 - CO2	1104	31104	4	0	5000	Parts per Million
Wireless Device 15 - CO2	1105	31105	4	0	5000	Parts per Million

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Wireless Device 16 - CO2	1106	31106	4	0	5000	Parts per Million
Wireless Device 17 - CO2	1107	31107	4	0	5000	Parts per Million
Wireless Device 18 - CO2	1108	31108	4	0	5000	Parts per Million
Wireless Device 19 - CO2	1109	31109	4	0	5000	Parts per Million
Wireless Device 20 - CO2	1110	31110	4	0	5000	Parts per Million
Effective Occupancy	5001	35001	4	0	3	0=Occupied, 1=Unoccupied, 2=Override, 3=Standby
ZigBee Network Status	5003	35003	4	0	4	0=Not det., 1=Pwr on, 2=No NWK, 3=Joined, 4=Online
Weekday	5005	35005	4	0	6	0=Monday, 1=Tuesday, 2=Wed., 3=Thursday, 4=Friday, 5=Saturday, 6=Sunday
Program Status	5006	35006	4	0	5	0=Idle, 1=Loading, 2=Running, 3=Waiting, 4=Halted, 5=Unloading
Program Error	5007	35007	4	0	5	0=No error, 1=Yield, 2=Runtime, 3=Syntax, 4=Memory, 5=Double err
Wireless Device 1 - Status	5008	35008	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 2 - Status	5009	35009	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 3 - Status	5010	35010	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 4 - Status	5011	35011	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 5 - Status	5012	35012	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 6 - Status	5013	35013	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 7 - Status	5014	35014	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 8 - Status	5015	35015	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 9 - Status	5016	35016	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 10 - Status	5017	35017	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 1 - Battery	5018	35018	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 2 - Battery	5019	35019	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 3 - Battery	5020	35020	4	0	2	0=None, 1=Normal, 2=Low

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Wireless Device 4 - Battery	5021	35021	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 5 - Battery	5022	35022	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 6 - Battery	5023	35023	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 7 - Battery	5024	35024	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 8 - Battery	5025	35025	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 9 - Battery	5026	35026	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 10 - Battery	5027	35027	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 1 - Communication Status	5028	35028	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 2 - Communication Status	5029	35029	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 3 - Communication Status	5030	35030	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 4 - Communication Status	5031	35031	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 5 - Communication Status	5032	35032	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 6 - Communication Status	5033	35033	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 7 - Communication Status	5034	35034	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 8 - Communication Status	5035	35035	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 9 - Communication Status	5036	35036	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 10 - Communication Status	5037	35037	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
CO2 Effective Source	5044	35044	4	0	23	0=None, 1=Internal, 2=Error, 3=Wired, 4=WL 1, 5=WL 2, 6=WL 3, 7=WL 4, 8=WL 5, 9=WL 6, 10=WL 7, 11=WL 8, 12=WL 9, 13=WL 10, 14=WL 11, 15=WL 12, 16=WL 13, 17=WL 14, 18=WL 15, 19=WL 16, 20=WL 17, 21=WL 18, 22=WL 19, 23=WL 20
Effective temperature sensor	5048	35048	4	0	22	0=Wired, 1=Internal, 2=WL IO, 3=WL 1, 4=WL 2, 5=WL 3, 6=WL 4, 7=WL 5, 8=WL 6, 9=WL 7, 10=WL 8, 11=WL 9, 12=WL 10, 13=WL 11, 14=WL 12, 15=WL 13, 16=WL 14, 17=WL 15, 18=WL 16, 19=WL 17, 20=WL 18, 21=WL 19, 22=WL 20
Effective relative humidity sensor	5049	35049	4	0	21	0=None, 1=Internal, 2=WL 1, 3=WL 2, 4=WL 3, 5=WL 4, 6=WL 5, 7=WL 6, 8=WL 7, 9=WL 8, 10=WL 9, 11=WL 10, 12=WL 11, 13=WL 12, 14=WL 13, 15=WL 14, 16=WL 15, 17=WL 16, 18=WL 17, 19=WL 18, 20=WL 19, 21=WL 20
Effective System Mode	5050	35050	4	0	2	0=Cool, 1=Heat
Wi-Fi Module Status	5051	35051	4	0	6	0=Offline, 1=Initializing, 2=Ready, 3=Booting, 4=Resetting, 5=Fail, 6=Testing
Wi-Fi Status	5052	35052	4	0	6	0=Idle, 1=Associate, 2=Config., 3=Ready, 4=Online, 5=Disconn., 6=Failure

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
BACnet IP Status	5053	35053	4	0	2	0=Disabled, 1=Enabled
SMTP Server Status	5054	35054	4	0	3	0=Unkown, 1=Disabled, 2=Offline, 3=Online
Facility Expert Enabled	5055	35055	4	0	2	0=Disabled, 1=Enabled
Facility Expert Status	5056	35056	4	0	5	0=Disabled, 1=Offline, 2=Connect., 3=Online, 4=Failure, 5=Unknown
Wireless Device 11 - Status	5057	35057	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 12 - Status	5058	35058	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 13 - Status	5059	35059	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 14 - Status	5060	35060	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 15 - Status	5061	35061	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 16 - Status	5062	35062	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 17 - Status	5063	35063	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 18 - Status	5064	35064	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 19 - Status	5065	35065	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 20 - Status	5066	35066	4	0	6	0=None, 1=Closed, 2=Opened, 3=No motion, 4=Motion, 5=Normal, 6=Leak
Wireless Device 11 - Battery	5067	35067	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 12 - Battery	5068	35068	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 13 - Battery	5069	35069	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 14 - Battery	5070	35070	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 15 - Battery	5071	35071	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 16 - Battery	5072	35072	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 17 - Battery	5073	35073	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 18 - Battery	5074	35074	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 19 - Battery	5075	35075	4	0	2	0=None, 1=Normal, 2=Low

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Wireless Device 20 - Battery	5076	35076	4	0	2	0=None, 1=Normal, 2=Low
Wireless Device 11 - Communication Status	5077	35077	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 12 - Communication Status	5078	35078	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 13 - Communication Status	5079	35079	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 14 - Communication Status	5080	35080	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 15 - Communication Status	5081	35081	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 16 - Communication Status	5082	35082	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 17 - Communication Status	5083	35083	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 18 - Communication Status	5084	35084	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 19 - Communication Status	5085	35085	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 20 - Communication Status	5086	35086	4	0	3	0=Not paired, 1=Online, 2=Invalid, 3=Offline
Wireless Device 1 - Sensor Type	5087	35087	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 2 - Sensor Type	5088	35088	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 3 - Sensor Type	5089	35089	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 4 - Sensor Type	5090	35090	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 5 - Sensor Type	5091	35091	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 6 - Sensor Type	5092	35092	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 7 - Sensor Type	5093	35093	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 8 - Sensor Type	5094	35094	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 9 - Sensor Type	5095	35095	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 10 - Sensor Type	5096	35096	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 11 - Sensor Type	5097	35097	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 12 - Sensor Type	5098	35098	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2

3000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Wireless Device 13 - Sensor Type	5099	35099	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 14 - Sensor Type	5100	35100	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 15 - Sensor Type	5101	35101	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 16 - Sensor Type	5102	35102	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 17 - Sensor Type	5103	35103	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 18 - Sensor Type	5104	35104	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 19 - Sensor Type	5105	35105	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Wireless Device 20 - Sensor Type	5106	35106	4	0	7	0=None, 1=Unknown, 2=Motion, 3=Contact, 4=Water, 5=Temp., 6=Temp./RH, 7=CO2
Time source	5107	35107	4	0	4	0=None, 1=Local, 2=BACnet, 3=NTP, 4=Cloud

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Temperature Scale	1	40001	3,6	0	1	0=°C, 1=°F
Display Language	2	40002	3,6	0	22	0=English, 1=French, 2=Spanish, 3=Chinese, 4=Russian, 5=Arabic, 6=Bulgarian, 7=Czech, 8=Danish, 9=Dutch, 10=Finnish, 11=German, 12=Hungarian, 13=Indones, 14=Italian, 15=Norwegian, 16=polish, 17=Portug., 18=Slovak, 19=Swedish, 20=Turkish, 21 = Japanese, 22 = Hebrew
System Mode	4	40004	3,6	0	3	0=Off, 1=Auto, 2=Cool, 3=Heat
Room Humidity Display	10	40010	3,6	0	1	0=Disabled, 1=Enabled
Dehumidification Lockout	12	40012	3,6	0	1	0=Disabled, 1=Enabled
Setpoint Function	17	40017	3,6	0	1	0=Dual SP, 1=Attach SP
Occupancy Command	22	40022	3,6	0	2	0=Loc. occ., 1=Occupied, 2=Unocc.
Network Units	23	40023	3,6	0	1	0=SI, 1=Imperial
Time Format	27	40027	3,6	0	1	0=AM-PM, 1=24-Hours
Standby Mode Configuration	28	40028	3,6	0	1	0=Absolute, 1=Offset
HMI Color	29	40029	3,6	0	9	0=White, 1=Green, 2=Blue, 3=Grey, 4=Dark grey, 5=Pink, 6=Purple, 7=Red, 8=Orange 9=Black
Main Display	30	40030	3,6	0	1	0=Temp., 1=Setpoint
Long Message Background Colour	31	40031	3,6	0	10	0=White, 1=Green, 2=Blue, 3=Grey, 4=Dark grey, 5=Pink, 6=Purple, 7=Red, 8=Orange 9=Black, 10= Default
Use Standby Screen	32	40032	3,6	0	3	0=No, 1=Yes, 2=Occ. only, 3=Screen sav
UO9 Configuration	41	40041	3,6	0	3	0=Analog, 1=Binary, 2=Relay RC, 3=Relay RH
UO10 Configuration	42	40042	3,6	0	2	0=Analog, 1=Binary, 2=Relay RC
UO11 Configuration	43	40043	3,6	0	1	0=Analog, 1=Binary
UO12 Configuration	44	40044	3,6	0	1	0=Analog, 1=Binary
Frost Protection	45	40045	3,6	0	1	0=Off, 1=On
Fan Control in Heating Mode	46	40046	3,6	0	1	0=Off, 1=On
Fan Mode	47	40047	3,6	0	2	0=On, 1=Auto, 2=Smart
UI16 Configuration	48	40048	3,6	0	5	0=None, 1=Rem NSB, 2=Motion NO, 3=Motion NC, 4=Window, 5=Fan lock
BO1 Auxiliary Output Configuration	49	40049	3,6	0	1	0=NO, 1=NC

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Mechanical Cooling Allowed	50	40050	3,6	0	1	0=Off., 1=On
Enable Smart Recovery	51	40051	3,6	0	1	0=Off, 1=On
UI19 Configuration	52	40052	3,6	0	1	0=None, 1=CO2
Economizer Configuration	53	40053	3,6	0	1	0=Off., 1=On
Schedule Menu	54	40054	3,6	0	3	0=Disabled, 1=Enabled, 2=Dis.no.clk, 3=En.no.clk
French	56	40056	3,6	0	1	0=Disabled, 1=Enabled
Spanish	57	40057	3,6	0	1	0=Disabled, 1=Enabled
Chinese	58	40058	3,6	0	1	0=Disabled, 1=Enabled
Russian	59	40059	3,6	0	1	0=Disabled, 1=Enabled
Month	60	40060	3,6	0	11	0=Jan., 1=Feb., 2=Mar., 3=Apr., 4=May, 5=June, 6=July, 7=Aug., 8=Sept., 9=Oct., 10=Nov., 11=Dec.
Fan Delay	61	40061	3,6	0	1	0=Off., 1=On
UI17 Configuration	63	40063	3,6	0	4	0=None, 1=Door dry, 2=Override, 3=Filter, 4=Service
Wireless Device 1 - Function	66	40066	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 2 - Function	67	40067	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 3 - Function	68	40068	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 4 - Function	69	40069	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 5 - Function	70	40070	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 6 - Function	71	40071	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 7 - Function	72	40072	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 8 - Function	73	40073	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 9 - Function	74	40074	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 10 - Function	75	40075	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Occupancy Source	77	40077	3,6	0	3	0=Motion, 1=Schedule, 2=Mot. occ., 3=Mot. unoc.

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Mode Button	78	40078	3,6	0	1	0=Normal, 1=Off-Auto
Control Status	79	40079	3	0	2	0=Off, 1=Cool, 2=Heat
Custom button icon	81	40081	3,6	0	16	0=Default Button, 1=No Button, 2=System Mode Heat/Cool, 3=System Mode On/Off, 4=Fan Mode, 5=Override Button, 6=Units Button, 7=Help Button, 8=Language Button, 9=Schedule Button, 10=Lighting Button, 11=Blind Button, 12=Lamp Button, 13=Energy Button, 14=make Room Button, 15=Setting Button, 16=Timer Button
Custom button behavior	82	40082	3,6	0	11	0=Default function, 1=No function, 2=System mode function, 3=Fan function, 4=Override function, 5=Schedule function, 6=Units function, 7=Help function, 8=Language function, 9=Configuration function, 10=Custom function, 11=Standby function
Arabic	83	40083	3,6	0	1	0=Disabled, 1=Enabled
Czech	85	40085	3,6	0	1	0=Disabled, 1=Enabled
Danish	86	40086	3,6	0	1	0=Disabled, 1=Enabled
Dutch	87	40087	3,6	0	1	0=Disabled, 1=Enabled
Finnish	88	40088	3,6	0	1	0=Disabled, 1=Enabled
German	89	40089	3,6	0	1	0=Disabled, 1=Enabled
Hungarian	90	40090	3,6	0	1	0=Disabled, 1=Enabled
Indonesian	91	40091	3,6	0	1	0=Disabled, 1=Enabled
Italian	92	40092	3,6	0	1	0=Disabled, 1=Enabled
Norwegian	93	40093	3,6	0	1	0=Disabled, 1=Enabled
Polish	94	40094	3,6	0	1	0=Disabled, 1=Enabled
Portuguese	95	40095	3,6	0	1	0=Disabled, 1=Enabled
Slovak	96	40096	3,6	0	1	0=Disabled, 1=Enabled
Swedish	97	40097	3,6	0	1	0=Disabled, 1=Enabled
Turkish	98	40098	3,6	0	1	0=Disabled, 1=Enabled
Comfort or economy mode	99	40099	3,6	0	1	0=Comfort, 1=Economy
Reversing valve operation	100	40100	3,6	0	1	0=O, 1=B
Compressor - auxiliary interlock	101	40101	3,6	0	1	0=Off, 1=On
Application	102	40102	3,6	0	1	0=Rooftop, 1=Heatpump

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Modbus Baud Rate	105	40105	3,6	0	4	0=4800, 1=9600, 2=19200, 3=38400, 4=57600
Modbus Parity Bit	106	40106	3,6	0	2	0=None, 1=Odd, 2=Even
Schedule Type	107	40107	3,6	0	2	0=7 days, 1= 5+2 days, 2=5+1+1 days
UI16 Input Type	109	40109	3,6	0	2	0=Therm., 1=Binary, 2=Voltage
UI17 Input Type	110	40110	3,6	0	2	0=Therm., 1=Binary, 2=Voltage
UI19 Input Type	111	40111	3,6	0	2	0=Therm., 1=Binary, 2=Voltage
UI20 Input Type	112	40112	3,6	0	2	0=Therm., 1=Binary, 2=Voltage
UI22 Input Type	113	40113	3,6	0	2	0=Therm., 1=Binary, 2=Voltage
UI23 Input Type	114	40114	3,6	0	2	0=Therm., 1=Binary, 2=Voltage
UI24 Input Type	115	40115	3,6	0	2	0=Therm., 1=Binary, 2=Voltage
Room Temperature Sensor	116	40116	3,6	0	22	0=Wired, 1=Internal, 2=WL IO, 3=WL 1, 4=WL 2, 5=WL 3, 6=WL 4, 7=WL 5, 8=WL 6, 9=WL 7, 10=WL 8, 11=WL 9, 12=WL 10, 13=WL 11, 14=WL 12, 15=WL 13, 16=WL 14, 17=WL 15, 18=WL 16, 19=WL 17, 20=WL 18, 21=WL 19, 22=WL 20
CO2 Display	118	40118	3,6	0	1	0=Disabled, 1=Enabled
CO2 Auto calibration	119	40119	3,6	0	1	0=Disabled, 1=Enabled
Lock Screen	120	40120	3,6	0	1	0=No, 1=Yes
Relative humidity sensor	121	40121	3,6	0	21	0=None, 1=Internal, 2=WL 1, 3=WL 2, 4=WL 3, 5=WL 4, 6=WL 5, 7=WL 6, 8=WL 7, 9=WL 8, 10=WL 9, 11=WL 10, 12=WL 11, 13=WL 12, 14=WL 13, 15=WL 14, 16=WL 15, 17=WL 16, 18=WL 17, 19=WL 18, 20=WL 19, 21=WL 20
Temperature Alarm Enabled	123	40123	3,6	0	1	0=Off, 1=On
ADR Permission	124	40124	3,6	0	1	0=Off, 1=On
Japanese	129	40129	3,6	0	1	0= Disabled 1=Enabled
Hebrew	130	40130	3,6	0	1	0= Disabled 1=Enabled
Wireless Device 11 - Function	138	40138	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 12 - Function	139	40139	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 13 - Function	140	40140	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 14 - Function	141	40141	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Wireless Device 15 - Function	142	40142	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 16 - Function	143	40143	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 17 - Function	144	40144	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 18 - Function	145	40145	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 19 - Function	146	401346	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
Wireless Device 20 - Function	147	40147	3,6	0	8	0=None, 1=Window, 2=Door, 3=Motion, 4=Env. data, 5=Remove, 6=Water, 7=Refrig., 8=Freezer
CO2 source	148	40148	3,6	0	21	0=None, 1=Local, 2=WL 1, 3=WL 2, 4=WL 3, 5=WL 4, 6=WL 5, 7=WL 6, 8=WL 7, 9=WL 8, 10=WL 9, 11=WL 10, 12=WL 11, 13=WL 12, 14=WL 13, 15=WL 14, 16=WL 15, 17=WL 16, 18=WL 17, 19=WL 18, 20=WL 19, 21=WL 20
Display the Fan Status icon	150	40150	3-6	0	1	0=Disabled, 1=Enabled
Display the System Status icon	151	40151	3-6	0	1	0=Disabled, 1=Enabled
Display the Help button	152	40152	3-6	0	1	0=Disabled, 1=Enabled
Occupied Cool Setpoint	4001	44001	3,6	54°F(12°C)	100°F(38°C)	Fahrenheit/Celsius
Occupied Heat Setpoint	4002	44002	3,6	40°F(4°C)	90°F(32°C)	Fahrenheit/Celsius
Unoccupied Cool Setpoint	4003	44003	3,6	54°F(12°C)	100°F(38°C)	Fahrenheit/Celsius
Unoccupied Heat Setpoint	4004	44004	3,6	40°F(4°C)	90°F(32°C)	Fahrenheit/Celsius
Heating Setpoint Limit	4005	44005	3,6	40°F(4°C)	90°F(32°C)	Fahrenheit/Celsius
Cooling Setpoint Limit	4006	44006	3,6	54°F(12°C)	100°F(38°C)	Fahrenheit/Celsius
Calibrate Room Temperature Sensor	4007	44007	3,6	-5°F(-2.5°C)	5°F(2.5°C)	Fahrenheit/Celsius
Standby Cool Setpoint	4009	44009	3,6	54°F(12°C)	100°F(38°C)	Fahrenheit/Celsius
Standby Heat Setpoint	4010	44010	3,6	40°F(4°C)	90°F(32°C)	Fahrenheit/Celsius
Dehumidification Setpoint	4012	44012	3,6	30	95	Percent Relative Humidity
Calibrate Humidity Sensor	4013	44013	3,6	-15	15	Percent Relative Humidity
Dehumidification Hysteresis	4015	44015	3,6	2	20	Percent Relative Humidity
Main Password	4017	44017	3,6	0	9999	

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
COM Address	4018	44018	3,6	0	254	
Model Number	4019	44019	3	160	164	
Minimum Deadband	4020	44020	3,6	2°F(1°C)	5°F(2.5°C)	Fahrenheit/Celsius
Heating CPH	4021	44021	3,6	3	8	
Cooling CPH	4022	44022	3,6	3	4	
Unoccupied Time	4026	44026	3,6	0	24	Hours
Temporary Occupancy Time	4027	44027	3,6	0	24	Hours
Standby Time	4028	44028	3,6	5	24	Hours
Proportional Band	4029	44029	3,6	3	10	
Cooling Demand Limit	4030	44030	3,6	0	100	Percent
Heating Demand Limit	4031	44031	3,6	0	100	Percent
Low Backlight	4033	44033	3,6	0	100	Percent
Night Backlight	4034	44034	3,6	0	100	Percent
Standby Temperature Differential	4038	44038	3,6	1°F(0.5°C)	5°F(2.5°C)	Fahrenheit/Celsius
User Password	4039	44039	3,6	0	9999	
User HMI	4042	44042	3,6	0	12	
Default Heating Setpoint	4043	44043	3,6	65°F(18°C)	80°F(27°C)	Fahrenheit/Celsius
Anti Short Cycle Time	4047	44047	3,6	0	5	Minutes
Number of Heating Stages	4048	44048	3,6	0	2	
Number of Cooling Stages	4049	44049	3,6	1	2	
Power-up Delay	4050	44050	3,6	10	120	Seconds
Calibrate Outside Temperature Sensor	4051	44051	3,6	-5°F(-2.5°C)	5°F(2.5°C)	Fahrenheit/Celsius
Heating Lockout from Outside Air Temperature	4052	44052	3,6	-15°F(-26°C)	120°F(49°C)	Fahrenheit/Celsius

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Cooling Lockout	4053	44053	3,6	-40°F(-40°C)	95°F(35°C)	Fahrenheit/Celsius
Supply Air Setpoint	4054	44054	3,6	50°F(10°C)	90°F(32°C)	Fahrenheit/Celsius
Changeover Setpoint	4055	44055	3,6	14°F(-10°C)	70°F(21°C)	Fahrenheit/Celsius
Economizer Minimum Position	4056	44056	3,6	0	100	Percent
Economizer Maximum Position	4057	44057	3,6	0	100	Percent
Occupied 1	4059	44059	3,6	0	1440	
Unoccupied 1	4060	44060	3,6	0	1440	
Occupied 2	4061	44061	3,6	0	1440	
Unoccupied 2	4062	44062	3,6	0	1440	
Occupied 3	4063	44063	3,6	0	1440	
Unoccupied 3	4064	44064	3,6	0	1440	
Occupied 1	4065	44065	3,6	0	1440	
Unoccupied 1	4066	44066	3,6	0	1440	
Occupied 2	4067	44067	3,6	0	1440	
Unoccupied 2	4068	44068	3,6	0	1440	
Occupied 3	4069	44069	3,6	0	1440	
Unoccupied 3	4070	44070	3,6	0	1440	
Occupied 1	4071	44071	3,6	0	1440	
Unoccupied 1	4072	44072	3,6	0	1440	
Occupied 2	4073	44073	3,6	0	1440	
Unoccupied 2	4074	44074	3,6	0	1440	
Occupied 3	4075	44075	3,6	0	1440	
Unoccupied 3	4076	44076	3,6	0	1440	

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Occupied 1	4077	44077	3,6	0	1440	
Unoccupied 1	4078	44078	3,6	0	1440	
Occupied 2	4079	44079	3,6	0	1440	
Unoccupied 2	4080	44080	3,6	0	1440	
Occupied 3	4081	44081	3,6	0	1440	
Unoccupied 3	4082	44082	3,6	0	1440	
Occupied 1	4083	44083	3,6	0	1440	
Unoccupied 1	4084	44084	3,6	0	1440	
Occupied 2	4085	44085	3,6	0	1440	
Unoccupied 2	4086	44086	3,6	0	1440	
Occupied 3	4087	44087	3,6	0	1440	
Unoccupied 3	4088	44088	3,6	0	1440	
Occupied 1	4089	44089	3,6	0	1440	
Unoccupied 1	4090	44090	3,6	0	1440	
Occupied 2	4091	44091	3,6	0	1440	
Unoccupied 2	4092	44092	3,6	0	1440	
Occupied 3	4093	44093	3,6	0	1440	
Unoccupied 3	4094	44094	3,6	0	1440	
Occupied 1	4095	44095	3,6	0	1440	
Unoccupied 1	4096	44096	3,6	0	1440	
Occupied 2	4097	44097	3,6	0	1440	
Unoccupied 2	4098	44098	3,6	0	1440	
Occupied 3	4099	44099	3,6	0	1440	

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Unoccupied 3	4100	44100	3,6	0	1440	
Fresh Air Range Upper Limit	4101	44101	3,6	0	20000	Cubic Feet per Minute
Minimum Supply Heat	4102	44102	3,6	50°F(10°C)	72°F(22°C)	Fahrenheit/Celsius
Supply Heat Lockout	4103	44103	3,6	-15°F(-26°C)	120°F(49°C)	Fahrenheit/Celsius
Discharge High Limit	4104	44104	3,6	70°F(21°C)	150°F(65°C)	Fahrenheit/Celsius
Discharge Low Limit	4105	44105	3,6	35°F(2°C)	65°F(18°C)	Fahrenheit/Celsius
Minimum Fresh Air	4106	44106	3,6	0	20000	Cubic Feet per Minute
Maximum Fresh Air	4107	44107	3,6	0	20000	Cubic Feet per Minute
Minimum CO2	4108	44108	3,6	0	5000	Parts per Million
Maximum CO2	4109	44109	3,6	0	5000	Parts per Million
Time	4110	44110	3,6	0	1439	
Year	4111	44111	3,6	2000	2100	
Day	4112	44112	3,6	1	31	
Lua Parameter A (AV25)	4117	44117	3,6	-32768	32767	
Lua Parameter B (AV26)	4118	44118	3,6	-32768	32767	
Lua Parameter C (AV27)	4119	44119	3,6	-32768	32767	
Lua Parameter D (AV28)	4120	44120	3,6	-32768	32767	
Lua Parameter E (AV29)	4121	44121	3,6	-32768	32767	
Lua Parameter F (AV30)	4122	44122	3,6	-32768	32767	
Hardware Revision	4123	44123	3	20	21	
Keyboard Value	4126	44126	3,6	0	35	
High balance point	4132	44132	3,6	34°F(1°C)	90°F(32°C)	Fahrenheit/Celsius
Low balance point	4133	44133	3,6	-40°F(-40°C)	30°F(-1°C)	Fahrenheit/Celsius

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
UI19 Lua	4134	44134	3,6	-32768	32767	
UI20 Lua	4135	44135	3,6	-32768	32767	
UI22 Lua	4136	44136	3,6	-32768	32767	
UI23 Lua	4137	44137	3,6	-32768	32767	
UI24 Lua	4138	44138	3,6	-32768	32767	
Ambient Low Temperature Threshold	4143	44143	3,6	32°F(0°C)	50°F(10°C)	Fahrenheit/Celsius
Temperature Alarm Hysteresis	4144	44144	3,6	0°F(0°C)	10°F(5.5°C)	Fahrenheit/Celsius
Load Shedding Offset	4145	44145	3,6	4°F(2°C)	10°F(5.5°C)	Fahrenheit/Celsius
Lua Parameter G (AV225)	4146	44146	3,6	-32768	32767	
Lua Parameter H (AV226)	4147	44147	3,6	-32768	32767	
Lua Parameter I (AV227)	4148	44148	3,6	-32768	32767	
Lua Parameter J (AV228)	4149	44149	3,6	-32768	32767	
Lua Parameter K (AV229)	4150	44150	3,6	-32768	32767	
Lua Parameter L (AV230)	4151	44151	3,6	-32768	32767	
Standby Screen Delay	4174	44174	3,6	5	300	Seconds
Ambient High Temperature Threshold	4175	44175	3,6	32°F(0°C)	122°F(50°C)	Fahrenheit/Celsius
Refrigeration High Temperature Threshold	4176	44176	3,6	32°F(0°C)	60°F(15.5°C)	Fahrenheit/Celsius
Refrigeration Low Temperature Threshold	4177	44177	3,6	32°F(0°C)	50°F(10°C)	Fahrenheit/Celsius
Freezer High Temperature Threshold	4178	44178	3,6	-40°F(-40°C)	32°F(0°C)	Fahrenheit/Celsius
PI Heating Demand	8001	48001	3	0	100	Percent
PI Cooling Demand	8002	48002	3	0	100	Percent
Economizer Demand	8004	48004	3	0	100	Percent
Analog Output Heat Demand	8005	48005	3	0	100	Percent

4000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
UO11 Analog Output	9001	49001	3	0	10	Voltage
UO12 Analog Output	9002	49002	3	0	10	Voltage
UO9 Analog Output	9003	49003	3	0	10	Voltage
UO10 Analog Output	9004	49004	3	0	10	Voltage

5000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Filter Alarm	5001	5001	1	0	1	0=Off, 1=On
Service Alarm	5002	5002	1	0	1	0=Off, 1=On
Window Alarm	5003	5003	1	0	1	0=Off, 1=On
PIR Local Motion	5004	5004	1	0	1	0=No motion, 1=Motion
Dehumidification Status	5005	5005	1	0	1	0=Off, 1=On
Low Battery Alarm	5006	5006	1	0	1	0=Off, 1=On
Window Contact Installed	5007	5007	1	0	1	0=No, 1=Yes
Window Contact Status	5008	5008	1	0	1	0=Closed, 1=Open
Door Contact Installed	5009	5009	1	0	1	0=No, 1=Yes
Door Contact Status	5010	5010	1	0	1	0=Closed, 1=Open
Display Long Screen Message	5011	5011	1,5	0	1	0=Off, 1=On
Force High Backlight	5012	5012	1,5	0	1	0=Off, 1=On
Fan Lock Alarm	5013	5013	1	0	1	0=Off, 1=On
Smart Recovery Status	5014	5014	1	0	1	0=Off, 1=On
Exception Status	5015	5015	1	0	1	0=Off, 1=On
CO2 Alarm	5016	5016	1	0	1	0=Off, 1=On
Low Fresh Air Alarm	5017	5017	1	0	1	0=Off, 1=On
Frost Protection Alarm	5018	5018	1	0	1	0=Off, 1=On
ZigBee PIR Sensor Installed	5019	5019	1	0	1	0=Off, 1=On
ZigBee Sensor Motion	5020	5020	1	0	1	0=No motion, 1=Motion
Clock Alarm	5021	5021	1	0	1	0=Off, 1=On
Water Leak	5024	5024	1	0	1	0=Off, 1=On
Water Leak Sensor Installed	5025	5025	1,	0	1	0=No, 1=Yes

5000+ MODBUS ADDRESS FUNCTIONS

Object Name	Modbus Register	Modbus Address	Function Code	Low Limit	High Limit	Description ***
Water leak Sensor Status	5026	5026	1	0	1	0=Normal, 1=Leak
Low Temperature	5027	5027	1	0	1	0=Off, 1=On
Load Shedding Demand	5028	5028	1,5	0	1	0=Off, 1=On
Load Shedding Status	5029	5029	1	0	1	0=Off, 1=On
Load Shedding Override	5030	5030	1	0	1	0=Off, 1=On
High Temperature	5033	5033	1	0	1	0=Off, 1=On

Technical Support



For any issues with SmartStruxure Solution or SmartStruxure Lite, contact Schneider Electric Technical Support according to your region.

North America (NAM) Product Support
Building Management Systems (BMS): www.nampss.com

Global Product Support
Building Management Systems (BMS): productsupport.BMS@schneider-electric.com

Schneider Electric
CS 30323
F-92506 Rueil-Malmaison Cedex
France

Schneider Electric is leading the Digital Transformation of Energy Management and Automation in Homes, Buildings, Data Centers, Infrastructure and Industries.

With global presence in over 100 countries, Schneider is the undisputable leader in Power Management – Medium Voltage, Low Voltage and Secure Power, and in Automation Systems. We provide integrated efficiency solutions, combining energy, automation and software.

In our global Ecosystem, we collaborate with the largest Partner, Integrator and Developer Community on our Open Platform to deliver real-time control and operational efficiency.

We believe that great people and partners make Schneider a great company and that our commitment to Innovation, Diversity and Sustainability ensures that Life Is On everywhere, for everyone and at every moment.

www.schneider-electric.com