

# SINAMICS S120

Safety Integrated  
Function Manual · 01/2011

SINAMICS

**SIEMENS**



# SIEMENS

## SINAMICS

### S120 Safety Integrated

#### Function Manual

#### Preface

---




|   |          |
|---|----------|
| <b>Standards and regulations</b>                            | <b>1</b> |
| <b>General information about SINAMICS Safety Integrated</b> | <b>2</b> |
| <b>System features</b>                                      | <b>3</b> |
| <b>Safety Integrated basic functions</b>                    | <b>4</b> |
| <b>Safety Integrated Extended Functions</b>                 | <b>5</b> |
| <b>Control of the safety functions</b>                      | <b>6</b> |
| <b>Commissioning</b>  | <b>7</b> |
| <b>Application examples</b>                                 | <b>8</b> |
| <b>Acceptance tests and acceptance reports</b>              | <b>9</b> |
| <b>Appendix A</b>   | <b>A</b> |

Valid from: Firmware version 4.4

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

|  |
|--|
|  <b>DANGER</b>                        |
| indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.                 |
|  <b>WARNING</b>                       |
| indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.                  |
|  <b>CAUTION</b>                       |
| with a safety alert symbol, indicates that minor personal injury can result if proper precautions are not taken.       |
| <b>CAUTION</b>   |
| without a safety alert symbol, indicates that property damage can result if proper precautions are not taken.          |
| <b>NOTICE</b>  |
| indicates that an unintended result or situation can occur if the corresponding information is not taken into account. |


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation for the specific task, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

|   |
|---|
|  <b>WARNING</b>  |
| Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be adhered to. The information in the relevant documentation must be observed. |

### Trademarks

All names identified by ® are registered trademarks of the Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Preface

## SINAMICS documentation

The SINAMICS documentation is organized in the following categories:

- General documentation/catalogs
- User documentation
- Manufacturer/service documentation

## More information

The following link provides information on the topics:

- Ordering documentation/overview of documentation
- Additional links to download documents
- Using documentation online (find and search in manuals/information)

<http://www.siemens.com/motioncontrol/docu>

Please send any questions about the technical documentation (e.g. suggestions for improvement, corrections) to the following e-mail address:  
[docu.motioncontrol@siemens.com](mailto:docu.motioncontrol@siemens.com)

## My Documentation Manager

The following link provides information on how to create your own individual documentation based on Siemens' content, and adapt it for your own machine documentation:

<http://www.siemens.com/mdm>

## Training

The following link provides information on SITRAIN - training from Siemens for products, systems and automation engineering solutions:

<http://www.siemens.com/sitrain>

## FAQs

You can find Frequently Asked Questions in the Service&Support pages under **Product Support**.

<http://support.automation.siemens.com>

## SINAMICS

You can find information on SINAMICS at:

<http://www.siemens.com/sinamics>.

## Usage phases and their tools/documents (as an example)

Table 1 Usage phases and the available documents/tools

| Usage phase            | Document/tool  |
|------------------------|--|
| Orientation            | SINAMICS S Sales Documentation   |
| Planning/configuration | <ul style="list-style-type: none"> <li>• SIZER Configuration Tool</li> <li>• Configuration Manuals, Motors</li> </ul>  |
| Deciding/ordering      | SINAMICS S Catalogs  |
| Installation/assembly  | <ul style="list-style-type: none"> <li>• SINAMICS S120 Equipment Manual for Control Units and Additional System Components</li> <li>• SINAMICS S120 Equipment Manual for Booksize Power Units</li> <li>• SINAMICS S120 Equipment Manual for Chassis Power Units</li> <li>• SINAMICS S120 Equipment Manual for AC Drives</li> </ul> |
| Commissioning          | <ul style="list-style-type: none"> <li>• STARTER commissioning tool</li> <li>• SINAMICS S120 Getting Started</li> <li>• SINAMICS S120 Commissioning Manual</li> <li>• SINAMICS S120 CANopen Commissioning Manual</li> <li>• SINAMICS S120 Function Manual</li> <li>• SINAMICS S120/S150 List Manual</li> </ul>                     |
| Usage/operation        | <ul style="list-style-type: none"> <li>• SINAMICS S120 Commissioning Manual</li> <li>• SINAMICS S120/S150 List Manual</li> </ul>   |
| Maintenance/servicing  | <ul style="list-style-type: none"> <li>• SINAMICS S120 Commissioning Manual</li> <li>• SINAMICS S120/S150 List Manual</li> </ul>   |
| References             | <ul style="list-style-type: none"> <li>• SINAMICS S120/S150 List Manual</li> </ul>   |

### Target group

This documentation is intended for machine manufacturers, commissioning engineers, and service personnel who use the SINAMICS drive system.

### Benefits

This Manual describes all the information, procedures and operational instructions required for commissioning and servicing SINAMICS S120.

## Standard scope

The scope of the functionality described in this document may differ from the scope of the functionality of the drive system that is actually supplied.

- It may be possible for other functions not described in this documentation to be executed in the drive system. However, no claim can be made regarding the availability of these functions when the equipment is first supplied or in the event of servicing.
- Functions that are not available in a particular product version of the drive system may be described in the documentation. The functionality of the supplied drive system should only be taken from the ordering documentation.
- Extensions or changes made by the machine manufacturer must be documented by the machine manufacturer.

For reasons of clarity, this documentation does not contain all of the detailed information on all of the product types. This documentation cannot take into consideration every conceivable type of installation, operation and service/maintenance.

## Technical Support

Country-specific telephone numbers for technical support are provided in the Internet under **Contact:**

<http://www.siemens.com/automation/service&support>

## EC Declaration of Conformity

The EC Declaration of Conformity for the EMC Directive can be found on the Internet at:

<http://support.automation.siemens.com>

There – as a search term – enter the number **15257461** or contact your local Siemens office.

## Search guides

The following guides are provided to help you locate information in this manual:

1. Contents
2. List of abbreviations
3. Index

## Internet address for Safety Integrated

<http://www.siemens.com/safety>

This address contains detailed application examples for Safety Integrated.

## Notation

The following notation and abbreviations are used in this documentation:

### Notation for parameters (examples):


- p0918 Adjustable parameter 918
- r1024 Display parameter 1024
- p1070[1] Adjustable parameter 1070, index 1
- p2098[1].3 Adjustable parameter 2098, index 1, bit 3
- p0099[0...3] Adjustable parameter 99 indices 0 to 3
- r0945[2](3) Display parameter 945 index 2 of drive object 3
- p0795.4 Adjustable parameter 795 bit 4

### Notation for faults and alarms (examples):


- F12345 Fault 12345
- A67890 Alarm 67890



## ESD Notes

|  |
|--|
|  <b>CAUTION</b>   |
| <p>Electrostatic sensitive devices (ESD) are single components, integrated circuits or devices that can be damaged by electrostatic fields or electrostatic discharges.</p> <p>Regulations for the ESD handling:</p> <p>During the handling of electronic components, pay attention to the grounding of the person, workplace and packaging!</p> <p>Electronic components may be touched by persons only when</p> <ul style="list-style-type: none"><li>• these persons are grounded using an ESD bracelet, or</li><li>• these persons in ESD areas with a conducting floor wear ESD shoes or ESD grounding straps.</li></ul> <p>Electronic components should be touched only when this is unavoidable. The touching is permitted only on the front panel or on the circuit board edge.</p> <p>Electronic components must not be brought into contact with plastics or clothing made of artificial fibers.</p> <p>Electronic components may only be placed on conducting surfaces (table with ESD coating, conducting ESD foamed material, ESD packing bag, ESD transport container).</p> <p>Electronic components may not be placed near display units, monitors or televisions (minimum distance from the screen &gt; 10 cm).</p> <p>Measurements must only be taken on boards when the measuring instrument is grounded (via protective conductors, for example) or the measuring probe is briefly discharged before measurements are taken with an isolated measuring device (for example, touching a bare metal housing).</p> |

## Safety notices

|  |
|--|
|  <b>DANGER</b>  |
| <ul style="list-style-type: none"><li>• Commissioning is absolutely prohibited until it has been completely ensured that the machine, in which the components described here are to be installed, is in full compliance with the provisions of the EC Machinery Directive.</li><li>• SINAMICS devices and AC motors must only be commissioned by suitably qualified personnel.</li><li>• The personnel must take into account the information provided in the technical customer documentation for the product, and be familiar with and follow the specified danger and warning notices.</li><li>• When electrical equipment and motors are operated, the electrical circuits automatically conduct a dangerous voltage.</li><li>• When the machine or system is operated, hazardous axis movements can occur.</li><li>• All of the work carried out on the electrical machine or system must be carried out with it in a no-voltage condition.</li><li>• SINAMICS devices with three-phase motors must only be connected to the power supply via an AC-DC residual-current-operated device with selective switching once verification has been provided that the SINAMICS device is compatible with the residual-current-operated device in accordance with IEC 61800-5-1, Section 5.2.11.2.</li></ul> |

 **WARNING**

- The successful and safe operation of this equipment and motors is dependent on correct transport, proper storage, installation and mounting as well as careful operator control, service and maintenance.
- For special versions of the drive units and motors, information and data in the Catalogs and quotations additionally apply.
- In addition to the danger and warning information provided in the technical customer documentation, the applicable national, local, and plant-specific regulations and requirements must be taken into account.
- Only protective extra-low voltages (PELV = Protective Extra Low Voltage, DVC-A) that comply with EN 60204-1 can be connected to the connections and terminals between 0 V and 48 V.

 **CAUTION**

- The motors can have surface temperatures of over +80 °C.
- This is the reason that temperature-sensitive components, e.g. cables or electronic components may neither be in contact nor be attached to the motor.
- When attaching the connecting cables, you must ensure that:
  - they are not damaged
  - they are not under tension
  - they cannot come into contact with any rotating parts

**CAUTION**

- As part of routine tests, SINAMICS devices are subject to a voltage test in accordance with EN 61800-5-1. Before the voltage test is performed on the electrical equipment of industrial machines in accordance with EN 60204-1, Section 18.4, all connectors of SINAMICS equipment must be disconnected/unplugged to prevent the equipment from being damaged.
- Motors should be connected up according to the circuit diagram provided. otherwise they can be destroyed.

---

**Note**

When operated in dry areas, SINAMICS devices with three-phase motors conform to the Low-Voltage Directive 2006/95/EC.

---

# Table of contents

|          |   |           |
|----------|---|-----------|
|          | <b>Preface .....</b>  | <b>3</b>  |
| <b>1</b> | <b>Standards and regulations .....</b>  | <b>13</b> |
| 1.1      | General information .....   | 13        |
| 1.1.1    | Aims .....  | 13        |
| 1.1.2    | Functional safety .....   | 14        |
| 1.2      | Safety of machinery in Europe .....   | 14        |
| 1.2.1    | Machinery Directive .....   | 15        |
| 1.2.2    | Harmonized European Standards .....   | 15        |
| 1.2.3    | Standards for implementing safety-related controllers .....                       | 17        |
| 1.2.4    | EN ISO 13849-1 (previously EN 954-1) .....  | 19        |
| 1.2.5    | EN 62061 .....  | 20        |
| 1.2.6    | Series of standards EN 61508 (VDE 0803) .....                                     | 22        |
| 1.2.7    | Risk analysis/assessment .....  | 23        |
| 1.2.8    | Risk reduction .....  | 25        |
| 1.2.9    | Residual risk .....   | 25        |
| 1.3      | Machine safety in the USA .....   | 25        |
| 1.3.1    | Minimum requirements of the OSHA .....  | 26        |
| 1.3.2    | NRTL listing .....  | 26        |
| 1.3.3    | NFPA 79 .....   | 27        |
| 1.3.4    | ANSI B11 .....  | 27        |
| 1.4      | Machine safety in Japan .....   | 28        |
| 1.5      | Equipment regulations .....   | 28        |
| 1.6      | Other safety-related issues .....   | 29        |
| 1.6.1    | Information sheets issued by the Employer's Liability Insurance Association ..... | 29        |
| 1.6.2    | Additional references .....   | 29        |
| <b>2</b> | <b>General information about SINAMICS Safety Integrated .....</b>                 | <b>31</b> |
| 2.1      | Supported functions .....   | 31        |
| 2.2      | Preconditions for the Safety Extended Functions .....                             | 34        |
| 2.3      | Controlling the Safety Integrated functions .....                                 | 35        |
| 2.4      | Drive monitoring with or without encoder .....                                    | 36        |
| 2.5      | Parameter, checksum, version, password .....                                      | 38        |
| 2.6      | DRIVE-CLiQ rules for Safety Integrated Functions .....                            | 41        |
| <b>3</b> | <b>System features .....</b>  | <b>43</b> |
| 3.1      | Latest information .....  | 43        |
| 3.2      | Certification .....   | 44        |
| 3.3      | Safety instructions .....   | 45        |
| 3.4      | Probability of failure of the safety functions (PFH value) .....                  | 48        |

|          |   |            |
|----------|---|------------|
| 3.5      | Response times .....  | 48         |
| 3.6      | Residual risk.....  | 53         |
| <b>4</b> | <b>Safety Integrated basic functions .....</b>                | <b>55</b>  |
| 4.1      | Safe Torque Off (STO).....                                    | 55         |
| 4.2      | Safe Stop 1 (SS1, time controlled).....                       | 59         |
| 4.3      | Safe Brake Control (SBC).....                                 | 61         |
| 4.4      | Safety faults .....   | 63         |
| 4.5      | Forced dormant error detection .....                          | 66         |
| <b>5</b> | <b>Safety Integrated Extended Functions .....</b>             | <b>69</b>  |
| 5.1      | Safety functions "with encoder" / "without encoder" .....     | 69         |
| 5.2      | Safe Torque Off.....  | 71         |
| 5.3      | Safe Stop 1 (SS1) .....                                       | 71         |
| 5.3.1    | Safe Stop 1 (SS1, time and acceleration controlled) .....     | 71         |
| 5.3.2    | Safe Stop 1 without encoder (time and speed controlled) ..... | 74         |
| 5.3.3    | Safe Stop 1 - Parameter .....                                 | 76         |
| 5.4      | Safe Stop 2 (SS2) .....                                       | 77         |
| 5.4.1    | EPOS and Safe Stop 2 .....                                    | 79         |
| 5.5      | Safe Operating Stop (SOS).....                                | 80         |
| 5.6      | Safely-Limited Speed (SLS).....                               | 82         |
| 5.6.1    | Safely Limited Speed (SLS).....                               | 82         |
| 5.6.2    | Safely Limited Speed without encoder.....                     | 84         |
| 5.6.3    | Safely Limited Speed - Parameter .....                        | 87         |
| 5.6.4    | EPOS and Safely-Limited Speed .....                           | 88         |
| 5.7      | Safe Speed Monitor (SSM) .....                                | 89         |
| 5.7.1    | Safe Speed Monitor with encoder .....                         | 89         |
| 5.7.2    | Safe Speed Monitor restart .....                              | 93         |
| 5.8      | Safe Acceleration Monitor (SAM).....                          | 95         |
| 5.9      | Safe Brake Ramp (SBR) .....                                   | 97         |
| 5.10     | Safe Direction (SDI) .....                                    | 100        |
| 5.10.1   | Safe Direction with encoder .....                             | 100        |
| 5.10.2   | Safe Direction without encoder .....                          | 102        |
| 5.10.3   | Overview of parameters and function diagrams .....            | 104        |
| 5.11     | Safety faults .....   | 105        |
| 5.12     | Message buffer .....  | 109        |
| 5.13     | Safe actual value acquisition .....                           | 111        |
| 5.13.1   | Reliable actual value acquisition with encoder system .....   | 111        |
| 5.13.2   | Safe current actual value acquisition without encoder.....    | 118        |
| 5.14     | Forced dormant error detection .....                          | 119        |
| 5.15     | Safety Info Channel.....                                      | 123        |
| <b>6</b> | <b>Control of the safety functions .....</b>                  | <b>125</b> |

|          |   |            |
|----------|---|------------|
| 6.1      | Control signals by way of terminals on the Control Unit and Motor/Power Module..... | 126        |
| 6.1.1    | Simultaneity and tolerance time of the two monitoring channels.....                 | 129        |
| 6.1.2    | Bit pattern test.....   | 130        |
| 6.2      | Activation via PROFIsafe.....   | 131        |
| 6.2.1    | Enabling of the control via PROFIsafe.....  | 131        |
| 6.2.2    | Structure of telegram 30.....   | 132        |
| 6.2.2.1  | Structure of telegram 30 (Basic Functions).....                                     | 132        |
| 6.2.2.2  | Structure of telegram 30 (Extended Functions).....                                  | 134        |
| 6.3      | Control via TM54F.....  | 136        |
| 6.3.1    | General information.....  | 136        |
| 6.3.2    | Overview of the F-DIs.....  | 137        |
| 6.3.3    | Overview of the F-DOs.....  | 139        |
| <b>7</b> | <b>Commissioning.....</b>   | <b>141</b> |
| 7.1      | Safety Integrated firmware versions.....  | 141        |
| 7.2      | Commissioning Safety Integrated functions.....                                      | 142        |
| 7.2.1    | General information.....  | 142        |
| 7.2.2    | Prerequisites for commissioning the Safety Integrated functions.....                | 147        |
| 7.2.3    | Default settings for commissioning Safety Integrated functions without encoder..... | 147        |
| 7.2.4    | Setting the sampling times.....   | 151        |
| 7.3      | Commissioning TM54F by means of STARTER/SCOUT.....                                  | 153        |
| 7.3.1    | Basic sequence of commissioning.....  | 153        |
| 7.3.2    | Configuration start screen.....   | 154        |
| 7.3.3    | TM54F configuration.....  | 156        |
| 7.3.4    | Test stop of the TM54F.....   | 158        |
| 7.3.4.1  | Test stop mode 1.....   | 160        |
| 7.3.4.2  | Test stop mode 2.....   | 161        |
| 7.3.4.3  | Test stop mode 3.....   | 162        |
| 7.3.4.4  | Test stop mode parameters.....  | 163        |
| 7.3.5    | F-DI/F-DO configuration.....  | 164        |
| 7.3.6    | Control interface of the drive group.....   | 166        |
| 7.4      | Procedure for configuring PROFIsafe communication.....                              | 167        |
| 7.4.1    | Configuring PROFIsafe via PROFIBUS.....   | 168        |
| 7.5      | PROFIsafe via PROFINET.....   | 178        |
| 7.5.1    | Requirements for PROFIsafe communication.....                                       | 178        |
| 7.5.2    | Configuring PROFIsafe via PROFINET.....   | 179        |
| 7.5.3    | Initializing the drives.....  | 184        |
| 7.6      | PROFIsafe configuration with STARTER.....   | 185        |
| 7.7      | Commissioning a linear/rotary axis.....   | 186        |
| 7.8      | Modular machine concept Safety Integrated.....                                      | 189        |
| 7.9      | Information pertaining to component replacements.....                               | 190        |
| 7.10     | Information pertaining to series commissioning.....                                 | 191        |
| <b>8</b> | <b>Application examples.....</b>  | <b>193</b> |
| 8.1      | Input/output interconnections for a safety switching device with TM54F.....         | 193        |
| 8.2      | Application examples.....   | 196        |

|          |  |            |
|----------|--|------------|
| <b>9</b> | <b>Acceptance tests and acceptance reports .....</b>                                 | <b>197</b> |
| 9.1      | Acceptance test structure.....   | 198        |
| 9.1.1    | Content of the complete acceptance test.....   | 199        |
| 9.1.2    | Content of the partial acceptance test .....   | 202        |
| 9.1.3    | Test scope for specific measures .....   | 205        |
| 9.2      | Safety logbook .....   | 206        |
| 9.3      | Acceptance reports .....   | 207        |
| 9.3.1    | Plant description - Documentation part 1 .....                                       | 207        |
| 9.3.2    | Description of safety functions - Documentation Part 2 .....                         | 209        |
| 9.3.2.1  | Function table.....  | 209        |
| 9.3.2.2  | SI functions for each drive.....   | 209        |
| 9.3.2.3  | Parameterizing the SI functions via TM54F .....                                      | 213        |
| 9.3.2.4  | Safety equipment .....   | 215        |
| 9.4      | Acceptance tests.....  | 216        |
| 9.4.1    | Acceptance tests – Basic Functions .....   | 217        |
| 9.4.1.1  | Acceptance test for Safe Torque Off (STO).....                                       | 217        |
| 9.4.1.2  | Acceptance test for Safe Stop 1, time controlled (SS1).....                          | 219        |
| 9.4.1.3  | Acceptance test for "Safe Brake Control" (SBC) .....                                 | 221        |
| 9.4.2    | Acceptance tests for Extended Functions (with encoder).....                          | 222        |
| 9.4.2.1  | Acceptance test Safe Torque Off with encoder (Extended Functions).....               | 222        |
| 9.4.2.2  | Acceptance test for Safe Stop 1, time and acceleration controlled .....              | 224        |
| 9.4.2.3  | Acceptance test for Safe Brake Control with encoder (Extended Functions).....        | 226        |
| 9.4.2.4  | Acceptance test for Safe Stop 2 (SS2) .....  | 227        |
| 9.4.2.5  | Acceptance test for Safe Operating Stop (SOS) .....                                  | 229        |
| 9.4.2.6  | Acceptance tests for Safely Limited Speed with encoder (Extended Functions) .....    | 232        |
| 9.4.2.7  | Acceptance test for Safe Speed Monitor (SSM) .....                                   | 247        |
| 9.4.3    | Acceptance tests for Extended Functions (without encoder).....                       | 249        |
| 9.4.3.1  | Acceptance test Safe Torque Off without encoder (Extended Functions).....            | 249        |
| 9.4.3.2  | Acceptance test for Safe Stop 1 without encoder (Extended Functions) .....           | 251        |
| 9.4.3.3  | Acceptance test for Safe Brake Control without encoder (Extended Functions).....     | 253        |
| 9.4.3.4  | Acceptance tests for Safely Limited Speed without encoder (Extended Functions) ..... | 254        |
| 9.5      | Completion of certificate.....   | 260        |
| <b>A</b> | <b>Appendix A .....</b>  | <b>263</b> |
| A.1      | List of abbreviations .....  | 263        |
| A.2      | Document structure .....   | 272        |
|          | <b>Index.....</b>  | <b>273</b> |

# Standards and regulations

## 1.1 General information

### 1.1.1 Aims

Manufacturers and operating companies of equipment, machines, and products are responsible for ensuring the required level of safety. This means that plants, machines, and other equipment must be designed to be as safe as possible in accordance with the current state of the art. To ensure this, companies describe in the various standards the current state of the art covering all aspects relevant to safety. When the relevant Standards are observed, this ensures that state-of-the-art technology has been utilized and, in turn, the erector/builder of a plant or a manufacturer of a machine or a piece of equipment has fulfilled his appropriate responsibility.

Safety systems are designed to minimize potential hazards for both people and the environment by means of suitable technical equipment, without restricting industrial production and the use of machines more than is necessary. The protection of man and environment must be assigned equal importance in all countries, which is it is important that rules and regulations that have been internationally harmonized are applied. This is also designed to avoid distortions in the competition due to different safety requirements in different countries.

There are different concepts and requirements in the various regions and countries of the world when it comes to ensuring the appropriate degree of safety. The legislation and the requirements of how and when proof is to be given and whether there is an adequate level of safety are just as different as the assignment of responsibilities.

The most important thing for manufacturers of machines and companies that set up plants and systems is that the legislation and regulations in the country where the machine or plant is being operated apply. For example, the control system for a machine that is to be used in the US must fulfill local US requirements even if the machine manufacturer (OEM) is based in the European Economic Area (EEA).

### 1.1.2 Functional safety

Safety, from the perspective of the object to be protected, cannot be split-up. The causes of hazards and, in turn, the technical measures to avoid them can vary significantly. This is why a differentiation is made between different types of safety (e.g. by specifying the cause of possible hazards). "Functional safety" is involved if safety depends on the correct function.

To ensure the functional safety of a machine or plant, the safety-related parts of the protection and control devices must function correctly. In addition, the systems must behave in such a way that either the plant remains in a safe state or it is brought into a safe state if a fault occurs. In this case, it is necessary to use specially qualified technology that fulfills the requirements described in the associated Standards. The requirements to achieve functional safety are based on the following basic goals:

- Avoiding systematic faults
- Controlling systematic faults
- Controlling random faults or failures

Benchmarks for establishing whether or not a sufficient level of functional safety has been achieved include the probability of hazardous failures, the fault tolerance, and the quality that is to be ensured by minimizing systematic faults. This is expressed in the Standards using different terms. In IEC/EN 61508, IEC/EN 62061, IEC/EN 61800-5-2 "Safety Integrity Level" (SIL) and EN ISO 13849-1 "Categories" and "Performance Level" (PL).

## 1.2 Safety of machinery in Europe

The EU Directives that apply to the implementation of products are based on Article 95 of the EU contract, which regulates the free exchange of goods. These are based on a new global concept ("new approach", "global approach"):

- EU Directives only specify general safety goals and define basic safety requirements.
- Technical details can be defined by means of standards by Standards Associations that have the appropriate mandate from the commission of the European Parliament and Council (CEN, CENELEC). These standards are harmonized in line with a specific directive and listed in the official journal of the commission of the European Parliament and Council. Legislation does not specify that certain standards have to be observed. When the harmonized Standards are observed, it can be assumed that the safety requirements and specifications of the Directives involved have been fulfilled.
- EU Directives specify that the Member States must mutually recognize domestic regulations.

The EU Directives are equal. This means that if several Directives apply for a specific piece of equipment or device, the requirements of all of the relevant Directives apply (e.g. for a machine with electrical equipment, the Machinery Directive and the Low-Voltage Directive apply).



### 1.2.1 Machinery Directive

The basic safety and health requirements specified in Annex I of the Directive must be fulfilled for the safety of machines.

The protective goals must be implemented responsibly to ensure compliance with the Directive.

Manufacturers of a machine must verify that their machine complies with the basic requirements. This verification is facilitated by means of harmonized standards.

### 1.2.2 Harmonized European Standards

The two Standards Organizations CEN (Comité Européen de Normalisation) and CENELEC (Comité Européen de Normalisation Électrotechnique), mandated by the EU Commission, drew-up harmonized European standards in order to precisely specify the requirements of the EC directives for a specific product. These standards (EN standards) are published in the official journal of the commission of the European Parliament and Council and must be included without revision in domestic standards. They are designed to fulfill basic health and safety requirements as well as the protective goals specified in Annex I of the Machinery Directive.

When the harmonized standards are observed, it is "automatically assumed" that the Directive is fulfilled. As such, manufacturers can assume that they have observed the safety aspects of the Directive under the assumption that these are also covered in this standard. However, not every European Standard is harmonized in this sense. Key here is the listing in the official journal of the commission of the European Parliament and Council.

The European standards regarding the safety of machines are structured in a hierarchical manner as follows:

- A standards (basic standards)
- B standards (group standards)
- C standards (product standards)

#### **Type A standards/basic standards**

A standards include basic terminology and definitions relating to all types of machine. This includes EN ISO 12100-1 (previously EN 292-1) "Safety of Machines, Basic Terminology, General Design Principles."

A standards are aimed primarily at the bodies responsible for setting the B and C standards. The measures specified here for minimizing risk, however, may also be useful for manufacturers if no applicable C standards have been defined.

#### **Type B standards/group standards**

B standards cover all safety-related standards for various different machine types. B standards are aimed primarily at the bodies responsible for setting C standards. They can also be useful for manufacturers during the machine design and construction phases, however, if no applicable C standards have been defined.

A further sub-division has been made for B standards:

- Type B1 standards for higher-level safety aspects (e.g. ergonomic principles, safety clearances from sources of danger, minimum clearances to prevent parts of the body from being crushed).
- Type B2 standards for protective safety devices are defined for different machine types (e.g. EMERGENCY STOP devices, two-hand operating circuits, interlocking elements, contactless protective devices, safety-related parts of controls).

#### **Type C standards/product standards**

C standards are product-specific standards (e.g. for machine tools, woodworking machines, elevators, packaging machines, printing machines etc.). Product standards cover machine-specific requirements. The requirements can, under certain circumstances, deviate from the basic and group standards. Type C/product standards have the highest priority for machine manufacturers who can assume that it fulfills the basic requirements of Annex I of the Machinery Directive (automatic presumption of compliance). If no product standard has been defined for a particular machine, type B standards can be applied when the machine is constructed.

A complete list of the standards specified and the mandated draft standards are available on the Internet at the following address:

<http://www.newapproach.org/>

Recommendation: Due to the rapid pace of technical development and the associated changes in machine concepts, the standards (and C standards in particular) should be checked to ensure that they are up to date. Please note that the application of a particular standard may not be mandatory provided that all the safety requirements of the applicable EU directives are fulfilled.

### 1.2.3 Standards for implementing safety-related controllers

If the functional safety of a machine depends on various control functions, the controller must be implemented in such a way that the probability of the safety functions failing is sufficiently minimized. EN ISO 13849-1 (formerly EN 954-1) and EN 62061 define principles for implementing safety-related machine controllers which, when properly applied, ensure that all the safety requirements of the EC Machinery Directive are fulfilled. These standards ensure that the relevant safety requirements of the Machinery Directive are fulfilled.

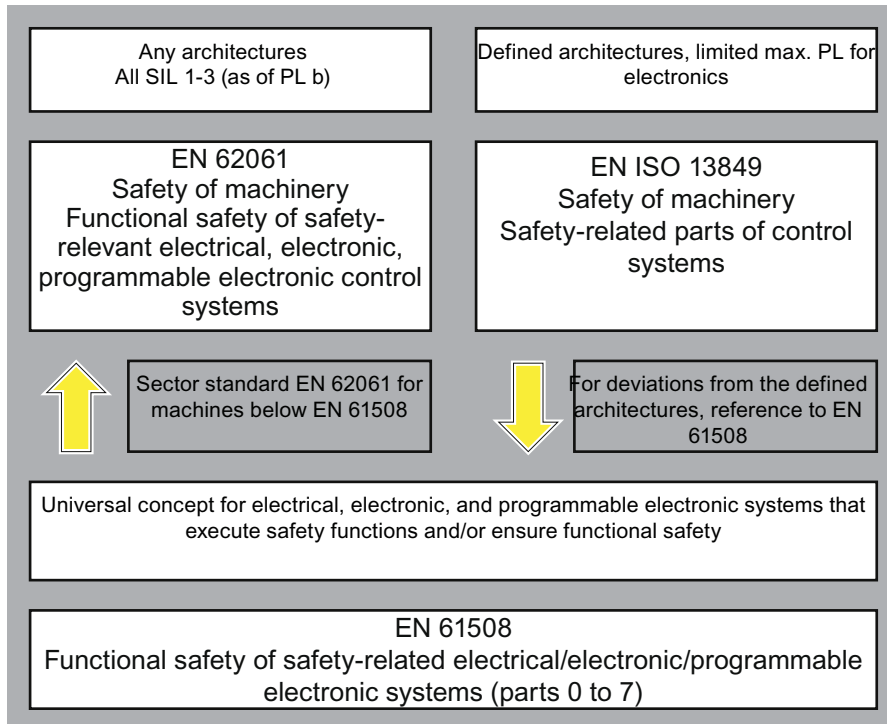


Figure 1-1 Standards for implementing safety-related controllers

The application areas of EN ISO 13849-1, EN 62061, and EN 61508 are very similar. To help users make an appropriate decision, the IEC and ISO associations have specified the application areas of both standards in a joint table in the introduction to the standards. EN ISO 13849-1 or EN 62061 should be applied depending on the technology (mechanics, hydraulics, pneumatics, electrics, electronics, programmable electronics), risk classification and architecture.

*Standards and regulations*

*1.2 Safety of machinery in Europe*

|  |  |  |  |
|--|--|--|--|
|  | Systems for executing safety-related control functions   | EN ISO 13849-1   | EN 62061                               |
| A  | Non-electrical (e.g. hydraulic, pneumatic)   | X  | Not covered                            |
| B  | Electromechanical (e.g. relay and/or basic electronics)  | Restricted to the designated architectures (see comment 1) and max. up to PL = e | All architectures and max. up to SIL 3 |
| C  | Complex electronics (e.g. programmable electronics)  | Restricted to the designated architectures (see comment 1) and max. up to PL = d | All architectures and max. up to SIL 3 |
| D  | A standards combined with B standards  | Restricted to the designated architectures (see comment 1) and max. up to PL = e | X<br>See comment 3                     |
| E  | C standards combined with B standards  | Restricted to the designated architectures (see comment 1) and max. up to PL = d | All architectures and max. up to SIL 3 |
| F  | C standards combined with A standards<br>or<br>C standards combined with A standards and B standards | X<br><br>See comment 2   | X<br><br>See comment 3                 |
| <p>"X" indicates that the point is covered by this standard.</p> <p>Comment 1:<br/>Designated architectures are described in Annex B of EN ISO 13849-1 and provide a simplified basis for the quantification.</p> <p>Comment 2:<br/>For complex electronics: Using designated architectures in compliance with EN ISO 13849-1 up to PL = d or every architecture in compliance with EN 62061.</p> <p>Comment 3:<br/>For non-electrical systems: Use components that comply with EN ISO 13849-1 as sub-systems.</p> |  |  |  |

## 1.2.4 EN ISO 13849-1 (previously EN 954-1)

A qualitative analysis (to EN 954-1) is not sufficient for modern controllers due to their technology. Among other things, EN 954-1 does not take into account time behavior (e.g. test interval and/or cyclic test, lifetime). This results in the probabilistic basis in EN ISO 13849-1 (probability of failure per unit time).

EN ISO 13849-1 is based on the known categories of EN 954-1. It now also takes into account complete safety functions and all the devices required to execute these. With EN ISO 13849-1, safety functions are investigated from a quantitative perspective going beyond the qualitative basis of EN 954-1. Performance levels (PL), which are based on the categories, are used. The following safety-related characteristic quantities are required for devices/equipment:

- Category (structural requirement)
- PL:  
Performance level
- MTTF<sub>d</sub>:  
Mean time to dangerous failure
- DC:  
Diagnostic coverage
- CCF:  
Common cause failure

The standard describes how the performance level (PL) is calculated for safety-related components of the controller on the basis of designated architectures. In the event of any deviations from this, EN ISO 13849-1 refers to EN 61508.

When combining several safety-related parts to form a complete system, the Standard explains how to determine the resulting PL.

---

### **Note**

Since May 2007, EN ISO 13849-1 has been harmonized as part of the Machinery Directive. EN 954-1 will continue to apply until 30.12.2011.

---

### 1.2.5 EN 62061

EN 62061 (identical to IEC 62061) is a sector-specific standard subordinate to IEC/EN 61508. It describes the implementation of safety-related electrical machine control systems and looks at the complete lifecycle, from the conceptual phase to decommissioning. The standard is based on the quantitative and qualitative analyses of safety functions,

whereby it systematically applies a top-down approach to implementing complex control systems (known as "functional decomposition"). The safety functions derived from the risk analysis are sub-divided into sub-safety functions, which are then assigned to real devices, sub-systems, and sub-system elements. Both the hardware and software are covered. EN 62061 also describes requirements regarding the implementation of application programs.

A safety-related control systems comprises different sub-systems. From a safety perspective, the sub-systems are described in terms of the SIL claim limit and  $PFH_D$  characteristic quantities.

Programmable electronic devices (e.g. PLCs or variable-speed drives) must fulfill EN 61508. They can then be integrated in the controller as sub-systems. The following safety-related characteristic quantities must be specified by the manufacturers of these devices.

Safety-related characteristic quantities for subsystems:

- SIL CL:  
SIL claim limit
- $PFH_D$ :  
Probability of dangerous failures per hour
- T1:  
Lifetime

Simple sub-systems (e.g. sensors and actuators) in electromechanical components can, in turn, comprise sub-system elements (devices) interconnected in different ways with the characteristic quantities required for determining the relevant  $PFH_D$  value of the sub-system.

Safety-related characteristic quantities for subsystem elements (devices):

- $\lambda$ :  
Failure rate
- B10 value:  
For elements that are subject to wear
- T1:  
Lifetime

For electromechanical devices, a manufacturer specifies a failure rate  $\lambda$  with reference to the number of operating cycles. The failure rate per unit time and the lifetime must be determined using the switching frequency for the particular application.

Parameters for the sub-system, which comprises sub-system elements, that must be defined during the design phase:

- T2:  
Diagnostic test interval
- $\beta$ :  
Susceptibility to common cause failure
- DC:  
Diagnostic coverage

The PFH<sub>D</sub> value of the safety-related controller is determined by adding the individual PFH<sub>D</sub> values for subsystems.

The user has the following options when setting up a safety-related controller:

- Use devices and sub-systems that already comply with EN ISO 13849-1, IEC/EN 61508, or IEC/EN 62061. The standard provides information specifying how qualified devices can be integrated when safety functions are implemented.
- Develop own subsystems:
  - Programmable, electronic systems and complex systems: Application of EN 61508 or EN 61800-5-2.
  - Simple devices and subsystems: Application of EN 62061.

EN 62061 does not include information about non-electric systems. The standard provides detailed information on implementing safety-related electrical, electronic, and programmable electronic control systems.

EN ISO 13849-1 must be applied for non-electric systems.

---

**Note**

Details of simple sub-systems that have been implemented and integrated are now available as "functional examples".

---

---

**Note**

IEC 62061 has been ratified as EN 62061 in Europe and harmonized as part of the Machinery Directive.

---

### 1.2.6 Series of standards EN 61508 (VDE 0803)

This series of standards describes the current state of the art.

EN 61508 is not harmonized in line with any EU directives, which means that an automatic presumption of conformity for fulfilling the protective requirements of a directive is not implied. The manufacturer of a safety-related product, however, can also use EN 61508 to fulfill basic requirements of European directives in accordance with the latest conceptual design, for example, in the following cases:

- If no harmonized standard exists for the application in question. In this case, the manufacturer can use EN 61508, although no presumption of conformity exists here.
- A harmonized European standard (e.g. EN 62061, EN ISO 13849, EN 60204-1) references EN 61508. This ensures that the appropriate requirements of the directives are fulfilled ("standard that is also applicable"). When manufacturers apply EN 61508 properly and responsibly in accordance with this reference, they can use the presumption of conformity of the referencing standard.

EN 61508 covers all the aspects that must be taken into account when E/E/PES systems (electrical, electronic, and programmable electronic System) are used in order to execute safety functions and/or to ensure the appropriate level of functional safety. Other hazards (e.g. electric shock) are, as in EN ISO 13849, not part of the standard.

EN 61508 has recently been declared the "International Basic Safety Publication", which makes it a framework for other, sector-specific standards (e.g. EN 62061). As a result, this standard is now accepted worldwide, particularly in North America and in the automotive industry. Today, many regulatory bodies already stipulate it (e.g. as a basis for NRTL listing).

Another recent development with respect to EN 61508 is its system approach, which extends the technical requirements to include the entire safety installation from the sensor to the actuator, the quantification of the probability of hazardous failure due to random hardware failures, and the creation of documentation covering all phases of the safety-related lifecycle of the E/E/PES.



## 1.2.7 Risk analysis/assessment

Risks are intrinsic in machines due to their design and functionality. For this reason, the Machinery Directive requires that a risk assessment be performed for each machine and, if necessary, the level of risk reduced until the residual risk is less than the tolerable risk. To assess these risks, the following standards must be applied:

- EN ISO 12100-1 "Safety of Machinery - basic terminology, general principles for design"
- EN ISO 13849-1 (successor to EN 954-1) "Safety-related parts of control systems"
- EN ISO 14121-1 (previously EN 1050, Paragraph 5) "Safety of machinery - Risk assessment"

EN ISO 12100-1 focuses on the risks to be analyzed and the design principles for minimizing risk. EN ISO 14121-1 describes the iterative process for assessing and minimizing risk to achieve the required level of safety.

The risk assessment is a procedure that allows hazards resulting from machines to be systematically investigated. Where necessary, the risk assessment is followed by a risk reduction procedure. When the procedure is repeated, this is known as an iterative process. This can help eliminate hazards (as far as this is possible) and can act as a basis for implementing suitable protective measures.

The risk assessment involves the following:

- Risk analysis
  - Determining the limits of the machine (EN ISO 12100-1, EN ISO 14121-1 Paragraph 5)
  - Identifying the hazards (EN ISO 12100-1, EN ISO 14121-1 Paragraph 6)
  - Estimating the level of risk (EN 1050 Paragraph 7)
- Risk assessment (EN ISO 14121-1 Paragraph 8)

As part of the iterative process to achieve the required level of safety, a risk assessment is carried out after the risk estimation. A decision must be made here as to whether the residual risk needs to be reduced. If the risk is to be further reduced, suitable protective measures must be selected and applied. The risk assessment must then be repeated.

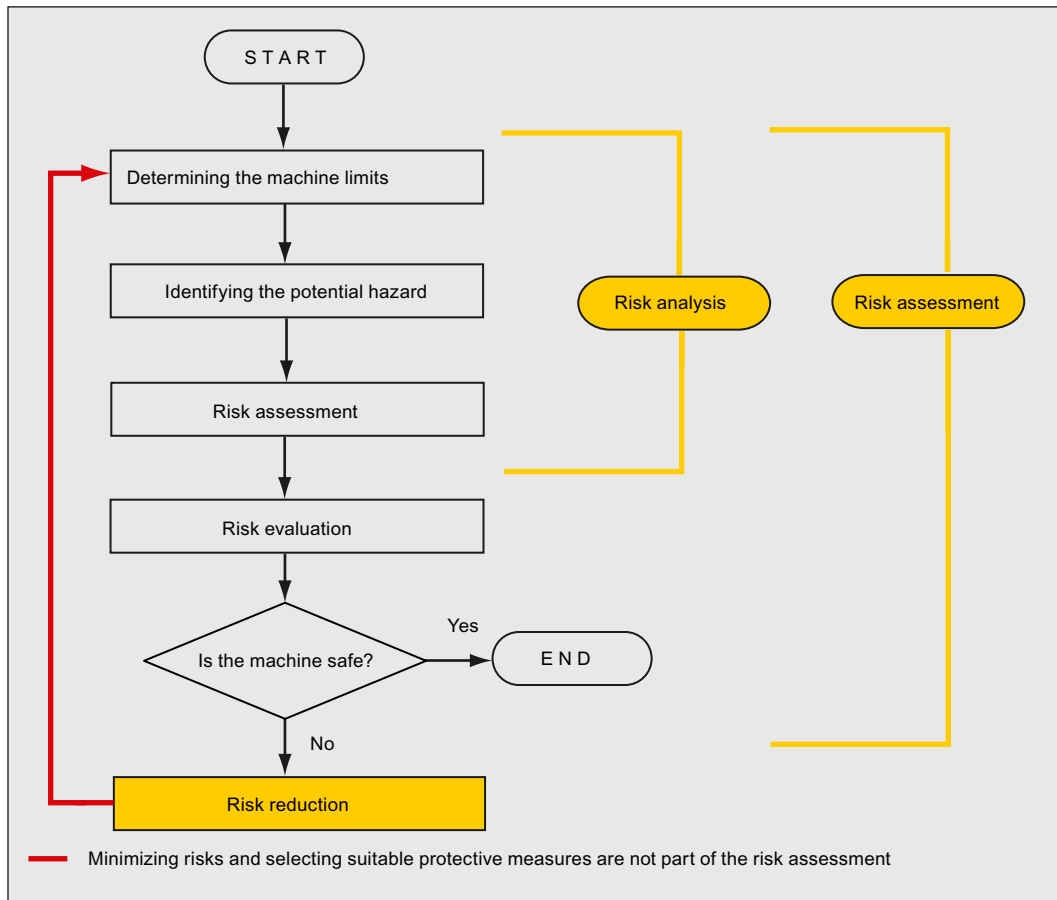


Figure 1-2 Iterative process to achieve the required level of safety to ISO 14121-1

Risks must be reduced by designing and implementing the machine accordingly (e.g. by means of controllers or protective measures suitable for the safety-related functions).

If the protective measures involve the use of interlocking or control functions, these must be designed in accordance with EN ISO 13849-1. For electrical and electronic controls, EN 62061 can be used as an alternative to EN ISO 13849-1. Electronic controls and bus systems must also comply with IEC/EN 61508.

## 1.2.8 Risk reduction

Risk reduction measures for a machine can be implemented by means of safety-related control functions in addition to structural measures. To implement these control functions, special requirements must be taken into account, graded according to the magnitude of the risk. These are described in EN ISO 13849-1 or, in the case of electrical controllers (particularly programmable electronics), in EN 61508 or EN 62061. The requirements regarding safety-related controller components are graded according to the magnitude of the risk and the level to which the risk needs to be reduced.

**EN ISO 13849-1** defines a risk graph, which can be used instead of the categories to create hierarchical performance levels (PL).

**IEC/EN 62061** uses "Safety Integrity Level" (SIL) for classification purposes. This is a quantified measure of the safety-related performance of a controller. The required SIL is also determined in accordance with the risk assessment principle to ISO 14121 (EN 1050). Annex A of the standard describes a method for determining the required Safety Integrity Level (SIL).

Regardless of which standard is applied, steps must be taken to ensure that all the machine controller components required for executing the safety-related functions fulfill these requirements.

## 1.2.9 Residual risk

In today's technologically advanced world, the concept of safety is relative. In practice, the ability to ensure safety to the extent that risk is permanently excluded – "zero-risk guarantee" – is impossible. The residual risk is the risk that remains once all the relevant protective measures have been implemented in accordance with the latest state of the art.

Machine/plant documentation must always refer to the residual risk (user information to EN ISO 12100-2).

## 1.3 Machine safety in the USA

A key difference between the USA and Europe in the legal requirements regarding safety at work is that, in the USA, no legislation exists regarding machinery safety that is applicable in all of the states and that defines the responsibility of the manufacturer/supplier. A general requirement exists stating that employers must ensure a safe workplace.

### 1.3.1 Minimum requirements of the OSHA

The Occupational Safety and Health Act (OSHA) from 1970 regulates the requirement that employers must offer a safe place of work. The core requirements of OSHA are specified in Section 5 "Duties".

The requirements of the OSH Act are managed by the "Occupational Safety and Health Administration" (also known as OSHA). OSHA employs regional inspectors who check whether or not workplaces comply with the applicable regulations.

The OSHA regulations are described in OSHA 29 CFR 1910.xxx ("OSHA Regulations (29 CFR) PART 1910 Occupational Safety and Health"). (CFR: Code of Federal Regulations.)

<http://www.osha.gov>

The application of standards is regulated in 29 CFR 1910.5 "Applicability of standards". The concept is similar to that used in Europe. Product-specific standards have priority over general standards insofar as they cover the relevant aspects. Once the standards are fulfilled, employers can assume that they have fulfilled the core requirements of the OSH Act with respect to the aspects covered by the standards.

In conjunction with certain applications, OSHA requires that all electrical equipment and devices that are used to protect workers be authorized by an OSHA-certified, "Nationally Recognized Testing Laboratory" (NRTL) for the specific application.

In addition to the OSHA regulations, the current standards defined by organizations such as NFPA and ANSI must be carefully observed and the extensive product liability legislation that exists in the US taken into account. Due to the product liability legislation, it is in the interests of manufacturing and operating companies that they carefully maintain the applicable regulations and are "forced" to fulfill the requirement to use state-of-the-art technology.

Third-party insurance companies generally demand that their customers fulfill the applicable standards of the standards organizations. Self-insured companies are not initially subject to this requirement but, in the event of an accident, they must provide verification that they have applied generally-recognized safety principles.

### 1.3.2 NRTL listing

To protect employees, all electrical equipment used in the USA must be certified for the planned application by a "Nationally Recognized Testing Laboratory" (NRTL) certified by the OSHA. NRTLs are authorized to certify equipment and material by means of listing, labeling, or similar. Domestic standards (e.g. NFPA 79) and international standards (e.g. IEC/EN 61508 for E/E/PES systems) are the basis for testing.

### 1.3.3 NFPA 79

Standard NFPA 79 (Electrical Standard for Industrial Machinery) applies to electrical equipment on industrial machines with rated voltages of less than 600 V. A group of machines that operate together in a coordinated fashion is also considered to be one machine.

For programmable electronics and communication buses, NFPA 79 states as a basic requirement that these must be listed if they are to be used to implement and execute safety-related functions. If this requirement is fulfilled, then electronic controls and communication buses can also be used for Emergency Stop functions, Stop Categories 0 and 1 (refer to NFPA 79 9.2.5.4.1.4). Like EN 60204-1, NFPA 79 no longer specifies that the electrical energy must be disconnected by electromechanical means for emergency stop functions.

The core requirements regarding programmable electronics and communication buses are: system requirements (see NFPA 79 9.4.3)

1. Control systems that contain software-based controllers must:
  - In the event of a single fault
    - (a) cause the system to switch to a safe shutdown mode
    - (b) prevent the system from restarting until the fault has been rectified
    - (c) prevent an unexpected restart
  - Offer the same level of protection as hard-wired controllers
  - Be implemented in accordance with a recognized standard that defines the requirements for such systems.
2. IEC 61508, IEC 62061, ISO 13849-1, ISO 13849-2 and IEC 61800-5-2 are specified as suitable standards in a note.

**Underwriter Laboratories Inc. (UL)** has defined a special category for "Programmable Safety Controllers" for implementing this requirement (code NRGF). This category covers control devices that contain software and are designed for use in safety-related functions.

A precise description of the category and a list of devices that fulfill this requirement can be found on the Internet at the following address:

<http://www.ul.com> → certifications directory → UL Category code/ Guide information → search for category "NRGF"

**TUV Rheinland of North America, Inc.** is also an NRTL for these applications.

### 1.3.4 ANSI B11

ANSI B11 standards are joint standards developed by associations such as the Association for Manufacturing Technology (AMT) and the Robotic Industries Association (RIA).

The hazards of a machine are evaluated by means of a risk analysis/assessment. The risk analysis is an important requirement in accordance with NFPA 79, ANSI/RIA 15.06, ANSI B11.TR-3 and SEMI S10 (semiconductors). The documented findings of a risk analysis can be used to select a suitable safety system based on the safety class of the application in question.

## 1.4 Machine safety in Japan

The situation in Japan is different from that in Europe and the US. Legislation such as that prescribed in Europe does not exist. Similarly, product liability does not play such an important role as it does in the US.

Instead of legal requirements to apply standards have been defined, an administrative recommendation to apply JIS (Japanese Industrial Standard) is in place: Japan bases its approach on the European concept and uses basic standards as national standards (see table).

Table 1- 1 Japanese standards

| ISO/IEC number       | JIS number   | Comment   |
|----------------------|--------------|---|
| ISO12100-1           | JIS B 9700-1 | Earlier designation TR B 0008                         |
| ISO12100-2           | JIS B 9700-2 | Earlier designation TR B 0009                         |
| ISO14121- 1 / EN1050 | JIS B 9702   |   |
| ISO13849-1           | JIS B 9705-1 |   |
| ISO13849-2           | JIS B 9705-1 |   |
| IEC 60204-1          | JIS B 9960-1 | Without annex F or route map of the European foreword |
| IEC 61508-0 to -7    | JIS C 0508   |   |
| IEC 62061            |              | JIS number not yet assigned                           |

## 1.5 Equipment regulations

In addition to the requirements of the guidelines and standards, company-specific requirements must be taken into account. Large corporations in particular (e.g. automobile manufacturers) make stringent demands regarding automation components, which are often listed in their own equipment specifications.

Safety-related issues (e.g. operating modes, operator actions with access to hazardous areas, EMERGENCY STOP concepts, etc.) should be clarified with customers early on so that they can be integrated in the risk assessment/risk reduction process.

## 1.6 Other safety-related issues

### 1.6.1 Information sheets issued by the Employer's Liability Insurance Association

Safety-related measures to be implemented cannot always be derived from directives, standards, or regulations. In this case, supplementary information and explanations are required.

Some regulatory bodies issue publications on an extremely wide range of subjects.

Information sheets covering the following areas are available, for example:

- Process monitoring in production environments
- Axes subject to gravitational force
- Roller pressing machines
- Lathes and turning centers - purchasing/selling

These information sheets issued by specialist committees can be obtained by all interested parties (e.g. to provide support in factories, or when regulations or safety-related measures for plants and machines are defined). These information sheets provide support for the fields of machinery construction, production systems, and steel construction.

You can download the information sheets from the following Internet address (website is in German, although some of the sheets are available in English):

<http://www.bg-metall.de/>

Click the "Downloads" quick link and select the category "Informationblätter der Fachausschüsse".

### 1.6.2 Additional references

- Safety Integrated: The Safety System for Industry (5th Edition and supplement), order no. 6ZB5 000-0AA01-0BA1
- Safety Integrated - Terms and Standards - Machine Safety Terminology (Edition 04/2007), order no. E86060-T1813-A101-A1





# General information about SINAMICS Safety Integrated

# 2

## 2.1 Supported functions

All of the Safety Integrated functions available under SINAMICS S120 are listed in this chapter. SINAMICS makes a distinction between Safety Integrated Basic Functions and Safety Integrated Extended Functions.

The safety functions listed here conform to:

- Safety Integrity Level (SIL) 2 according to DIN EN 61508
- Category 3 to DIN EN ISO 13849-1
- Performance level (PL) d according to DIN EN ISO 13849-1

The safety functions correspond to the functions according to DIN EN 61800-5-2.

The following Safety Integrated functions (SI functions) are available:

## 2.1 Supported functions

- **Safety Integrated Basic Functions**

These functions are part of the standard scope of the drive and can be used without requiring an additional license. These functions are always available. These functions do not place any special requirements on the encoder used.

- Safe Torque Off (STO)

STO is a safety function that prevents the drive from restarting unexpectedly, in accordance with EN 60204-1, Section 5.4.

- Safe Stop 1 (SS1, time controlled)

Safe Stop 1 is based on the "Safe Torque Off" function. This means that a Category 1 stop in accordance with EN 60204-1 can be implemented.

- Safe Brake Control (SBC)

The SBC function permits the safe control of a holding brake.

Note regarding Power/Motor Modules in chassis format:

For the chassis format, SBC is only supported by Power/Motor Modules with order number ...3 or higher. A Safe Brake Adapter is needed in addition for this design.

Note regarding Power/Motor Modules in blocksize format:

blocksize Power Modules additionally require a Safe Brake Relay for this function.

- **Safety Integrated Extended Functions**

These functions require an additional Safety license: Extended Functions with encoder require an encoder with Safety capability (see section "Reliable actual value acquisition with encoder system").

- Safe Torque Off (STO)

STO is a safety function that prevents the drive from restarting unexpectedly, in accordance with EN 60204-1, Section 5.4.

- Safe Stop 1 (SS1, time and acceleration controlled)

The SS1 function is based on the "Safe Torque Off" function. This means that a Category 1 stop in accordance with EN 60204-1 can be implemented.

- Safe Stop 2 (SS2)

The SS2 function brakes the motor safely with a subsequent transition to "Safe Operating Stop" (SOS). This means that a Category 2 stop in accordance with EN 60204-1 can be implemented.

- Safe Operating Stop (SOS)

SOS protects against unintentional movement. The drive is in closed-loop control mode and is not disconnected from the power supply.

- Safely Limited Speed (SLS)

The SLS function ensures that the drive does not exceed a preset speed limit.

- Safe Speed Monitor (SSM)

The SSM function enables safe detection of a speed limit undershot in both directions of rotation, for example, for zero speed detection. A fail-safe output signal is available for further processing

- Safe Acceleration Monitor (SAM)

The SAM function monitors the safe braking of the drive during the ramp down. An unintentional "reacceleration" is reliably prevented. It is a part of the SS1 and SS2 functions.

- Safe Brake Ramp (SBR)

The Safe Brake Ramp function provides reliable monitoring of the brake ramp. It is part of the SS1 without encoder and SLS without encoder functions.

- Safe Direction (SDI)

The Safe Direction function provides reliable monitoring of the direction of motion.

- Safety Info Channel (SIC)

The Safety Info Channel enables Safety Integrated functionality status information of the drive to be transmitted to the higher-level control.

## 2.2 Preconditions for the Safety Extended Functions

- A license is required to use the Safety Integrated Extended Functions. The associated license key is entered in parameter p9920 in ASCII code. The license key is activated using parameter p9921 = 1. Alternatively, you can enter the license key via the STARTER button "License Key".
- For information on how to generate the license key for the product "SINAMICS Safety Integrated Extended Functions", read the section "Licensing" in the SINAMICS S120 Function Manual. An insufficient license is indicated via the following alarm and LED:
  - A13000 --> License not sufficient
  - LED RDY --> Flashes green/red at 0.5 Hz
- Control via PROFIsafe or TM54F
- An activated speed controller in the drive
- Overview of hardware components that support the Extended Functions:
  - Control Unit CU320-2
  - Motor Modules Booksize where the order number ends as follows: ...3 or higher
  - Motor Modules Booksize Compact
  - Motor Modules Booksize where the order number ends as follows: -xxx3 or higher
  - Motor Modules Chassis where the order number ends as follows: -xxx3 or higher (For this design, Extended Functions are permitted only **with** sin/cos encoders.)
  - Motor Modules Cabinet where the order number ends as follows: -xxx2 or higher
  - Sensor Module SMC20, SME20/25/120/125, SMI20
  - Power Modules Blocksize
  - Control Unit adapter CUA31 with order no.: 6SL3040-0PA00-0AA1
  - Control Unit adapter CUA32 with order no.: 6SL3040-0PA01-0AA0
  - Motors with integrated encoder and encoder evaluation with DRIVE-CLiQ interface

## 2.3 Controlling the Safety Integrated functions

The following options for controlling Safety Integrated functions are available:

Table 2- 1 Controlling the Safety Integrated functions

|                    | Terminals (on the Control Unit and Motor/Power Module) | PROFIsafe based on PROFIBUS or PROFINET | TM545F |
|--------------------|--|---|--------|
| Basic Functions    | Yes  | Yes                                     | No     |
| Extended Functions | No   | Yes                                     | Yes    |

For Extended Functions, control is also possible via the Terminal Module TM54F. In this case, control via terminals **and** TM54F or terminals **and** PROFIsafe can be simultaneously selected.

|  |
|--|
| <b>NOTICE</b>  |
| <b>Safety Integrated functions with SIMOTION</b>       |
| PROFISafe via PROFINET is not permitted with SIMOTION. |

|  |
|--|
| <b>NOTICE</b>  |
| <b>PROFIsafe or TM54F</b>  |
| Using a Control Unit, control is possible either via PROFIsafe or TM54F. Mixed operation is not permissible. |

---

### Note

When controlling Safety Integrated functions via a TM54F, you may only assign each drive to precisely one drive group of the TM54F.

---

## 2.4 Drive monitoring with or without encoder

If motors without an encoder are being used, not all Safety Integrated functions can be used. In operation without encoder the speed actual values are calculated from the measured electrical actual values.

As a consequence, speed monitoring down to a speed of 0 rpm is also possible for operation without an encoder.

Table 2- 2 Overview of Safety Integrated functions

|                    | Functions                 | Abbreviation | With encoder | Without encoder                            | Brief description  |
|--------------------|---------------------------|--------------|--------------|--|--|
| Basic Functions    | Safe Torque Off           | STO          | Yes          | Yes  | Safe torque off  |
|                    | Safe Stop 1               | SS1          | Yes          | Yes  | Safe stopping process in accordance with stop category 1 |
|                    | Safe Brake Control        | SBC          | Yes          | Yes  | Safe brake control                                       |
| Extended Functions | Safe Torque Off           | STO          | Yes          | Yes  | Safe torque off  |
|                    | Safe Stop 1               | SS1          | Yes          | Yes  | Safe stop in accordance with stop category 1             |
|                    | Safe Brake Control        | SBC          | Yes          | Yes  | Safe brake control                                       |
|                    | Safe Stop 2               | SS2          | Yes          | No   | Safe stop in accordance with stop category 2             |
|                    | Safe Operating Stop       | SOS          | Yes          | No   | Safe monitoring of the standstill position               |
|                    | Safely Limited Speed      | SLS          | Yes          | Yes  | Safe monitoring of the maximum speed                     |
|                    | Safe Speed Monitor        | SSM          | Yes          | No   | Safe monitoring of the minimum speed                     |
|                    | Safe Acceleration Monitor | SAM          | Yes          | No   | Safe monitoring of drive acceleration                    |
|                    | Safe Brake Ramp           | SBR          | No           | Yes  | Safe brake ramp  |
| Safe Direction     | SDI                       | Yes          | Yes          | Safe monitoring of the direction of motion |  |

The configuration of the Safety Integrated functions and the selection of monitoring with or without encoder takes place in the Safety screens of the STARTER or SCOUT tools.

### Monitoring with an encoder

The Safety Integrated functions with encoder are configured using  $p9506 = p9306 = 0$  in the expert list (factory setting) or by selecting "with encoder" in the Safety screen form.

The Safe Acceleration Monitor (SAM) recognizes if the drive accelerates beyond the tolerance defined in  $p9348/p9548$  during the ramp down phase, and generates a STOP A. The monitoring function is activated for SS1 (or STOP B) and SS2 (or STOP C) and is deactivated after the speed drops below the value set in  $p9368/p9568$ .

You can find more detailed information on the Safe Acceleration Monitor later on in this manual.

### Monitoring without an encoder

The encoderless Safety Integrated functions are configured in the expert list using  $p9506 = p9306 = 1$  or  $p9506 = p9306 = 3$  or by selecting "without encoder" in the Safety screen form.

For speed monitoring without encoder, the drive is braked along a ramp, which is set using Safe Brake Ramp (SBR encoderless). The gradient of the brake ramp is defined using a reference speed ( $p9581/p9381$ ) and a monitoring time ( $p9583/p9383$ ). In addition, a delay time ( $p9582/p9382$ ) can be set. The brake ramp is effectively monitored once this delay time expires.

If a Safety Integrated function is activated, e.g. SS1, then the system monitors whether the actual value of the speed remains below the brake ramp during the complete braking operation.

For  $p9506/p9306 = 3$ , the Safety functions without encoder correspond to the functions with encoder, and SAM responds just the same as for "monitoring with encoder".

## 2.5 Parameter, checksum, version, password

### Properties of Safety Integrated parameters

The following applies to Safety Integrated parameters:

- The safety parameters are kept separate for each monitoring channel.
- During startup, checksum calculations (Cyclic Redundancy Check, CRC) are performed on the safety parameter data and checked. The display parameters are not contained in the CRC.
- Data storage: The parameters are stored on the non-volatile memory card.
- Factory settings for safety parameters

A reset of the safety parameters to the factory setting on a drive-specific basis using p0970 or p3900 and p0010 = 30 is only possible when the safety functions are not enabled (p9301 = p9501 = p9601 = p9801 = p10010 = 0).

A complete reset of all parameters to the factory settings (p0976 = 1 and p0009 = 30 on the Control Unit) is possible even when the safety functions are enabled (p9301 = p9501 = p9601 = p9801 = p10010 ≠ 0).

- The Safety parameterization is password-protected against accidental or unauthorized changes.

#### NOTICE

The following safety parameters are not protected by the safety password:

- p9370 SI Motion acceptance test mode (Motor Module)
- p9570 SI Motion acceptance test mode (Control Unit)
- p9533 SI Motion SLS setpoint speed limitation
- p9783 SI Motion synchronous motor current without encoder

### Checking the checksum

For each monitoring channel, the safety parameters include one parameter for the actual checksum for the safety parameters that have undergone a checksum check.

During commissioning, the actual checksum must be transferred to the corresponding parameter for the setpoint checksum. This can be done for all checksums of a drive object at the same time with parameter p9701.

Basic Functions

- r9798 SI actual checksum SI parameters (Control Unit)
- p9799 SI setpoint checksum SI parameters (Control Unit)
- r9898 SI actual checksum SI parameters (Motor Module)
- p9899 SI setpoint checksum SI parameters (Motor Module)



#### Extended Functions

- r9398[0...1] SI Motion actual checksum SI parameters (Motor Module)
- r9399[0...1] SI Motion setpoint checksum SI parameters (Motor Module)
- r9728[0...2] SI Motion actual checksum SI parameters
- p9729[0...2] SI Motion setpoint checksum SI parameters

During each ramp-up procedure, the actual checksum is calculated via the safety parameters and then compared with the setpoint checksum.

If the actual and reference checksums are different, fault F01650/F30650 or F01680/F30680 is output.

### Safety Integrated versions

The safety firmware has a separate version ID for the Control Unit and Motor Module.

For the Basic Functions:

- r9770 SI version, drive-autonomous safety functions (Control Unit)
- r9870 SI version (Motor Module)

For the Extended Functions:

- r9590 SI Motion version safe movement monitoring (Control Unit)
- r9390 SI Motion version safe movement monitoring (Motor Module)
- r9890 SI version (Sensor Module)
- r10090 SI version TM54F

---

#### Note

For detailed requirements regarding Safety Integrated firmware, see "Safety Integrated firmware versions".

---

### Password

The safety password protects the safety parameters against unintentional or unauthorized access.

In commissioning mode for Safety Integrated (p0010 = 95), you cannot change safety parameters until you have entered the valid safety password in p9761 for the drives or p10061 for the TM54F.

- When Safety Integrated is commissioned for the first time, the following applies:
  - Default of p10061 = 0 (SI password entry TM54F)
  - Default of p9761 = 0 (SI password entry drive)

This means:

the safety password does not need to be set during first commissioning.

- In the case of a series commissioning of Safety or in the case of spare part installation, the following applies:
  - The safety password is retained on the memory card and in the STARTER project.
  - No safety password is required in the case of spare part installation.
- Change password for the drives
  - p0010 = 95 Commissioning mode
  - p9761 = Enter "old safety password".
  - p9762 = Enter "new password".
  - p9763 = Confirm "new password".
  - The new and confirmed safety password is valid immediately.
- Change password for the TM54F
  - p0010 = 95 Commissioning mode
  - p10061 = Enter "Old TM54F Safety Password" (factory setting "0")
  - p10062 = Enter "new password"
  - p10063 = Acknowledge "new password"
  - The new and acknowledged safety password is valid immediately.

If you need to change safety parameters but you do not know the safety password, the following options are available:

- Readout of the password by Siemens

Contact your regional Siemens office and ask for a readout of the password (complete drive project must be made available).
- Completely recommission SINAMICS S120.
  - Set the entire drive unit (Control Unit with all connected drives/components) to the factory setting.
  - Recommission the drive unit and drives.
  - Recommission Safety Integrated.

### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p9761 SI password input
- p9762 SI password new
- p9763 SI password acknowledgement
- p10061 SI password input TM54F
- p10062 SI password new TM54F
- p10063 SI password acknowledgement TM54F

## 2.6 DRIVE-CLiQ rules for Safety Integrated Functions

---

### Note

For the Safety Integrated Functions (Basic and Extended Functions) the general DRIVE-CLiQ rules apply as a basic principle. You will find these rules in the chapter "Rules for connection with DRIVE-CLiQ" in the following manual:

References: SINAMICS S120 Drive Functions Function Manual

This specification also lists the exceptions for Safety Integrated components depending on the firmware version.

---

The following rules also apply particularly for Safety Integrated Extended Functions:


- Maximum of 6 servo axes for default clock cycle settings (monitoring clock cycle = 12 ms; current controller cycle = 125  $\mu$ s).
- Of which a maximum of 4 servo axes in a DRIVE-CLiQ line.
- Maximum of 6 vector axes for default clock cycle settings (monitoring clock cycle = 12 ms; current controller cycle = 500  $\mu$ s).
- A Double Motor Module, a DMC20 or DME20 and a TM54F each correspond to two DRIVE-CLiQ nodes.  
**Note:** This limitation is not valid for SINUMERIK 828D-2.
- TM54F
  - The TM54F connection should be established via the DRIVE-CLiQ directly at a Control Unit. Only one TM54F Terminal Module can be assigned to each Control Unit.
  - Additional DRIVE-CLiQ nodes can be operated at the TM54F, such as Sensor Modules and Terminal Modules (excluding an additional TM54F). Motor Modules and Line Modules should not be connected to a TM54F.
  - In the case of a CU310-2 Control Unit, it is not possible to connect the TM54F to the DRIVE-CLiQ line of a Power Module. The TM54F can only be connected to the sole DRIVE-CLiQ X100 socket of the Control Unit.



## System features

### 3.1 Latest information

Important note for maintaining the operational safety of your system:

|   |
|---|
|  <b>WARNING</b>  |
| Systems with safety-related characteristics are subject to special operational safety requirements on the part of the operating company. The supplier is also obliged to comply with special product monitoring measures. For this reason, we publish a special newsletter containing information on product developments and features that are (or could be) relevant when operating safety-related systems. You should subscribe to the corresponding newsletter in order to obtain the latest information and to allow you to modify your equipment accordingly. |

Go into the Internet under:

<http://automation.siemens.com>

To subscribe to the newsletter, please proceed as follows:

1. Select the desired language for the webpage.
2. Click on the menu item "Support".
3. Click on the menu item "Newsletter".

---

#### Note

You have to register and log in if you want to subscribe to any newsletters. You will be led automatically through the registration process.

---

4. Click on "Login" and log in with your access data. If you do not yet have a login and password, select "Yes, I would like to register now".

You can subscribe to the individual newsletters in the following window.

5. Select the document type you wish to be informed about under "Select document type for topic and product newsletters".
6. Under the "Product Support" heading on this page, you can see which newsletter is currently available.

7. Open the subject area "Safety Engineering - Safety Integrated".

You will now be shown which newsletter is available for this particular subject area or topic. You can subscribe to the appropriate newsletter by clicking on the box. If you require more detailed information on the newsletters then please click on these. A small supplementary window is opened from where you can take the appropriate information.

8. At the very least, register for the newsletters for the following product areas:
  - Safety Integrated for SIMOTION
  - Drives

## 3.2 Certification

The safety functions of the SINAMICS S drive system meet the following requirements:

- Category 3 according to ISO 13849-1
- Performance level (PL) d according to EN ISO 13849-1
- Safety integrity level 2 (SIL 2) to IEC 61508
- EN 954-1
- EN 61800-5-2
- Systematic capability according to EN 62061

In addition, most of the safety functions of the SINAMICS S have been certified by independent institutes. An up-to-date list of certified components is available on request from your local Siemens office.

## 3.3 Safety instructions

### Note

Additional safety information and residual risks not specified in this section are included in the relevant sections of this Function Manual.

### DANGER

Safety Integrated can be used to minimize the level of risk associated with machines and plants.

Machines and plants can only be operated safely in conjunction with Safety Integrated, however, when the machine manufacturer is familiar with and observes every aspect of this technical user documentation, including the documented general conditions, safety information, and residual risks.

- Precisely knows and observes this technical user documentation - including the documented limitations, safety information and residual risks;
- Carefully constructs and configures the machine/plant. A careful and thorough acceptance test must then be performed by qualified personnel and the results documented.
- Implements and validates all the measures required in accordance with the machine/plant risk analysis by means of the programmed and configured Safety Integrated functions or by other means.

The use of Safety Integrated does not replace the machine/plant risk assessment carried out by the machine manufacturer as required by the EC machinery directive. In addition to using Safety Integrated functions, further risk reduction measures must be implemented.

### WARNING

The Safety Integrated functions cannot be activated until the system has been completely powered up. System startup is a critical operating state with increased risk. No personnel may be present in the immediate danger zone in this phase.

The drives of vertical axes must be in torque state.

A complete forced dormant error detection cycle is required after power on (see chapter "Forced dormant error detection").

 **WARNING**

EN 60204-1

The Emergency Stop function must bring the machine to a standstill in accordance with stop category 0 or 1 (STO or SS1).

The machine must not restart automatically after EMERGENCY STOP.

When individual safety functions (Extended Functions) are deactivated, an automatic restart is permitted under certain circumstances depending on the risk analysis (except when Emergency Stop is reset). An automatic start is permitted when a protective door is closed, for example.

 **WARNING**

After hardware and/or software components have been modified or replaced, all protective equipment must be closed prior to system startup and drive activation. Personnel shall not be present within the danger zone.

It may be necessary to carry out a partial or complete acceptance test or a simplified functional test (see chapter "Acceptance test") after having made certain changes or replacements.

Before allowing anybody to re-enter the danger zone, you should test steady control response by briefly moving the drives in forward and reverse direction (+/-).

**To observe during power on:**

The Safety Integrated functions are only available and can only be selected after the system has completely powered up.



 **WARNING**

- For a 1-encoder system, encoder faults are detected using different hardware and software monitoring functions. It is not permissible to disable these monitoring functions and they must be parameterized carefully. Depending on the fault type and responding monitoring function, stop function category 0 or 1 in accordance with EN 60204-1 (fault response functions STOP A or STOP B in accordance with Safety Integrated) is selected.
- The category 0 stop function to EN 60204-1 (STO or STOP A to Safety Integrated) means that the drives are not decelerated but instead coast to standstill (the time required to coast to standstill depends on the kinetic energy). This must be included in the logic of the protective door lock, for example, by means of logic operation of "SSM with encoder (n<nx)". For Safety without encoder, you need to use other measures to ensure that the protective door remains locked until the drive has come to a standstill.
- Safety Integrated functions cannot detect parameterization errors made by the machine manufacturer. The required safety level can only be reached by means of an elaborate acceptance test.
- Motor Modules or the motor must be replaced with a device of the same type, as the parameter settings will otherwise lead to an incorrect response of the Safety Integrated functions. The corresponding drive must be re-calibrated after an encoder is replaced.

 **WARNING**

If an internal or external fault occurs, none or only some of the parameterized safety functions are available during the STOP-F response triggered by the fault. This must be taken into account when a delay time between STOP F and STOP B is parameterized. This applies in particular to vertical axes.

**NOTICE**

**Changing the EDS with safe motion monitoring**

An encoder which is used for Safety functions must not be switched over when a data set is switched over.

The Safety functions check the safety-relevant encoder data for changes when data sets are switched over. If a change is detected, fault F01670 is displayed with a fault value of 10, which results in a non-acknowledgeable STOP A. The safety-relevant encoder data in the various data sets must therefore be identical.

### 3.4 Probability of failure of the safety functions (PFH value)

#### Probability of failure

The probability of failure of safety functions must be specified in the form of a PFH value (Probability of Failure per Hour) in accordance with IEC 61508, IEC 62061, and ISO 13849-1. The PFH value of a safety function depends on the safety concept of the drive unit and its hardware configuration, as well as on the PFH values of other components used for this safety function.

Corresponding PFH values are provided for the SINAMICS S120 drive system, depending on the hardware configuration (number of drives, control type, number of encoders used). The various integrated safety functions are not differentiated.

The PHF values can be requested from your local sales office.

### 3.5 Response times

The Basic Functions are executed in the monitoring clock cycle (p9780). PROFIsafe telegrams are evaluated in the PROFIsafe scan cycle, which corresponds to twice the monitoring clock cycle (PROFIsafe scan cycle =  $2 \times r9780$ ).

#### Controlling Basic Functions via terminals on the Control Unit and Motor Module


The following table lists the response times from the control via terminals until the response actually occurs.

Table 3-1 Response times for control via terminals on the Control Unit and the Motor Module.

| Function   | Typical                                | Worst case                             |
|--|--|--|
| STO  | $2 \times r9780 + t\_E$                | $4 \times r9780 + t\_E$                |
| SBC  | $4 \times r9780 + t\_E$                | $8 \times r9780 + t\_E$                |
| SS1 (time controlled)<br>Selection up until braking is initiated | $2 \times r9780 + t\_E + 2 \text{ ms}$ | $4 \times r9780 + t\_E + 2 \text{ ms}$ |

The following applies for  $t\_E$  (debounce time of the used digital input F-DI):

$p9651 = 0$   $t\_E = p0799$  (default = 4 ms)  
 $p9651 \neq 0$   $t\_E = p9651 + 1 \text{ ms}$

|  |
|--|
|  <b>CAUTION</b> |
|--|

|  |
|--|
| Response time of Power Module PM340 for STO, controlled via terminals:<br>$5 \times r9780 + p0799$ |
|--|

### Controlling Basic Functions via Profisafe

The following table lists the response times from receiving the PROFIsafe telegram at the Control Unit up to initiating the particular response.

Table 3- 2 Response times when controlling via PROFIsafe

| Function   | Typical           | Worst case         |
|--|-------------------|--------------------|
| STO  | 5 x r9780         | 5 x r9780          |
| SBC  | 6 x r9780         | 10 x r9780         |
| SS1 (time controlled)<br>Selection up until STO is initiated     | 5 x r9780 + p9652 | 5 x r9780 + p9652  |
| SS1 (time controlled)<br>Selection up until SBC is initiated     | 6 x r9780 + p9652 | 10 x r9780 + p9652 |
| SS1 (time controlled)<br>Selection up until braking is initiated | 2 x r9780 + 2 ms  | 4 x r9780 + 2 ms   |

### Control of Safety Extended Functions with encoder via PROFIsafe

The following table lists the response times from receiving the PROFIsafe telegram at the Control Unit up to initiating the particular response.

Table 3- 3 Response times when controlling via PROFIsafe

| Function  | Typical               | Worst case   |
|---|-----------------------|--|
| STO   | 4 x p9500 + r9780     | 4 x p9500 + 3 x r9780                                |
| SBC   | 4 x p9500 + 2 x r9780 | 4 x p9500 + 6 x r9780                                |
| SS1 (time and acceleration controlled), SS2<br>selection until braking is initiated | 4 x p9500 + 2 ms      | 5 x p9500 + 2 ms                                     |
| SAM response of safe acceleration monitoring  | 2 x p9500 + 2 ms      | 2.5 x p9500 + r9780 + t <sub>ACT</sub> <sup>1)</sup> |
| SOS standstill tolerance window violated  | 1.5 x p9500 + 2 ms    | 3 x p9500 + t <sub>ACT</sub> <sup>1)</sup> + 2 ms    |
| SLS speed limit violated <sup>2)</sup>  | 2 x p9500 + 2 ms      | 3.5 x p9500 + t <sub>ACT</sub> <sup>1)</sup> + 2 ms  |
| SSM <sup>3)</sup>   | 4 x p9500             | 4.5 x p9500 + t <sub>ACT</sub> <sup>1)</sup>         |
| SDI with encoder (until braking is initiated)                                       | 1.5 x p9500 + 2 ms    | 3 x p9500 + t <sub>ACT</sub> <sup>1)</sup> + 2 ms    |

The specified response times involve internal SINAMICS response times. Program run times in the F host and the transmission time via PROFIBUS or PROFINET are not taken into account.

### Control of Safety Extended Functions with encoder via TM54F

The table below shows the response times after the appearance of a signal at the terminals.

Table 3- 4 Response times with control via TM54F

| Function   | Typical   | Worst case  |
|--|---|---|
| STO  | $2.5 \times p9500 + r9780 + p10017 + 1.5 \text{ ms}$        | $3 \times p9500 + 3 \times r9780 + p10017 + 2 \text{ ms}$ |
| SBC  | $2.5 \times p9500 + 2 \times r9780 + p10017 + 1 \text{ ms}$ | $3 \times p9500 + 6 \times r9780 + p10017 + 2 \text{ ms}$ |
| SS1 (time and acceleration controlled), SS2 selection until braking is initiated | $2.5 \times p9500 + p10017 + 3 \text{ ms}$                  | $4 \times p9500 + p10017 + 4 \text{ ms}$                  |
| SAM response of safe acceleration monitoring                                     | $2 \times p9500 + 2 \text{ ms}$                             | $2.5 \times p9500 + r9780 + t_{ACT}^{1)}$                 |
| SOS standstill tolerance window violated   | $1.5 \times p9500 + 2 \text{ ms}$                           | $3 \times p9500 + t_{ACT}^{1)}) + 2 \text{ ms}$           |
| SLS speed limit violated <sup>2)</sup>   | $2 \times p9500 + 2 \text{ ms}$                             | $3.5 \times p9500 + t_{ACT}^{1)}) + 2 \text{ ms}$         |
| SSM <sup>4)</sup>  | $3 \times p9500$  | $3.5 \times p9500 + t_{ACT}^{1)})$                        |
| SDI with encoder (until braking is initiated)                                    | $1.5 \times p9500 + 2 \text{ ms}$                           | $3 \times p9500 + t_{ACT}^{1)}) + 2 \text{ ms}$           |

### Control of Safety Extended Functions without encoder via PROFIsafe

The following table lists the response times from receiving the PROFIsafe telegram at the Control Unit up to initiating the particular response.

Table 3- 5 Response times when controlling via PROFIsafe

| Function                                       | Typical                                    | Worst case   |   |
|--|--|--|---|
| STO  | $4 \times p9500 + r9780 + p10017$          | $4 \times p9500 + 3 \times r9780 + p10017$             |   |
| SBC  | $4 \times p9500 + 2 \times r9780 + p10017$ | $4 \times p9500 + 6 \times r9780 + p10017$             |   |
| SS1 (time and acceleration controlled)         | $4 \times p9500 + p10017 + 2 \text{ ms}$   | $5 \times p9500 + p10017 + 2 \text{ ms}$               |   |
| SBR response of Safe Brake Ramp monitoring     | $3 \times p9500 + p9587 + 6 \text{ ms}$    | $3.5 \times p9500 + r9780 + p9587 + 32 \text{ ms}$     |   |
| SLS speed limit violated <sup>2)</sup>         | Standard                                   | $3 \times p9500 + p9587 + 6 \text{ ms}$                | $4.5 \times p9500 + r9780 + p9587 + 32 \text{ ms}$              |
|  | Start phase <sup>5)</sup>                  | $3 \times p9500 + p9587 + 6 \text{ ms} + p9586^{5)}$   | $4.5 \times p9500 + r9780 + p9587 + 32 \text{ ms} + p9586^{5)}$ |
| SSM without encoder                            | $6 \times p9500 + p9587 + 4 \text{ ms}$    | $6.5 \times p9500 + p9587 + 32 \text{ ms}$             |   |
| SDI without encoder until braking is initiated | Standard                                   | $2.5 \times p9500 + p9587 + 6 \text{ ms}$              | $4 \times p9500 + r9780 + p9587 + 32 \text{ ms}$                |
|  | Start phase <sup>5)</sup>                  | $2.5 \times p9500 + p9587 + 6 \text{ ms} + p9586^{5)}$ | $4 \times p9500 + r9780 + p9587 + 32 \text{ ms} + p9586^{5)}$   |

The specified response times involve internal SINAMICS response times. Program run times in the F host and the transmission time via PROFIBUS or PROFINET are not taken into account.

|  |
|--|
| <b>CAUTION</b>   |
| <p>If the SLS or SDI safety functions are selected without an encoder when enabling the control pulse for the Power Module, ensure during the start phase that the response times for limit violations and system errors are extended by the time value set in parameters p9586 and p9386<sup>5)</sup> in comparison with standard values (see table above).</p> <p>Following the time interval set for parameters p9586 and p9386, the standard response times apply (see table above).</p> |

### Control of Safety Extended Functions without encoder via TM54F

The table below shows the response times after the appearance of a signal at the terminals.

Table 3- 6 Response times with control via TM54F

| Function                                       | Typical  | Worst case   |
|--|--|--|
| STO  | $2.5 \times p9500 + r9780 + 1.5 \text{ ms}$        | $3 \times p9500 + 3 \times r9780 + 2 \text{ ms}$       |
| SBC  | $2.5 \times p9500 + 2 \times r9780 + 1 \text{ ms}$ | $3 \times p9500 + 6 \times r9780 + 2 \text{ ms}$       |
| SS1 (time and acceleration controlled)         | $2.5 \times p9500 + 3 \text{ ms}$                  | $4 \times p9500 + 4 \text{ ms}$                        |
| SBR response of Safe Brake Ramp monitoring     | $3 \times p9500 + p9587 + 6 \text{ ms}$            | $3.5 \times p9500 + r9780 + p9587 + 32 \text{ ms}$     |
| SLS speed limit violated <sup>2)</sup>         | Standard   | $3 \times p9500 + p9587 + 6 \text{ ms}$                |
|  | Start phase <sup>5)</sup>                          | $3 \times p9500 + p9587 + 6 \text{ ms} + p9586^{5)}$   |
| SSM without encoder                            | $4 \times p9500 + p9587 + 4 \text{ ms}$            | $4.5 \times p9500 + p9587 + 32 \text{ ms}$             |
| SDI without encoder until braking is initiated | Standard   | $4 \times p9500 + r9780 + p9587 + 32 \text{ ms}$       |
|  | Start phase <sup>5)</sup>                          | $2.5 \times p9500 + p9587 + 6 \text{ ms} + p9586^{5)}$ |

|  |
|--|
| <b>CAUTION</b>   |
| <p>If the SLS or SDI safety functions are selected without an encoder when enabling the control pulse for the Power Module, ensure during the start phase that the response times for limit violations and system errors are extended by the time value set in parameters p9586 and p9386<sup>5)</sup> in comparison with standard values (see table above).</p> <p>Following the time interval set for parameters p9586 and p9386, the standard response times apply (see table above).</p> |

**Information about the tables:**

1)  $t_{ACT}$

For  $p9511 \neq 0$   $t_{ACT} = p9511$

For  $p9511 = 0$  If an isochronous PROFIBUS master is available:  $t_{ACT} = \text{PROFIBUS cycle}$

Otherwise:  $t_{ACT} = 1 \text{ ms}$

2) SLS: Specification of the response time required for initiation of a braking reaction in the drive, or for the output of the "SOS selected" message to the motion control system.

3) SSM: The data corresponds to the times between the limit value being undershot up to sending the information via PROFIsafe.

4) SSM: The data corresponds to the times between the limit value being undershot up to output of the information via the TM54F terminals.

5) In this way, you determine the "Evaluation delay time without encoder" ( $p9386/p9586$ )

The  $p9586/p9386$  delay time is used for preventing unnecessary messages during the start phase of the converter.

1. To determine the minimum delay time of  $p9586/p9386$ , perform a trace recording of the drive system's startup characteristics (with motor and supplied load). In this case, the trace function of the STARTER enables the value for  $p9586/p9386$  to be determined.
2. To prevent any unnecessary messages, deselect the functions "SDI without encoder" and "SLS without encoder".
3. Activate the trace function using the "OFF2 → inactive" trigger and as the signals to be recorded: at least one motor current phase and OFF2.  
  
Record this motor current phase following the ON command until  $I_{Rated}$  is achieved. Enter the time required for  $I_{min}$  to be achieved (+ 10 % reserve) into  $p9386$ .
4. Perform application-specific startup characteristics for the drive.
5. Deduct from the trace recording the time after which the peak current of the asynchronous motor or the pulse pattern of the rotor position identification finishes, and the current of  $p9588/p9388$  which exceeds the "Minimum current actual value acquisition without encoder".
6. Enter the time measured + approx. 10% into  $p9586$  (the same value is automatically entered into  $p9386$  by means of parameter duplication).
7. Activate the functions "SDI without encoder" and "SLS without encoder"
8. Now restart the machine, this will activate the trace function.
9. Unnecessary messages will no longer appear.

## 3.6 Residual risk

The fault analysis enables the machine manufacturer to determine the residual risk at his machine with regard to the drive unit. The following residual risks are known:

### WARNING

Due to the intrinsic potential of hardware faults, electrical systems are subject to additional residual risk, which can be expressed by means of the PFH value.

### WARNING

- Faults in the absolute track (C-D track), cyclic interchange of the drive phases (V-W-U instead of U-V-W) and reversal of the control direction may cause acceleration of the drive. Due to the fault, however, Category 1 and 2 stop functions according to EN 60204-1 (fault response functions STOP B to D in accordance with Safety Integrated) are not activated.  
Stop function Category 0 according to EN 60204-1 (fault response function STOP A in accordance with Safety Integrated) is not triggered until after the transition or delay time set in the parameter has elapsed. These faults are detected when SAM is selected (fault reaction functions STOP B/C) and stop function category 0 to EN 60204-1 (fault reaction function STOP A in accordance with Safety Integrated) is triggered as early as possible regardless of this delay. Electrical faults (defective components or similar) may also lead to the response stated above.
- Simultaneous failure of two power transistors (one in the upper and the other offset in the lower inverter bridge) in the inverter may cause brief movement of the drive, depending on the number of poles of the motor.  
Maximum value of this movement:  
Synchronous rotary motors: Max. movement =  $180^\circ / \text{no. of pole pairs}$   
Synchronous linear motors: Max. movement = pole width

### WARNING

- Violation of limits may briefly lead to a speed higher than the speed setpoint, or the axis may pass the defined position to a certain extent, depending on the dynamic response of the drive and on parameter settings.
- Mechanical forces greater than the maximum drive torque may force a drive currently operated in position control mode out of the Safe Operating Stop state (SOS) and trigger stop function category 1 to EN 60204-1 (fault reaction function STOP B).

 **WARNING**

Within a single-encoder system:

a) a single electrical fault in the encoder

(or loose encoder shaft coupling), or a loose encoder housing will cause a static state of the encoder signals (that is, they no longer follow a movement while still returning a correct level), and prevent fault detection while the drive is in stop state (for example, drive in SOS state).

Generally, the drive is held by the active closed-loop control. Especially for drives with suspended load, from a closed-loop control perspective, it is conceivable that drives such as these move without this being detected.

The risk of an electrical fault in the encoder as described under a) is only given for few encoder types with specific function principle (for example, encoders with microprocessor controlled signal generation such as the Heidenheim EQI, Hübner HEAG 159/160, or AMO measuring systems with sin/cos signals).

The risk analysis of the machine manufacturer must include all of the faults described above. Additional safety measures have to be taken for drives with suspended/vertical or pulling loads - e.g. in order to exclude faults under a):

- Use of an encoder with analog signal generation
- Use of a two-encoder system

In order to exclude the fault described in b), for example:

- An FMEA regarding encoder shaft breakage (or slip of the encoder shaft coupling), and a solution to prevent loose encoder housings, integration of a fault exclusion process to IEC 61800-5-2, or
- Implementation of a two-encoder system (the encoders must not be mounted on the same shaft).



## Safety Integrated basic functions

---

**Note**

The Basic Functions are also described in the following manual:

Reference: SINAMICS S120 Function Manual Drive Functions.

---

---

**Note**

You can ask your local sales office regarding the PFH values of the individual safety functions (also refer to the Section "Probability of failure of safety functions").

---

### 4.1 Safe Torque Off (STO)

In conjunction with a machine function or in the event of a fault, the "Safe Torque Off" (STO) function is used to safely disconnect the torque-generating energy feed to the motor.

When the function is selected, the drive unit is in a "safe status". The switching on inhibited function prevents the drive unit from being restarted.

The two-channel pulse suppression function integrated in the Motor Modules / Power Modules is a basis for this function.

#### Functional features of "Safe Torque Off"

- This function is integrated in the drive; this means that a higher-level controller is not required.
- The function is drive-specific, i.e. it is available for each drive and must be individually commissioned.
- The function must be enabled using parameters.
- When the "Safe Torque Off" function is selected, the following applies:
  - The motor cannot be started accidentally.
  - The pulse suppression safely disconnects the torque-generating energy feed to the motor.
  - The power unit and motor are not electrically isolated.

#### 4.1 Safe Torque Off (STO)

- Extended acknowledgment:  
If STO is selected/deselected (and p9307.0/p9507.0 = 1 are set), safety messages (in addition to fault messages) are also canceled automatically.
- A debounce function can be applied to the terminals of the Control Unit and the Motor Module/Power Module to prevent incorrect trips due to signal disturbances. The filter times are set using parameters p9651 and p9851.

 **WARNING**

Appropriate measures must be taken to ensure that the motor does not undesirably move once the energy feed has been disconnected, e.g. against coasting down or for a hanging/suspended axis, the "Safe Brake Control" (SBC) function should be enabled, also refer to Chapter "Safe Brake Control".

 **CAUTION**

If two power transistors simultaneously fail in the power unit (one in the upper and one in the lower bridge), then this can cause brief momentary movement.

The maximum movement can be:

Synchronous rotary motors: Max. movement =  $180^\circ / \text{No. of pole pairs}$

Synchronous linear motors: Max. movement = pole width

- The status of the "Safe Torque Off" function is displayed using parameters.

#### Enabling the "Safe Torque Off" function

The "Safe Torque Off" function is enabled via the following parameters:

- STO via terminals:  
p9601.0 = 1, p9801.0 = 1
- STO via TM54F (only with "Extended Functions" option):
  - p9601.2 = 1, p9801.2 = 1
  - p9601.3 = 0, p9801.3 = 0

- STO via PROFIsafe:
  - p9601.0 = 0, p9801.0 = 0
  - Basic Functions: p9601.2 = 0, p9801.2 = 0  
Extended Functions: p9601.2 = 1, p9801.2 = 1
  - p9601.3 = 1, p9801.3 = 1
- STO via PROFIsafe and terminals:
  - p9601.0 = 1, p9801.0 = 1
  - Basic Functions: p9601.2 = 0, p9801.2 = 0  
Extended Functions: p9601.2 = 1, p9801.2 = 1
  - p9601.3 = 1, p9801.3 = 1

### Selecting/deselecting "Safe Torque Off"

The following is executed when "Safe Torque Off" is selected:

- Each monitoring channel triggers safe pulse suppression via its switch-off signal path.
- A motor holding brake is closed (if connected and configured).

Deselecting "Safe Torque Off" represents an internal safety acknowledgement. The following is executed:

- Each monitoring channel cancels safe pulse suppression via its switch-off signal path.
- The Safety requirement "Close motor holding brake" is canceled.
- Any pending STOP F or STOP A commands are canceled (see r9772 / r9872).
- The cause of the fault must be removed.
- The messages in the fault memory must be additionally reset using the general acknowledgement mechanism.

---

#### Note

If "Safe Torque Off" is selected and deselected through one channel within the time in p9650/p9850, the pulses are suppressed without a message being output.

However, if you want a message to be displayed, then you must reconfigure N01620/N30620 as an alarm or fault using p2118 and p2119.

---

### Restart after the "Safe Torque Off" function has been selected

1. Deselect the function.
2. Issue drive enable signals.
3. Cancel the "switching on inhibited" and switch the drive back on.
  - 1/0 edge at input signal "ON/OFF1" (cancel "switching on inhibited")
  - 0/1 edge at input signal "ON/OFF1" (switch on drive)

#### *4.1 Safe Torque Off (STO)*

### **Status for "Safe Torque Off"**

The status of the "Safe Torque Off" (STO) function is displayed using the parameters r9772, r9872, r9773 and r9774.

As an alternative, the status of the functions can be displayed using the configurable messages N01620 and N30620 (configured using p2118 and p2119).

### **Response time for the "Safe Torque Off" function**

For the response times when the function is selected/deselected via input terminals, see the table in "Response times".

### **Internal armature short-circuit with the "Safe Torque Off" function**

The function "internal armature short-circuit" can be configured together with the "STO" function. However, only one of the two functions can be selected, as an OFF2 is also always triggered when STO is selected. This OFF2 disables the function "Internal armature short-circuit".

The "STO" safety function has the higher priority when simultaneously selected. If the "STO" function is initiated, then an activated "internal armature short-circuit" is disabled.

### **Overview of important parameters (see the SINAMICS S120/S150 List Manual)**

- p9601 SI enable, functions integrated in the drive (Control Unit)
- r9772 CO/BO: SI Status (Control Unit)
- r9872 CO/BO: SI Status (Motor Module)
- r9773 CO/BO: SI Status (Control Unit + Motor Module)
- r9774 CO/BO: SI Status (group STO)
- p0799 CU inputs/outputs sampling time
- r9780 SI Monitoring clock cycle (Control Unit)
- p9801 SI enable, functions integrated in the drive (Motor Module)
- r9880 SI Monitoring clock cycle (Motor Module)

## 4.2 Safe Stop 1 (SS1, time controlled)

### General description

The "Safe Stop 1" (SS1) function allows the drive to be stopped in accordance with EN 60204-1, Stop Category 1. The drive decelerates with the OFF3 ramp (p1135) once "Safe Stop 1" is selected and switches to "Safe Torque Off" once the delay time set in p9652/p9852 has elapsed.

|  |
|--|
| <b>CAUTION</b>   |
| If the "Safe Stop 1" function (time-controlled) function has been selected by parameterizing a delay in p9652/p9852, STO can no longer be selected directly via terminals. |

### Functional features of Safe Stop 1

SS1 is enabled when p9652 and p9852 (delay time) are not equal to "0".

- The precondition is that the Basic Functions or STO are enabled via terminals and/or PROFIsafe.
  - p9601.0/p9801.0 = 1 (enable via terminals)
  - p9601.3/p9801.3 = 1 (enable via PROFIsafe)
- Setting parameter p9652/p9852 has the following effect:

| Setting         | Effect   | Control mode for Basic Functions |
|-----------------|--|----------------------------------|
| p9652/p9852 = 0 | STO enabled  | Via terminals                    |
|                 | STO enabled and SS1 not enabled (cannot therefore be selected) | Via PROFIsafe                    |
| p9652/p9852 > 0 | SS1 enabled  | Via PROFIsafe or terminals       |

#### *4.2 Safe Stop 1 (SS1, time controlled)*

- When SS1 is selected, the drive is braked along the OFF3 ramp (p1135) and STO/SBC is automatically initiated after the delay time has expired (p9652/p9852).

After the function has been selected, the delay timer runs down - even if the function is deselected during this time. In this case, after the delay time has expired, the STO/SBC function is selected and then again deselected immediately.

---

#### **Note**

So that the drive is able to travel down the OFF3 ramp completely and any motor holding brake present can be applied, the delay time should be set as follows:

- Motor holding brake parameterized: Delay time  $\geq$  p1135 + p1228 + p1217
- Motor holding brake not parameterized: Delay time  $\geq$  p1135 + p1228

- 
- The selection is realized through two channels - however braking along the OFF3 ramp, only through one channel.
  - A debounce function can be applied to the terminals of the Control Unit and the Motor Module in order to prevent incorrect trips due to signal disturbances. The filter times are set using parameters p9651 and p9851.

#### **Prerequisite**

STO via terminals (p9601.0 = p9801.0 = 1) or Basic Functions via PROFIsafe (p9601.2 = p9801.2 = 0 and p9601.3 = p9801.3 = 1) must be configured.

In order that the drive can brake down to a standstill even when selected through one channel, the time in p9652/p9852 must be shorter than the sum of the parameters for the data cross-check (p9650/p9850 and p9658/p9858). Otherwise the drive will coast down after p9650 + p9658 have elapsed.

#### **Status for Safe Stop 1**

The status of the "Safe Stop 1" (SS1) function is displayed using the parameters r9772, r9872, r9773 and r9774.

Alternatively, the status of the functions can be displayed using the configurable messages N01621 and N30621 (configured using p2118 and p2119).

#### **Overview of important parameters (see the SINAMICS S120/S150 List Manual)**

- p1135[0...n] OFF3 ramp-down time
- p9652 SI Safe Stop 1 delay time (Control Unit)
- r9772 CO/BO: SI Status (Control Unit)
- r9773 CO/BO: SI Status (Control Unit + Motor Module)
- r9774 CO/BO: SI Status (group STO)
- r9872 CO/BO: SI Status (Motor Module)
- p9852 SI Safe Stop 1 delay time (Motor Module)

## 4.3 Safe Brake Control (SBC)

### Description

The "Safe Brake Control" function (SBC) is used to control holding brakes that function according to the closed-circuit principle (e.g. motor holding brake).

The command for releasing or applying the brake is transmitted to the Motor Module/Power Module via DRIVE-CLiQ. The Motor Module/Safe Brake Relay then carries out the action and activates the outputs for the brake.

Brake activation via the brake connection on the Motor Module/Safe Brake Relay involves a safe, two-channel method.

### Note

- Chassis components support this function from an order number with the ending ...xxx3. A Safe Brake Adapter is needed in addition for this design.
- To ensure that this function can be used for Blocksize Power Modules, a Safe Brake Relay must be used (for more information, see the Equipment Manual).  
When the Power Module is configured automatically, the Safe Brake Relay is detected and the motor holding brake type is defaulted (p1278 = 0).

### WARNING

"Safe Brake Control" does not detect mechanical defects. The system does not detect whether a brake is e.g. worn or has a mechanical defect, whether it opens or closes. A cable break or a short-circuit in the brake winding is only detected when the state changes, i.e. when the brake either opens or closes.

### Functional features of "Safe Brake Control"

- When "Safe Torque Off" (STO) is selected or when safety monitoring functions respond, SBC is executed with safe pulse suppression.
- Unlike conventional brake control, SBC is executed via p1215 through two channels.
- SBC is executed regardless of the brake control or mode set in p1215. SBC is not recommended, however, when 1215 = 0 or 3.
- The function must be enabled using parameters.
- When the state changes, electrical faults, such as e.g. a short-circuit in the brake winding or wire breakage can be detected.

### Enabling the "Safe Brake Control" function

The "Safe Brake Control" function is enabled via the following parameters:

- p9602 SI enable safe brake control (Control Unit)
- p9802 SI enable safe brake control (Motor Module)

The "Safe Brake Control" function cannot be used until at least one safety monitoring function has been enabled (i.e. p9601 = p9801 ≠ 0).

Two-channel brake control

**Note**

**Connecting the brake**

The brake cannot be directly applied at the Motor Module of chassis format. The connection terminals are only designed for 24 V DC with 150 mA; the Safe Brake Adapter is required for larger currents and voltages.

The brake is essentially controlled from the Control Unit. Two signal paths are available for applying the brake.

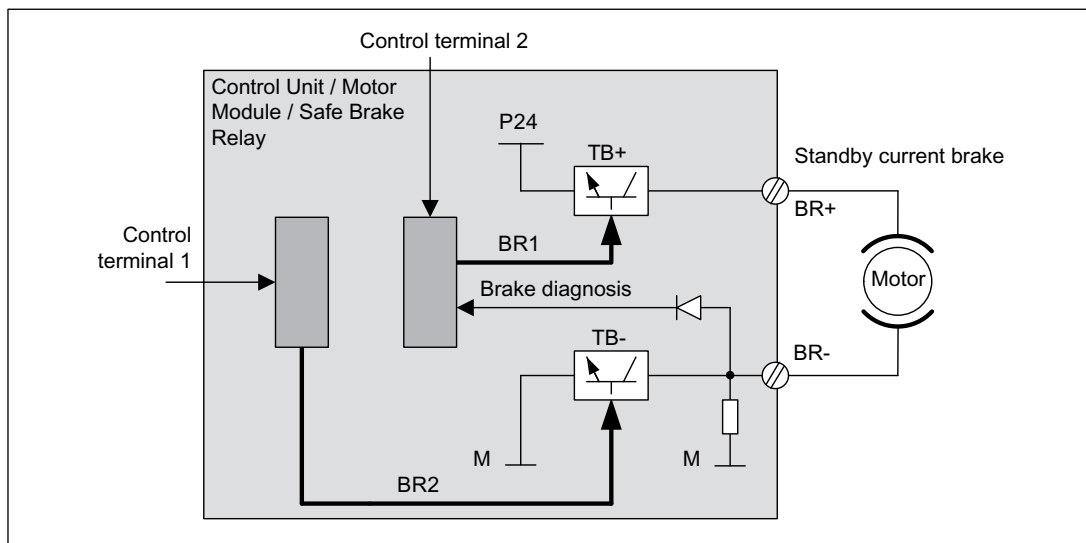


Figure 4-1 Two-channel brake control, blocksize (example)

For the "Safe Brake Control" function, the Motor/Power Module assumes a monitoring function to ensure that when the Control Unit fails or malfunctions the brake current is interrupted therefore closing the brake.

The brake diagnosis can only reliably detect a malfunction in either of the switches (TB+, TB-) when the status changes (when the brake is released or applied).

If the Motor Module or Control Unit detects a fault, the brake current is switched off and the safe status is reached.

**Safe Brake Control for Motor Modules of chassis format**

To be able to set higher power in the brakes of devices of this format, an additional Safe Brake Adapter (SBA) module is needed. You can find more information on the connection and wiring of the Safe Brake Adapter in the Equipment Manual.

Using parameters p9621/p9821, you can define via which digital input the Safe Brake Adapter's feedback signal (brake released or applied) is channeled to the Control Unit.

Further functionality and the activation of the brake, i.e. reaching the safe status, are in this case the same as the above described procedure for booksize devices.



### Response time with the "Safe Brake Control" function

For the response times when the function is selected/deselected via input terminals, see the table in "Response times".

|  |
|--|
| <b>NOTICE</b>  |
| <b>When the brake is controlled via a relay with "Safe Brake Control":</b>   |
| If "Safe Brake Control" is used, it is not permissible to control the brake via a relay. It may result in faults being triggered in the brake control. |

### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p0799 CU inputs/outputs sampling time
- p9602 SI enable safe brake control (Control Unit)
- p9621 BI: SI Signal source for SBA (Control Unit)
- p9622[0...1] SI SBA relay wait times (Control Unit)
- r9780 SI Monitoring clock cycle (Control Unit)
- p9802 SI enable safe brake control (Motor Module)
- p9821 BI: SI Signal source for SBA (Motor Module)
- p9822[0...1] SI SBA relay wait times (Motor Module)
- r9880 SI Monitoring clock cycle (Motor Module)

## 4.4 Safety faults


The fault messages for Safety Integrated Basic Functions are stored in the standard message buffer and can be read from there. In contrast, the fault messages for Safety Integrated Extended Functions are stored in a separate Safety message buffer (see chapter "Message buffer").

When faults associated with Safety Integrated Basic Functions occur, the following stop responses can be initiated:

4.4 Safety faults

Table 4- 1 Stop responses to Safety Integrated Basic Functions

| Stop response   | Triggered ...   | Action   | Effect   |
|---|---|--|--|
| STOP A cannot be acknowledged   | For all non-acknowledgeable Safety faults with pulse suppression.           | Trigger safe pulse suppression via the switch-off signal path for the relevant monitoring channel. During operation with SBC: apply motor holding brake. | The motor coasts to a standstill or is braked by the holding brake.  |
| STOP A  | For all acknowledgeable Safety faults<br>As a follow-up reaction of STOP F. |  |  |
| <p>STOP A corresponds to Stop Category 0 to EN 60204-1.</p> <p>With STOP A, the motor is switched directly to zero torque via the "Safe Torque Off (STO)" function.</p> <p>A motor at standstill cannot be started again accidentally.</p> <p>A moving motor coasts to standstill. This can be prevented by using external braking mechanisms, e.g. holding or operating brake.</p> <p>When STOP A is present, "Safe Torque Off" (STO) is active.</p> |   |  |  |
| STOP F  | If an error occurs in the data cross-check.                                 | Transition to STOP A.  | Follow-up response STOP A with adjustable delay (factory setting without delay) if one of the Safety functions is selected |
| <p>STOP F is permanently assigned to the data cross-check (DCC). In this way, errors are detected in the monitoring channels.</p> <p>After STOP F, STOP A is triggered.</p> <p>When STOP A is present, "Safe Torque Off" (STO) is active.</p>   |   |  |  |

|  |
|--|
|  <b>WARNING</b>   |
| <p>With a vertical axis or pulling load, there is a risk of uncontrolled axis movements when STOP A/F is triggered. This can be prevented by using "Safe Brake Control (SBC)" and a holding brake (not a safety brake!) with sufficient holding force.</p> |

**Acknowledging the Safety faults**

There are several options for acknowledging Safety faults (for more details see S120 Commissioning Manual):

1. Faults associated with Safety Integrated Basic Functions must be acknowledged as follows:

- Remove the cause of the fault.
- Deselect "Safe Torque Off" (STO).
- Acknowledge the fault.

If the Safety commissioning mode is exited when the Safety functions are switched off (p0010 = value not equal to 95 when p9601 = p9801 = 0), then all the Safety faults can be acknowledged.

Once Safety commissioning mode has been selected again (p0010 = 95), all the faults that were previously present reappear.

2. The higher-level controller sets the signal "Internal Event ACK" via the PROFIsafe telegram (STW bit 7). A falling edge in this signal resets the status "Internal Event" and so acknowledges the fault.

|   |
|---|
| <b>NOTICE</b>   |
| Safety faults can also be acknowledged (as with all other faults) by switching the drive unit off and then on again (POWER ON). |
| If this action has not eliminated the fault cause, the fault is displayed again immediately after power up.                     |

## Description of faults and alarms

---

### Note

The faults and alarms for SINAMICS Safety Integrated functions are described in the following document:

Reference: SINAMICS S120/S150 List Manual

---

## 4.5 Forced dormant error detection

### Forced dormant error detection or test of the switch-off signal paths for Safety Integrated Basic Functions

The forced dormant error detection function at the switch-off signal paths is used to detect software/hardware faults at both monitoring channels in time and is automated by means of activation/deactivation of the "Safe Torque Off" function.

To fulfill the requirements of ISO 13849-1 regarding timely error detection, the two switch-off signal paths must be tested at least once within a defined time to ensure that they are functioning properly. This functionality must be implemented by means of forced dormant error detection function, triggered either in manual mode or by the automated process.

A timer ensures that forced dormant error detection is carried out as quickly as possible.

- p9659 SI timer for the forced dormant error detection.

Forced dormant error detection must be carried out at least once during the time set in this parameter.

Once this time has elapsed, an alarm is output and remains present until forced dormant error detection is carried out.

The timer returns to the set value each time the STO function is deactivated.

When the appropriate safety devices are implemented (e.g. protective doors), it can be assumed that running machinery will not pose any risk to personnel. For this reason, an alarm is only output to inform the user that a forced dormant error detection run is due and to request that this be carried out at the next available opportunity. This alarm does not affect machine operation.

The user must set the time interval for carrying out forced dormant error detection to between 0.00 and 9000.00 hours depending on the application (factory setting: 8.00 hours).

Examples of when to carry out forced dormant error detection:

- When the drives are at a standstill after the system has been switched on (POWER ON).
- When the protective door is opened.
- At defined intervals (e.g. every 8 hours).
- In automatic mode (time and event dependent)

#### NOTICE

The timer of the Basic Functions will be reset if the associated forced dormant error detection is executed and the Extended Functions are used simultaneously.

Discrepancy is not checked at the terminals used to select the Basic Functions as long as STO is set by the Extended Functions. That is, the forced dormant error detection procedure of the Basic Functions always has to be executed without simultaneous selection of STO or SS1 by the Extended Functions. It is otherwise not possible to verify the correct control through the terminals.

 **WARNING**

For the SINAMICS S110 drive system, to perform a self test, a POWER OFF/POWER ON<sup>1)</sup> must be performed for the Control Unit at least once a year. This also applies, if the forced checking procedure of the safety functions takes place more frequently than once per year.

<sup>1)</sup> For SINAMICS S110, the Control Unit can also be supplied from the line connection of the Power Module. For SINAMICS S110, a POWER OFF/POWER ON means line supply off/on for the Power Module and – if one is being used – also for the 24V power supply.



## Safety Integrated Extended Functions

---

### Note

You can ask your local sales office regarding the PFH values of the individual safety functions (also refer to the Section "Probability of failure of safety functions").

---

### 5.1 Safety functions "with encoder" / "without encoder"

For activation of the Safety Integrated functions "with encoder" and "without encoder", set the parameters p9306 and p9506 (factory setting = 0). You can also make this setting by selecting "with encoder" or "without encoder" on the Safety Integrated STARTER screen. This STARTER screen can be found for each drive under "Functions" → "Safety Integrated".

- Operation with encoder  
p9306 = p9506 = 0
- Operation without encoder  
p9306 = p9506 = 1  
or  
p9306 = p9506 = 3

### "Park" mode for Safety Integrated Extended Functions "with encoder"

---

### Note

When a drive object for which Safety Integrated Extended Functions **with encoder** are enabled is switched to "Park" mode, the Safety Integrated software responds by selecting STO without generating a separate message. This internal STO selection is displayed in parameter r9772.19.

---

**Restrictions for Safety Integrated Extended Functions "without encoder"**

The following restrictions apply for the Safety Extended Functions "without encoder":

| Only operation with motors of type |          |
|------------------------------------|----------|
| 1                                  | SIEMOSYN |

| No operation with devices of the following types |              |
|--|--------------|
| 1  | Blocksize GX |
| 2  | Chassis      |

| Technological restrictions |   |
|----------------------------|---|
| 1                          | Pulling loads are not permitted                                 |
| 2                          | Slip of the asynchronous motor must be taken into consideration |

| Cannot be used in conjunction with the following functions <sup>1)</sup> |   |
|--|---|
| 1  | Flying restart  |
| 2  | Current limitation $I_{lim}$  |
| 3  | DC brake  |
| 4  | Compound brake  |
| 5  | SW pulse logic  |
| 6  | Motor identification  |
| 7  | Motor data record switchover from synchronous and asynchronous motors is not permitted              |
| 8  | Pulse pattern procedure for sensorless vector control of synchronous motors (selection via p1750.5) |

1) Note: Activation of a safety motion monitoring function and the simultaneous use of these drive functions leads to a safety fault.

| Performance restrictions |  |
|--------------------------|--|
| 1                        | Within 1 s only one start-up and one ramp-down are permitted <sup>2)</sup>   |
| 2                        | The permitted ramp time is a minimum of 1 s for synchronous motors (ramp time depends on the performance variable) |
| 3                        | Current controller cycle of 32.5 $\mu$ s causes an error in the Motor Module <sup>3)</sup>                         |

2) Note: For a cycle "0  $\rightarrow$  +n<sub>set</sub>  $\rightarrow$  -n<sub>set</sub>  $\rightarrow$  0", an interval of at least 2 s is required.

3) Note: This means that it is likewise not possible to have a current controller cycle of 62.5  $\mu$ s on a Double Motor Module with 2 safety axes.



**! CAUTION**

Safety Integrated Extended Functions "without encoder" must not be used if the motor, after it has been switched off, can still be accelerated by the mechanical elements of the connected machine component.

Whether or not a mechanical brake is installed is irrelevant here.

Examples:

1. For the hoisting gear of a crane, the suspended load can accelerate the motor as soon as the motor is switched off. In this case, the safety functions "without encoder" are not permitted.

Even if the mechanical brake of the hoisting gear is generally applied after the motor has been switched off, the use of safety functions "without encoder" in this application is still prohibited.

2. A horizontal conveyor is always braked to a standstill due to friction as soon as the motor is switched off. In this case, the safety functions "without encoder" can be used without any restriction.

## 5.2 Safe Torque Off

In addition to the control options specified under Safety Integrated Basic Functions, "Safe Torque Off (STO) under Safety Integrated Extended Functions can also be activated via TM54F or PROFIsafe.

### Functional features of "Safe Torque Off"

The functionality of "Safe Torque Off (STO)" is described in the section, "Safety Integrated Basic Functions".

## 5.3 Safe Stop 1 (SS1)

### 5.3.1 Safe Stop 1 (SS1, time and acceleration controlled)

The SS1 function with an encoder monitors whether motor acceleration reaches impermissible levels during the SS1 time.

The "Safe Stop 1" (SS1) function allows the drive to be stopped in accordance with EN 60204-1, Stop Category 1. The drive brakes with the OFF3 ramp (p1135) once "Safe Stop 1" is selected and switches to "Safe Torque Off" (STO) once the delay time has elapsed (p9356/p9556) or when the shutdown speed is reached (p9360/p9560).

5.3 Safe Stop 1 (SS1)

If the drive complies with acceleration monitoring limits, STO is triggered when the shutdown speed is reached or once the SS1 time expires. If acceleration monitoring limits are violated, messages C01706 and C30706 are output and the drive is stopped with STOP A.

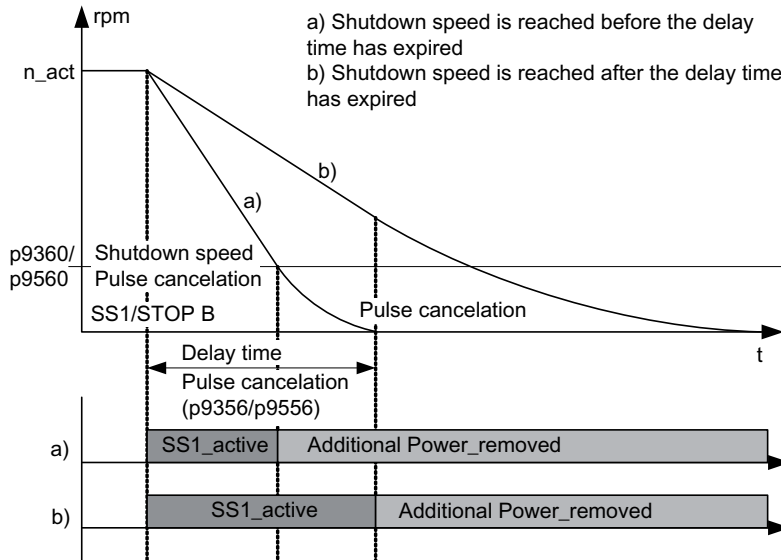


Figure 5-1 Sequence with SS1 selection

Functional features of Safe Stop 1

- The delay time starts after the function is selected. If SS1 is deselected again within this time, after the delay time has expired or after the shutdown speed has been undershot, the STO function is selected and then immediately deselected again.
- Selection and monitoring of the brake ramp (SBR) or the acceleration (SAM) are implemented in two channels, however braking at the OFF3 ramp is only through one channel.
- The "Safe Acceleration Monitor" (SAM) function is activated when braking (see "Safe Acceleration Monitor").

Note

Activating SS1 can result in the higher-level control (SPS, Motion Controller), which specifies the speed setpoint, interrupting the ramp function with OFF2. The device behaves in this way as a result of a fault reaction triggered by OFF3 activation. This fault reaction must be avoided by assigning appropriate parameters or configurations.

Note

If you use SS1 under EPOS, then an OFF2 is not permitted as a fault reaction to F07490 (EPOS: enable disabled during procedure). The reaction can be configured via p2100/p2101.

---

## Commissioning

---

### Note

When "Safe Stop 1" (SS1) is installed, the function "Safe Acceleration Monitor" (SAM) is active. For parameterization of the function "Safe Acceleration Monitor" (SAM)

→ See section "Safe Acceleration Monitor (SAM)".

---

The delay time (SS1 time) is set by entering parameters p9356 and p9556. The wait time until the pulses are suppressed can be shortened by defining a shutdown speed in p9360 and p9560.

To enable the drive to decelerate to standstill, the time set in p9356/p9556 must be sufficient to allow the drive to decelerate to below the shutdown speed in p9360/p9560 along the OFF3 ramp (p1135).

---

### Note

So that the drive is able to travel down the OFF3 ramp completely and any motor holding brake present can be applied, the delay time should be set as follows:

- Motor holding brake parameterized: Delay time  $\geq p1135 + p1228 + p1217$
  - Motor holding brake not parameterized: Delay time  $\geq p1135 + p1228$
- 

The shutdown speed defined in p9360/p9560 must be set in such a way that personal safety or the safety of the machine is not compromised as of this speed and as a result of subsequent coasting due to the pulses being suppressed.

The actual speed tolerance is set using parameters p9348/p9548 (for more information please see section "Safe Acceleration Monitor (SAM)").

## Responses

### Speed limit violated (SAM):

- STOP A
- Safety message C01706/C30706

### System errors:

1. STOP F with subsequent STOP B, followed by STOP A
2. Safety message C01711/C30711

## Status for "Safe Stop 1"

The status of the "Safe Stop 1" function is displayed using the following parameters:

- r9722.1 CO/BO: SI Motion status signals, SS1 active
- r9722.0 CO/BO: SI Motion status signals, STO active (power removed)

### **5.3.2 Safe Stop 1 without encoder (time and speed controlled)**

Two encoderless Safe Stop 1 (SS1) monitoring functions can be set with parameters p9506/p9306:

- p9506/p9306 = 3: Safe monitoring of acceleration (SAM) / delay time

The function is identical to "Safe Stop 1" with encoder, which was described in the previous section.

- p9506/p9306 = 1: Safe brake ramp monitoring (SBR)

#### **Brake ramp monitoring**

The motor is immediately decelerated along the OFF3 ramp as soon as SS1 is triggered. Monitoring is activated once the delay time in p9582/p9382 has elapsed. The drive is monitored during braking to ensure the set brake ramp is adhered to. As soon as the speed drops below the shutdown speed (p9560/p9360), safe monitoring of the brake ramp is deactivated and safe pulse suppression (STO) is activated. If the set brake ramp (SBR) is violated (exceeded), messages C01706 and C30706 are output and the drive is stopped with STO (STOP A).

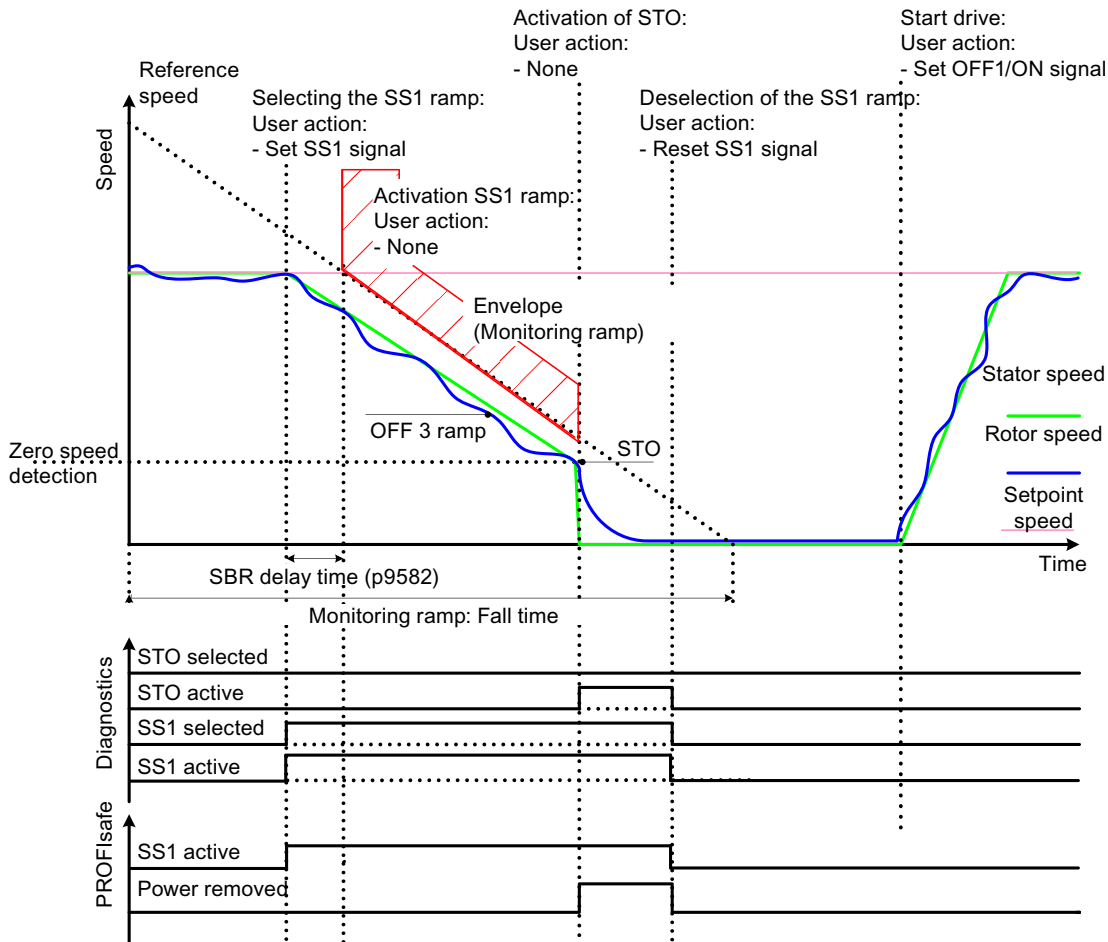


Figure 5-2 Sequence for "Safe Stop 1" without encoder (p9506/p9306 = 1)

### Functional feature of Safe Stop 1 without encoder

- Selection and monitoring of the brake ramp (SBR) or the acceleration (SAM) are implemented in two channels, however braking at the OFF3 ramp is only through one channel.

### Parameterization of the brake ramp "without encoder"

p9581/p9381 and p9583/p9383 are used to set the steepness of the brake ramp (SBR). Parameters p9581/p9381 determine the reference speed; parameters p9583/p9383 define the ramp-down time from the reference speed to the value 0. Parameters p9582/p9382 are used to set the time between the triggering of Safe Stop 1 and the start of brake ramp monitoring.

### 5.3.3 Safe Stop 1 - Parameter

#### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p1135[0...n] OFF3 ramp-down time
- p9301 SI Motion enable safety functions (Motor Module)
- p9501 SI Motion enable safety functions (Control Unit)
- p9306 SI Motion function specification (Motor Module)
- p9506 SI Motion function specification (Control Unit)
- p9356 SI Motion pulse cancelation delay time (Motor Module)
- p9556 SI Motion pulse cancelation delay time (Control Unit)
- p9360 SI Motion pulse cancelation shutdown speed (Motor Module)
- p9560 SI Motion pulse cancelation shutdown speed (Control Unit)
- r9722.0...15 CO/BO: SI Motion drive-integrated status signals

#### Only for SS1 with encoder and SS1 without encoder with acceleration monitoring (p9506 = 3):

- p9348 SI Motion SAM actual speed tolerance (Motor Module)
- p9548 SI Motion SAM actual speed tolerance (Control Unit)

#### Only for SS1 without encoder (p9506 = 1):

- p9381 SI Motion brake ramp reference value (Motor Module)
- p9581 SI Motion brake ramp reference value (Control Unit)
- p9382 SI Motion brake ramp delay time (Motor Module)
- p9582 SI Motion brake ramp delay time (Control Unit)
- p9383 SI Motion brake ramp monitoring time (Motor Module)
- p9583 SI Motion brake ramp monitoring time (Control Unit)

## 5.4 Safe Stop 2 (SS2)

The "Safe Stop 2" (SS2) function is used to brake the motor safely along the OFF3 deceleration ramp (p1135) with subsequent transition to the SOS state (see "Safe Operating Stop") after the delay time expires (p9352/p9552). The delay time set must allow the drive to be able to brake down to a standstill within this time. The standstill tolerance (p9330/p9530) may not be violated after this time.

After the braking operation is completed, the drives remain in the speed control mode with the speed setpoint  $n = 0$ . The full torque is available.

---

### Note

The safety function "Safe Stop 2" (SS2) can only be used with an encoder.

---

The default setpoint (e.g from the setpoint channel, or from a higher-level control) remains inhibited as long as SS2 is selected. The "Safe Acceleration Monitor" (SAM) function is active during braking.

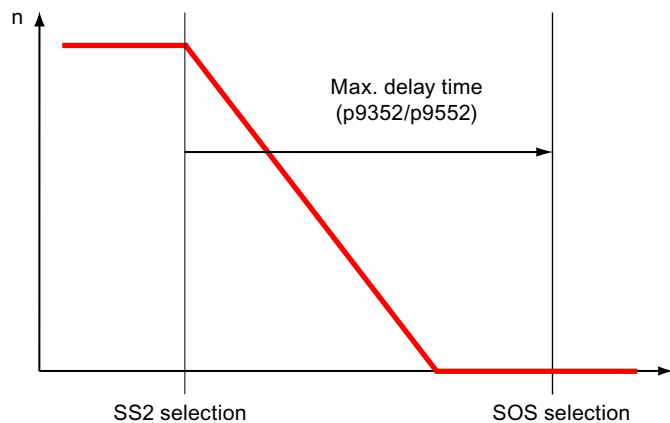


Figure 5-3 Sequence with SS2 selection

Selection and monitoring of the brake ramp (SBR) or the acceleration (SAM) are implemented in two channels, however braking at the OFF3 ramp is only through one channel.

---

### Note

Activating SS2 can result in the higher-level control (SPS, Motion Controller), which specifies the speed setpoint, interrupting the ramp function with OFF2. The device behaves in this way as a result of a fault reaction triggered by OFF3 activation. This fault reaction must be avoided by assigning appropriate parameters or configurations.

---

## Responses

### Speed limit violated (SAM):

- STOP A
- Safety message C01706/C30706

### Standstill tolerance violated in p9330/p9530 (SOS):

- STOP B with subsequent STOP A
- Safety message C01707/C30707

### System errors:

- STOP F with subsequent STOP A
- Safety message C01711/C30711

## Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p1135[0...n] OFF3 ramp-down time
- p9301 SI Motion enable safety functions (Motor Module)
- p9501 SI Motion enable safety functions (Control Unit)
- p9330 SI Motion standstill tolerance (Motor Module)
- p9530 SI Motion standstill tolerance (Control Unit)
- p9348 SI Motion SAM actual speed tolerance (Motor Module)
- p9548 SI Motion SAM actual speed tolerance (Control Unit)
- p9352 SI Motion transition time STOP C to SOS (Motor Module) <sup>1)</sup>
- p9552 SI Motion transition time STOP C to SOS (Control Unit) <sup>1)</sup>
- r9722.0...15 CO/BO: SI Motion drive-integrated status signals

<sup>1)</sup> STOP C corresponds to SS2.



### 5.4.1 EPOS and Safe Stop 2

Since the function SS2 – with its setpoint-independent braking – is not suitable for use with EPOS, the Safe Operating Stop (SOS) function can be used with delay.

On selection of SOS, the EPOS function "intermediate stop" (p2640 = 0) ensures that EPOS is able to stop the drive in its tracks and then keep it under control in this state before the SOS becomes active. The maximum necessary braking time (from p2573 and p2645 from EPOS) must then be entered in the delay time for SLS/SOS (p9551/p9351) with a small safety addition: This ensures that the drive is stationary before SOS becomes active.

To do this, proceed as follows:

1. Connect the EPOS function "intermediate stop" (p2640) with the SOS selection (r9720.3).
2. Enter the maximum necessary braking time from EPOS (depending on the values set in p2573 and p2645) with a safety addition (approx. +5%) in the SOS delay time (p9551/p9351).

#### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p2645 CI: EPOS direct setpoint input/MDI, deceleration override
- p2573 EPOS maximum deceleration
- p2594 CI: EPOS maximum speed, externally limited
- p2640 BI: EPOS intermediate stop (0 signal)
- p9351 SI Motion SLS changeover delay time (Motor Module)
- p9551 SI Motion SLS(SG) changeover delay time (Control Unit)
- r9720.0...10 CO/BO: SI Motion drive-integrated control signals
- r9733[0...1] CO: SI Motion setpoint speed limit effective

## 5.5 Safe Operating Stop (SOS)

### General description

This function serves for fail-safe monitoring of the standstill position of a drive.

Personnel can enter the protected machine areas without having to shut down the machine as long as SOS is active.

Drive standstill is monitored by means of an SOS tolerance window (p9330 and p9530). The function SOS comes into effect in the following cases:

- After SOS has been selected and after the delay time set in p9351/p9551 has expired. The drive must be braked to standstill within this delay time (e.g. by the controller).
- As a consequence of SS2
- As a consequence of STOP C (corresponds to selection SS2)
- As a consequence of STOP D (corresponds to selection SOS)
- As a consequence of STOP E

When this function is activated, the current actual position is saved as a comparative position, until SOS is deselected again. Any delay time is cleared after SOS is deselected and the drive can be immediately moved.

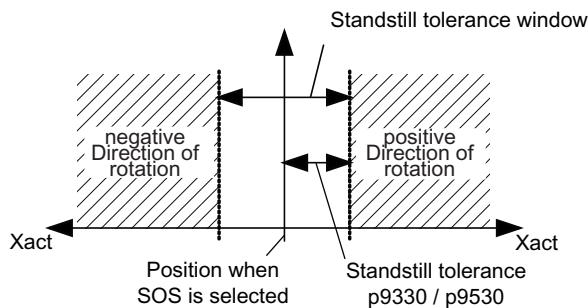


Figure 5-4 Standstill tolerance

---

### Note

The "Safe Operating Stop" (SOS) safety function can only be used with an encoder.

---

### Functional features of "Safe Operating Stop"

- The drive remains in the closed-loop control mode.
- A programmable standstill tolerance window is available.
- STOP B is the stop response after the standstill tolerance window has been violated

---

#### Note

The size of the tolerance window should be slightly above the standard standstill monitoring limit, otherwise the standard monitoring functions will no longer be effective.

Parameter r9731 displays the safe position accuracy (load side) that can be achieved as a maximum, based on the acquisition of the actual value for the safe motion monitoring functions.

---

### Responses

#### Standstill tolerance violated in p9330/p9530:

- STOP B with subsequent STOP A
- Safety message C01707/C30707

#### System errors:

- STOP F
- Safety message C01711/C30711

### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p9301 SI Motion enable safety functions (Motor Module)
- p9501 SI Motion enable safety functions (Control Unit)
- p9330 SI Motion standstill tolerance (Motor Module)
- p9530 SI Motion standstill tolerance (Control Unit)
- p9351 SI Motion SLS changeover delay time (Motor Module)
- p9551 SI motion SLS changeover delay time (Control Unit)
- r9722.0...15 CO/BO: SI Motion drive-integrated status signals
- r9731 SI Motion safe position accuracy

## 5.6 Safely-Limited Speed (SLS)

The Safely Limited Speed (SLS) function is used to protect a drive against unintentionally high speeds in both directions of rotation. This is achieved by monitoring the current drive speed up to a speed limit.

Safely Limited Speed prevents a parameterized speed limit from being exceeded. Limits must be specified based on results of the risk analysis. Up to 4 different SLS speed limits can be parameterized via parameter p9331[0..3]/p9531[0..3]; it is possible to switch between them even if the SLS is activated.

### 5.6.1 Safely Limited Speed (SLS)

#### Features

- After switching to a lower Safely Limited Speed limit value (p9331/p9531), the actual speed of the drive must have dropped below the new Safely Limited Speed limit within the delay time (p9351/p9551). The existing Safely Limited Speed limit remains active during the delay time. The lower Safely Limited Speed limit becomes active after the delay time has elapsed.
- If the actual speed of the drive is higher than the new Safely Limited Speed limit after the delay time has elapsed, a message is created with the parameterized stop response.
- The stop response (STOP A, STOP B, STOP C or STOP D) is parameterized with p9363/p9563.
- The delay time is not active when switching over to a higher Safely Limited Speed limit – the higher Safely Limited Speed limit (SLS limit value) is active immediately.
- 4 parameterizable Safely Limited Speed limit values p9331[0...3] and p9531[0...3]

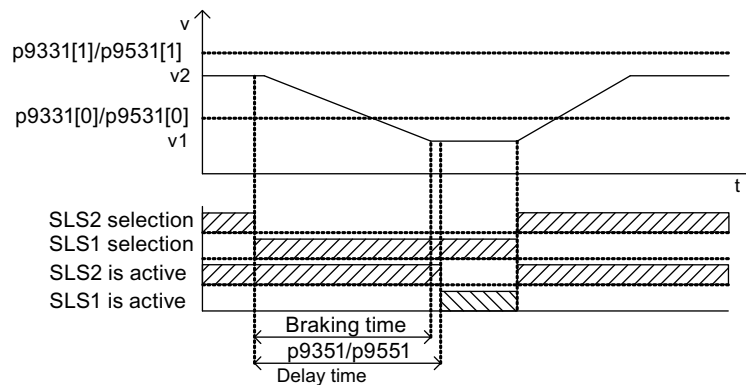


Figure 5-5 Safely Limited Speed limit delay time

- In parameter p9533, enter the factor for the speed setpoint limitation as a percentage. This factor is used to calculate the effective speed setpoint limit r9733. The effective speed setpoint limit is dependent on the selected SLS limit value p9531[x]. In contrast to the parameterization of SLS limit values, r9733 specifies limits on the motor side, not limits on the load side.
- SLS limit value
  - $r9733[0] = p9531[x] * p9533$ ; x = selected SLS limit value
  - $r9733[1] = - p9531[x] * p9533$ ; x = selected SLS limit value

r9733 is used, for example, for transmitting values to a higher-level control, which can then, for example, adjust traversing speeds to the SLS levels. r9733 is a part of the Safety Info Channel (SIC).

### Changeover of SLS limit values


The changeover is executed binary-coded via two F-DIs or two PROFIsafe control bits. The speed selection status can be checked using the r9720.9/r9720.10 parameters. Parameters r9722.9 and r9722.10 indicate the actual speed limit, bit r9722.4 must carry a "1" signal.

Table 5- 1 Changeover of speed limits:

| F-DI for bit 1 (r9720.10) | F-DI for bit 0 (r9720.9) | Speed limit       |
|---------------------------|--------------------------|-------------------|
| 0                         | 0                        | p9331[0]/p9531[0] |
| 0                         | 1                        | p9331[1]/p9531[1] |
| 1                         | 0                        | p9331[2]/p9531[2] |
| 1                         | 1                        | p9331[3]/p9531[3] |

The changeover from a lower to a higher speed limit takes effect without any delay.

The changeover from a higher to a lower limit triggers a delay time which can be set at the corresponding parameter (p9351 and p9551).

|  |
|--|
|  <b>CAUTION</b>   |
| <p><b>The limit value SLS1 must be defined as the lowest Safely Limited Speed limit.</b></p> <p>The limit value SLS level 1 is activated after two unacknowledged discrepancy errors; in other words, 0 is the failsafe value for the 2 F-DIs for speed level selection. The SLS limit values must, therefore, always be parameterized in ascending order, i.e. with limit value SLS1 as the lowest speed and limit value SLS4 as the highest speed.</p> |

### Responses

#### Speed limit value exceeded:

- Configured subsequent stop STOP A / B / C / D by means of p9363/p9563
- Safety message C01714/C30714

#### System errors:

- STOP F
- Safety messages C01711/C30711

## 5.6.2 Safely Limited Speed without encoder

### Functions

Two different encoderless Safely Limited Speed monitoring functions can be set with the parameters p9506/9306:

- p9506/9306 = 3: Safe monitoring of acceleration (SAM) / delay time  
The function is identical to "Safely Limited Speed with encoder", which was described in the previous section.
- p9506/9306 = 1: Safe brake ramp monitoring (SBR)

### Monitoring the brake ramp

- After activation of the monitoring of the speed setpoint limit "Safely Limited Speed without encoder", the motor is immediately braked with the OFF3 ramp from the actual speed to below the selected SLS limit value.
- Parameters p9582/p9382 are used to set the delay time for the brake ramp monitoring.
- Monitoring of the brake ramp is activated once the delay time in p9582/p9382 has elapsed. If the actual speed of the drive violates the brake ramp (SBR) during braking, Safety messages C01706 and C30706 are output and the drive is stopped with STOP A.
- The newly selected SLS limit value is also taken over as the new limit speed, if either
  - the SBR ramp has reached the new SLS limit value, or
  - the actual speed of the drive was below the new SLS limit value for at least the time set in p9582/p9382.
- The function "Safely Limited Speed without encoder" then monitors whether the actual speed remains below the newly selected SLS limit value.
- The parameterized stop response (p9563[x]) is triggered if the SLS limit value is exceeded.

### Configuring the limits

- The speed limits for Safely Limited Speed without encoder are configured in exactly the same way as described for Safely Limited Speed with encoder.
- Only STOP A and STOP B may be configured as stop responses for "Safely Limited Speed" (SLS) without encoder.

Signal profile for SLS without encoder

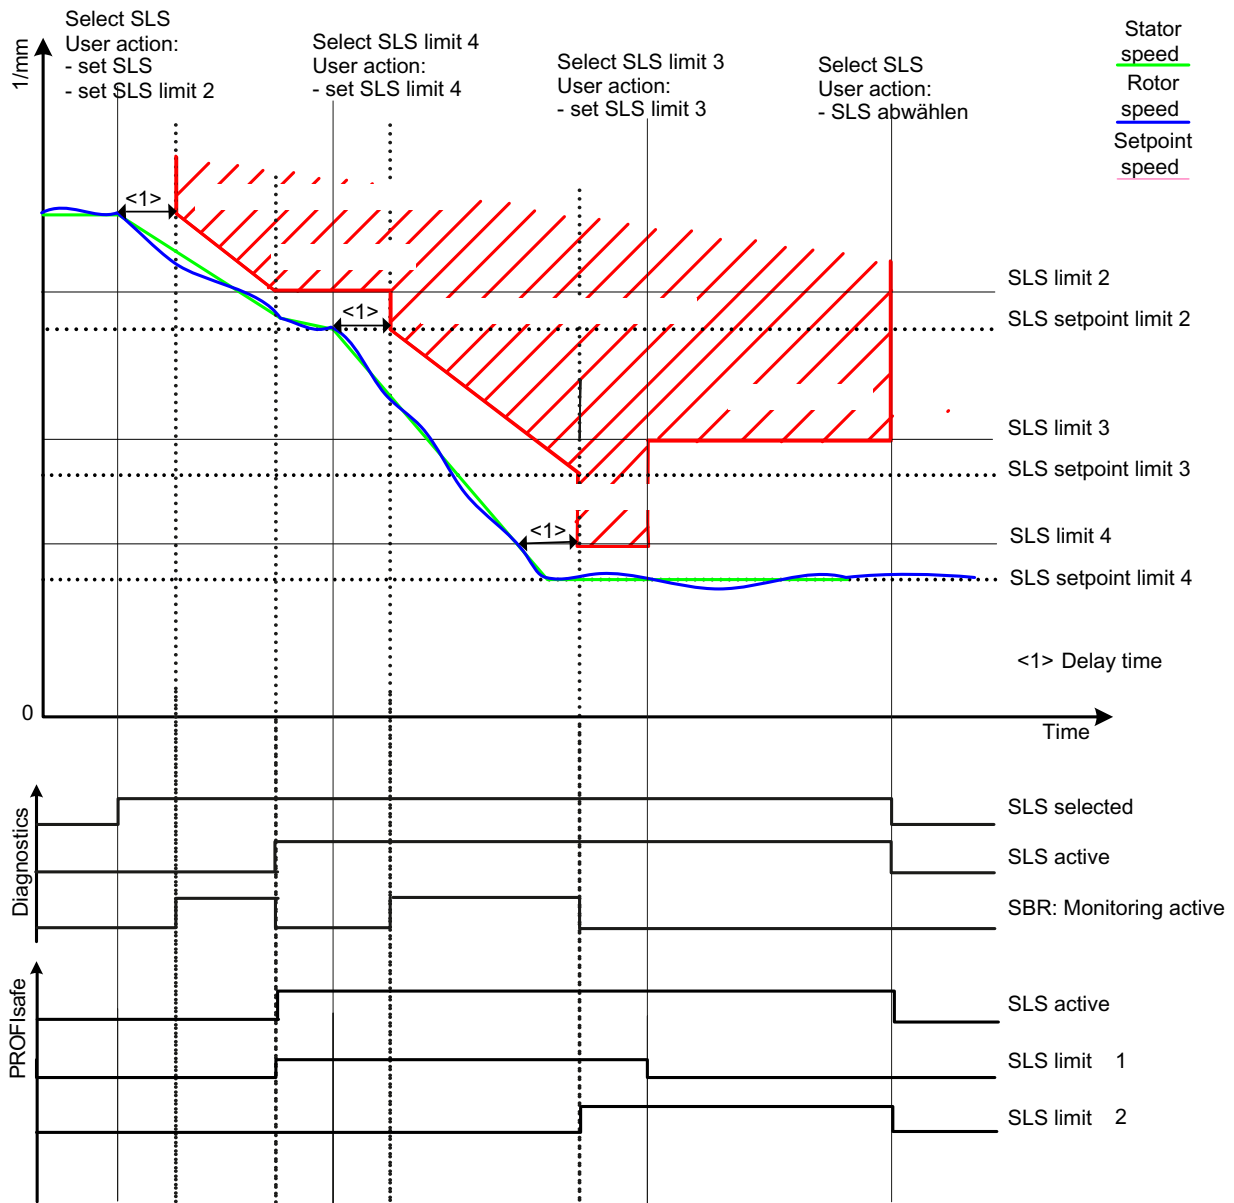


Figure 5-6 Signal profile for SLS without encoder

### Restart after OFF2

If the drive has been switched off via OFF2/STO, the following steps need to be carried out before a restart can be performed:

1st scenario:

- State after power-on: SLS selected, STO selected, OFF2 active
- Deselect STO.
- The drive enable must be given within 5 seconds via a positive edge at OFF1, otherwise STO is reactivated.

2nd scenario

- Situation: Run until standstill with SLS selected, then OFF2 activated
- Select STO
- Deselect STO.

STO activated internally via OFF2: This activation must be undone by selection/deselection.

- The drive enable must be given within 5 seconds via a positive edge at OFF1, otherwise STO is reactivated.

3rd scenario

- Situation: Run until standstill with SLS selected, then OFF2 activated
- Deselect SLS
- Select SLS

STO activated internally via OFF2: This activation must be undone by selecting/deselecting SLS.

- After this the drive enable must be given by a positive edge at OFF1.

4th scenario

- Situation: All Safety Integrated functions are deselected
- After this the drive enable must be given by a positive edge at OFF1.

---

#### Note

In the 4th scenario the motor is not reliably started.

---

### Parameterization of the brake ramp without encoder

p9581/p9381 and p9583/p9383 are used to set the steepness of the brake ramp. Parameters p9581/p9381 define the reference velocity, parameters p9583/p9383 the ramp-down time from the reference velocity down to a value of 0. Parameters p9582/p9382 are used to set the time, which after changing over to a lower SLS velocity stage, elapses until the braking ramp monitoring becomes effective.



### 5.6.3 Safely Limited Speed - Parameter

#### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p9301.0 SI Motion enable safety functions (Motor Module)
- p9306 SI Motion function specification (Motor Module)
- p9331[0 to 3] SI Motion SLS limits (Motor Module)
- p9351 SI Motion SLS changeover delay time (Motor Module)
- p9381 SI Motion brake ramp reference value (Motor Module)
- p9382 SI Motion brake ramp delay time (Motor Module)
- p9383 SI Motion brake ramp monitoring time (Motor Module)
- p9501.0 SI Motion enable safety functions (Control Unit)
- p9506 SI Motion function specification (Control Unit)
- p9531[0 to 3] SI Motion SLS (SG) limits (Control Unit)
- p9551 SI Motion SLS(SG) changeover delay time (Control Unit)
- p9581 SI Motion brake ramp reference value (Control Unit)
- p9582 SI Motion brake ramp delay time (Control Unit)
- p9583 SI Motion brake ramp monitoring time (Control Unit)
- p9601 SI enable, functions integrated in the drive (Control Unit)
- r9714[0...1] SI Motion diagnostics speed
- r9720.0...10 CO/BO: SI Motion drive-integrated control signals
- r9721.0...15 CO/BO: SI motion, status signals
- r9722.0...15 CO/BO: SI Motion drive-integrated status signals
- p9801 SI enable, functions integrated in the drive (Motor Module)

#### **5.6.4 EPOS and Safely-Limited Speed**

If safe speed monitoring (SLS) is also to be used at the same time as the EPOS positioning function, EPOS must be informed of the activated speed monitoring limit. Otherwise the speed monitoring limit can be violated by the EPOS setpoint input. Through the SLS monitoring, this violation leads to the drive being stopped and so abandoning the planned movement sequences. Here the relevant safety faults are output first of all and only then the sequential faults created by EPOS.

With its parameter r9733, the SLS function provides a setpoint limit value which, when taken into account, prevents the SLS limit value from being violated.

This means that the setpoint limit value in r9733 must therefore be transferred to the input for the maximum setpoint speed/velocity of EPOS (p2594), to prevent an SLS limit value violation as a result of the EPOS setpoint input. You need to set the delay time for SLS/SOS (p9551/p9351) so that the SLS only becomes active after the maximum required time for the speed to be reduced below the SLS limit. This required braking time is determined by the current speed, the jerk limit in p2574 and the maximum delay in p2573.

#### **Overview of important parameters (see the SINAMICS S120/150 List Manual)**

- p2573 EPOS maximum deceleration
- p2574 EPOS jerk limitation
- p2593 CI: EPOS LU/revolution LU/mm
- p2594 CI: EPOS maximum speed, externally limited
- p9351 SI Motion SLS changeover delay time (Motor Module)
- p9551 SI Motion SLS(SG) changeover delay time (Control Unit)
- r9733(0.1) CO: SI Motion setpoint speed limit effective

## 5.7 Safe Speed Monitor (SSM)

### 5.7.1 Safe Speed Monitor with encoder

The "Safe Speed Monitor" (SSM) function provides a reliable method for detecting when a speed limit has been undershot (p9346/p9546) in both directions of rotation, e.g. for zero speed detection. A fail-safe output signal is available for further processing.

The function is activated automatically as soon as the Safety Integrated Extended Functions are enabled with parameters  $p9301.0 = p9501.0 = 1$  and  $p9346/p9546 > 0$ . SSM is deactivated if  $p9346/p9546 = 0$ .

#### NOTICE

If 0 is entered for p9368/p9568, the speed limit of the SSM function (p9346/p9546) is simultaneously the shutdown limit for the safe acceleration monitoring function (SAM).

In this case, the effects of safe acceleration monitoring are therefore restricted if a relatively high SSM/SAM speed limit is set when using the SS1 and SS2 stop functions.

#### WARNING

A STOP F is indicated by Safety message C01711/C30711. STOP F only results in the follow-up response STOP B / STOP A if one of the Safety functions is active. If only the SSM function is active, a STOP F cross-checking error does not result in a STOP B / STOP A follow-up response.

SSM is only valid as an active monitoring function if  $p9301.0 = p9501.0 \neq 0$  and  $p9346 = p9546 \neq 0$  and "Hysteresis and filtering" is parameterized ( $p9301.16 = p9501.16 = 1$ ).

If "Hysteresis and filtering" is not parameterized ( $p9301.16 = p9501.16 = 0$ ), SSM is not valid as an active monitoring function, but instead has only an informative character.

### Functional features of "Safe Speed Monitor" with encoder

The parameter p9346/p9546 "SI Motion SSM (SGA  $n < n_x$ ) speed limit  $n_x$ " is used to set the speed limit. The abbreviation "SGA  $n < n_x$ " indicates the safety function required for determining an output signal when a parameterizable velocity limit has been undershot.

If the speed limit for the "Safe Speed Monitor" feedback signal ( $n < n_x$ ) is undershot, the signal "Safe Speed Monitor feedback signal active" (SGA  $n < n_x$ ) is set. When the set threshold value has been undershot, the "Safe Acceleration Monitor" (SAM) function is also deactivated (see p9368/p9568). If  $p9368 = p9568 = 0$ , then p9346/p9546 (SSM feedback signal) is also used as a trip threshold for the SAM monitoring.

The hysteresis for the SSM output signal is set in parameter p9347/p9547 "SI Motion SSM Speed Hysteresis  $n_x$ ". The SSM output signal can either take the state "1" or "0" – depending on from which direction the belt is reached.

5.7 Safe Speed Monitor (SSM)

If the maximum permissible speed tolerance is exceeded (i.e. one channel displays a speed less than  $p9546 - p9547$ , while the other channel displays a speed greater than  $p9546$ ), a STOP F is issued. Parameters  $p9347/p9547$  are used to define the maximum tolerance of the speed actual values between the two channels.

The output signal for SSM is smoothed by setting a filter time with a PT1 filter ( $p9345/p9545$ ).

During safe motion monitoring, the hysteresis and filtering functions can be activated or deactivated jointly using the enable bit  $p9301.16/p9501.16$ . In the default setting, the functions are deactivated ( $p9301.16/p9501.16 = 0$ ).

**NOTICE**

**Exception**

If the "hysteresis and filtering" function is enabled, the SSM function is evaluated as an active monitoring function and, after a STOP F, also results in a follow-up response STOP B/STOP A.

The following diagram shows the characteristic of the safe output signal SSM when the hysteresis is active:

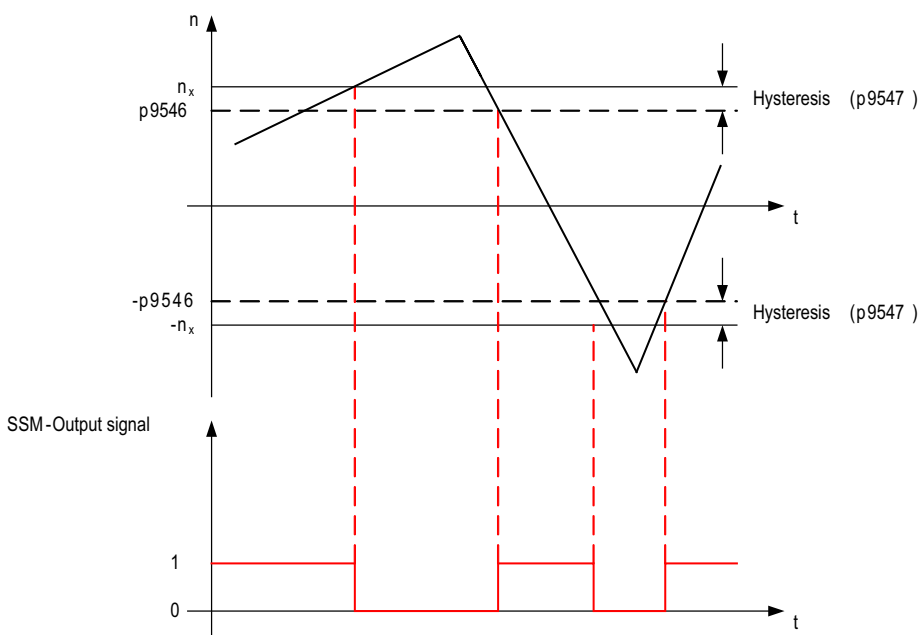


Figure 5-7 Safe output signal for SSM with hysteresis

---

### Note

When "hysteresis and filtering" is activated with output signal SSM, a time-delayed SSM feedback signal occurs for the axes. This is a characteristic of the filter.

---

### Features

- Safe monitoring of the speed limit specified in p9346 and p9546
- Parameterizable hysteresis via p9347 and p9547
- Variable PT1 filter via p9345 and p9545
- Fail-safe output signal
- No stop response

### Function

Set p9306 = p9506 = 1 or p9306 = p9506 = 3 (factory setting = 0) to activate Safety Integrated functions without encoder. You can also make this setting by selecting "Without encoder" on the Safety screen in STARTER.

Without an encoder, the "Safe Speed Monitor" essentially functions exactly the same as described in the previous section under "Safe Speed Monitor with encoder".

### Differences between Safe Speed Monitor with and without encoder

- For Safe Speed Monitor without encoder, after pulse suppression the drive is unable to determine the current speed. Two responses can be selected for this operating state with parameters p9309.0/p9509.0:
  - p9309.0 = p9509.0 = 1  
The status signal (SSM feedback signal) displays "inactive" (factory setting).
  - p9309.0/p9509.0 = 0  
The status signal (SSM feedback signal) is frozen. "Safe Torque Off" (STO) is selected internally.
- Due to the less precise speed recognition, "Safe Speed Monitor without encoder" requires a larger hysteresis (p9347/p9547) and, where applicable, a filter time (p9345/p9545) compared with the function with encoder.

Sequence diagram

The diagram below shows the signal profile for the case  $p9309.0/p9509.0 = 0$ .

The speed remains below the limits of  $p9346/p9546$  throughout the entire observation period. The SSM feedback signal therefore remains  $r9722.15 = 1$ . Following the command for pulse suppression, the motor speed drops. The internal STO is set when the speed drops below the zero speed detection level.

The SSM monitoring remains active. The motor speed continues to be below the speed limit  $p9346/p9546$ . The SSM feedback signal remains as 1, i.e. it is frozen.

To restart the motor safely, the STO must be selected manually and deselected once more. After the STO has been deselected, a 5 second time window is opened. If the pulse enable takes place within this time window, the motor starts. If the pulse enable does not take place within this 5 second time window, the internal STO becomes active once more.

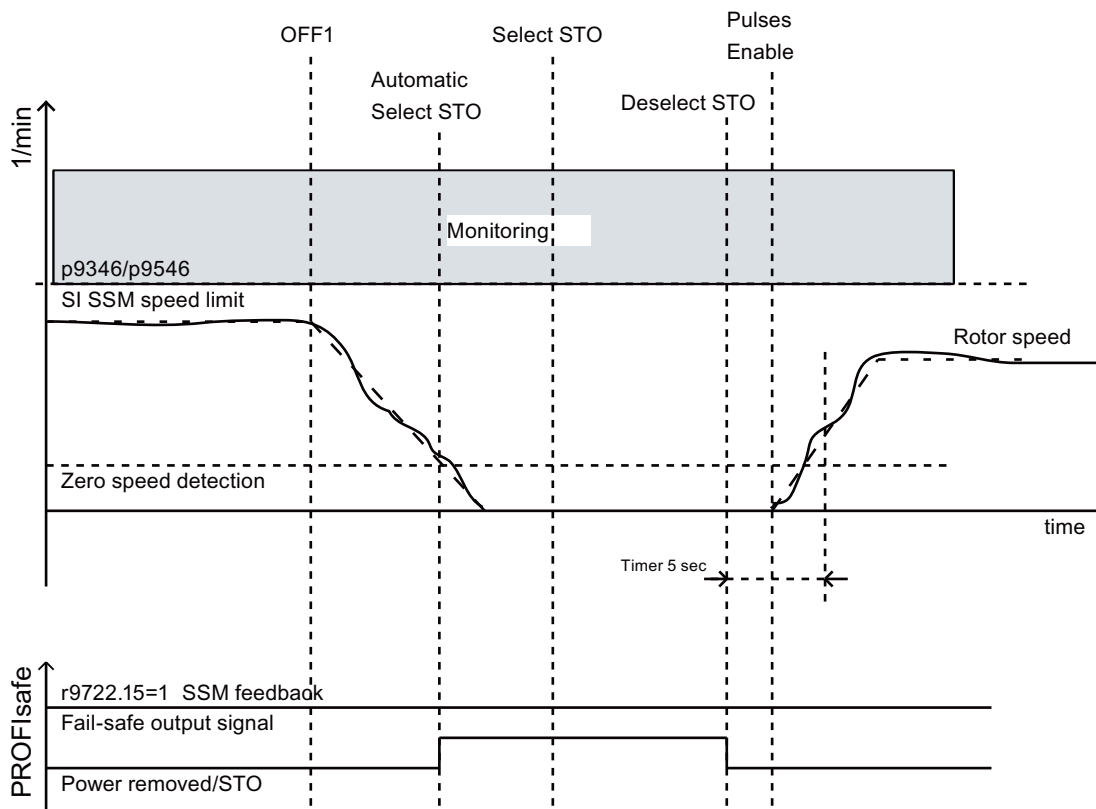


Figure 5-8 Safe Speed Monitor without encoder ( $p9309.0 = p9509.0 = 0$ )

If  $p9309.0 = p9509.0 = 1$ , the SSM monitoring is ended after the pulse suppression. The feedback signal  $p9722.15$  drops to 0. The SSM monitoring is only reactivated following a new pulse enable.

## 5.7.2 Safe Speed Monitor restart

### Restart after pulse suppression for p9309/p9509 = 0

If the drive pulses have been suppressed using OFF1/OFF2/STO, the following steps must be carried out for a restart:

1st scenario:

- State after power-on:
  - SSM selected,
  - STO selected,
  - Pulse suppression active
- Deselect STO.
- A drive enable via a positive edge at OFF1 must occur within 5 seconds after deselection of the STO, otherwise the drive will drop back into the STO state.

2nd scenario

- Situation:
  - SSM selected
  - Motor turning
  - OFF1 triggered, pulses are suppressed
- Select STO
- Deselect STO.  
STO activated internally via pulse suppression: This activation must be undone by selection/deselection.
- A drive enable via a positive edge at OFF1 must occur within 5 seconds after deselection of the STO, otherwise the drive will drop back into the STO state.

### Function diagrams

- 2840 -- Safety Integrated - Extended Functions, control word and status word
- 2855 -- Safety Integrated - Extended Functions, TM54F control interface
- 2857 -- Safety Integrated - Extended Functions, TM54F assignment (F-DO 0 ... F-DO 3)
- 2860 – Extended Functions, SSM (Safe Speed Monitor)

**Overview of important parameters (see the SINAMICS S120/S150 List Manual)**

- p9301 SI Motion enable safety functions (Motor Module)
- p9501 SI Motion enable safety functions (Control Unit)
- p9306 SI Motion function specification (Motor Module)
- p9506 SI Motion function specification (Control Unit)
- p9309 SI Motion behavior during pulse suppression (Motor Module)
- p9509 SI Motion behavior during pulse suppression (Control Unit)
- p9345 SI Motion SSM (SGA n < nx) filter time (Motor Module)
- p9545 SI Motion SSM (SGA n < nx) filter time (Control Unit)
- p9346 SI Motion SSM velocity limit (Motor Module)
- p9546 SI Motion SSM (SGA n < nx) velocity limit n\_x (CU)
- p9347 SI Motion velocity hysteresis (crosswise) (Motor Module)
- p9547 SI Motion velocity hysteresis (crosswise) (Control Unit)
- r9722.0...15 CO/BO: SI Motion drive-integrated status signals
- p10042 SI F-DO 0 signal sources
- p10043 SI F-DO 1 signal sources
- p10044 SI F-DO 2 signal sources
- p10045 SI F-DO 3 signal sources



## 5.8 Safe Acceleration Monitor (SAM)

### Safe Acceleration Monitor with encoder

The "Safe Acceleration Monitor" (SAM) function is used to safely monitor drive acceleration. This function is part of the SS1 (time and acceleration-controlled) and SS2 or STOP B and STOP C Safety functions.

#### Note

For reasons of clarity, the abbreviation for this function has been changed from "SBR" to "SAM". This change has no impact on the functionality.

### Features

SAM recognizes if the drive accelerates beyond the tolerance defined in p9348/p9548 during the ramp down phase, and generates a STOP A. The monitoring function is activated for SS1 (or STOP B) and SS2 (or STOP C) and is deactivated after the speed drops below the value set in p9368/p9568.

#### NOTICE

If 0 is entered for p9368/p9568, the speed limit of the SSM function (p9346/p9546) is also used as shutdown limit for the SAM function (safe acceleration monitoring). The SAM is deactivated if the speed is below this limit.

This means the effects of safe acceleration monitoring are greatly restricted if a relatively high SSM/SAM speed limit is set when using the SS1 and SS2 stop functions.

#### Note

SAM is part of the Safety Integrated Extended Functions SS1 and SS2. SAM cannot be activated individually.

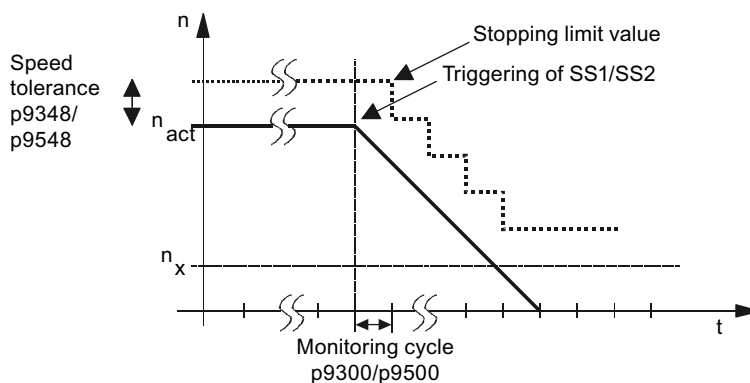


Figure 5-9 Characteristics of the shutdown limit for SAM

Calculating the SAM tolerance of the ACTUAL speed:

- The following applies when parameterizing the SAM tolerance:
  - The maximum speed increase after SS1 / SS2 is triggered is derived from the effective acceleration (a) and the duration of the acceleration phase.
  - The duration of the acceleration phase is equivalent to one monitoring clock cycle (p9300/p9500) MC (delay from detecting an SS1 / SS2 until  $n_{set} = 0$ ):
- SAM tolerance  
Actual speed SAM = acceleration \* acceleration duration  
The following setup rule is derived thereof:
  - For linear axes:  
SAM tolerance [mm/min] = a [m/s<sup>2</sup>] \* MC [s] \* 1000 [mm/m] \* 60 [s/min]
  - For rotary axes:  
SAM tolerance [rpm] = a [rev/s<sup>2</sup>] \* MC [s] \* 60 [s/min]
- Recommendation:  
The SAM tolerance value entered should be approx. 20% higher than the calculated value.

## Responses

**Speed limit violated (SAM):**

- STOP A
- Safety message C01706/C30706

**System errors:**

- STOP F with subsequent STOP A
- Safety message C01711/C30711

## Features

- Element of the SS1 (time and acceleration controlled) and SS2 functions
- Parameterizable minimum shutdown speed to be monitored (p9368/p9568)

## Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p9346 SI Motion SSM velocity limit (Motor Module)
- p9546 SI Motion SSM (SGA  $n < n_x$ ) velocity limit  $n_x$  (CU)
- p9348 SI Motion SAM actual speed tolerance (Motor Module)
- p9548 SI Motion SAM actual speed tolerance (Control Unit)
- p9368 SI Motion SAM speed limit (Motor Module)
- p9568 SI Motion SAM speed limit (CU)

## 5.9 Safe Brake Ramp (SBR)

The Safe Brake Ramp (SBR) function provides a safe method for monitoring the brake ramp. The Safe Brake Ramp function is used to monitor braking when using the "SS1 without encoder" and "SLS without encoder" functions.

### Features

The motor is immediately decelerated along the OFF3 ramp as soon as SS1 or SLS is triggered (if setpoint speed limitation is used). Monitoring of the brake ramp is activated once the delay time in p9582/p9382 has elapsed. Monitoring ensures that the motor does not exceed the set brake ramp (SBR) when braking. Deactivation of the safe monitoring of the brake ramp occurs

- for SS1:
  - as soon as the speed drops below the shutdown speed (p9560/p9360).
- for SLS:
  - as soon as the set brake ramp has reached the new SLS level
  - or
  - as soon as the actual speed has fallen below the newly selected SLS level and has remained there for the time parameterized in p9582/p9382.

Additional specific functions (e.g. STO, new SLS speed limit, etc.) are activated at this point, depending on the Safety Integrated function used.

5.9 Safe Brake Ramp (SBR)

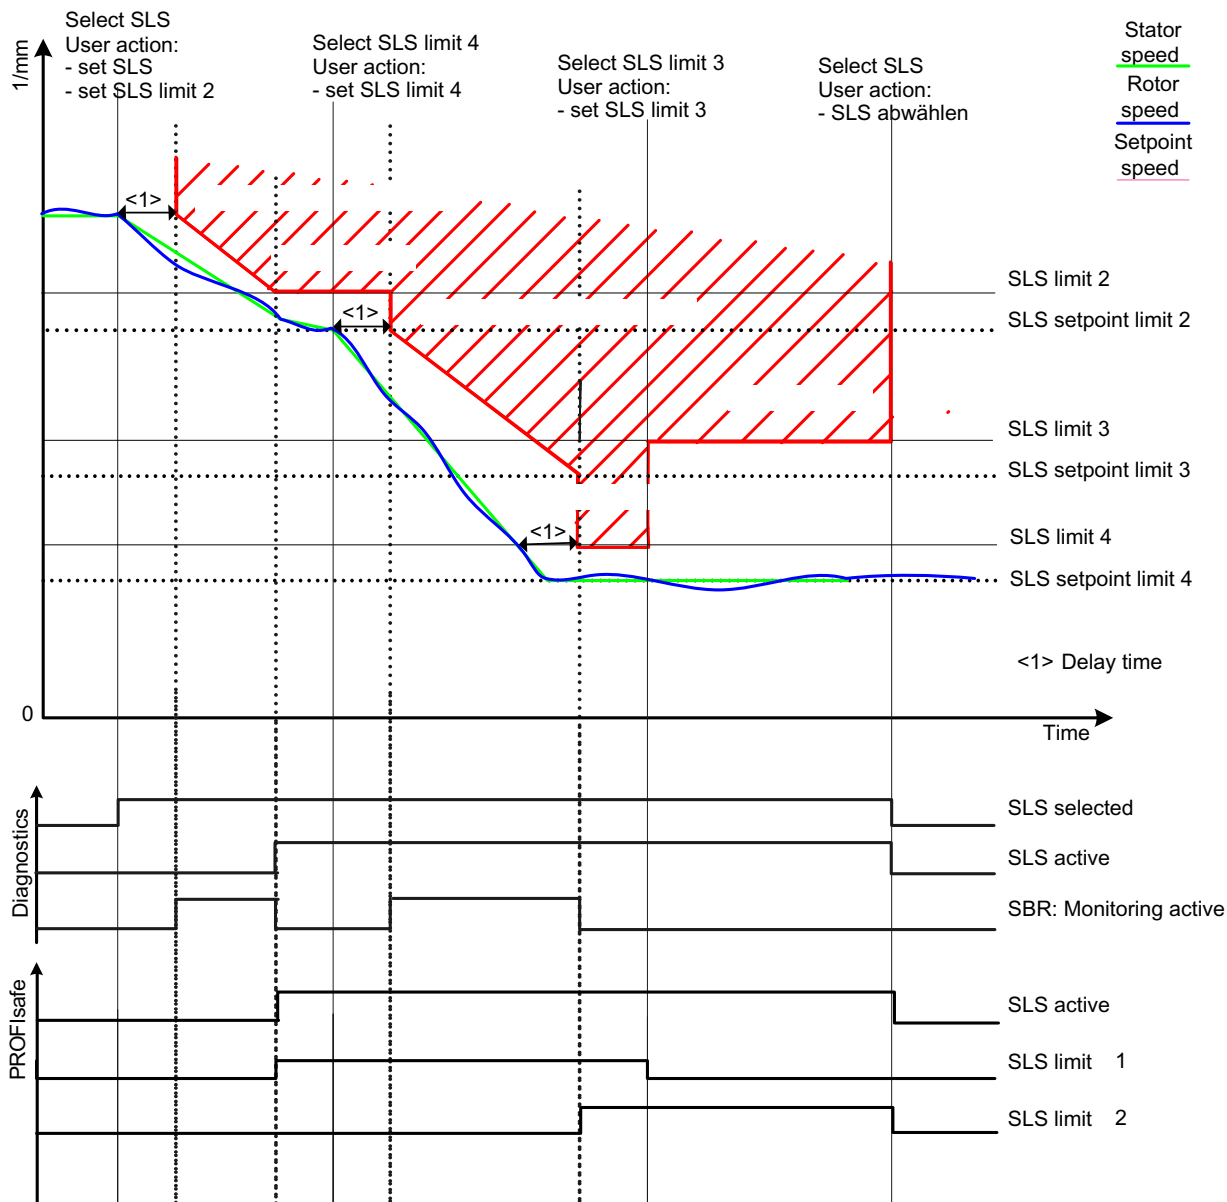


Figure 5-10 Safe Brake Ramp without encoder (for SLS)

Parameterization of the brake ramp

p9581/p9381 (SI Motion brake ramp reference value) and p9583/p9383 (SI Motion brake ramp monitoring time) are used to set the steepness of the brake ramp. Parameters p9581/p9381 determine the reference speed and parameters p9583/p9383 define the ramp-down time. Parameters p9582/p9382 are used to set the time which passes after the triggering of SS1, selection of SLS or SLS level changeover and the start of brake ramp monitoring.

### **Responses to brake ramp violations (SBR)**

- Safety messages C01706 and C30706 (SI Motion: SAM/SBR limit exceeded)
- Drive stopped with STOP A

### **Features**

- Part of the "SS1 without encoder" and "SLS without encoder" functions.
- Parameterizable safe brake ramp

### **Overview of important parameters (see the SINAMICS S120/S150 List Manual)**

- p9360 SI Motion pulse suppression shutdown speed (Motor Module)
- p9560 SI Motion pulse suppression shutdown speed (Control Unit)
- p9381 SI Motion brake ramp reference value (Motor Module)
- p9581 SI Motion brake ramp reference value (Control Unit)
- p9382 SI Motion brake ramp delay time (Motor Module)
- p9582 SI Motion brake ramp delay time (Control Unit)
- p9383 SI Motion brake ramp monitoring time (Motor Module)
- p9583 SI Motion brake ramp monitoring time (Control Unit)

## 5.10 Safe Direction (SDI)

### 5.10.1 Safe Direction with encoder

The Safe Direction function (SDI) allows reliable monitoring of the direction of motion of the drive. If this function is activated, the drive can only move in the enabled, safe direction.

#### Functional principle

After SDI has been selected via terminals or PROFIsafe, the delay time p9365/p9565 is started. During this period, you have the option of ensuring that the drive is moving in the enabled (safe) direction. After this, the Safe Direction function is active and the direction of motion is monitored. If the drive now moves in the non-safe direction, messages C01716/C30716 are output and the stop response defined in p9366/p9566 is initiated.

#### Features

- Parameters r9720.12/r9720.13 display whether the SDI function is selected.
- Parameters rr9722.12/r9722.13 display whether the SDI function is active.
- Parameters p9364/p9564 are used to set the tolerance within which a movement in a non-enabled (non-safe) direction is tolerated.
- Parameters p9366/p9566 define the stop response in the case of a fault.
- Parameters p10030/p10130 define the terminals for SDI.
- Parameters p10042 to p10045 are used to define whether the SDI status in the F-DO status display of the TM54F is taken into account.

- If "SDI positive" is selected, the following value is set automatically:
  - r9733[1] = 0 (setpoint limitation negative)
- If "SDI "negative" is selected, the following value is set automatically:
  - r9733[0] = 0 (setpoint limitation positive)
- The absolute setpoint speed limit is available in r9733[2].

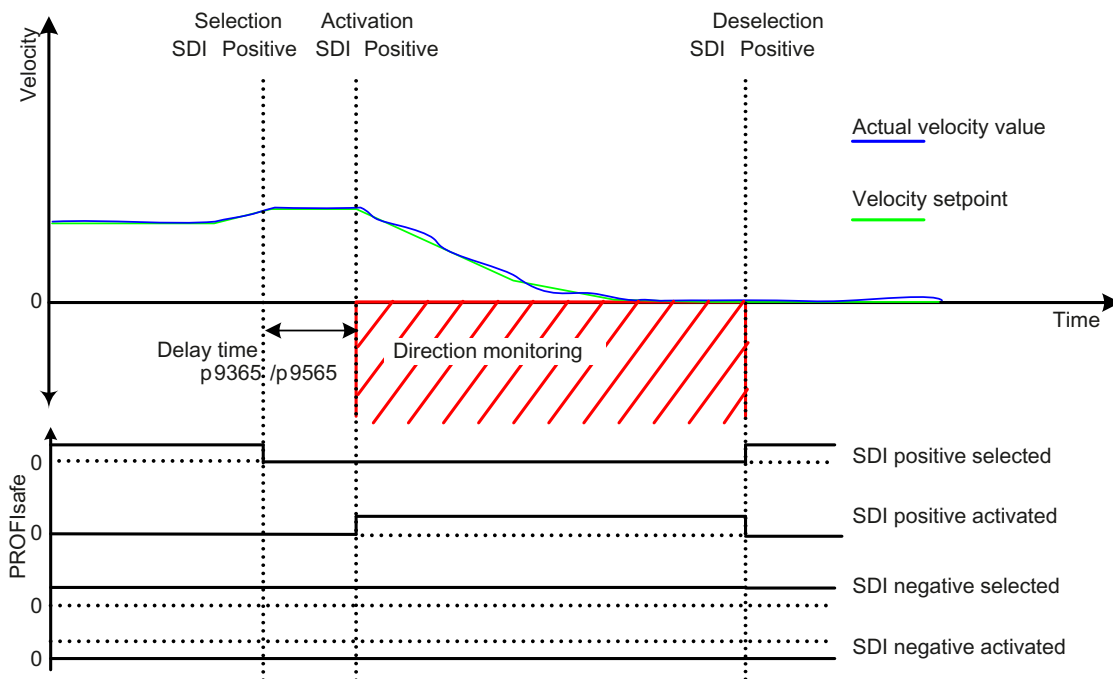


Figure 5-11 Functional principle SDI with encoder

### Enabling the Safe Direction function

The "Safe Direction" function is enabled via the following parameters:

- p9501.17 = 1, p9301.17 = 1

## 5.10.2 Safe Direction without encoder

### Function

Set  $p9306 = p9506 = 1$  or  $p9506 = p9306 = 3$  (factory setting = 0) to activate Safety Integrated functions without encoder. You can also make this setting by selecting "Without encoder" on the STARTER safety screen.

### Differences between Safe Direction with encoder and Safe Direction without encoder

- For Safe Direction without encoder, after pulse suppression the drive is unable to determine the current speed. For this operating state, the behavior is defined with the parameters  $p9309.8/p9509.8$ :
  - $p9309.8 = p9509.8 = 1$   
The status signal displays "inactive".
  - $p9309.8 = p9509.8 = 0$   
The status signal displays "active", and the drive takes on the state STO.
- Due to the less precise position recognition, "Safe Direction without encoder" requires a larger tolerance ( $p9364/p9564$ ) compared with the function with encoder.

---

### Note

Changing the direction of rotation using parameter  $p1820$  or  $p1821$  is not recognized by "SDI without encoder". For this reason, the limitation of SDI from  $r9733$  no longer functions.

---

### Restart after pulse suppression

If the drive has been switched off via OFF2/STO, the following steps need to be carried out before a restart can be performed:

1st scenario:

- State after power-on: SDI selected, STO selected, OFF2 active
- Deselect STO.
- The drive enable must be given within 5 seconds via a positive edge at OFF1, otherwise STO is reactivated.



2nd scenario

- Situation: Run until standstill with SDI selected, then OFF2 activated
- Select STO
- Deselect STO.

STO activated internally via OFF2: This activation must be undone by selection/deselection.

- The drive enable must be given within 5 seconds via a positive edge at OFF1, otherwise STO is reactivated.

3rd scenario

- Situation: Run until standstill with SDI selected, then OFF2 activated
- Deselect SDI
- Select SDI

STO activated internally via OFF2: This activation must be undone by deselecting SDI.

- After this the drive enable must be given by a positive edge at OFF1.

4th scenario

- Situation: All Safety Integrated functions are deselected
- After this the drive enable must be given by a positive edge at OFF1.

---

**Note**

In the 4th scenario the motor is not reliably started.

---

### 5.10.3 Overview of parameters and function diagrams

#### Function diagrams (see SINAMICS S120/S150 List Manual)

- 2840 – Extended Functions, control word and status word
- 2855 – Extended Functions, TM54F control interface
- 2856 – Extended Functions, TM54F Safe State selection
- 2857 – Extended Functions, TM54F assignment (F-DO 0 ... F-DO 3)
- 2861 -- Safety Integrated - Extended Functions, SDI (Safe Direction)

#### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p1820[0...n] Reverse output phase sequence
- p1821[0...n] Direction of rotation
- p9301.17 SI Motion enable safety functions (Motor Module) Enable SDI
- p9306 SI Motion function specification (Motor Module)
- p9309 SI Motion behavior during pulse suppression (Motor Module)
- p9364 SI Motion SDI tolerance (Motor Module)
- p9365 SI Motion SDI delay time (Motor Module)
- p9366 SI Motion SDI stop response (Motor Module)
- p9501.17 SI Motion enable safety functions (Control Unit): Enable SDI
- p9506 SI Motion function specification (Control Unit)
- p9509 SI Motion behavior during pulse suppression (Control Unit)
- p9564 SI Motion SDI tolerance (Control Unit)
- p9565 SI Motion SDI delay time (Control Unit)
- p9566 SI Motion SDI stop response (Control Unit)
- r9720 CO/BO: SI Motion drive-integrated control signals
- r9722 CO/BO: SI Motion drive-integrated status signals
- r9733[0...2] CO: SI Motion setpoint speed limit effective
- p10002 SI discrepancy monitoring time
- p10017 SI digital inputs, debounce time
- p10030[0...3] SI SDI positive input terminal
- p10031[0...3] SI SDI negative input terminal
- p10039[0...3] SI Safe State signal selection
- p10042[0...5] SI F-DO 0 signal sources
- p10043[0...5] SI F-DO 1 signal sources
- p10044[0...5] SI F-DO 2 signal sources
- p10045[0...5] SI F-DO 3 signal sources

## 5.11 Safety faults

### Stop responses

Faults with Safety Integrated Extended Functions and violation of limits can trigger the following stop response:

Table 5-2 Stop response overview

| Stop response | Triggered ...   | Action  | Effect  |
|---------------|---|---|---|
| STOP A        | - For all acknowledgeable Safety faults with pulse suppression.<br>- Configured subsequent stop p9363/p9563 for SLS/SDI.  | Immediate pulse suppression   | Drive coasts down   |
| STOP B        | Examples:<br>- standstill tolerance violated in p9330/p9530 (SOS).<br>- Configured subsequent stop p9363/p9563 for SLS/SDI.<br>- Subsequent response of STOP F. | Immediate input of speed setpoint = 0 and start of timer $t_B$ .<br>Once $t_B$ or $n_{act} < n_{shutdown}$ , STOP A is triggered. | STOP B with subsequent STOP A.<br>The drive decelerates along the OFF3 ramp and then switches to STOP A.  |
| STOP C        | Configured subsequent stop p9363/p9563 for SLS/SDI.   | Immediate input of speed setpoint = 0 and start of timer $t_C$ .<br>Once $t_C$ has elapsed, SOS is selected.                      | The drive decelerates along the OFF3 ramp; SOS is then selected.  |
| STOP D        | Configured subsequent stop p9363/p9563 for SLS/SDI.   | Timer $t_D$ starts.<br>No drive-integrated response.<br>SOS is activated on expiration of $t_D$ .                                 | The drive must be decelerated by the higher-level control (within the drive group)!<br>Once $t_D$ has elapsed, SOS is selected.<br>An automatic response is only triggered if the standstill tolerance window is violated in SOS. |
| STOP E        | - Configured subsequent stop p9563/p9363 for SLS<br>- Configured subsequent stop p9566/p9366 for SDI  | SOS triggered after the expiry of p9554/p9354   | Controlling the drive-integrated ESR functionality  |
| STOP F        | If a fault occurs in the crosswise data comparison.<br>Follow-up response STOP B.   | Timer $t_{F1}$ (Basic Functions) or $t_{F2}$ (Extended Functions)<br>No drive response  | If a safety function (SOS, SLS) has been selected or if SSM with hysteresis has been enabled, transition to STOP A after $t_{F1}$ (Basic Functions) has elapsed or STOP B after $t_{F2}$ (Extended Functions) has elapsed.        |

**Note**

A delay time between STOP F and STOP B should only be set if an additional response is initiated during this time when the "Internal Event" (r9722.7) message signal is evaluated.

Further, when using the delay time, a monitoring function should always be selected (e.g. SLS with a high limit speed) or the hysteresis of SSM should be configured.

When hysteresis is activated for SSM, then this should be considered to be an activated monitoring function.

**On delays at the stop response transitions**

- $t_B$ : p9356/p9556
- $t_C$ : p9352/p9552
- $t_D$ : p9353/p9553
- $t_{F1}$ : p9658/p9858
- $t_{F2}$ : p9355/p9555
- $t_{shutdown}$ : p9360/p9560

**Stop response priorities**

Table 5- 3 Stop response priorities

| Priority classes | Stop response |
|------------------|---------------|
| Highest priority | STOP A        |
| .....            | STOP B        |
| ...              | STOP C        |
| ..               | STOP D        |
| ..               | STOP E        |
| Lowest priority  | STOP F        |

### Priorities of stop responses and Extended Functions

Table 5- 4 Priorities of stop responses and Extended Functions

| Stop response / Extended Function |            | Highest priority     | ...                  | ...                  | ...                  | ...    | Lowest priority            |
|-----------------------------------|------------|----------------------|----------------------|----------------------|----------------------|--------|----------------------------|
|                                   |            | STOP A               | STOP B               | STOP C               | STOP D               | STOP E | STOP F                     |
| Highest priority                  | <b>STO</b> | STOP A / STO         | STO                  | STO                  | STO                  | STO    | STO                        |
| .....                             | <b>SS1</b> | STOP A               | STOP B / SS1         | SS1                  | SS1                  | SS1    | SS1                        |
| ...                               | <b>SS2</b> | STOP A               | STOP B               | STOP C / SS2         | SS2                  | SS2    | SS2 / STOP B <sup>2)</sup> |
| ..                                | <b>SOS</b> | STOP A <sup>1)</sup> | STOP B <sup>1)</sup> | SOS                  | SOS                  | SOS    | STOP B <sup>2)</sup>       |
| Lowest priority                   | <b>SLS</b> | STOP A <sup>3)</sup> | STOP B <sup>3)</sup> | STOP C <sup>4)</sup> | STOP D <sup>4)</sup> | STOP E | STOP B <sup>2)</sup>       |

1) The SOS monitoring function remains active, although the fault response in the event of a fault can no longer be triggered because it is already present.  
 2) STOP B is the subsequent stop of STOP F, which is activated after a parameterizable time. STOP F alone does not have any effect; the active safety function is still present.  
 3) The SLS monitoring function remains active, although the fault response in the event of a fault can no longer be triggered because it is already present.  
 4) SLS remains active during the braking phase, after which the system switches to SOS.

The table above specifies which stop response/safety function is set if a STOP is triggered when a safety function is active. The STOPS are arranged here from left to right in descending order of priority (STOP A-F).

No overall priority is assigned in the individual safety functions. SOS remains active, for example, even if STO is requested. The safety functions that cause the drive to decelerate (STO, SS1, SS2) are specified from top to bottom in descending order of priority.

If a field contains two entries, the stop responses and safety functions have the same priority. Explanation:

- STOP A corresponds to STO
- STOP B corresponds to SS1
- STOP C corresponds to SS2
- When the SS2 function is active, STOP F results in subsequent stop B. SS2 remains active.

**Examples for illustrating the information in the table:**

1. Safety function SS1 has just been selected. STOP A remains active; a STOP B operation that is currently in progress is not interrupted by this. Any remaining STOP C-F would be replaced by SS1.
2. The SLS safety function is selected. This selection does not modify the function of STOP A-D. A STOP F now triggers a STOP B because a safety function has been activated.
3. Stop response, STOP C is selected. If the STO or SS1 safety functions are active, this does not have any effect. If SS2 is active, this brake ramp is retained. If SOS is active, SOS remains effective, which is also the end status of STOP C. When SLS is selected, the drive is decelerated with STOP C.

**Acknowledging the safety faults**

**General**

|  |
|--|
| <b>NOTICE</b>  |
| Safety faults can also be acknowledged (as with all other faults) by switching the drive unit off and then on again (POWER ON).<br>If this action has not eliminated the fault cause, the fault is displayed again immediately after power up. |

**Acknowledgement via TM54F**

Parameter p10006 "SI acknowledgement internal event input terminal" allows faults to be acknowledged in the safety drives and with an F-DI of the TM54F itself.

The **"safe fault acknowledgement"** mechanism functions as follows:

The safe input F-DI on the TM54F parameterized with the function p10006 "Safety Integrated acknowledgement internal event input terminal" is controlled. This allows faults that occurred in the firmware installed in the Control Unit or Motor Module to be acknowledged by means of a safe input signal. The falling edge at this input resets the status "Internal Event" in the drives and, if used, in the TM54F.

To prevent safety faults from being acknowledged unintentionally or incorrectly, the signal at the TM54F F DI terminal, which was parameterized for acknowledgement purposes, must be at level "0" in the idle state. To trigger the acknowledgement (falling edge at F DI), the signal must first be set to "1" and then back to "0". If the required idle state is not reached, an alarm is output.

After "safe fault acknowledgement", an acknowledgement must be issued on the Control Unit in order to:

- Delete the TM54F faults from the fault buffer
- Reset the pending, red "Ready" LED on the TM54F

**Acknowledgement via PROFIsafe**

The higher-level controller sets the signal "Internal Event ACK" via the PROFIsafe telegram (STW bit 7) separately for each drive object. A falling edge in this signal resets the status "Internal Event" in the relevant drive, which acknowledges the fault.

Faults in the drive objects (DOs) cannot be acknowledged by the higher-level control in the line-up but must instead be acknowledged separately for each individual drive object.

**Extended acknowledgment**

If STO is selected/deselected (and p9307.0/p9507.0 = 1 are set), safety messages (in addition to fault messages) are also canceled automatically.

**Description of faults and alarms**

---

**Note**

The faults and alarms for SINAMICS Safety Integrated are described in the following documentation:

Reference: SINAMICS S120/S150 List Manual

---

**5.12 Message buffer**

In addition to the fault buffer for F... faults and the alarm buffer for A... alarms (see the corresponding chapter in: /IH1/ SINAMICS S120 Commissioning Manual), specifically for Safety Integrated Extended Functions, there is also a message buffer for C... safety messages.

The fault messages for the Safety Integrated Basic Functions are stored in the standard fault buffer (see chapter "Buffer for faults and alarms" in /IH1/: SINAMICS S120 Commissioning Manual).

---

**Note**

Set parameter p3117 = 1 if you need to save both the Basic Functions messages and the Extended Functions messages in the standard fault buffer.

---

The message buffer for safety messages is similar to the fault buffer for fault messages. The message buffer comprises the message code, message value, and message time (received, resolved), the component number for identifying the affected SINAMICS component and diagnostics attributes. The following diagram shows how the message buffer is structured:

5.12 Message buffer

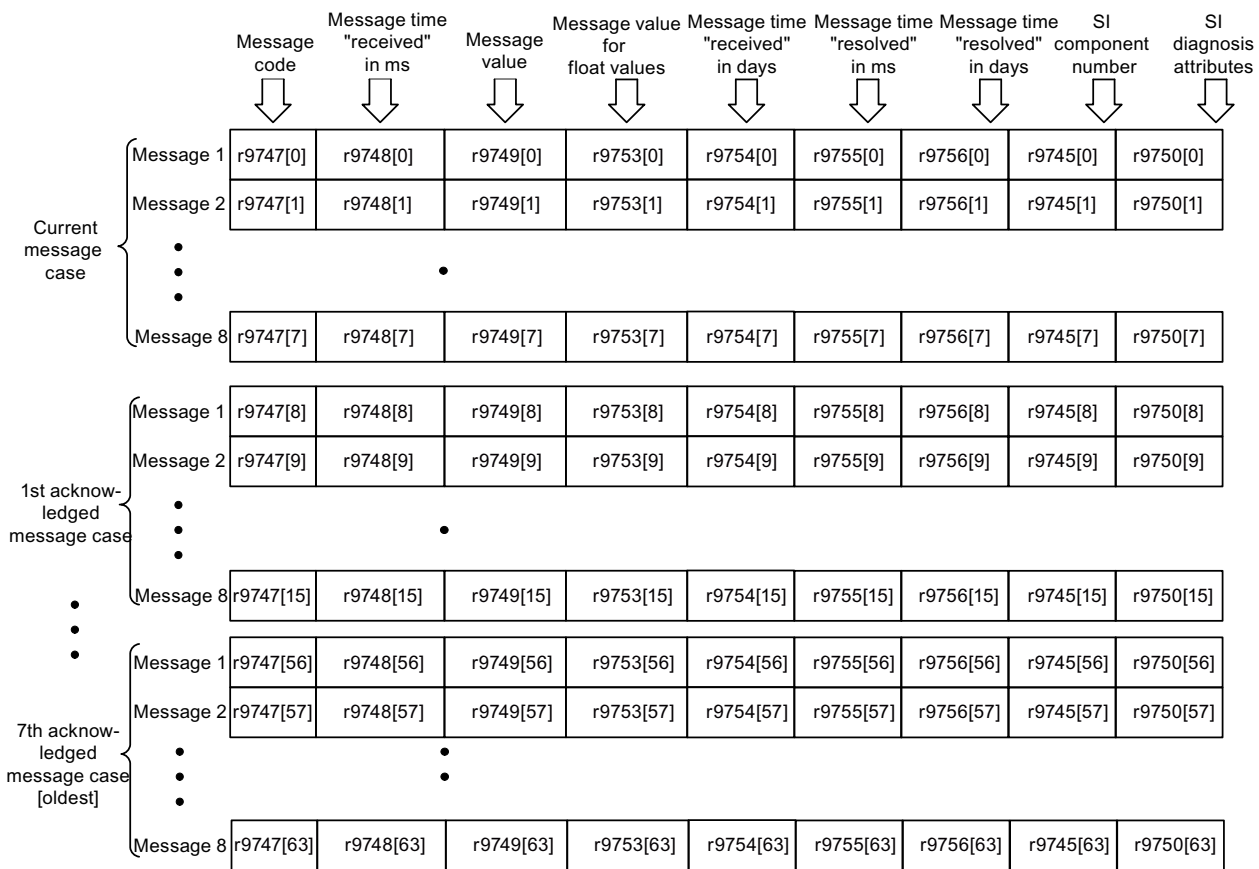


Figure 5-12 Structure of the message buffer

When a safety message is present, the bit 2139.5 = 1 ("Safety message present") is set. The entry in the message buffer is delayed. For this reason, the message buffer should not be read until a change in the buffer (r9744) has been detected after "Safety message present" is output.

The messages must be acknowledged via a fail-safe input F-DI of the TM54F or via PROFIsafe.

**Properties of the safety message buffer:**

- The entries appear in the buffer according to the time at which they occurred.
- If a new message case occurs, the message buffer is reorganized accordingly. The history is recorded in the "Acknowledged message case" 1 to 7.
- If the cause of at least one message in "Current message case" is rectified and acknowledged, the message buffer is reorganized accordingly. Messages that have not been rectified remain in "Current message case".
- If "Current message case" contains 8 messages and a new message for the current message case is output, the message in the current message case parameters is overwritten with the new message in index 7.



- r9744 is incremented each time the message buffer changes.
- A message value (r9749, r9753) can be output for a message. The message value is used to diagnose the message more accurately (refer to the message description for more details).

**Deleting the message buffer:**

The message buffer can be deleted as follows: p9752 = 0. Parameter p9752 (SI message cases, counter) is also reset to 0 at POWER ON. This also clears the fault memory.

**Overview of important parameters (see the SINAMICS S120/S150 List Manual)**

- r2139.0...12 CO/BO: Status word, faults/alarms 1
- r9744 SI message buffer changes, counter
- r9745[0...63] SI component number
- r9750[0...63] SI diagnostic attributes
- p9752 SI message cases, counter
- r9747[0...63] SI message code
- r9748[0...63] SI message time received in milliseconds
- r9749[0...63] SI message value
- p9752 SI message cases, counter
- r9753[0...63] SI message value for float values
- r9754[0...63] SI message time received in days
- r9755[0...63] SI message time removed in milliseconds
- r9756[0...63] SI message time removed in days

## 5.13 Safe actual value acquisition

### 5.13.1 Reliable actual value acquisition with encoder system

**Supported encoder systems**

The Safety functions used to monitor motion (e.g. SS1, SS2, SOS, SLS and SSM) require reliable actual value acquisition.

The following encoder systems should primarily be used for reliable speed/position acquisition:

- Single-encoder systems or
- Two-encoder systems

### Single-encoder system

In a single-encoder system, only the motor encoder is used to safely acquire the drive actual values. This motor encoder must be appropriately qualified (see encoder types). The safety-relevant actual values are generated either directly in the encoder or in the Sensor Module and are transferred to the Control Unit by way of fail-safe communication via DRIVE-CLiQ.

For motors without a DRIVE-CLiQ interface, the connection is established by means of additional Sensor Modules (SMC or SME).

Even if the drive is operating in the closed-loop torque controlled mode, motion monitoring functions may be selected as long as it is guaranteed that the encoder signals can be evaluated.

### Special feature in the case of linear motors

The motor encoder (linear scale) of linear motors also acts as load measuring system. Only one measuring system is required for this reason. The system is connected by means of a Sensor Module or directly via DRIVE-CLiQ.

|   |
|---|
| <b>NOTICE</b>   |
| When specifying the standstill tolerance window, you must remember that fail-safe position monitoring takes place with a maximum of the precision displayed in r9731. |

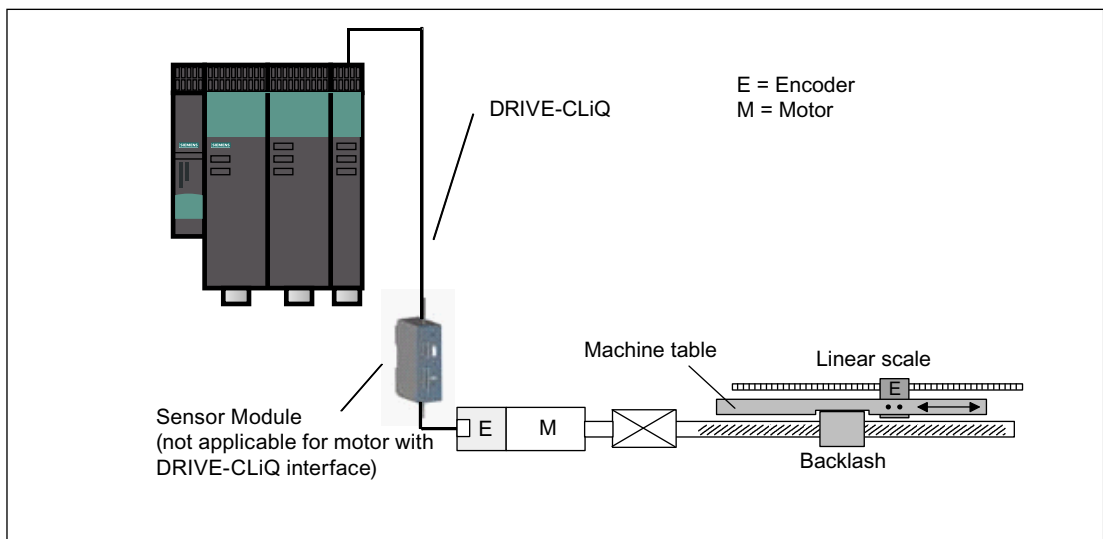


Figure 5-13 Example of a single-encoder system

## Two-encoder system

The fail-safe actual values for a drive are provided by two separate encoders. The actual values are transferred to the Control Unit by means of fail-safe communication via DRIVE-CLiQ.

For motors without a DRIVE-CLiQ interface, the connection is established by means of additional Sensor Modules (SMC or SME).

Each measuring system requires a separate connection or a separate Sensor Module.

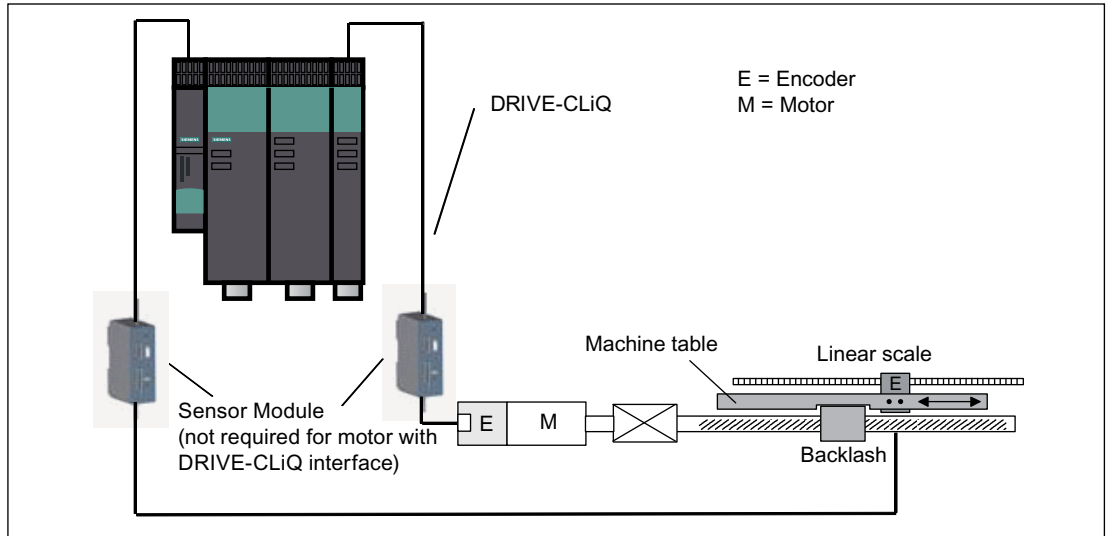


Figure 5-14 Example of an S120 two-encoder system on a linear axis via a ballscrew

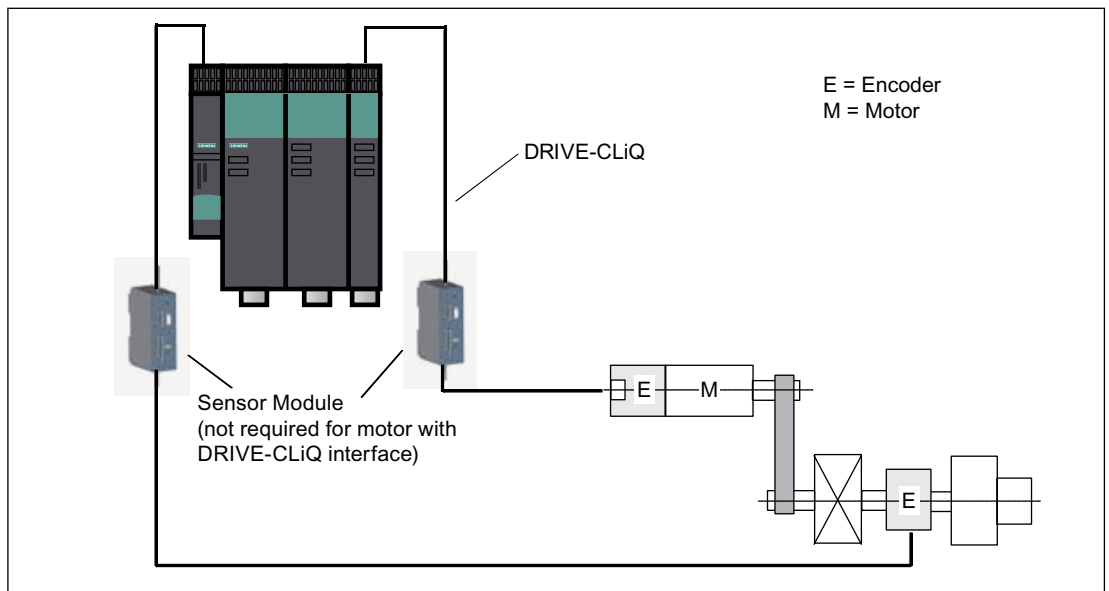


Figure 5-15 Example of a two-encoder system on a rotary axis

### Encoder types

Incremental encoders or absolute encoders can be used for safe acquisition of the position values on a drive.

Safe actual value acquisition relies on redundant evaluation of the incremental tracks A/B, which have to supply sin/cos signals of 1 Vpp.

The absolute position values can be transferred via the serial EnDat interface or an SSI interface to the controller.

### Encoder types for 1 and 2 encoder systems

In systems with encoders with SINAMICS Safety Integrated (1 and 2 encoder systems), for safe actual value acquisition only encoders with sin/cos 1 Vss signals to the SINAMICS Sensor Modules SME20/25, SME120/125 and SMC20 are permitted which fulfill the following conditions:

1. The encoders must contain purely analog signal processing and creation. This is necessary to be able to prevent the A/B track signals with valid levels from becoming static ("freezing").
2. A failure modes and effects analysis (FMEA) must be carried out for the fixation of the encoder onto the motor shaft or the linear drive. The result should incorporate exclusion of the failure "Loosening of encoder fixation so that encoder no longer reports movement correctly" (see IEC 61800-5-2, 2008, Table D.16).

It should be noted that the machine manufacturer has sole responsibility for the fulfillment of the above-described requirements. Information on the internal realization of the encoder must come from the encoder manufacturer. The FMEA must be created by the machine manufacturer.

Certain Siemens motors with and without DRIVE-CLiQ connection can be used for Safety Integrated functions, see:

<http://support.automation.siemens.com/WW/view/de/33512621>

For these motors, the fault listed under 2. cannot occur.

|               |
|---------------|
| <b>NOTICE</b> |
|---------------|

|   |
|---|
| Basic absolute encoders (e.g. ECI, EQI) that offer an EnDat interface with additional sin/cos tracks, but operate according to an inductive measuring principle internally, are not permitted until their suitability for SINAMICS Safety Integrated has been determined. |
|---|

## Actual value synchronization

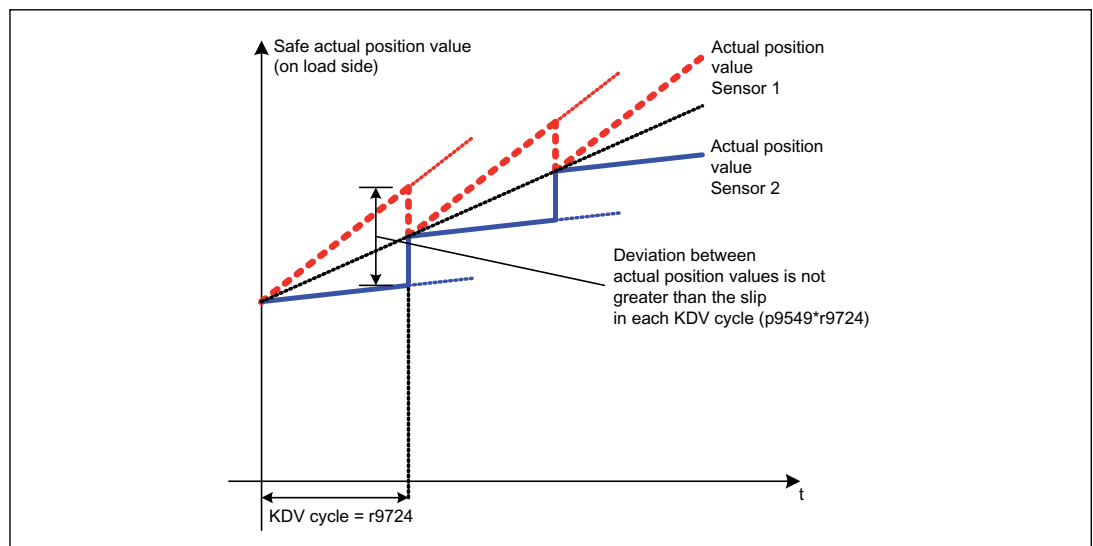


Figure 5-16 Example diagram of actual value synchronization

The mean value of the actual values of both encoders is calculated cyclically after actual value synchronization ( $p9301.3 = p9501.3 = 1$ ) was activated, for example, for systems or machines with slip. The maximum slip defined in  $p9349/p9549$  is monitored within the crosswise comparison clock cycle ( $r9724$ ). If "actual value synchronization" is not enabled, the value parameterized in  $p9342/p9542$  is used as tolerance value for the crosswise comparison.

## Safe motion monitoring

Two read parameters are available for safe motion monitoring:

### r9730: SI Motion safe maximum velocity

Displays the maximum speed (load side) permissible due to the acquisition of actual values for safe motion monitoring functions. The maximum velocity for actual value acquisition depends on the actual value update clock cycle ( $p9311/p9511$ ). Parameters  $p9311/p9511$  are used to set the clock cycle time of the actual value acquisition for safe motion monitoring.

A slower clock cycle reduces the maximum permissible velocity, but also reduces the load on the Control Unit for safe actual value acquisition.

The maximum permissible velocity which, if overshoot, can trigger faults in safe actual value acquisition, is displayed in parameter  $r9730$ .

With a default value of  $p9311/p9511$  (0 ms), the isochronous PROFIBUS clock cycle is used (or 1 ms in non-isochronous mode).

### r9731: SI Motion safe position accuracy

Displays the greatest position accuracy (load side) that can be ensured due to the acquisition of the actual value for the safe motion monitoring functions.

Both parameters ( $r9730/r9731$ ) depend on the relevant encoder type.

**Overview of important parameters (see the SINAMICS S120/S150 List Manual)**

- p9301.3 SI Motion enable safety functions (Motor Module), enable actual value synchronization
- p9501.3 SI Motion enable safety functions (Control Unit), enable actual value synchronization
- p9302 SI Motion axis type (Motor Module)
- p9502 SI Motion axis type (Control Unit)
- p9311 SI Motion actual value sensing clock cycle (Motor Module)
- p9511 SI Motion actual value sensing clock cycle (Control Unit)
- p9315 SI Motion encoder coarse position value configuration (Motor Module)
- p9515 SI Motion encoder coarse position value configuration (Control Unit)
- p9316 SI Motion motor encoder configuration safety functions (Motor Module)
- p9516 SI Motion motor encoder configuration safety functions (Control Unit)
- p9317 SI Motion linear scale grid division (Motor Module)
- p9517 SI Motion linear scale grid division (Control Unit)
- p9318 SI Motion encoder pulses per revolution (Motor Module)
- p9518 SI Motion encoder pulses per revolution (Control Unit)
- p9319 SI Motion fine resolution Gn\_XIST1 (Motor Module)
- p9519 SI Motion fine resolution G1\_XIST1 (Control Unit)
- p9320 SI Motion spindle pitch (Motor Module)
- p9520 SI Motion spindle pitch (Control Unit)
- p9321[0...7] SI Motion gearbox encoder/load denominator (Motor Module)
- p9521[0...7] SI Motion gearbox encoder/load denominator (Control Unit)
- p9322[0...7] SI Motion gearbox encoder/load numerator (Motor Module)
- p9522[0...7] SI Motion gearbox encoder/load numerator (Control Unit)
- p9323 SI Motion redundant coarse position value valid bits (Motor Module)
- p9324 SI Motion redundant coarse position value fine resolution (Motor Module)
- p9325 SI Motion redundant coarse position value relevant bits (Motor Module)
- p9523 SI Motion redundant coarse position value valid bits (Control Unit)
- p9524 SI Motion redundant coarse position value fine resolution (Control Unit)
- p9525 SI Motion redundant coarse position value relevant bits (Control Unit)
- p9326 SI Motion encoder assignment (Motor Module)
- p9526 SI Motion encoder assignment second channel
- p9342 SI Motion actual value comparison tolerance (crosswise) (Motor Module)
- p9542 SI Motion actual value comparison tolerance (crosswise) (Control Unit)
- p9349 SI Motion slip velocity tolerance (Motor Module)

- p9549 SI Motion slip velocity tolerance (Control Unit)
- r9713[0...3] SI Motion diagnostics position action value load side
- r9714[0...1] SI Motion diagnostics speed
- r9724 SI Motion crosswise comparison clock cycle
- r9730 SI Motion safe maximum velocity
- r9731 SI Motion safe position accuracy

### 5.13.2 Safe current actual value acquisition without encoder

Several parameters are available in order to guarantee safe motion monitoring for Safety Extended functions without encoder depending on the situation in your particular application. You define these parameters in the following STARTER dialog box:

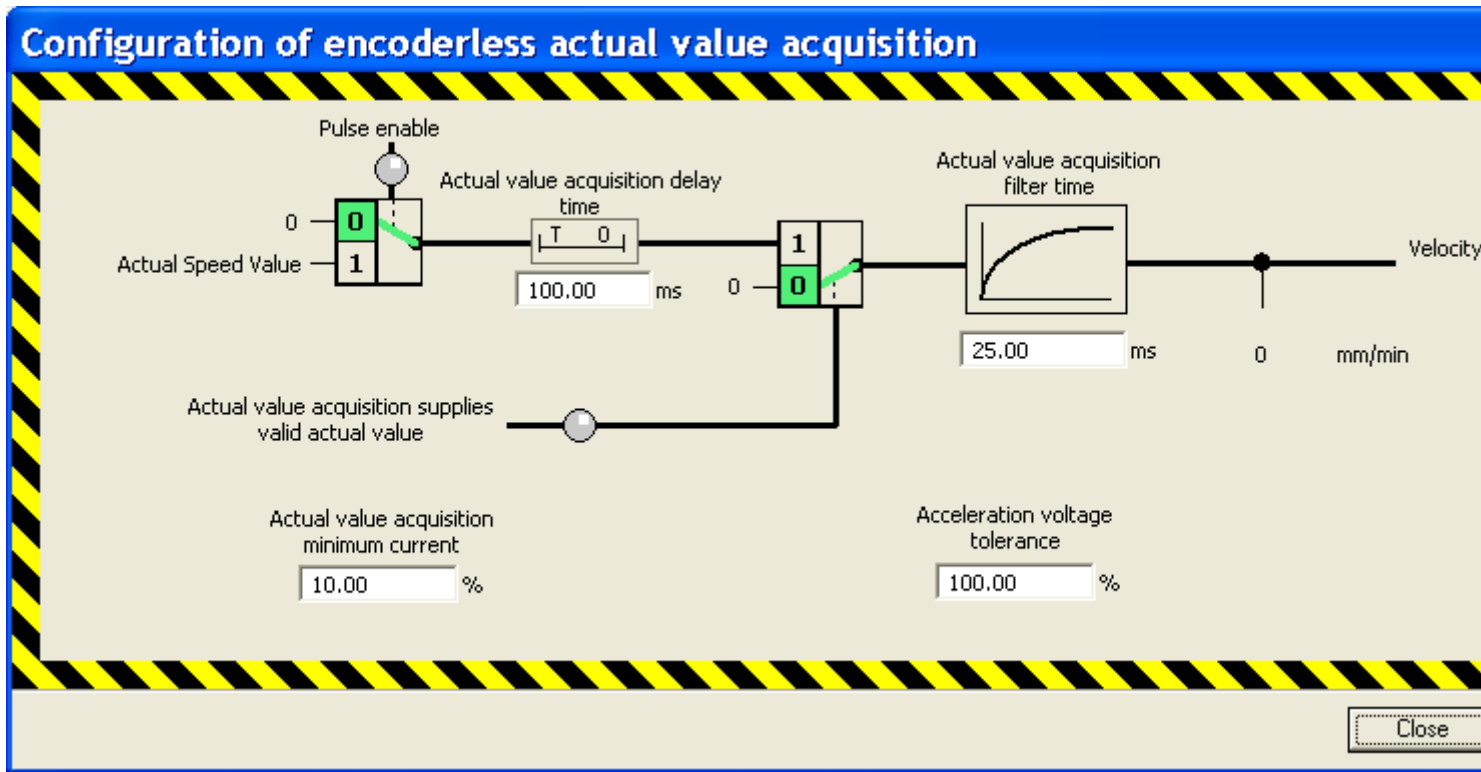


Figure 5-17 Configuration, actual value acquisition without encoder

In most cases, you can work with the default values. If the converter outputs unnecessary messages/signals – especially during the starting phase – then increase the value of the selected parameter **Delay time actual value acquisition** (p9586/p9386).

Instructions to determine the correction value using the trace function are provided in the "Reaction times" section. Alternatively, you can change the value of p9586/p9386 in small steps and then monitor the system reaction. You have found a suitable value if unnecessary messages/signals no longer occur.

#### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p9386 SI Motion evaluation delay time without encoder (MM)
- p9387 SI Motion actual value acquisition without encoder filter time (Motor Module)
- p9388 SI Motion actual value acquisition without encoder minimum current (Motor Module)
- p9389 SI Motion acceleration voltage tolerance (Motor Module)
- p9586 SI Motion evaluation delay time without encoder (CU)



- p9587 SI Motion actual value acquisition without encoder filter time (Control Unit)
- p9588 SI Motion actual value acquisition without encoder minimum current (Control Unit)
- p9589 SI Motion acceleration voltage tolerance (Control Unit)

## **5.14 Forced dormant error detection**

### **Forced dormant error detection and function test through test stop**

The functions and switch-off signal paths must be tested at least once within a defined period to establish whether they are working properly in order to meet the requirements of EN ISO 13849-1 and IEC 61508 in terms of timely error detection.

The maximum permissible interval for forced dormant error detection with the Basic and Extended Functions is 9000 hours or once a year.

This functionality must be implemented by means of test stop triggering either in cyclic manual mode or by the automated process.

The test stop cycle is monitored. On expiration of the parameterized timer (also after POWER ON / warm restart), the alarm A01697: "SI Motion: Test of motion monitoring required" is generated and a status bit is set which can be transferred to an output or to a PZD bit via BICO. This alarm does not affect machine operation.

The test stop must be initiated application-specific and be executed at a time which suits application requirements. This functionality is implemented by means of a single-channel parameter p9705 which can be wired via BICO either to an input terminal on the drive unit (CU), or to an IO-PZD in the drive telegram.

- p9559 SI Motion Forced dormant error detection timer (Control Unit)
- p9705 BI: SI Motion Test stop signal source
- r9723.0 CO/BO: SI Motion diagnostics signals integrated in the drive

A test stop does not require POWER ON. The acknowledgment is set by canceling the test stop request.

When the appropriate safety devices are implemented (e.g. protective doors), it can be assumed that running machinery will not pose any risk to personnel. For this reason, an alarm is only output to inform the user that a forced dormant error detection run is due and to request that this be carried out at the next available opportunity.

*5.14 Forced dormant error detection*

Examples of when to carry out forced dormant error detection:

- When the drives are at a standstill after the system has been switched on.
- Before the protective door is opened.
- At defined intervals (e.g. every 8 hours).
- In automatic mode (time and event dependent)

---

**Note**

STO is triggered when a test stop is carried out for the Safety functions. It is not permissible to select STO before selecting the test stop.

When using blocksize Power Modules, the test stop must be initiated at controlled standstill (speed setpoint of 0, current is flowing through the motor).

---

**Forced dormant error detection F-DI/F-DO of TM54F through test stop**

An automatic test stop function is available for forced dormant error detection within the F-DIs/DOs test.

To ensure that the test stop function of the TM54F can be used, the F-DIs that are used must be interconnected in accordance with the following wiring example. The digital inputs of F-DI0 to F-DI4 must be connected to the "L1+" power supply. The digital inputs of F-DI5 to F-DI9 must be connected to the "L2+" power supply.

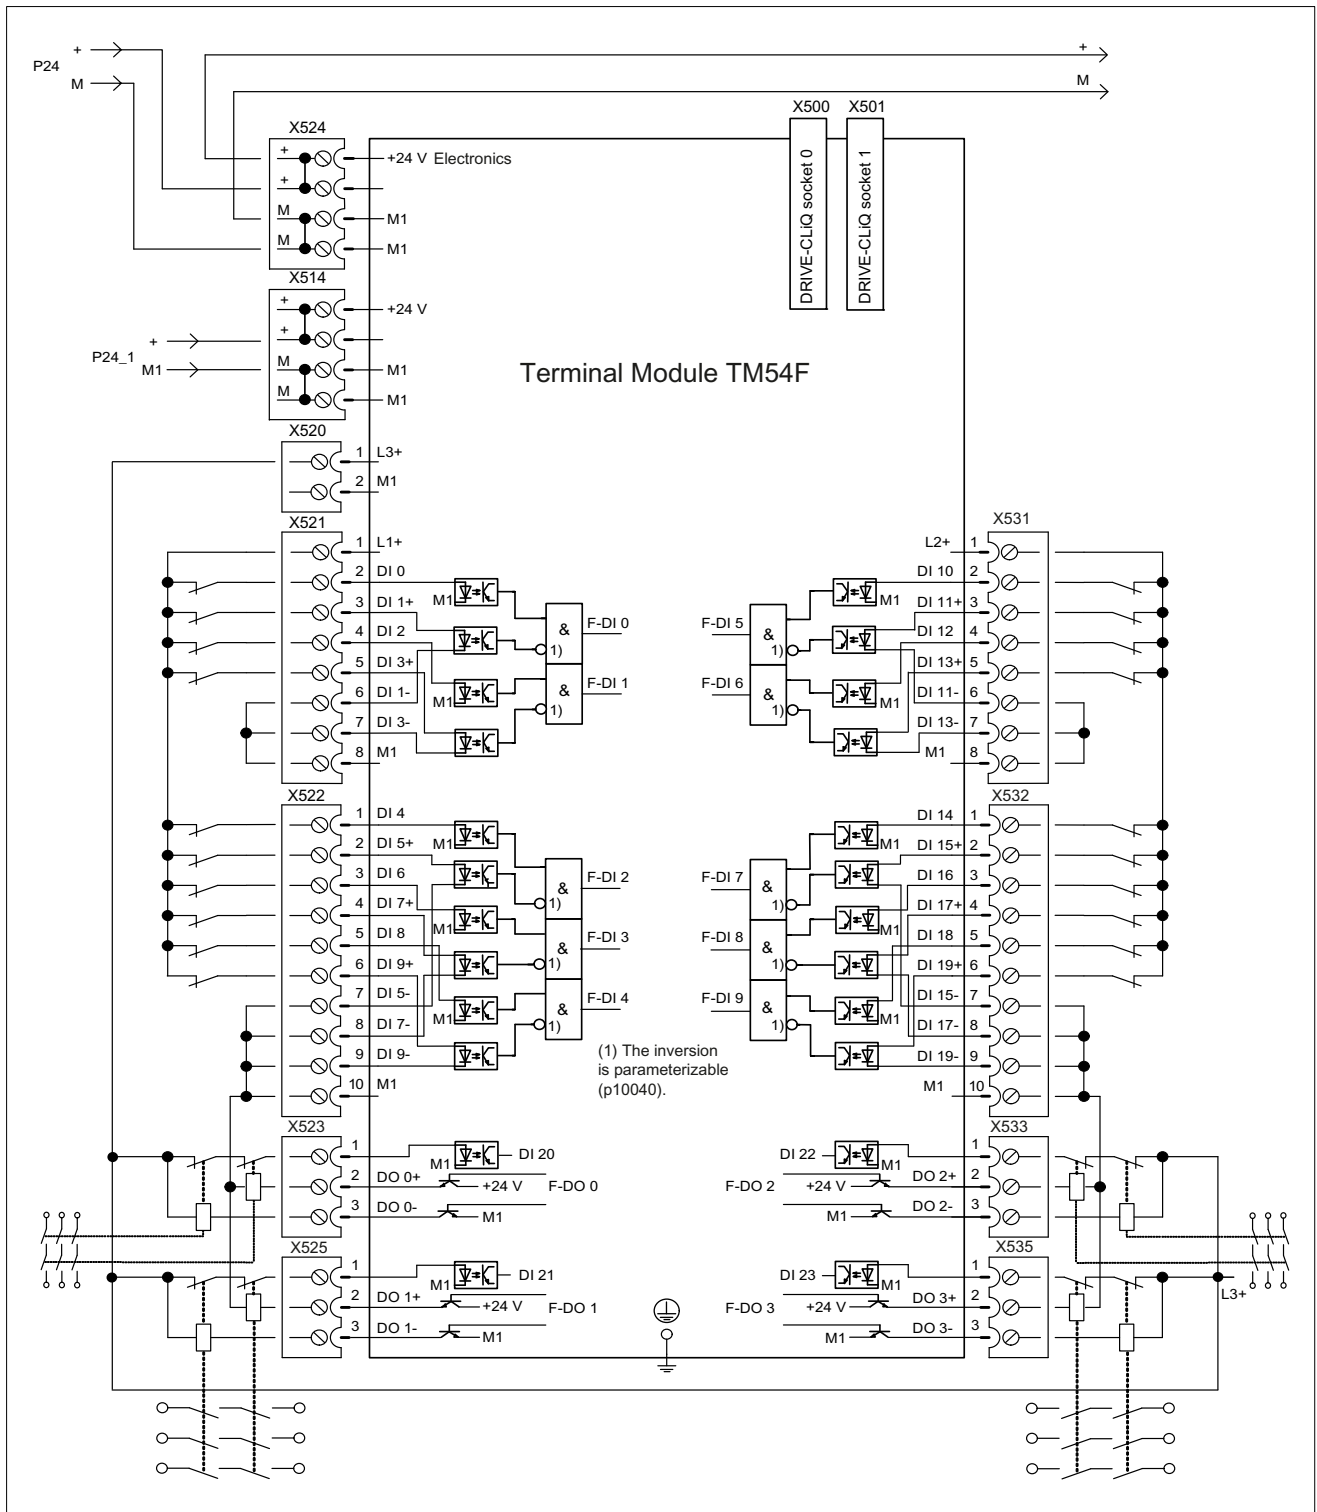


Figure 5-18 Example of the TM54F wiring

The F-DIs must be registered for the test stop by means of p10041.

**CAUTION**

The F-DI states are frozen for the duration of the test!

In order to be able to use the test stop function, the F-DOs being used must be interconnected in accordance with the connection example shown above and the forced feedback signals of the two relays must be connected to the corresponding digital input (DI 20 to DI 23).

The corresponding F-DOs must be registered for the test stop by means of p10046.

**NOTICE**

F-DOs which are not registered for evaluation by means of p10046 are set to "0" for the duration of the test stop ("fail-safe values").

Maximum test stop period:  $T_{\text{Teststop}} = T_{\text{FDIs}} + T_{\text{FDOs}}$

- Test of the FDIs:  $T_{\text{FDIs}} = 3 * p10000 + 3 * X \text{ ms}$   
( $X = 20 \text{ ms}$  or  $p10000$  or  $p10017$  - the greatest time value of the 3 values determines the waiting time  $X$ )
- Test of the FDOs:  $T_{\text{FDOs}} = 8 * p10000 + 6 * Y \text{ ms}$   
( $Y = p10001$  or  $p10000$  or  $p10017$  - the greatest time value of the 3 values determines the waiting time  $Y$ )

 **WARNING**

If the connected devices do not support the test stop function for specific F-DIs or F-DOs, the relevant F-DIs/F-DOs must be operated dynamically, e.g. by means of switch operation, or through specific machine functions.

The test stop must be executed at a suitable time. That is, it must be initiated application-specific. This functionality is implemented by means of a parameter p10007 which can be wired via BICO either to an input terminal on the drive unit (CU), or to an IO-PZD in the drive telegram.

The test stop cycle is monitored. On expiration of the parameterized timer (also after POWER ON / warm restart), the alarm A35014: "TM54F: Test stop required" is output.

- p10001 SI wait time for test stop at F-DO 0 ... 3
- p10003 SI forced dormant error detection timer
- p10007 BI: SI input terminal forced dormant error detection F-DO 0 ... 3
- p10041 SI F-DI test enable
- p10046 SI test sensor feedback input DI 20 ... 23

A test stop does not require POWER ON. The acknowledgment is set by canceling the test stop request.

Additional instructions for performing the test stops are provided in Chapter "Commissioning TM54F using STARTER/Scout → Test stop".

## 5.15 Safety Info Channel

The Safety Info Channel (SIC) enables Safety Integrated functionality status information of the drive to be transmitted to the higher-level control.

### Telegram 700

The predefined PROFIdrive telegram 700 is available for this transmission:

You can find further information on communication via PROFIdrive in the Manual "S120 Drive Functions", section "Communication according to PROFIdrive"

Table 5- 5 Structure of telegram 700

|      | Receive data | Send data   | Parameter |
|------|--------------|-------------|-----------|
| PZD1 | –            | S_ZSW1B     | r9734     |
| PZD2 | –            | S_V_LIMIT_B | r9733.2   |
| PZD3 | –            |             |           |

#### Note

The transmit data S\_ZSW1B and S\_V\_LIMIT\_B are only updated if the Safety Integrated Extended Functions are enabled.

**S\_ZSW1B**

Safety Info Channel: Status word

Table 5- 6 Description S\_ZSW1B

| Bit    | Meaning                        | Remarks |                                    | Parameter |
|--------|--------------------------------|---------|------------------------------------|-----------|
| 0      | STO active                     | 1       | STO active                         | r9734.0   |
|        |                                | 0       | STO not active                     |           |
| 1      | SS1 active                     | 1       | SS1 active                         | r9734.1   |
|        |                                | 0       | SS1 not active                     |           |
| 2      | SS2 active                     | 1       | SS2 active                         | r9734.2   |
|        |                                | 0       | SS2 not active                     |           |
| 3      | SOS active                     | 1       | SOS active                         | r9734.3   |
|        |                                | 0       | SOS not active                     |           |
| 4      | SLS active                     | 1       | SLS active                         | r9734.4   |
|        |                                | 0       | SLS not active                     |           |
| 5      | SOS selected                   | 1       | SOS selected                       | r9734.5   |
|        |                                | 0       | SOS deactivated                    |           |
| 6      | SLS selected                   | 1       | SLS selected                       | r9734.6   |
|        |                                | 0       | SLS not selected                   |           |
| 7      | Internal event                 | 1       | Internal event                     | r9734.7   |
|        |                                | 0       | No internal event                  |           |
| 8...11 | Reserved                       | -       | -                                  | -         |
| 12     | SDI positive selected          | 1       | SDI positive selected              | r9734.12  |
|        |                                | 0       | SDI positive not selected          |           |
| 13     | SDI negative selected          | 1       | SDI negative selected              | r9734.13  |
|        |                                | 0       | SDI negative not selected          |           |
| 14     | Emergency retraction requested | 1       | Emergency retraction requested     | r9734.14  |
|        |                                | 0       | Emergency retraction not requested |           |
| 15     | Safety message effective       | 1       | Safety message effective           | r9734.15  |
|        |                                | 0       | No Safety message effective        |           |

**S\_V\_LIMIT\_B**

SLS speed limit with a 32-bit resolution with sign bit.

- The SLS speed limit is available in r9733[2].
- Bit 31 determines the sign of the value:
  - Bit = 0 → positive value
  - Bit = 1 → negative value
- The SLS speed limit is standardized via p2000.

$$S\_V\_LIMIT\_B = 4000\ 0000\ \text{hex} \hat{=} \text{speed in p2000}$$

## Control of the safety functions

The safety-oriented input and output terminals (F-DI and F-DO) act as an interface between the internal Safety Integrated functionality and the process.

A dual-channel signal applied to an F-DI (Fail-safe Digital Input, safety-oriented digital input = safe input terminal pair) controls the active monitoring of the activation/deactivation of safety functions. This function also depends on the status of sensors (e.g. switches).

An F-DO (Fail-safe Digital Output, safety-oriented digital output = safe output terminal pair) delivers a dual-channel signal representing feedback from the safety functions. It is suitable, for example, for the safety-oriented control of actuators (e.g. line contactor). See also the figures "F-DI 0 ... 4 overview", "F-DI 5 ... 9 overview" and "F-DO overview (without showing the main contacts on the contactors)".

### Dual-channel processing of I/O signals

A dual-channel structure is implemented for data input/output and for processing safety-oriented I/O signals. All requests and feedback signals for safety-oriented functions should be entered or tapped using both channels.

### The following options are available for controlling Safety Integrated functions:

- Control via terminals on the Control Unit and Motor Module (only STO, SS1 (time controlled) and SBC).
- Control via PROFIsafe
- Control by means of TM54F terminals

Control by means of terminals on the Control Unit and Motor Module can be activated alongside with one of the other two options. Only one of the two control modes can be selected for each drive object; either PROFIsafe or TM54F.

|  |
|--|
| <b>NOTICE</b>  |
| Per single Control Unit, either control via PROFIsafe or TM54F is permitted. Mixed operation is not permitted. |

## 6.1 Control signals by way of terminals on the Control Unit and Motor/Power Module

### Features

- Only for the STO, SS1 (time-controlled) and SBC functions
- Dual-channel structure via two digital inputs (Control Unit/power unit)
- A debounce function can be applied to the terminals of the Control Unit and the Motor Module to prevent incorrect trips due to signal disturbances or test signals. The filter times are set using parameters p9651 and p9851.
- Different terminal blocks depending on the format
- Automatic ANDing of up to 8 digital inputs (p9620[0...7]) on the Control Unit for chassis format power units connected in parallel

### Overview of the safety function terminals for SINAMICS S120

The different power unit formats of SINAMICS S120 have different terminal designations for the inputs of the safety functions. These are shown in the following table.

Table 6- 1 Inputs for safety functions

| Module  | 1. Switch-off signal path (p9620[0])            | 2. Switch-off signal path (EP terminals)  |
|---|---|---|
| Control Unit CU320-2  | X122.1...6 / X132.1...6<br>DI 0...7/16/17/20/21 |   |
| Single Motor Module<br>Booksize/Booksize<br>Compact                     | (see CU320-2)                                   | X21.3 and X21.4 (on the Motor Module)   |
| Single Motor Module/<br>Power Module Chassis                            | (see CU320-2)                                   | X41.1 and X41.2   |
| Double Motor Module<br>Booksize/Booksize<br>Compact                     | (see CU320-2)                                   | X21.3 and X21.4 (motor connection X1)/X22.3 and X22.4 (motor connection X2) (on the Motor Module) |
| Power Module Blocksize<br>with CUA31/CUA32                              | (see CU320-2)                                   | X210.3 and X210.4 (on the CUA31/CUA32)  |
| Control Unit CU310-2  | X120.3/6/9<br>X121.1...4                        | X120.4 and X120.5   |
| For further information about the terminals, see the Equipment Manuals. |   |   |



## Terminals for STO, SS1 (time-controlled), SBC

The functions are separately selected/deselected for each drive using two terminals.

### 1. Switch-off signal path, Control Unit

The desired input terminal is selected via BICO interconnection (BI: p9620[0]).

### 2. Switch-off signal path Motor Module/Power Module

The input terminal is the "EP" terminal ("Enable Pulses")

The EP terminal is periodically interrogated with a sampling time, which is rounded off to an integer multiple of the current controller cycle; however, it is a minimum of 1 ms.

(example:  $t_i = 400 \mu\text{s}$ ,  $t_{EP} \Rightarrow 3 \times t_i = 1.2 \text{ ms}$ )

Both terminals must be operated simultaneously within the discrepancy time p9650/p9850, otherwise a fault will be issued.

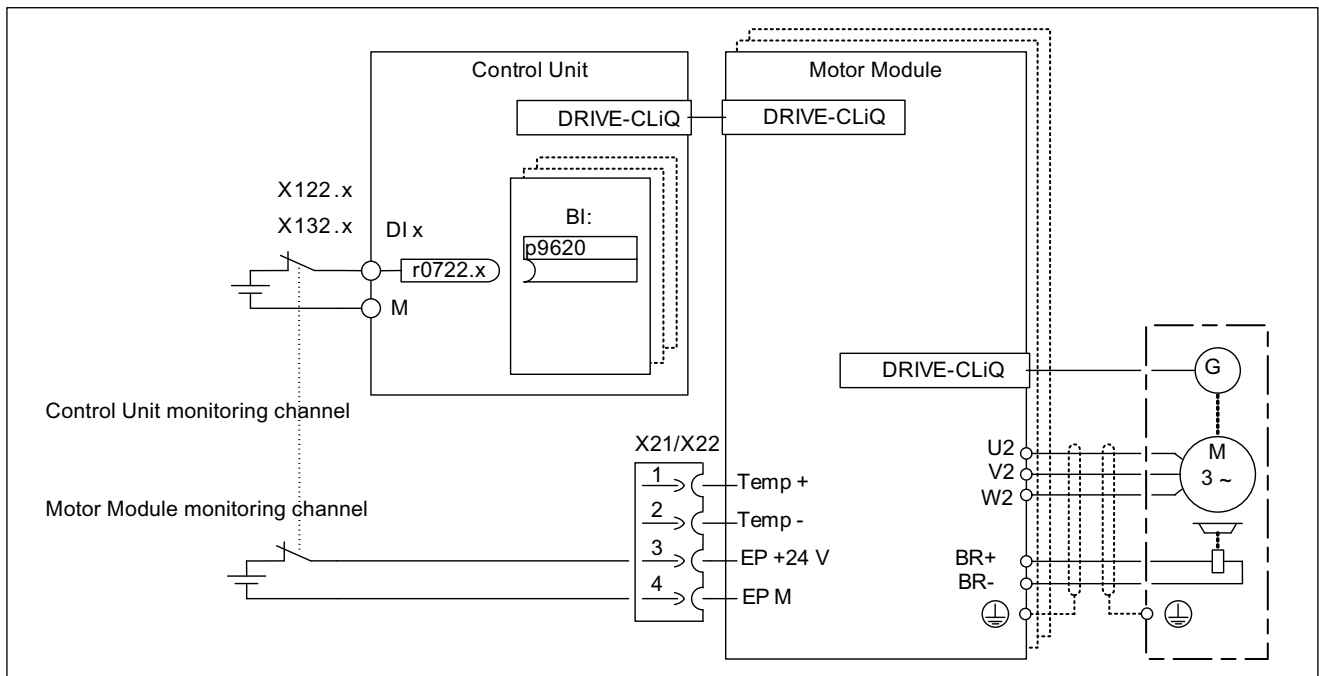


Figure 6-1 Example: Terminals for "Safe Torque Off": example for Motor Modules Booksize and CU320-2

## Grouping drives

To ensure that the function works for more than one drive at the same time, the terminals for the corresponding drives must be grouped together as follows:

### 1. Switch-off signal path

By connecting the binector input to the joint input terminal on the drives in one group.

### 2. Switch-off signal path (Motor Module/Power Module with CUA3x)

By appropriately wiring the terminals for the individual Motor Modules/Power Modules with CUA31/CUA32 assigned to the group.

**Note**

The grouping must be identical in both monitoring channels.

If a fault in a drive results in a "Safe Torque Off" (STO), this does not automatically mean that the other drives in the same group also switch to "Safe Torque Off" (STO).

The assignment is checked during the test for the switch-off signal paths, The operator selects "Safe Torque Off" for each group. The check is drive-specific.

**Example: Terminal groups**

It must be possible to select/deselect "Safe Torque Off" separately for group 1 (drive 1 and 2) and group 2 (drive 3 and 4).

For this purpose, the same grouping for "Safe Torque Off" must be performed on both the Control Unit and the Motor Modules.

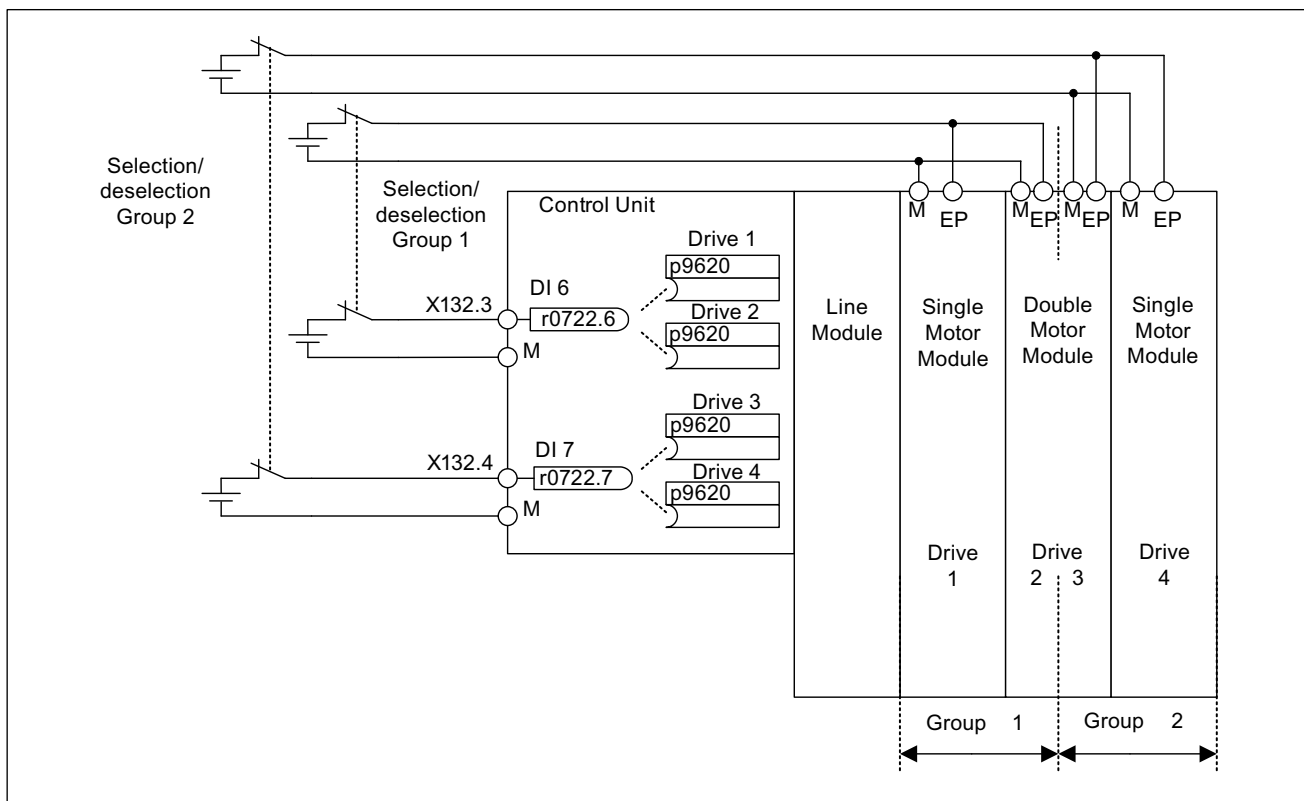


Figure 6-2 Example: Grouping terminals with Motor Modules Booksize and CU320-2

**Information on the parallel connection of chassis type Motor Modules**

When chassis type Motor Modules are connected in parallel, a safe AND element is created on the parallel drive object. The number of indexes in p9620 corresponds to the number of parallel chassis components in p0120.

### 6.1.1 Simultaneity and tolerance time of the two monitoring channels

The "Safe Torque Off" function must be selected/deselected simultaneously in both monitoring channels using the input terminals and is only effective for the associated drive.

1 signal: Deselecting the function

0 signal: Selecting the function

"Simultaneously" means:

The changeover must be complete in both monitoring channels within the parameterized tolerance time.

- p9650 SI SGE changeover tolerance time (Control Unit)
- p9850 SI SGE changeover tolerance time (Motor Module)

---

#### Note

To avoid incorrect triggering of fault messages, on these inputs the tolerance time must always be set to be smaller than the shortest time between two switching events (ON/OFF, OFF/ON).

---

If the "Safe Torque Off" function is not selected/deselected within the tolerance time, this is detected by the cross-comparison, and fault F01611 or F30611 (STOP F) is output. In this case, the pulses have already been canceled as a result of the selection of "Safe Torque Off" on one channel.

### 6.1.2 Bit pattern test

#### Bit pattern test of fail-safe outputs

The inverter normally responds immediately to signal changes in its fail-safe inputs. This is not desired in the following case: Several control modules test their fail-safe outputs using bit pattern tests (on/off tests) to identify faults due to either short or cross circuiting. When you interconnect a fail-safe input of the inverter with a fail-safe output of a control module, the inverter responds to these test signals.

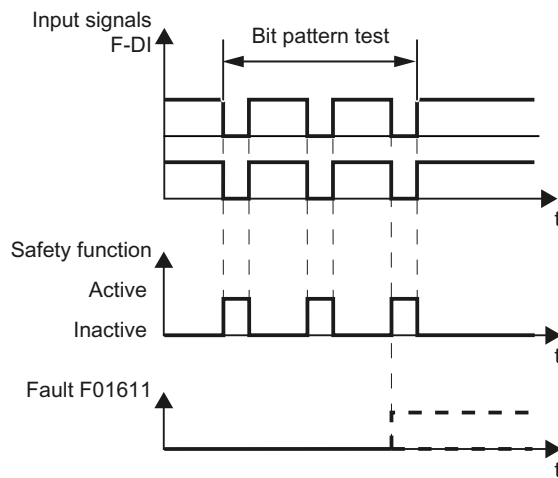


Figure 6-3 Inverter response to a bit pattern test

---

#### Note

If the test pulses lead to unintended triggering of the Safety Integrated functions, a filtering (p9651/p9851 SI STO/SBC/SS1 debounce time) of the terminal inputs must be parameterized.

---

#### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p9651 SI STO/SBC/SS1 debounce time (Control Unit)
- p9851 SI STO/SBC/SS1 debounce time (Control Unit)

## 6.2 Activation via PROFIsafe

As an alternative to controlling Safety Integrated functions via terminals or TM54F, they can also be controlled via PROFIsafe. PROFIsafe telegram 30 is used for communication using PROFIBUS and PROFINET.

Control via PROFIsafe is available for both Safety Integrated Basic Functions and Safety Integrated Extended Functions.

### 6.2.1 Enabling of the control via PROFIsafe

For PROFIsafe communication, SINAMICS devices require a PROFIBUS or a PROFINET interface.

Every drive with configured PROFIsafe in the drive unit represents a PROFIsafe slave (F slave or F device) with a fail-safe communication to the F host via PROFIBUS or PROFINET and is assigned its own PROFIsafe telegram.

In so doing, a PROFIsafe channel, a so-called safety slot is created using the HW Config tool of SIMATIC Manager Step 7. It is then possible to also control the Basic Functions using PROFIsafe telegram 30. The structure of the associated control and status words is described further below (see Tables "PROFIsafe-STW" and "PROFIsafe-ZSW"). The PROFIsafe telegram 30 is placed in front of the standard telegram for communication (e.g. telegram 2).

### Enabling PROFIsafe

The Safety Integrated Functions are enabled via PROFIsafe using parameters p9601 and p9801:

- Basic Functions: p9601.2 = 0, p9801.2 = 0  
Extended Functions: p9601.2 = 1, p9801.2 = 1
- p9601.3 = 1, p9801.3 = 1

---

#### Note

#### Licensing for Safety Integrated Basic Functions via PROFIsafe

No license is required to use Basic Functions. This also applies to control via PROFIsafe. However, for Extended Functions, you require an appropriate license that will be charged for.

---

All parameters involved in PROFIsafe communication are password protected against undesirable changes and secured using a checksum. The telegrams are configured using a configuration tool (e.g. SIMATIC Manager HW Config + F-Configuration Pack or SCOUT) on the F host.

**Safety Integrated Basic Functions via PROFIsafe and terminals**

Control of the Basic Functions via terminals on the Control Unit and on the Motor/Power Module (parameters p9601.0 = p9801.0 = 1) may be enabled in parallel. In this way, the STO and SS1 functions (time controlled) can be selected via PROFIsafe telegram 30 as well as in parallel via the onboard terminals of the Control Unit and Motor Module/Power Module.

STO takes priority over SS1, i.e. STO becomes active if SS1 and STO are triggered at the same time.

**6.2.2 Structure of telegram 30**

**6.2.2.1 Structure of telegram 30 (Basic Functions)**

**PROFIsafe control word (STW)**

S\_STW1, PZD1 in telegram 30, output signals  
See function diagram [2840].

Table 6- 2 Description of the PROFIsafe STW

| Bit     | Meaning            | Remarks |                   |
|---------|--------------------|---------|-------------------|
| 0       | STO                | 1       | Deselect STO      |
|         |                    | 0       | Select STO        |
| 1       | SS1                | 1       | Deselect SS1      |
|         |                    | 0       | Select SS1        |
| 2       | SS2                | 0       | – <sup>1)</sup>   |
| 3       | SOS                | 0       | – <sup>1)</sup>   |
| 4       | SLS                | 0       | – <sup>1)</sup>   |
| 5       | Reserved           | -       | –                 |
| 6       | Reserved           | -       | –                 |
| 7       | Internal Event ACK | 1/0     | Acknowledgment    |
|         |                    | 0       | No acknowledgment |
| 8       | Reserved           | -       | –                 |
| 9       | Select SLS bit 0   | -       | – <sup>1)</sup>   |
| 10      | Select SLS bit 1   | -       |                   |
| 11...15 | Reserved           | -       | –                 |

<sup>1)</sup> Signals not relevant to Basic Functions should be set to "0".

### PROFIsafe status word (ZSW)

S\_ZSW1, PZD1 in telegram 30, input signals  
See function diagram [2840].

Table 6- 3 Description of the PROFIsafe status word (ZSW)

| Bit     | Meaning                | Remarks |                   |
|---------|------------------------|---------|-------------------|
| 0       | STO active             | 1       | STO active        |
|         |                        | 0       | STO not active    |
| 1       | SS1 active             | 1       | SS1 active        |
|         |                        | 0       | SS1 not active    |
| 2       | SS2 active             | 0       | – <sup>1</sup>    |
| 3       | SOS active             | 0       | – <sup>1</sup>    |
| 4       | SLS active             | 0       | – <sup>1</sup>    |
| 5       | Reserved               | -       | –                 |
| 6       | Reserved               | -       | –                 |
| 7       | Internal Event         | 1       | Internal event    |
|         |                        | 0       | No internal event |
| 8       | Reserved               | -       | –                 |
| 9       | Active SLS level bit 0 | -       | – <sup>1</sup>    |
| 10      | Active SLS level bit 1 | -       |                   |
| 11      | SOS selected           | 0       | – <sup>1</sup>    |
| 12...14 | Reserved               | -       | –                 |
| 15      | SSM (speed)            | 0       | – <sup>1</sup>    |

<sup>1</sup> Signals not relevant to Basic Functions should be set to "0".

## 6.2.2.2 Structure of telegram 30 (Extended Functions)

## PROFIsafe control word (STW)

S\_STW1, PZD1 in telegram 30, output signals  
See function diagram [2840].

Table 6- 4 Description of the PROFIsafe STW

| Bit    | Meaning            | Remarks |   |
|--------|--------------------|---------|---|
| 0      | STO                | 1       | Deselect STO                                  |
|        |                    | 0       | Select STO                                    |
| 1      | SS1                | 1       | Deselect SS1                                  |
|        |                    | 0       | Select SS1                                    |
| 2      | SS2                | 1       | Deselect SS2                                  |
|        |                    | 0       | Select SS2                                    |
| 3      | SOS                | 1       | Deselect SOS                                  |
|        |                    | 0       | Select SOS                                    |
| 4      | SLS                | 1       | Deselect SLS                                  |
|        |                    | 0       | Select SLS                                    |
| 5      | Reserved           | -       | -   |
| 6      | Reserved           | -       | -   |
| 7      | Internal Event ACK | 1/0     | Acknowledgment                                |
|        |                    | 0       | No acknowledgment                             |
| 8      | Reserved           | -       | -   |
|        |                    | -       | -   |
| 9      | Select SLS bit 0   | -       | Selection of the speed limit for SLS (2 bits) |
| 10     | Select SLS bit 1   | -       |   |
| 11     | Reserved           | -       | -   |
| 12     | SDI positive       | 1       | Deselect SDI positive                         |
|        |                    | 0       | Select SDI positive                           |
| 13     | SDI negative       | 1       | Deselect SDI negative                         |
|        |                    | 0       | Select SDI negative                           |
| 14, 15 | Reserved           | -       | -   |



**PROFIsafe status word (ZSW)**

S\_ZSW1, PZD1 in telegram 30, input signals  
See function diagram [2840].

Table 6- 5 Description of the PROFIsafe status word (ZSW)

| Bit | Meaning                | Remarks |   |
|-----|------------------------|---------|---|
| 0   | STO active             | 1       | STO active                                  |
|     |                        | 0       | STO not active                              |
| 1   | SS1 active             | 1       | SS1 active                                  |
|     |                        | 0       | SS1 not active                              |
| 2   | SS2 active             | 1       | SS2 active                                  |
|     |                        | 0       | SS2 not active                              |
| 3   | SOS active             | 1       | SOS active                                  |
|     |                        | 0       | SOS not active                              |
| 4   | SLS active             | 1       | SLS active                                  |
|     |                        | 0       | SLS not active                              |
| 5   | Reserved               | -       | -   |
| 6   | Reserved               | -       | -   |
| 7   | Internal Event         | 1       | Internal event                              |
|     |                        | 0       | No internal event                           |
| 8   | Reserved               | -       | -   |
|     |                        | -       | -   |
| 9   | Active SLS level bit 0 | -       | Display of the speed limit for SLS (2 bits) |
| 10  | Active SLS level bit 1 |         |   |
| 11  | SOS selected           | 1       | SOS selected                                |
|     |                        | 0       | SOS deactivated                             |
| 12  | SDI positive active    | 1       | SDI positive active                         |
|     |                        | 0       | SDI positive not active                     |
| 13  | SDI negative active    | 1       | SDI negative active                         |
|     |                        | 0       | SDI negative not active                     |
| 14  | Reserved               | -       | -   |
| 15  | SSM (speed)            | 1       | SSM (speed below limit value)               |
|     |                        | 0       | SSM (speed higher than/equal to limit)      |

## 6.3 Control via TM54F

### 6.3.1 General information

Terminal Module TM54F is a terminal expansion module for snap-on rail mounting to DIN EN 60715. The TM54F features fail-safe digital I/O for controlling the Safety Integrated Extended Functions.

Each Control Unit can be assigned only one TM54F which is connected via DRIVE-CLiQ.

**NOTICE**

The TM54F may not be interconnected in series with the Motor Modules and must be operated on a separate DRIVE-CLiQ line (separate port on the Control Unit). Other Terminal and Sensor Modules can be connected to this DRIVE-CLiQ line. Nor may the TM54F be connected in a line with an infeed.

TM54F features the following terminals:

Table 6- 6 Overview of the TM54F interfaces

| Type   | Number |
|--|--------|
| Fail-safe digital outputs (F-DO)   | 4      |
| Fail-safe digital inputs (F-DI)  | 10     |
| Sensor <sup>1)</sup> power supplies, dynamic response supported <sup>2)</sup>      | 2      |
| Sensor <sup>1)</sup> power supply, no dynamic response                             | 1      |
| Digital inputs for checking the F-DO with activated forced dormant error detection | 4      |

<sup>1)</sup> Sensors: Fail-safe devices for command operations and status logging (e.g. Emergency Stop pushbuttons, safety door locks, position switches, and light arrays / light curtains).

<sup>2)</sup> Dynamic response: The sensor power supply is cycled on and off by the TM54F when the forced dormant error detection is active for the sensors, cable routing, and the evaluation electronics.

The TM54F provides 4 fail-safe digital outputs and 10 fail-safe digital inputs. A fail-safe digital output consists of a 24 V DC switching output, an output switching to ground and a digital input for reading back the switching state. A fail-safe digital input consists of two digital inputs.

**Note**

You have the following options of acknowledging TM54F faults after troubleshooting:

- POWER ON
- Falling edge in signal "Internal Event ACK" with subsequent acknowledgement on the Control Unit.

The signal states of the two digital inputs of the F-DI are frozen at logical 0 (safety function selected) when different signal states are present within a fail-safe F-DI of the TM54F, until a safe acknowledgment has been carried out using an F-DI via parameter p10006 (SI acknowledgment internal event input terminal), or the extended alarm acknowledgment has been carried out.

The monitoring time (p10002) for the discrepancy of the two digital inputs of an F-DI may have to be increased so that switching operations do not trigger an undesired response, thereby necessitating a safe acknowledgment. Therefore, the signal states at the two related digital inputs (F-DI) must have the same state within this monitoring time, otherwise the following fault will be output F35151 TM54F: Discrepancy error. This requires safe acknowledgement.

---

**Note**

The discrepancy time must be set so that it is always smaller than the smallest expected switching interval of the signal to this F-DI.

---

## 6.3.2 Overview of the F-DIs

### Description

Fail-safe digital inputs (F-DI) consist of two digital inputs. The cathode (M) of the optocoupler is routed to the second digital input to allow the connection of an M-switching F-DO output (the anode must be connected to 24 V DC).

Parameter p10040 is used to determine whether an F-DI is operated as NC/NC or NC/NO contact. The status of DI can be read at parameter r10051 for the drive objects TM54F\_MA and TM54F\_SL. The same bits of both drive objects are logically linked by AND operation and return the status of the relevant F-DI.

Test signals from F-DOs and interference pulses can be filtered out using the input filter (p10017), so that they do not cause any faults.

**Explanation of terms:**

**NC contact / NC contact:** to select the safety function, a "zero level" must be present on both inputs.

**NC contact / NO contact:** to select the safety function, a "zero level" at input 1 and a "1 level" at input 2 must be present.

The signal states at the two associated digital inputs (F-DI) must assume the same status configured in p10040 within the monitoring time set in p10002.

In order to enable forced dormant error detection, connect the digital inputs of F-DI 0 ... 4 with the dynamic voltage supply L1+ and the digital inputs with F-DI 5 ... 9 to L2+ (for additional information on forced dormant error detection, see the corresponding function description in the chapter "Extended Functions").

In the SINAMICS S120/150 List Manual, function diagrams 2850 or 2851 show an overview of the fail-safe inputs F-DI 0 ... 4 or F-DI 5 ... 9.

### F-DI features

- Fail-safe configuration with two digital inputs per F-DI
- Input filter for test signals with an adjustable gating time (p10017)
- Configurable connection of NC/NC or NC/NO contacts by means of parameter p10040
- Status parameter r10051
- Adjustable time window for monitoring discrepancy at both digital inputs by means of parameter p10002 for all F-DIs (details in Chapter: Input/output interconnections of a safety switching device with TM54F)

---

#### Note

To avoid incorrect triggering of fault messages, on these inputs the discrepancy time must always be set less than the shortest time between two switching events (ON/OFF, OFF/ON).

---

- Second digital input with additional tap of the optocoupler cathode for connecting an M-switching output of a fail-safe controller.

|  |
|--|
|  <b>WARNING</b> |
|--|

|  |
|--|
| In contrast to mechanical switching contacts (e.g. Emergency Stop switches), closed-circuit currents can still flow through semiconductor switches even when they are switched off. This can lead to false switching states if digital inputs are not connected correctly. |
|--|

|  |
|--|
| The conditions for digital inputs/outputs specified in the relevant manufacturer documentation must be observed. |
|--|

|  |
|--|
|  <b>WARNING</b> |
|--|

|   |
|---|
| In accordance with IEC 61131 Part 2, Chapter 5.2 (2008), only outputs that have a maximum closed-circuit current of 0.5 mA when "OFF" can be used to connect TM54F digital inputs with digital semiconductor outputs. |
|---|

### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p9651 SI STO/SBC/SS1 debounce time (Control Unit)
- p9851 SI STO/SBC/SS1 debounce time (Control Unit)
- p10002 SI discrepancy monitoring time
- p10017 SI digital inputs, debounce time
- p10040 SI F-DI input mode
- r10051.0...9 CO/BO: SI status of digital inputs

### 6.3.3 Overview of the F-DOs

Fail-safe digital outputs (F-DO) consist of two digital outputs plus one digital input that checks the switching state for forced dormant error detection. The first digital input switches 24 V DC, and the second switches M of the X514 voltage supply.

The status of each F-DO can be read at parameter r10052. The status of the associated DIs can be read at parameter r10053 for the drive objects of the slave (TM54F\_SL).

In order to enable forced dormant error detection, connect the corresponding digital input for the forced feedback signals of the relays (additional information on forced dormant error detection is provided in the chapter "Extended functions").

In the SINAMICS S120/150 List Manual, function diagram 2853 provides an overview of the fail-safe outputs F-DO 0...3, and the associated checking inputs F-DI 20...23.

#### F-DO signal sources

A drive group contains several drives with similar characteristics. The groups are parameterized at the p10010 and p10011 parameters.

The following signals are available for interconnecting (p10042, ..., p10045) each one of the four drive groups with the F-DO:

- STO active
- SS1 active
- SS2 active
- SOS active
- SLS active
- SLS level
- SSM feedback active
- Safe state
- SOS selected
- Internal event
- Active SLS level bit 0
- Active SLS level bit 1
- SDI positive active
- SDI negative active

The following (safe state) signals can be requested via p10039[0...3] for each drive group (index 0 corresponds with drive group 1 etc.):

- STO active (power removed/pulse suppressed)
- SS1 active
- SS2 active
- SOS active
- SLS active

- SDI positive active
- SDI negative active

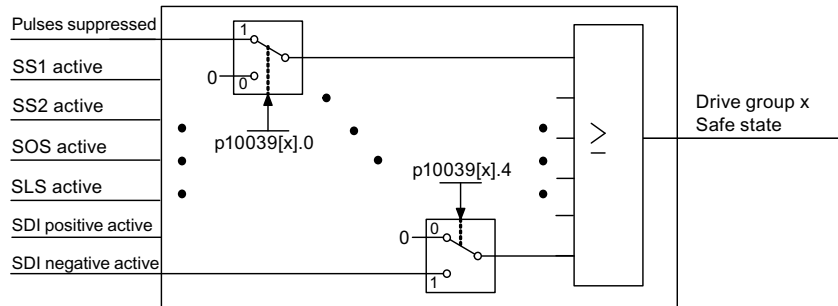


Figure 6-4 Safe state selection

The same signals (high-active) of each drive or drive group are logically linked by means of AND operation. The different signals selected through p10039 are logically linked by means of OR operation. Result of these logic operations is the "Safe State" for each drive group. Details can be found in function block diagram 2856, see SINAMICS S120/S150 List Manual.

Each F-DO supports the interconnection of up to 6 signals by way of indexing (p10042[0...5] to p10045[0...5]) and their output as logical AND operation.

### F-DO features

- Each F-DO with fail-safe configuration consisting of two digital outputs plus one digital input for checking the switching state for forced dormant error detection
- Status parameters r10052/r10053

### Function diagrams (see SINAMICS S120/S150 List Manual)

- 2853 TM54F (F-DO 0 ... F-DO 3, DI 20 ... DI 23)
- 2856 TM54F Safe State selection
- 2857 TM54F assignment (F-DO 0 ... F-DO 3)

### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p10039 SI Safe State signal selection
- p10042[0...5] SI F-DO 0 signal sources
- p10043[0...5] SI F-DO 1 signal sources
- p10044[0...5] SI F-DO 2 signal sources
- p10045[0...5] SI F-DO 3 signal sources
- r10052.0...3 CO/BO: SI status of digital outputs
- r10053.0...3 CO/BO: SI digital inputs 20 ... 23

# Commissioning

## 7.1 Safety Integrated firmware versions

### Firmware versions for Safety Integrated

The safety firmware installed on the Control Unit and the safety firmware installed on the Motor Module each have separate version IDs. The parameters listed below can be used to read the version IDs from the relevant hardware.

Read the overall firmware version via:

- r0018 Control Unit firmware version

The following firmware data can be read for the basic functions:

- r9770[0...3] SI version, drive-autonomous safety functions (Control Unit)
- r9870[0...3] SI version, drive-autonomous safety functions (Motor Module)

The following firmware data can be read for the extended functions:

- r9590[0...3] SI Motion version safety motion monitoring (Control Unit)
- r9390[0...3] SI Motion version safety motion monitoring (Motor Module)
- r9890[0...2] SI version (Sensor Module)
- r10090[0...3] SI TM54F version

### Basic Functions and Extended Functions

Basic and/or Extended Functions that have been enabled are checked to determine whether the parameter for the automatic firmware update is set (p7826 = 1).

This means that at each boot, the firmware version of the DRIVE-CLiQ components involved is checked in comparison to the firmware version of the Control Unit and, if required, updated.

In this case, p7826 = 1 must apply, otherwise message F01664 (SI CU: No automatic firmware update) is output.

During the acceptance test for Safety Integrated Basic Functions, the safety firmware versions (r9770, r9870) must be read, logged, and checked against the list below.

During the acceptance test for the Safety Integrated extended functions, the safety firmware versions of the Motor Modules (r9590, r9390), Sensor Modules (r9890) and, if necessary, the Terminal Module TM54F (r10090) required for the safety functions are also read, logged, and checked against the list below.

The list of permissible safety firmware version combinations, which must be used as a reference during the test, can be found under "Product Support" at the following address: <http://support.automation.siemens.com/WW/view/de/28554461>

The testing procedure is described at the end of the chapter.

### Procedure for checking the safety firmware version combinations

The document in the link provided contains tables listing the permissible safety firmware version combinations for the different safety function classes (SINAMICS basic functions, SINAMICS extended functions, SINUMERIK Safety Integrated).

The Safety firmware version relevant for the Safety function can be read from the Control Unit. The row containing this version number specifies the associated, permissible safety firmware versions of the relevant drive components. These versions must be compatible with the versions installed on your system.

## 7.2 Commissioning Safety Integrated functions

### 7.2.1 General information

1. The Safety Integrated Basic Functions can be commissioned using STARTER in three ways:
  - STO/SS1/SBC via terminal
  - STO/SS1/SBC via PROFIsafe
  - STO/SS1/SBC via PROFIsafe and terminal simultaneously
2. The Safety Integrated Extended Functions can be commissioned using STARTER in four ways:
  - Motion monitoring via TM54F
  - Motion monitoring via PROFIsafe
  - Motion monitoring via TM54F and terminal simultaneously
  - Motion monitoring via PROFIsafe and terminal simultaneously

There follows a brief overview of the STARTER functionality which enables Safety Integrated functions to be used by means of terminals, PROFIsafe, or a combination of the two.

---

#### Note

You can find detailed information on configuring in STARTER in the online help.

---

#### Safety slot

In order to use the Safety Integrated functions via PROFIBUS or PROFINET, a safety slot must first be created using the SIMATIC Manager Step 7 and HW Config. The procedure to do this was described in the previous chapters.

#### Expert list

The Safety Integrated functions can be set individually and manually using the expert list – but the settings using the STARTER screen forms are more user-friendly and you are less likely to make mistakes.



### Calling Safety Integrated in STARTER using SINAMICS S120 as example

The STARTER screen form for "Safety Integrated" is called under Drives/Functions with a double-click and can look like this (tree-type view depends on the specific project):

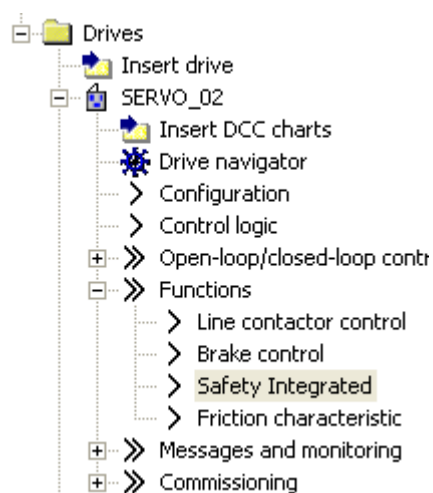


Figure 7-1 STARTER tree to call Safety Integrated

The password "0" is set by default.

The screens shown here represent the online commissioning. An online connection between STARTER/SCOUT and the drives is required for this.

Selecting using the pulldown menu:

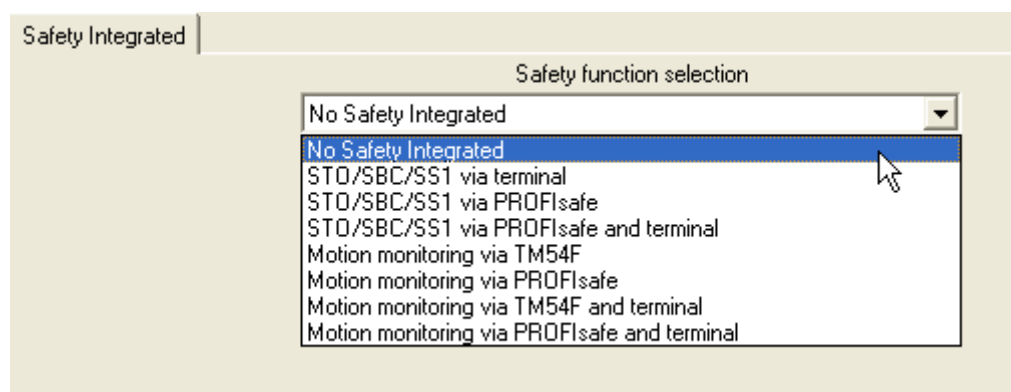


Figure 7-2 Selection of the type of control

Depending on the selection, different setting screen forms open:

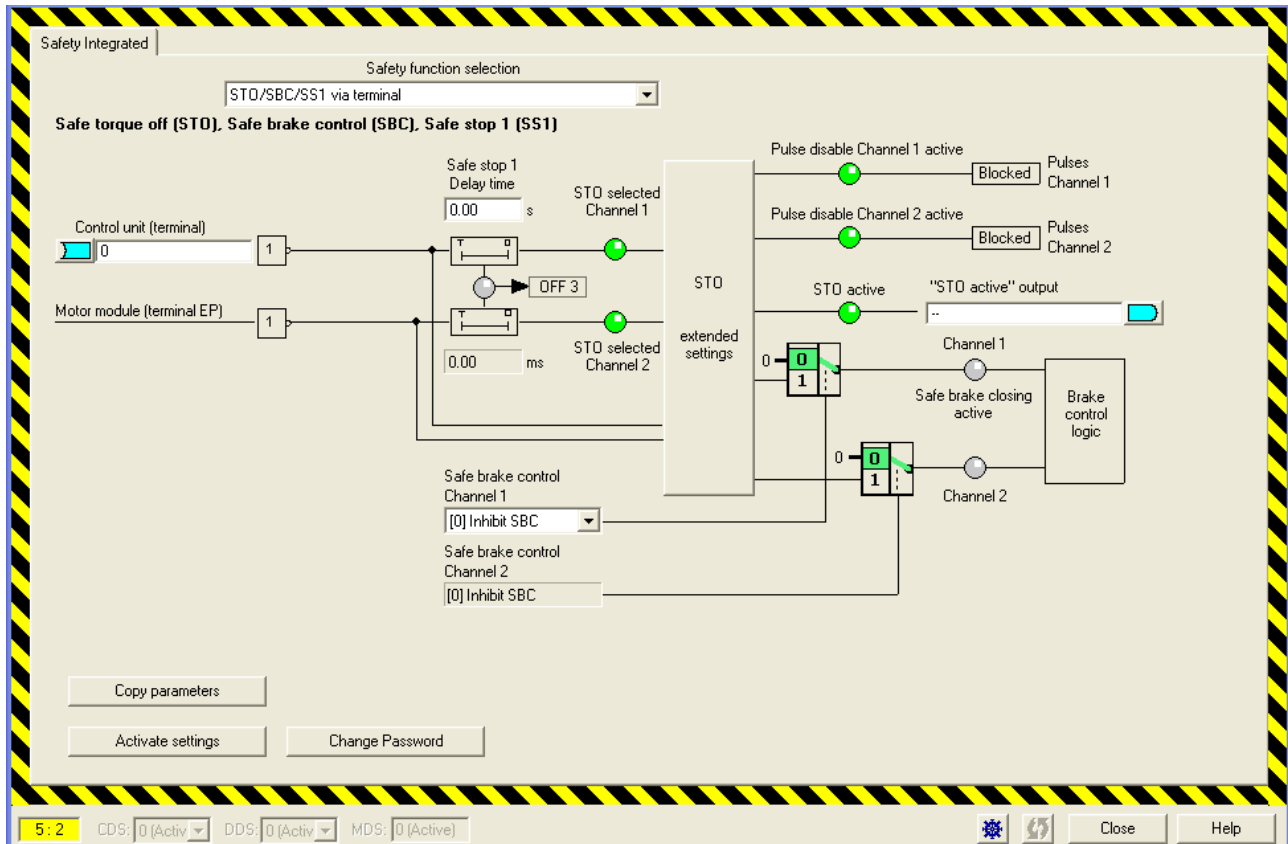


Figure 7-3 STO/SBC/SS1 via terminals

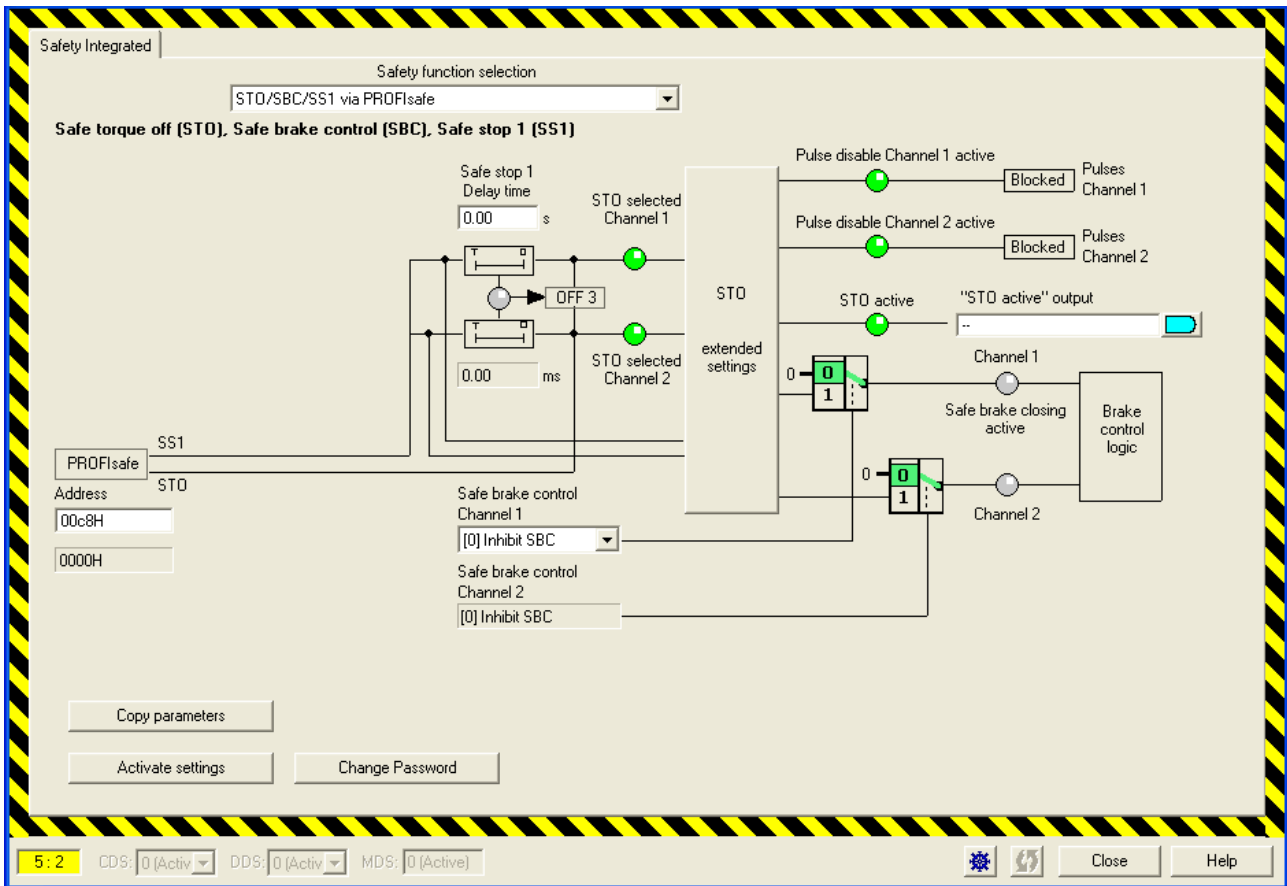


Figure 7-4 STO/SBC/SS1 via PROFIsafe

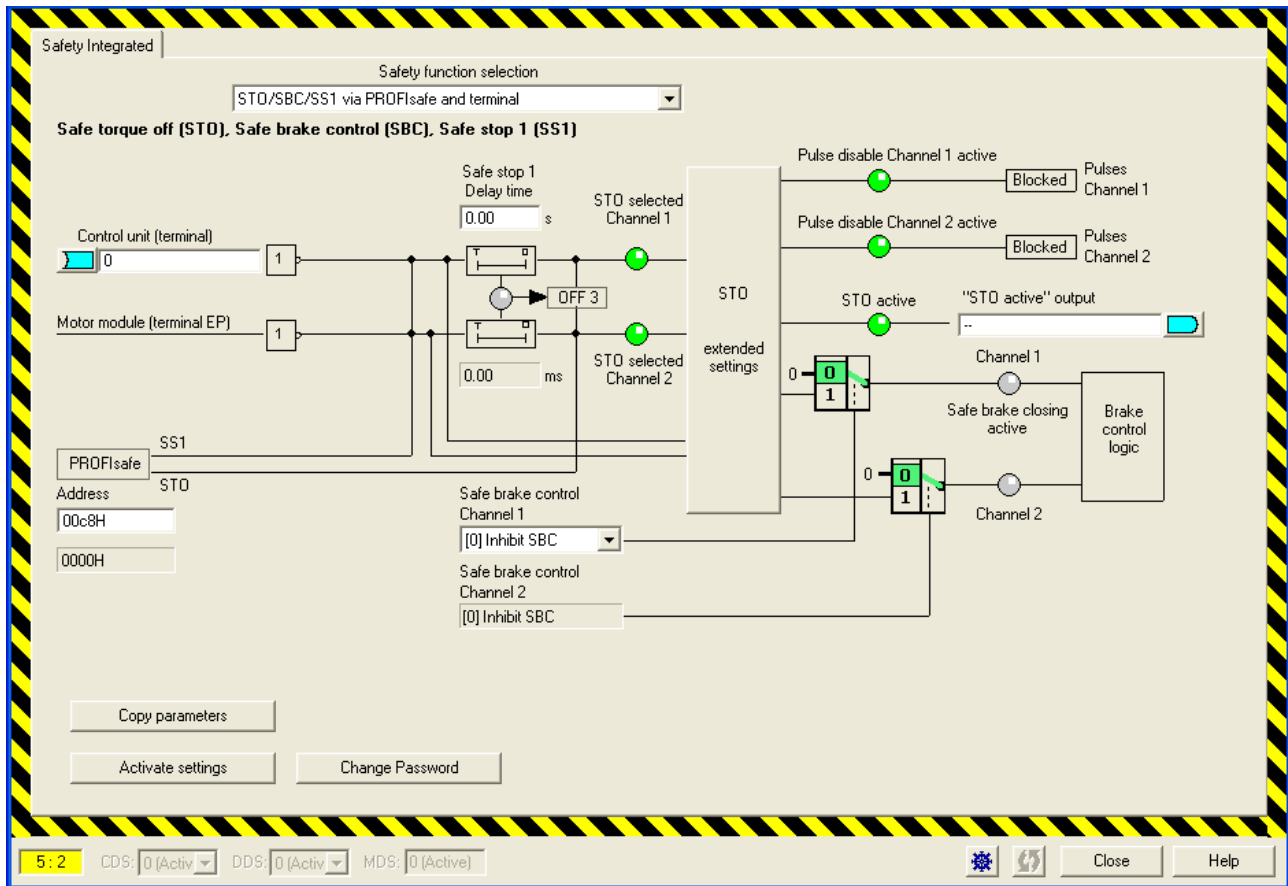


Figure 7-5 STO/SBC/SS1 via PROFIsafe and terminal

**NOTICE**

For safety reasons, when using the STARTER commissioning tool (or SCOUT) you can only set the safety-relevant parameters of the first channel offline.

In order to set the safety-relevant parameters of the second channel, place a tick in the checkbox "Copy parameters after download" and then establish an online connection to the drive unit. Or establish an online connection to the drive unit first and then duplicate the parameters by pressing the "Copy parameters" button on the start screen of the configuration.

**Note**

For the encoder parameters (p9515 to p9529), which are used for safe motion monitoring, the following procedure applies when copying:

- The following applies to safety-related functions that have not been enabled (p9501 = 0):
  - During startup, the parameters are automatically set in the same way as the respective corresponding encoder parameter (e.g. p0410, p0474, etc.).
- The following applies to safety-related functions that have been enabled (p9501 > 0):
  - The parameters are checked for compliance with the respective corresponding encoder parameter (e.g. p0410, p0474, etc.).

Further information can be found in the parameter descriptions in the SINAMICS S120/S150 List Manual.

---

**Note****Activating changed safety parameters**

When exiting the commissioning mode (p0010 = 0), most of the changed parameters immediately become active. However, for some parameters, a POWER ON is required. If this is the case, a STARTER message or an alarm from the drive (A01693 or A30693) will inform you of this.

When performing an acceptance test, a POWER ON is always required.

---

## 7.2.2 Prerequisites for commissioning the Safety Integrated functions

1. Commissioning of the drives must be complete.
2. Non-safe pulse suppression must be present, e.g. via OFF1 = "0" or OFF2 = "0".

If the motor holding brake is connected and parameterized, the holding brake is applied.
3. For operation with SBC, the following applies:

A motor with motor holding brake must be connected to the appropriate terminal of the Motor Module or SBR/SBA.

## 7.2.3 Default settings for commissioning Safety Integrated functions without encoder

Additional default settings are required before commissioning Safety functions without an encoder. The ramp-function generator is automatically created if a vector drive is configured. Please continue up to the ramp-function generator configuration. If a servodrive is configured, proceed as follows to call the ramp-function generator:

1. Activate the ramp-function generator: In the configured project, call the "Drive Navigator" offline, select the device configuration and click on "Configure drive". In the next window, under the function modules, select "Extended setpoint channel". With "Continue", proceed with the configuration and when completed, exit with "Complete". The ramp-function generator is now active and can be parameterized.

2. In the project window, open the ramp-function generator by double-clicking on <Drive unit> → Drives → <Drive> → Setpoint channel → Ramp-function generator:

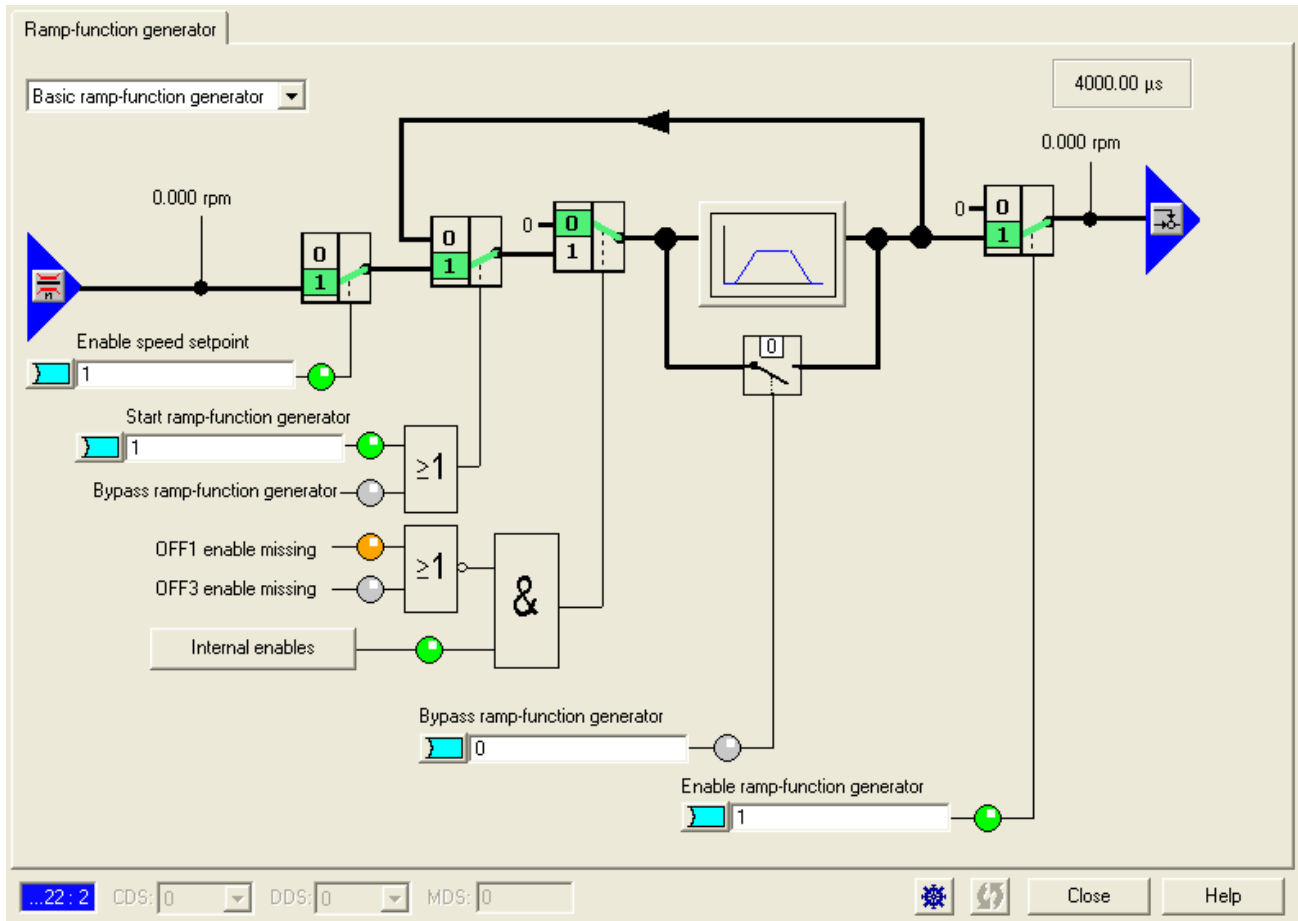


Figure 7-6 Ramp-function generator

3. Clicking on the button with the ramp opens the following window:

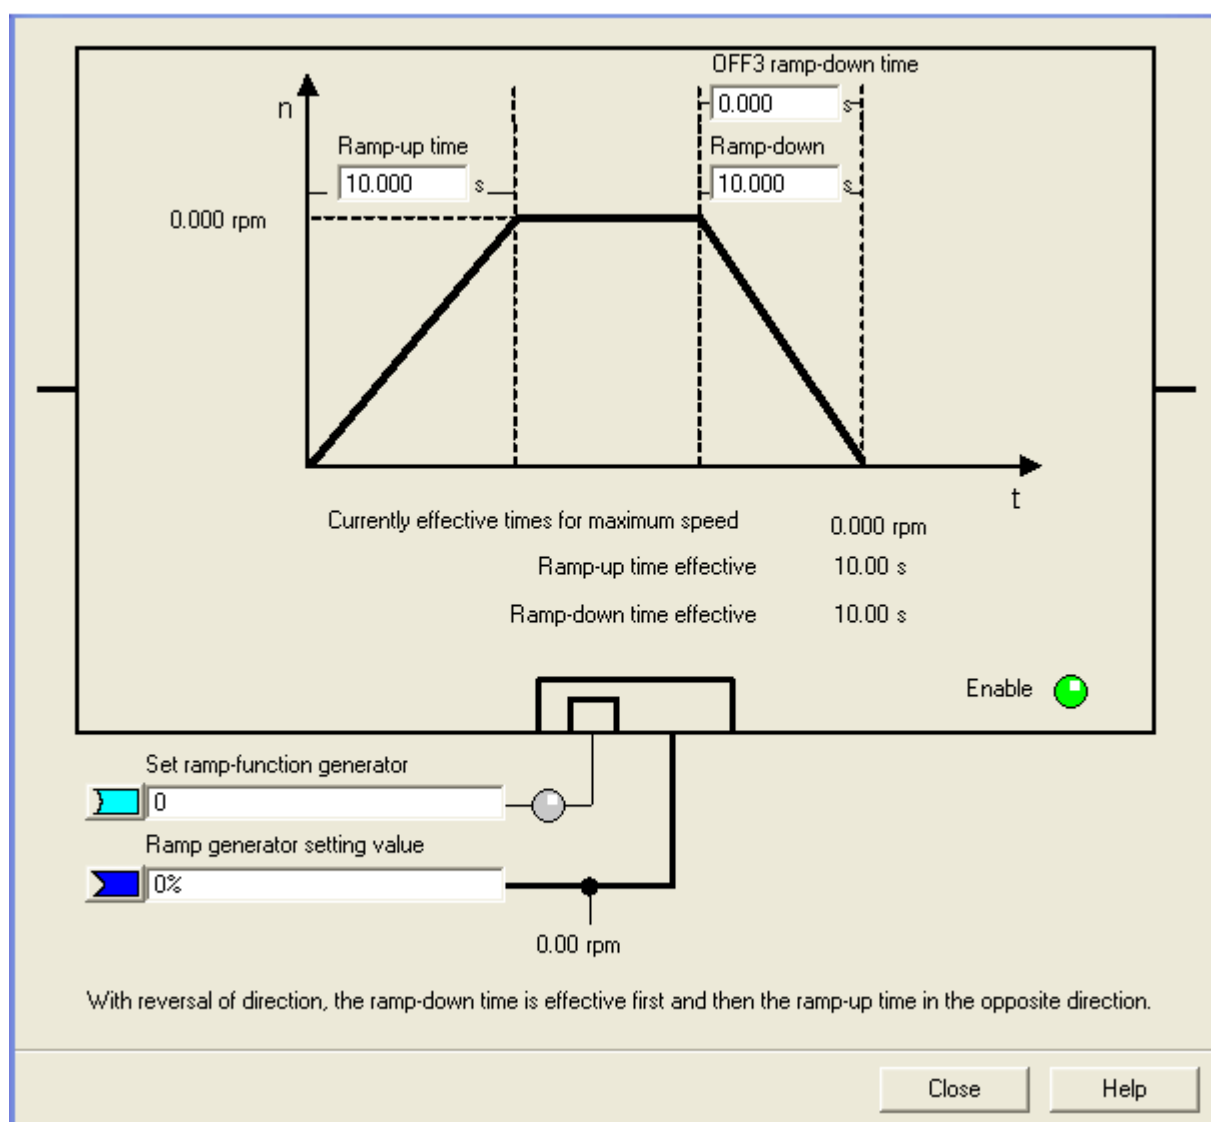


Figure 7-7 Ramp-function generator ramp

4. Here, enter the data to define the ramp-function generator ramp.
5. Then you must carry out the motor measurements: Start with static measurements and then take rotating measurements.

### Activating Safety Integrated

1. Open the Safety Integrated selection window via **<Drive unit> → Drives → <Drive> → Functions → Safety Integrated** and select the Safety function you require:

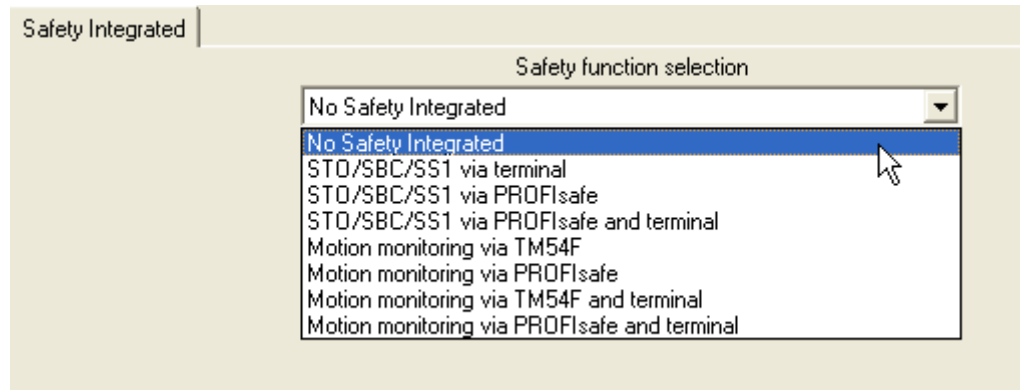


Figure 7-8 Safety Integrated selection

2. In the drop-down menu below, select "[1] Safety without encoder".
3. Then, open the configuration window and set the actual value acquisition cycle (p9511) to the value of the current controller cycle (p0115[0]) (e.g. 125 µsec).
4. Click "Gear factor" and set the actual value tolerance (p9542) to a larger value (e.g. 10 mm/min or 10 rpm) and the number of motor revolutions to match the pole pair number (r0313).
5. Open SS1 and set the shutdown speed to >0.
6. Call the Safely-Limited Speed, change all of the stop responses to "[0]STOP A" or "[1]STOP B" and close the window.
7. The user-specific Safety settings can now be performed.
8. Click on "Copy parameters".
9. Switch off/switch on the drive to accept the changes.

#### Note

If during acceleration or deceleration, the drive outputs the message C01711/C30711 (message value 1041 to 1043), this indicates problems, for example, with values too great for acceleration/deceleration. You have the following options to remedy this:

- Reduce the ramp gradient.
- Use the extended ramp-function generator (with rounding) to set a more gentle ramp up.
- Reduce the precontrol.
- Change the values of parameters p9586, p9587, p9588, p9589 and p9783 (see specifications in the List Manual).



## 7.2.4 Setting the sampling times

### Terminology

The software functions installed in the system are executed cyclically at different **sampling times** (p0115, p0799, p4099).

Safety functions are executed within the **monitoring clock cycle** (p9300/p9500) and TM54F is executed within the **sampling time** (p10000). For Basic Functions, the cycle is displayed in r9780/r9880.

Communication on PROFIBUS is handled cyclically by means of the **communication clock cycle**.

During the PROFIsafe scan cycle, the PROFIsafe telegrams issued by the master are evaluated.

### Rules

- The monitoring clock cycle (p9300/p9500) can be set between 500 µs to 25 ms.

---

#### Note

The monitoring clock cycle must be the same on all drives and the TM54F.

---

However, the calculation time required for the Extended Functions in the Control Unit depends on the monitoring clock cycle, that is, shorter clock cycles extend the calculation time. The availability of a specific monitoring clock cycle therefore depends on calculation time resources of the Control Unit.

CPU time resources on the Control Unit are influenced primarily by the number of drives, the number of drives with enabled Extended Functions, the connected DRIVE-CLiQ components, the selected DRIVE-CLiQ topology, the use of a CBE20 and by the selected technological functions.

---

#### Note

Please note that the deactivated drives also affect the required CPU time. In the case of utilization limits being reached, it is sufficient to deactivate one drive. This drive must then be deleted.

---

-

- PROFIBUS
  - The monitoring clock cycle (p9300/p9500) must be an integer multiple of the actual value update clock cycle. p9311/p9511 are generally used for the clock cycle for actual value acquisition. If p9311/p9511 = 0 in *isochronous operation* the isochronous PROFIBUS communication clock cycle is used, in *non-isochronous* operation the actual update clock cycle in this case is 1 ms.
  - The current controller cycle must be no more than a quarter of the length of the actual value update clock cycle.
  - The sampling time of the current controller (p0115[0]) must be at least 125 µs.
- The sampling time of the TM54F must be the same as the monitoring clock cycle (p10000 = p9300/p9500).

---

**Note**

The Safety functions are carried out in the monitoring cycle (r9780/r9880 for Basic Functions or p9500/p9300 for Extended Functions). PROFIsafe telegrams are evaluated in the PROFIsafe scan cycle, which corresponds to twice the monitoring clock cycle.

---

**Overview of important parameters (see the SINAMICS S120/S150 List Manual)**

- p9300 SI Motion monitoring clock cycle (Motor Module) (only Extended Functions)
- p9500 SI Motion monitoring clock cycle (Control Unit) (only Extended Functions)
- p9311 SI Motion actual value sensing clock cycle (Motor Module)
- p9511 SI Motion actual value sensing clock cycle (Control Unit)
- r9780 SI monitoring clock cycle (Control Unit)
- r9880 SI monitoring clock cycle (Motor Module)
- p10000 SI sampling time (TM54F)

## 7.3 Commissioning TM54F by means of STARTER/SCOUT

### 7.3.1 Basic sequence of commissioning

The following conditions must be met before you can configure the TM54F:

- Concluded initial commissioning of all drives

Table 7- 1 Configuration sequence

| Step | Execution  |
|------|--|
| 1    | Insert the TM54F   |
| 2    | Configure the TM54F and generate the drive groups            |
| 3    | Configure Safety functions of the drive groups               |
| 4    | Configure the inputs   |
| 5    | Configure the outputs  |
| 6    | Copy the parameters to the second drive object (TM54F_SL)    |
| 7    | Change the safety password                                   |
| 8    | Activate the configuration by selecting "Activate settings"  |
| 9    | Save the project in STARTER                                  |
| 10   | Save the project in the drive by selecting "Copy RAM to ROM" |
| 11   | Execute POWER ON   |
| 12   | Acceptance test  |

### 7.3.2 Configuration start screen

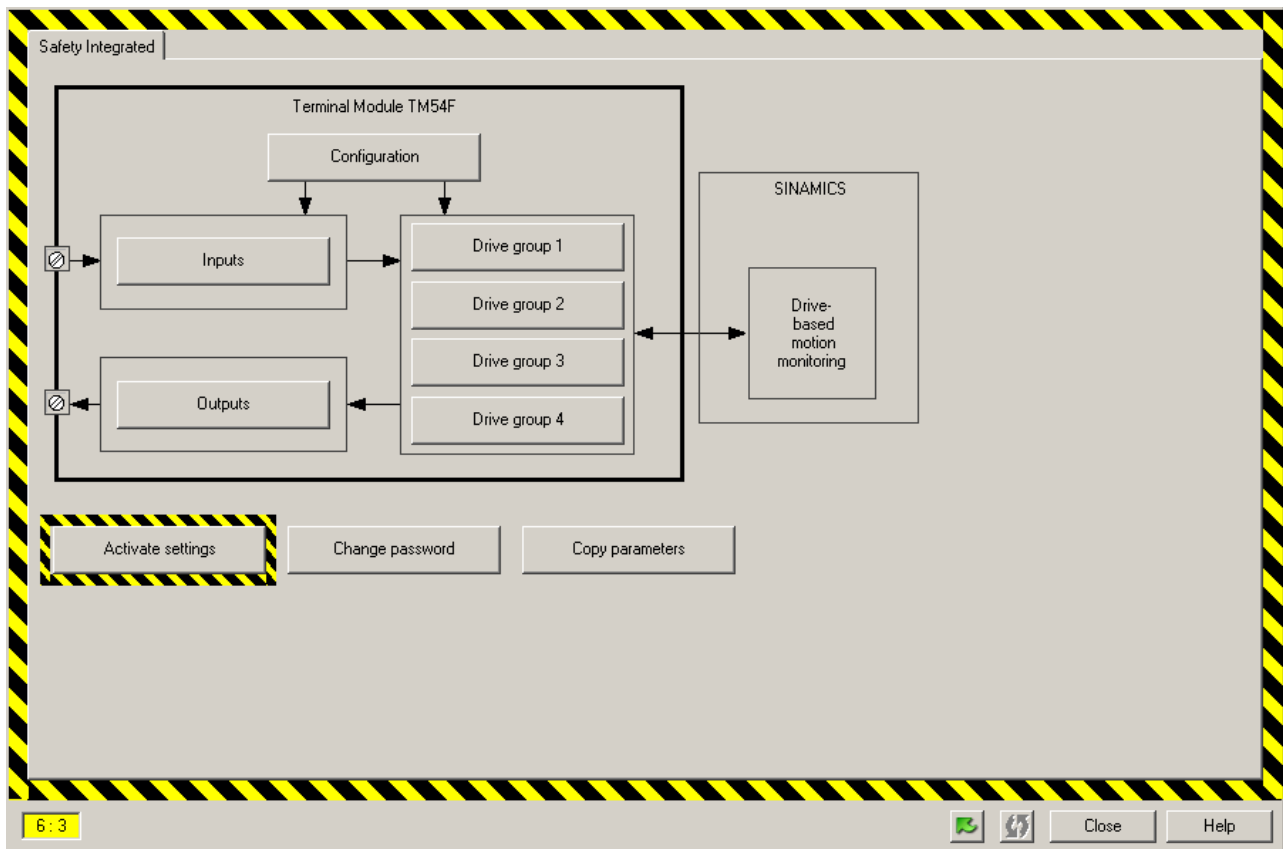


Figure 7-9 Configuration start screen TM54F

The following functions can be selected in the start screen:

- Configuration  
Opens the "Configuration" screen
- Inputs  
Opens the "Inputs" screen
- Outputs  
Opens the "Outputs" screen
- Drive group 1 ... 4  
Opens the corresponding screen of drive group 1 to 4
- Copy parameters  
To copy the configuration to the second drive object (TM54F\_SL), press "Copy parameters".

- Change/activate settings
  - Change settings

You can select this button and enter the TM54F password to activate the commissioning mode. The button function changes to "Activate settings".
  - Activate settings

This function activates your parameter settings and initiates calculation of the actual CRC and the corresponding transfer to the target CRC.

A message is output requesting you to save the project and then restart the system. It is also required to carry out an acceptance test.
- Change password (p10061 ... p10063)

In order to change the password, enter the old password (factory setting: 0) and then enter and confirm the new password.

### 7.3.3 TM54F configuration

#### Configuration screen of TM54F for Safety Integrated

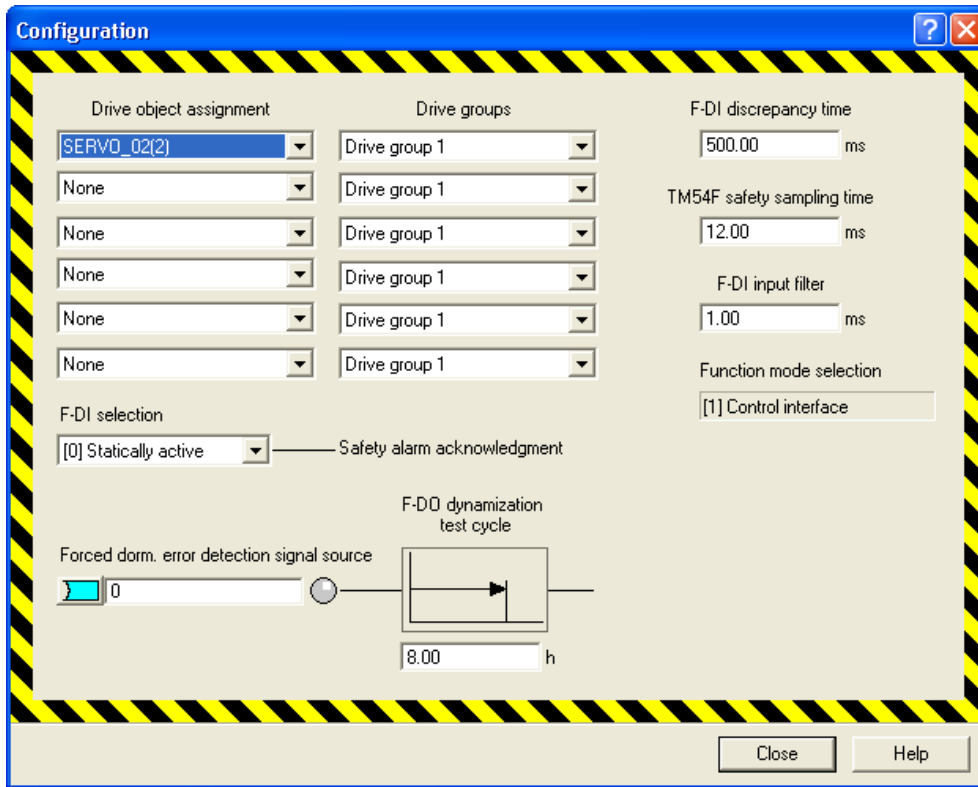


Figure 7-10 TM54F configuration

Functions of this screen:

- Assigning drive objects (p10010)  
Select a drive object to be assigned to a drive group.
- Drive groups (p10011)  
Each configured safety drive can be assigned to a drive group using a drop-down list box. The list box displays the drives and their names.
- Discrepancy time (p10002)  
The signal states at the two terminals of an F-DI are monitored in order to determine whether these have assumed the same logical state within the discrepancy time.

---

**Note**

The discrepancy time must be set so that it is always smaller than the smallest expected switching interval of the signal to this F-DI.

---

- Safety sampling time (p10000)

The Safety sampling time corresponds to the sampling time of TM54F.

---

**Note**

The Safety clock cycle (p10000) of the TM54F must be set so it is the same as the monitoring clock cycle in p9300/p9500 for all the drives controlled by the TM54F.

---

- F-DI input filter (p10017)

Parameterizing the debounce time of the F-DIs and single-channel DIs of the TM54F. The debounce time is rounded off to whole ms and then accepted. The debounce time specifies the maximum time an interference pulse can be present at F-DIs before being interpreted as a switching operation.

- F-DI selection (p10006)

The Extended Functions enter a safety message in a special message buffer upon the detection of internal errors or violations of limits. This alarm must be acknowledged safely. You can assign an F-DI terminal pair for safe acknowledgment.

- Signal source, forced dormant error detection (p10007)

Select an input terminal to start the test stop: The test stop is started with a 0/1 signal at the input terminal and is then only possible if the drive is not in commissioning mode. The F-DI of the TM54F must not be used as a signal source.

- Test cycle, dynamization F-DO (p10003)

Fail-safe I/O must be tested at defined intervals in order to validate their fail-safety (test stop, or forced dormant error detection). The TM54F module is provided with a function block which is selected by means of a BICO source to execute this forced dormant error detection (e.g. switch the L1+ and L2+ sensor power supply). Each selection triggers a timer in order to monitor the test cycle. A message is set on expiration of the monitored time. This message is also set following each switch on/off.

## 7.3.4 Test stop of the TM54F

### Test of the fail-safe inputs and outputs

Fail-safe I/O must be tested at defined intervals in order to validate their fail-safety (test stop, or forced dormant error detection). For this purpose, the TM54F contains a function block which carries out this forced dormant error detection when selected via a BICO source. To monitor the time until the next required test, a timer is started after every error-free test stop. A message is set on expiration of the monitored time and each time the Control Unit is switched on.

The fail-safe digital inputs can be selected for the test stop. Three test stop modes can be selected for testing the outputs (see following section). After a time interval (p10003) has expired, the user is notified via message A35014 that a test stop must be performed for the F-DI/DO of the TM54F.

When the appropriate safety devices are implemented (e.g. protective doors), it can be assumed that running machinery will not pose any risk to personnel. For this reason, an alarm is only output to inform the user that a forced dormant error detection run is due and to request that this be carried out at the next available opportunity.

Examples of when to carry out forced dormant error detection:

- When the drives are at a standstill after the system has been switched on.
- Before the protective door is opened.
- At defined intervals (e.g. every 8 hours).
- In automatic mode (time and event dependent)

### Carrying out a test stop:

Proceed as follows to parameterize the test stop:

1. Determine the appropriate test stop mode for the circuits used in your application (see diagrams in the following sections).
2. Set the test stop mode which is to be used via parameter p10047.
3. Use parameter p10046 to define which digital outputs (F-DO 0 to F-DO 3) are to be tested. Note the following:

Digital outputs which are not tested will be switched off during the test stop.

4. Use parameter p10041 to define which fail-safe digital inputs are to be checked during the test.

Inputs which do not have L1+ and L2+ power supplies may not be selected for the test.

5. Use parameter p10001 to set the time within which the digital output signals to the corresponding digital inputs DI 20 ... DI 23 or DIAG inputs must be recognized. Select this time depending on the maximum response time of the external F-DO circuit.



6. Use parameter p10003 to set the interval within which a test stop should be carried out. After this time interval has expired, you will be notified via message A35014 that a test stop must be performed for the TM54F.
7. Set the signal source which triggers the start of the test stop using parameter p10007. This can be, for example, a control signal or switch via a BICO switchable signal.

While the test stop is being carried out, the message A35012 (TM54F: Test stop active) is displayed. The F-DI values are frozen for the duration of the test stop/forced dormant error detection. The messages A35014 and A35012 only disappear again after the test stop has been performed. If an error is found during the test stop, fault F35013 is output. Using the test sequence specified for each test stop mode, you can see which error has occurred from the fault value of the test step.

### Duration of test stop

You can calculate the duration of the test stop with this formula:

F-DOs which are not registered for evaluation by means of p10046 are set to "0" for the duration of the test stop ("fail-safe values").

Maximum test stop period:  $T_{\text{Teststop}} = T_{\text{FDIs}} + T_{\text{FDOs}}$

- Test of the FDIs:  $T_{\text{FDIs}} = 3 * p10000 + 3 * X \text{ ms}$   
(X = 20 ms or p10000 or p10017 - the greatest time value of the 3 values determines the waiting time X)
- Test of the FDOs:  $T_{\text{FDOs}} = 8 * p10000 + 6 * Y \text{ ms}$   
(Y = p10001 or p10000 or p10017 - the greatest time value of the 3 values determines the waiting time Y)

7.3.4.1 Test stop mode 1

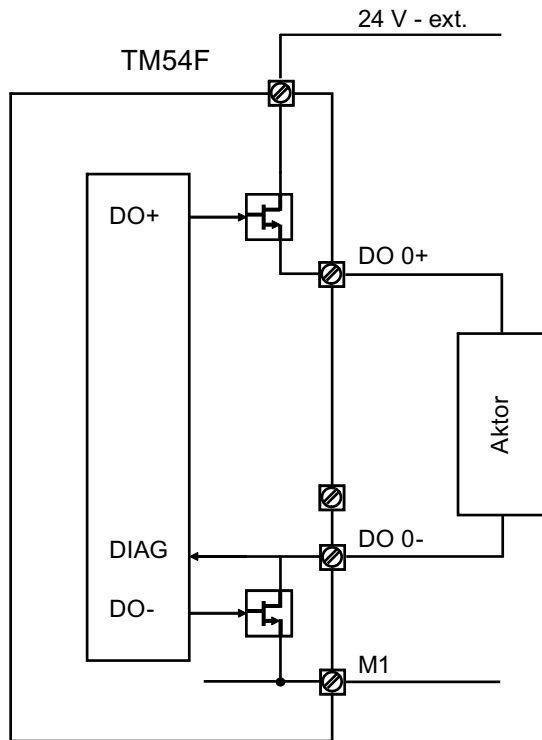


Figure 7-11 F-DO circuit, test stop mode 1

| Test step <sup>1)</sup> | L1+ | L2+ | Comment                    |
|-------------------------|-----|-----|----------------------------|
| 1                       | OFF | ON  | Synchronization            |
| 3                       | OFF | OFF | F-DIs 0 ... 4 Check at 0 V |
| 5                       | ON  | ON  | F-DIs 5 ... 9 Check at 0 V |

| Test step <sup>1)</sup> | DO+ | DO- | Expected response, DIAG signal |
|-------------------------|-----|-----|--------------------------------|
| 6                       | OFF | OFF | LOW                            |
| 8                       | ON  | ON  | LOW                            |
| 10                      | OFF | ON  | LOW                            |
| 12                      | ON  | OFF | <b>HIGH</b>                    |
| 14                      | OFF | OFF | LOW                            |

Test sequence for test stop mode 1

<sup>1)</sup> You can find a complete list of the steps in the SINAMICS S120/S150 List Manual under message F35013.

## 7.3.4.2 Test stop mode 2

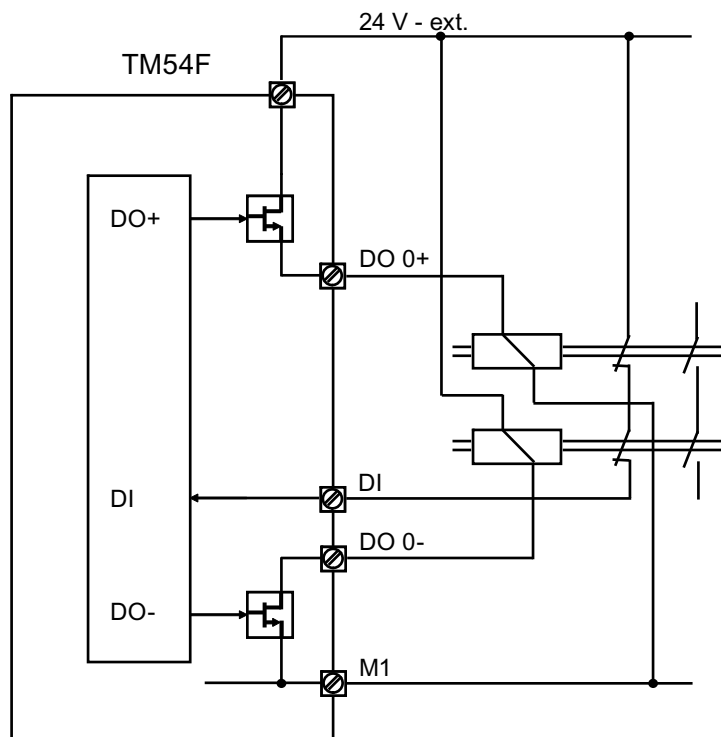


Figure 7-12 F-DO circuit, test stop mode 2

| Test step <sup>1)</sup> | L1+ | L2+ | Comment                    |
|-------------------------|-----|-----|----------------------------|
| 1                       | OFF | ON  | Synchronization            |
| 3                       | OFF | OFF | F-DIs 0 ... 4 Check at 0 V |
| 5                       | ON  | ON  | F-DIs 5 ... 9 Check at 0 V |

| Test step <sup>1)</sup> | DO+ | DO- | Expected response, DI signal |
|-------------------------|-----|-----|------------------------------|
| 6                       | OFF | OFF | HIGH                         |
| 8                       | ON  | ON  | LOW                          |
| 10                      | OFF | ON  | LOW                          |
| 12                      | ON  | OFF | LOW                          |
| 14                      | OFF | OFF | HIGH                         |

Test sequence for test stop mode 2

<sup>1)</sup> You can find a complete list of the steps in the SINAMICS S120/S150 List Manual under message F35013.

7.3.4.3 Test stop mode 3

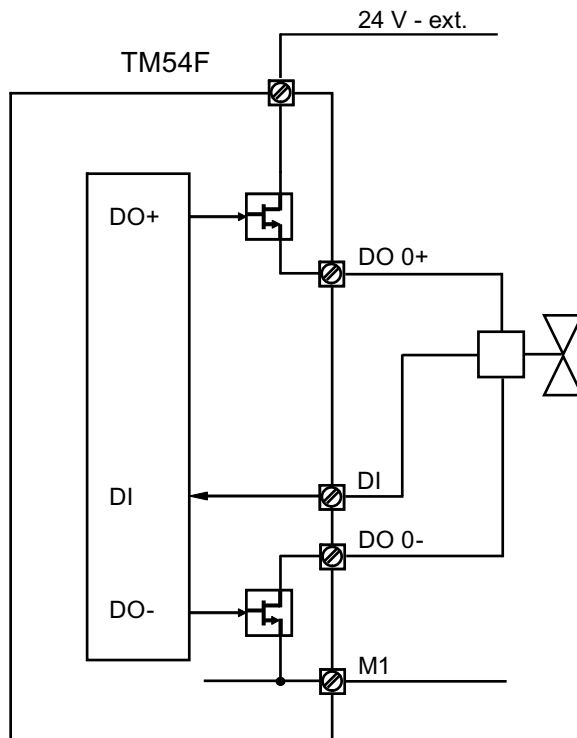


Figure 7-13 F-DO circuit, test stop mode 3

| Test step <sup>1)</sup> | L1+ | L2+ | Comment                    |
|-------------------------|-----|-----|----------------------------|
| 1                       | OFF | ON  | Synchronization            |
| 3                       | OFF | ON  | F-DIs 0 ... 4 Check at 0 V |
| 5                       | ON  | ON  | F-DIs 5 ... 9 Check at 0 V |

| Test step <sup>1)</sup> | DO+ | DO- | Expected response, DI signal |
|-------------------------|-----|-----|------------------------------|
| 6                       | OFF | OFF | HIGH                         |
| 8                       | ON  | ON  | <b>LOW</b>                   |
| 10                      | OFF | ON  | HIGH                         |
| 12                      | ON  | OFF | HIGH                         |
| 14                      | OFF | OFF | HIGH                         |

Test sequence for test stop mode 3

<sup>1)</sup> You can find a complete list of the steps in the SINAMICS S120/S150 List Manual under message F35013.

#### 7.3.4.4 Test stop mode parameters

##### Overview of important parameters (see the SINAMICS S120/S150 List Manual)

- p10000 SI sampling time
- p10001 SI wait time for test stop at DO 0 ... DO 3
- p10003 SI forced dormant error detection timer
- p10007 BI: SI forced dormant error detection F-DO 0 ... 3 signal source
- p10017 SI digital inputs, debounce time
- p10046 SI test sensor feedback input DI 20 ... 23
- p10047[0...3] SI select test mode for test stop

### 7.3.5 F-DI/F-DO configuration

#### Screen of the F-DI fail-safe inputs

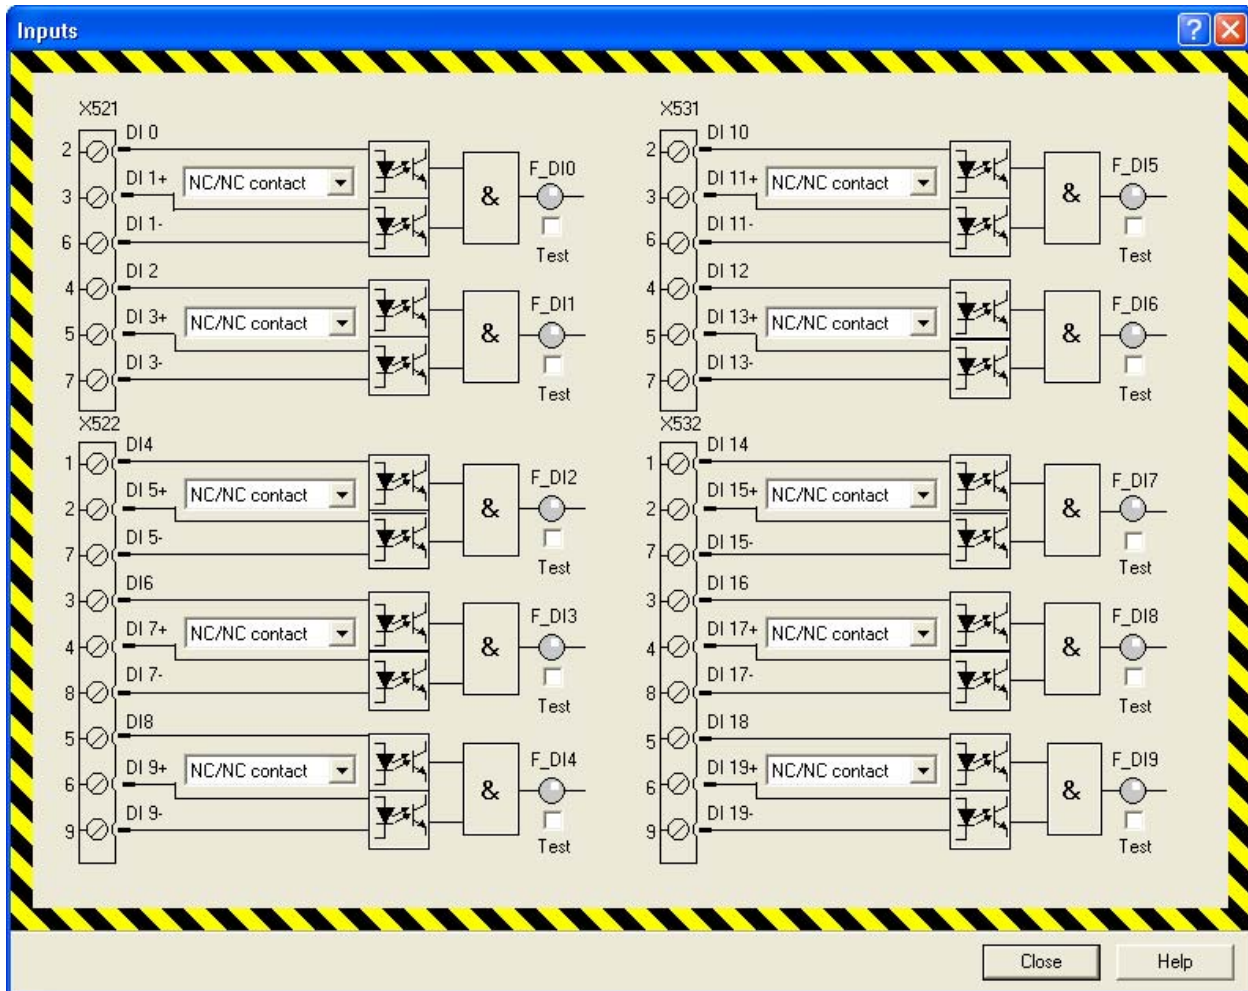


Figure 7-14 Inputs screen

#### NC/NO contact (p10040)

Terminal property F-DI 0-9 (p10040.0 = F-DI 0, ... p10040.9 = F-DI 9), only the property of the second (lower) digital input is set. Always connect an NC contact to digital input 1 (upper). Digital input 2 can be configured as NO contact.

#### Activate test mode (p10041)

A check mark at an F-DI defines whether the pair of digital inputs is to be integrated in the forced dormant error detection test (for additional information, see section "Forced dormant error detection", under Extended Functions).

#### LED symbol in the F-DI screen

The LED symbol downstream of the AND element indicates the logical state (inactive: gray, active: green, discrepancy error: red).

## Screen of the F-DO fail-safe outputs

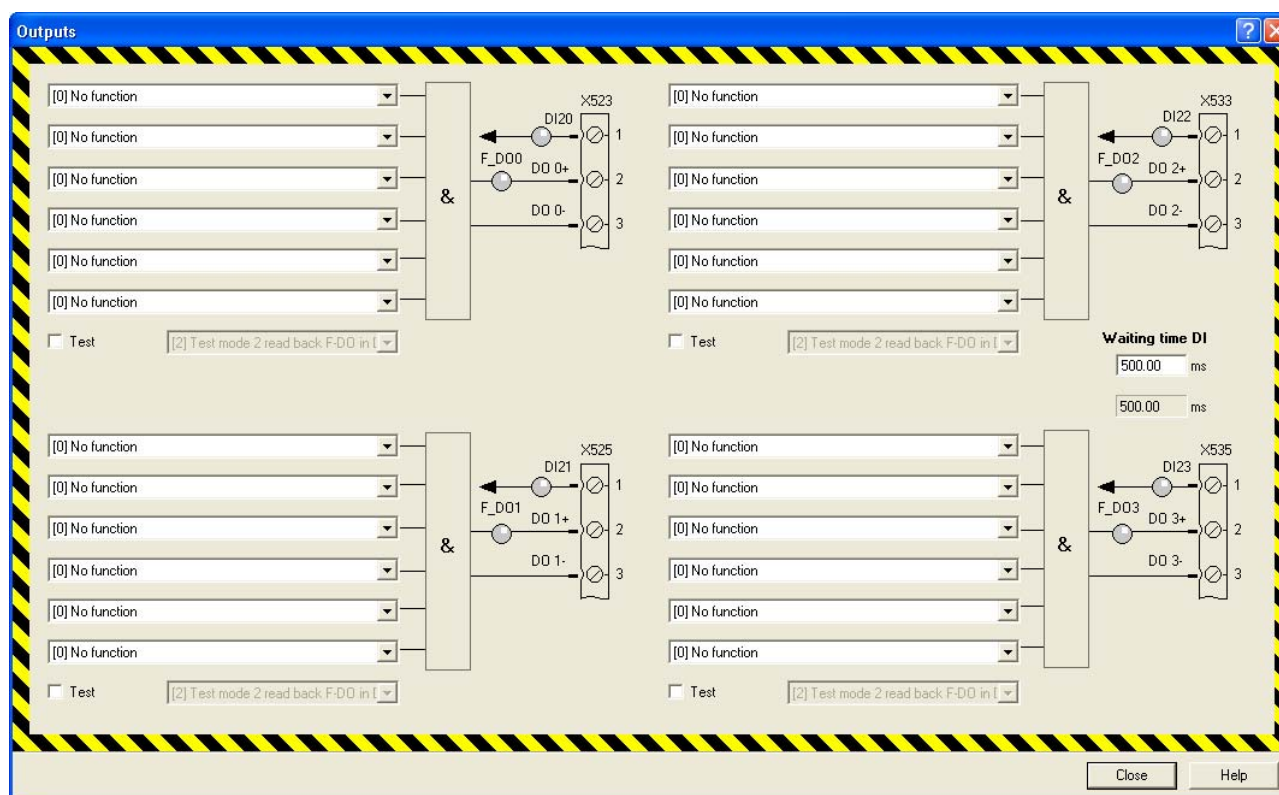


Figure 7-15 Outputs screen

**Signal source for F-DO (p10042 - p10045)**

An AND element with 6 inputs is interconnected with each output terminal pair of an F-DO; the signal sources for the AND inputs can be selected:

- If a signal source is not connected to an input, then the input is set to HIGH (default), exception: If a signal source is not connected at any input, then the output signal = 0
- Status signals of the drive of drive group 1 to 4

For additional information on status signals, see chapter "F-DO overview" in the "Control by means of TM54F terminals".

**Select test sensor feedback signal (p10046 [0..3]) and select test mode for test stop (p10047 [0..3])**

The test of the feedback line for the dynamization can be activated at each F-DO and the test mode can be selected for the test stop (for additional information, see Chapter "Forced dormant error detection" under Extended Functions).

**LED symbol in the F-DO screen**

The LED symbol downstream of the AND element indicates the logical state (inactive: gray, active: green).

The LED symbol of the digital inputs DI20 to DI23 indicates the status of the digital input (inactive: gray, active: green).

### 7.3.6 Control interface of the drive group

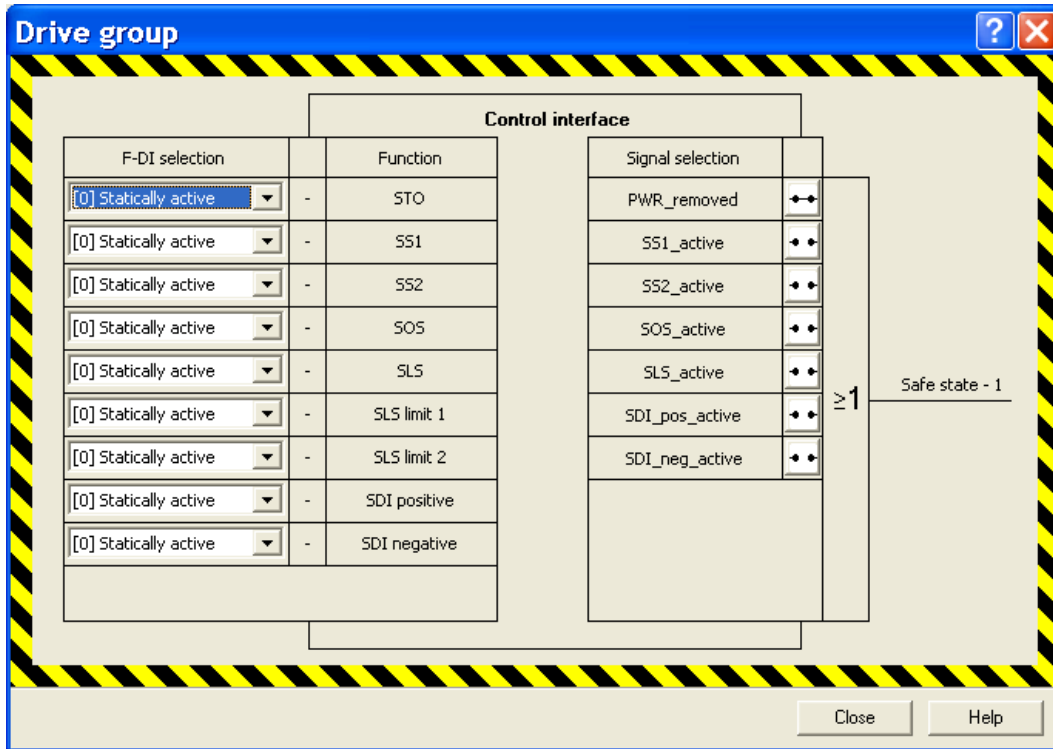


Figure 7-16 Screen, drive group

Functions of this screen:

- Selection of an F-DI for the STO, SS1, SS2, SOS and SLS functions and for SLS speed limits (bit coded) (p10022 to p10028) and SDI.

A separate screen is available for each drive group. An F-DI can be assigned several functions in several drive groups.

- Configuration of the "Safe State" signal (p10039)

A safety output signal "Safe State" can be generated for each drive group from the following status signals:

- STO active (Power\_removed)
- SS1 active
- SS2 active
- SOS active
- SLS active
- SDI positive
- SDI negative

The status signals from the same functions for different drives of a drive group are logically AND'ed. The status signals of the individual functions (STO active, SS1 active, etc.) are ORed.

The "Safe State" signals can be assigned to an F-DO.



## 7.4 Procedure for configuring PROFI-safe communication

The next sections deal with a sample configuration of PROFI-safe communication between a SINAMICS S120 drive unit and higher-level SIMATIC F-CPU operating as PROFIBUS master. Here a special safety connection ("safety slot") between the master and slave is set up automatically.

HW Config can then be used to configure the PROFI-safe telegram 30 (sub-module ID = 30) for the drive objects (abbreviation: DO).

### Requirements for PROFI-safe communication

The following minimum software and hardware requirements apply for the configuration and operation of safety-oriented communication (F communication):

Software:

- SIMATIC Manager STEP 7 V5.4 SP4 or higher
- S7 F Configuration Pack V5.5 SP5<sup>1)</sup> or higher
- S7 Distributed Safety Programming V5.4 SP5<sup>1)</sup> or higher
- STARTER V4.2 or SIMOTION SCOUT<sup>2)</sup> V4.2
- Drive ES Basic V5.4 SP4 <sup>1)</sup> or higher

Hardware:

- A controller with safety functions (in our example, SIMATIC F-CPU 317F-2<sup>1)</sup>)
- SINAMICS S120 (in our example, a CU320-2)
- Correct installation of the devices

<sup>1)</sup> When using a SIMATIC F-CPU

<sup>2)</sup> If SIMOTION SCOUT is used however, SP6 cannot be used

|   |
|---|
| <b>NOTICE</b>   |
| If a single software or hardware component is either older than those specified in this document or is missing, PROFI-safe cannot be configured via PROFIBUS or PROFINET. |

### 7.4.1 Configuring PROFIsafe via PROFIBUS

#### Topology (network view of the project)

Components participating in F communication via PROFIBUS are basically wired as follows:

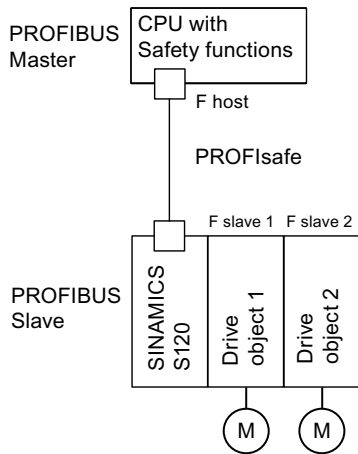


Figure 7-17 Example of a PROFIsafe topology

## Configuring PROFI-safe communication (example based on a Siemens F-CPU)

The next sections describe a configuration of PROFI-safe communication between a SIMATIC F-CPU and a drive unit. It is helpful to regularly save intermediate states.

### Creating a safety master

1. Create an F-CPU, e.g. CPU 317F-2, and a drive, e.g. SINAMICS S120 with CU320-2, in accordance with the hardware installed in HW Config.

To do this, start SIMATIC Manager and create a new project.

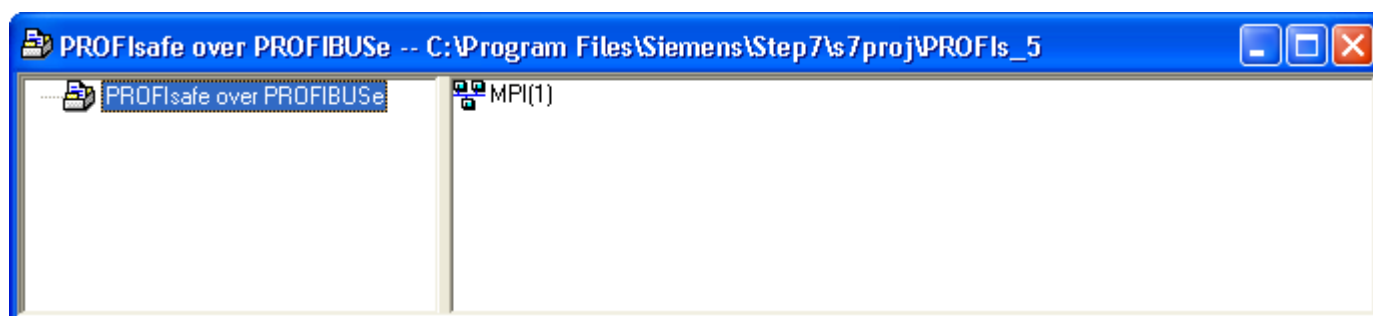


Figure 7-18 Creating a new project

2. Create a SIMATIC S300 Station under "Insert".

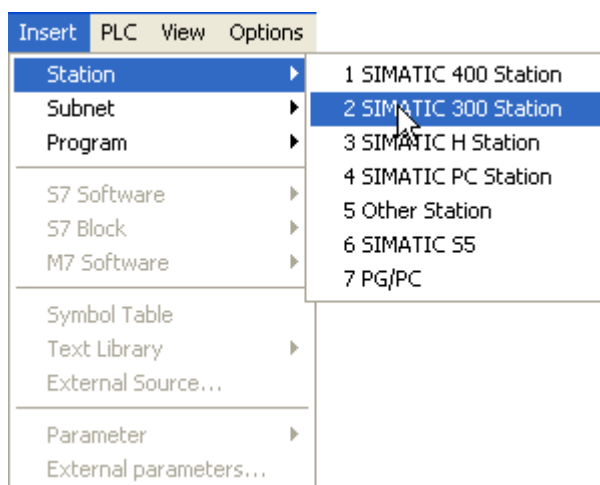


Figure 7-19 Creating a new station

7.4 Procedure for configuring PROFIsafe communication

3. The HW Config tool opens by double-clicking on SIMATIC S300(1), and then on "Hardware".

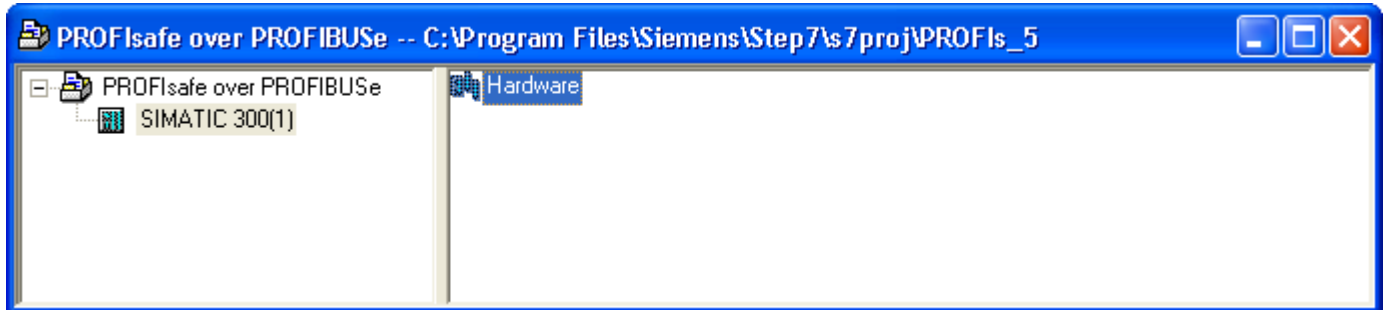


Figure 7-20 Calling HW Config

4. First create a mounting rail ((0)UR) under HW Config in the lefthand window: From the standard catalog under SIMATIC 300/RACK-300, drag the mounting rail to the upper lefthand field (the cursor has a "+" character).

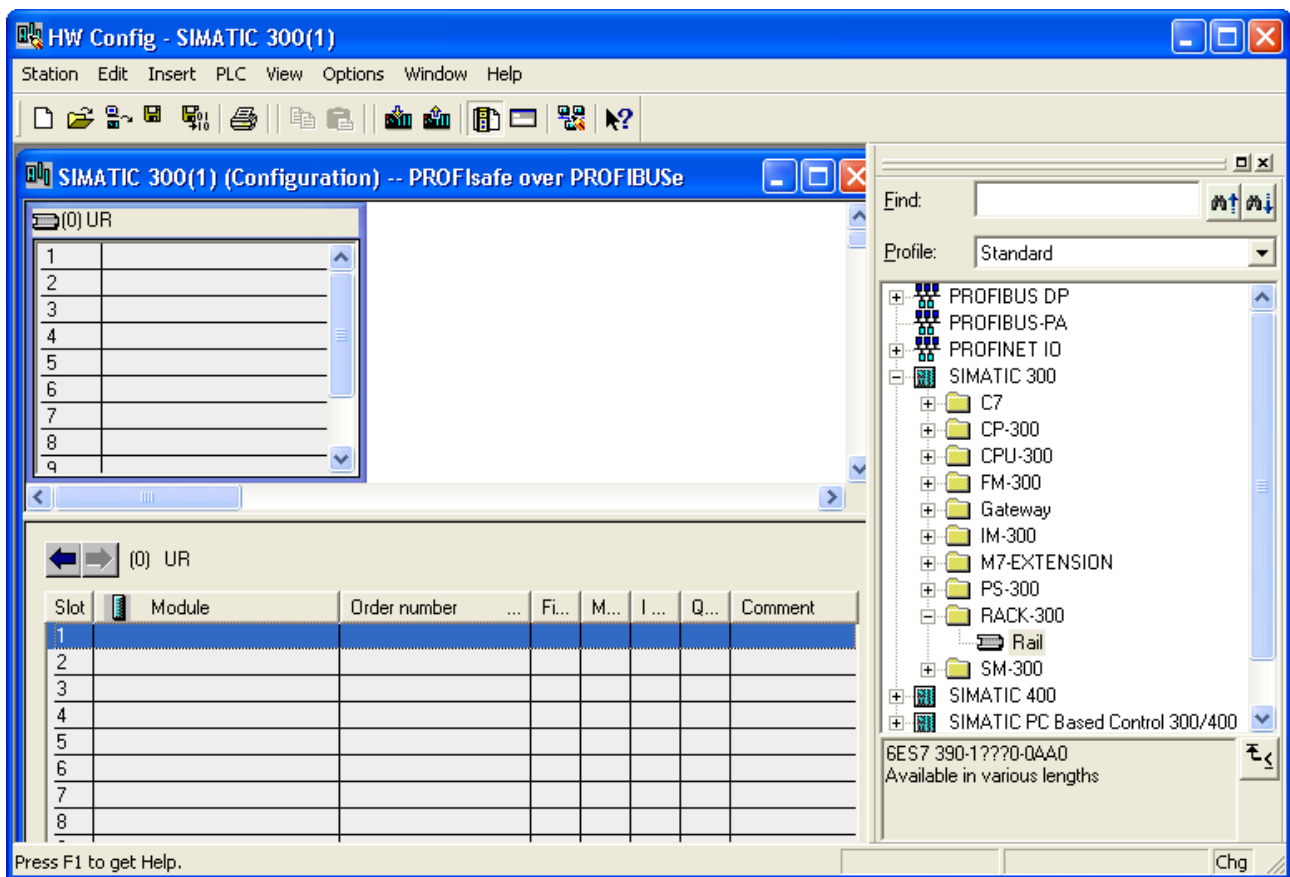


Figure 7-21 Creating a mounting rail

5. Select a safety-capable CPU under SIMATIC 300/CPU 300:  
In this case, for example, drag CPU 317F-2, V2.6 into the RACK on slot 2 (highlighted).

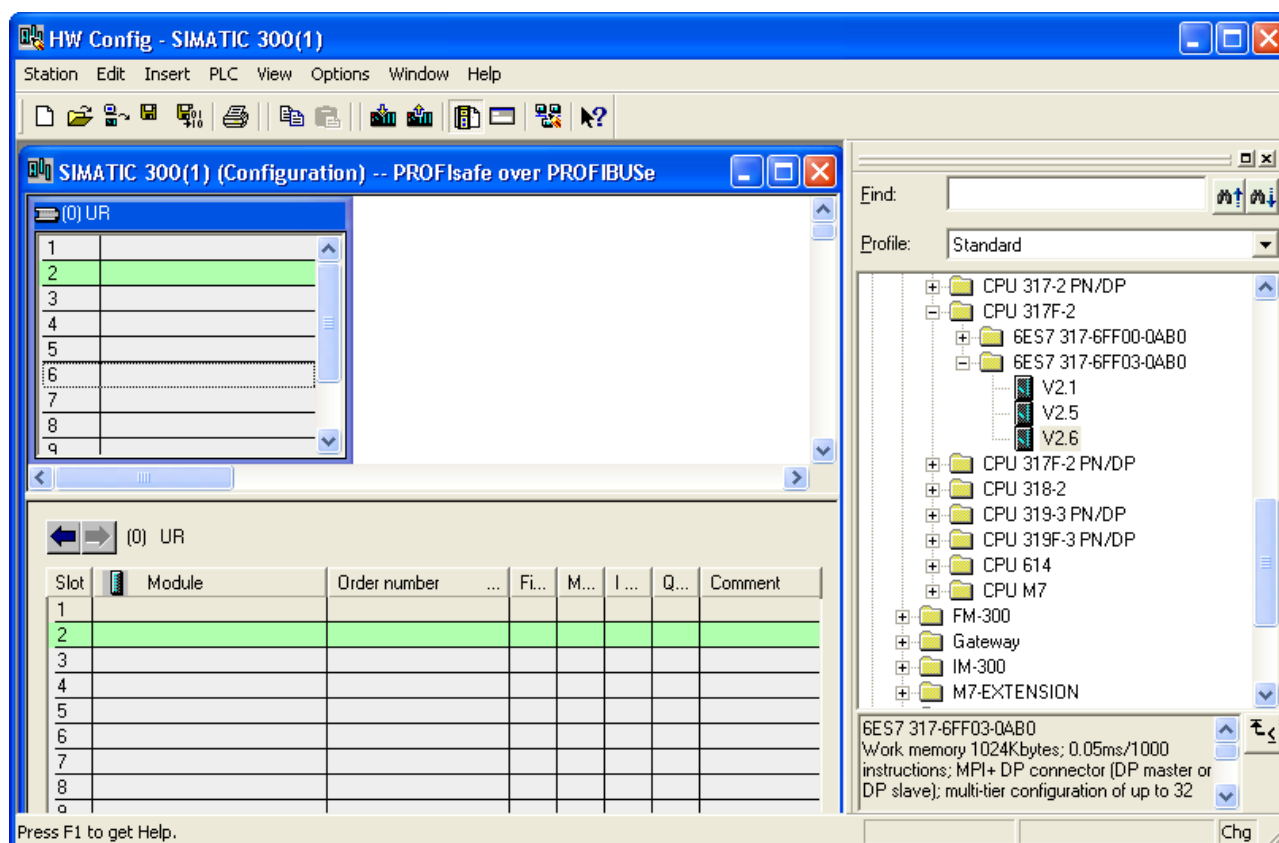


Figure 7-22 Creating an F host (master)

6. In the rack: The "Properties - PROFIBUS interface DP" window is opened by double-clicking on line X2. Under the tab "Parameter", click on "Properties..." in the interface field.

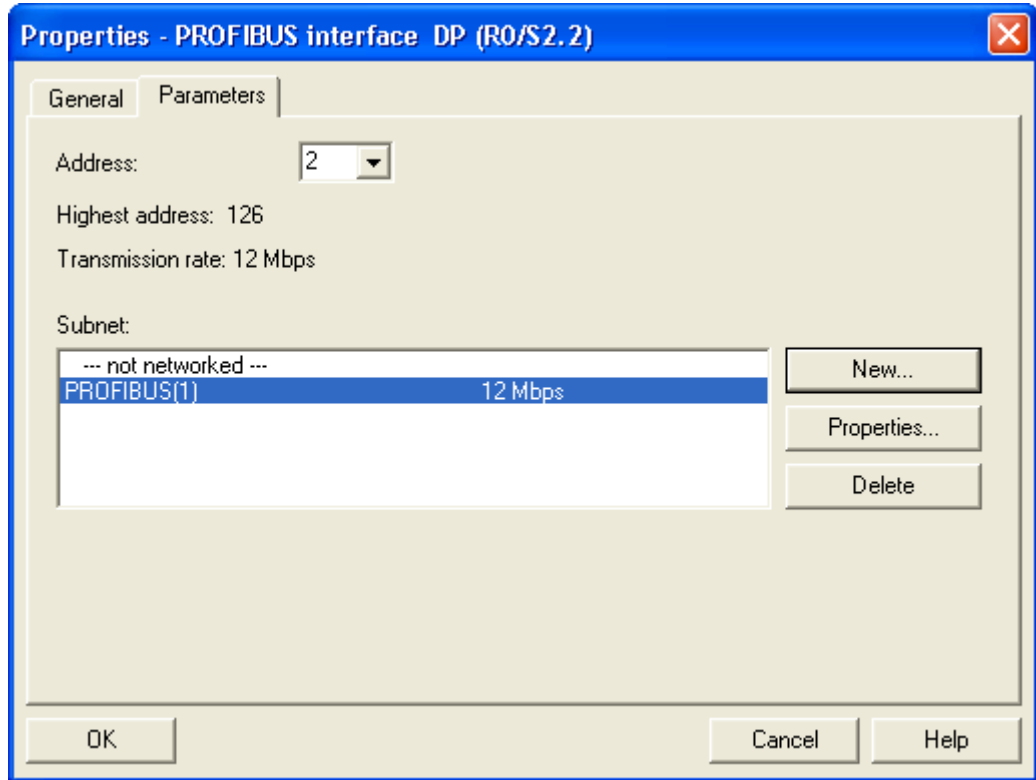


Figure 7-23 Setting the PROFIBUS interface

7. Set the PROFIBUS interface under the "Parameter" tab, set the address, and with the "Properties..." button, set the network settings, the transmission rate (e.g. 12 Mbit/s), the profile (DP) and then acknowledge with "OK". This sets up the master.

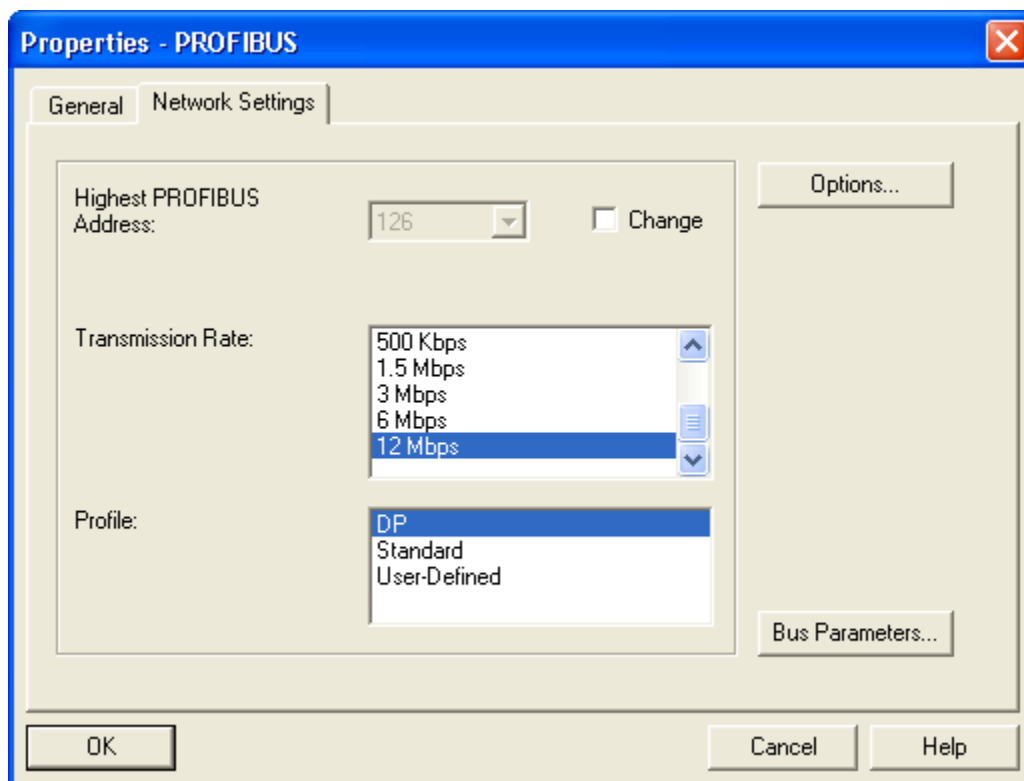


Figure 7-24 Setting the PROFIBUS profile

8. In the "Properties" window of the F-CPU in the "Protection" tab:
  - activate the access protection for the F-CPU and protect it with a password.
  - Activate the safety program ("CPU contains safety program").

**Creating a safety slave (drive)**

1. The drive can either be selected in the catalog window under PROFIBUS-DP/SINAMICS /SINAMICS S120/SINAMICS S120 CU320-2 or by installing a GSD file. Using the lefthand mouse key, drag the "SINAMICS S120 CU320" drive to the PROFIBUS line in the upper lefthand window (the cursor has a + character) and release the mouse key. In the following properties window, set the PROFIBUS address of the drive and exit the following window with "OK".

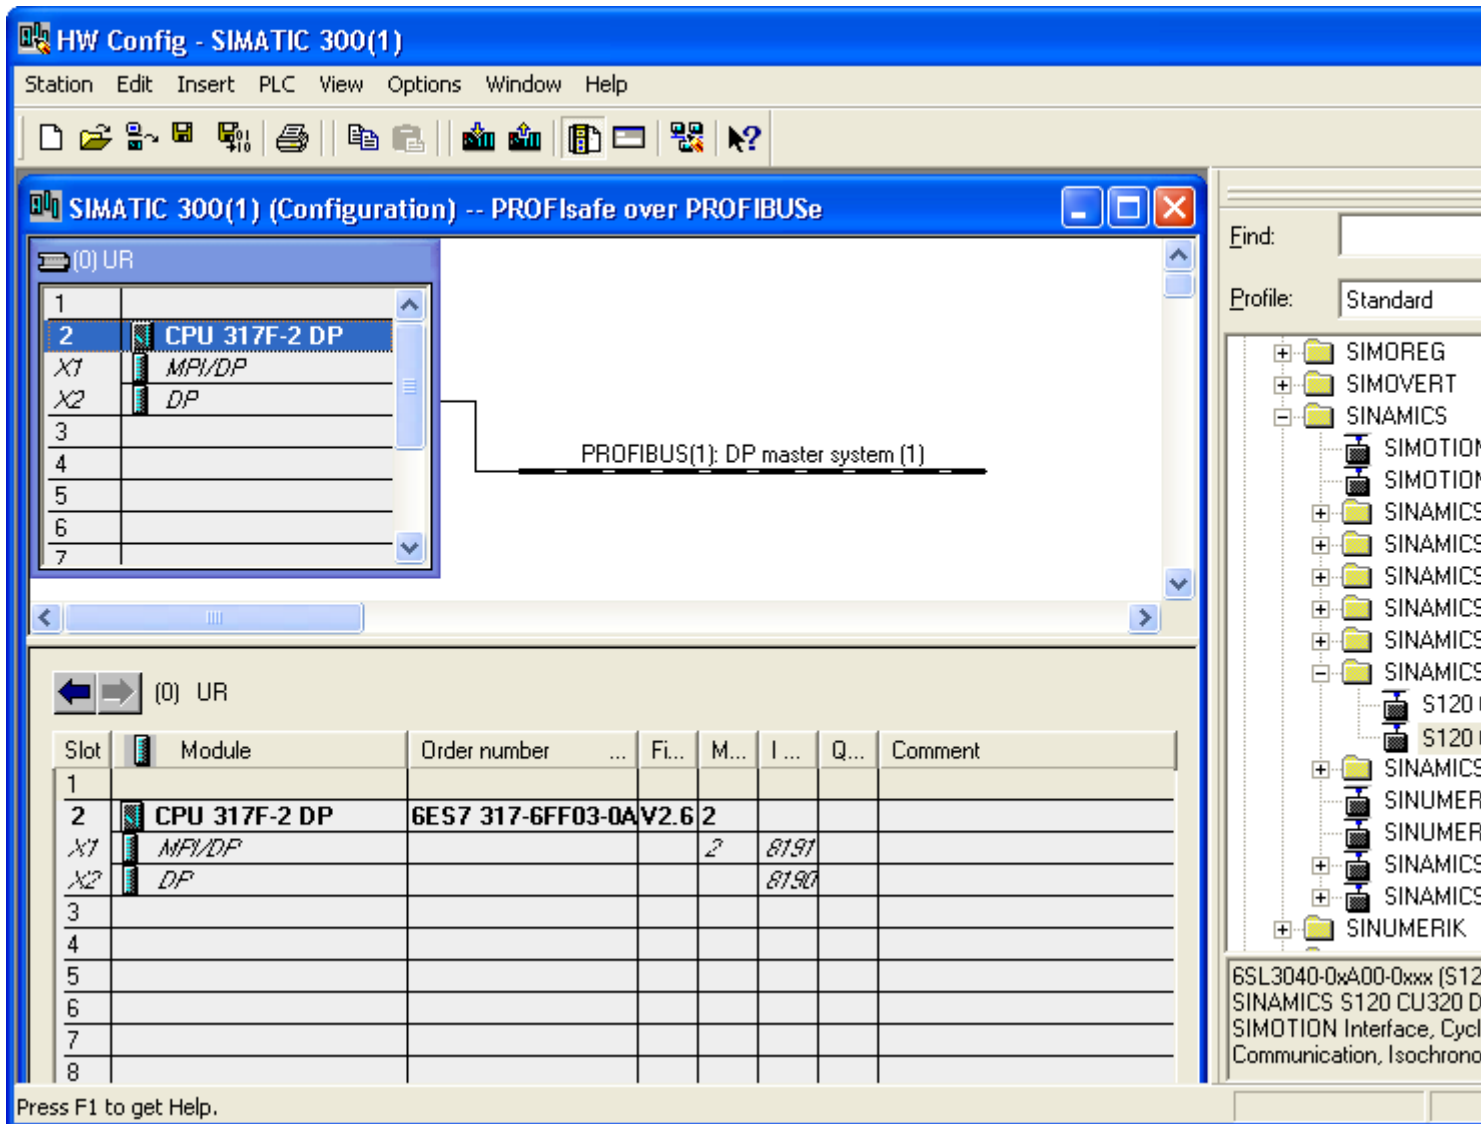


Figure 7-25 Selecting a drive



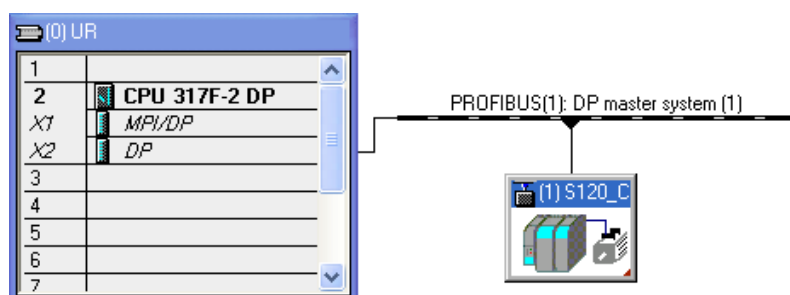


Figure 7-26 Drive created

2. Double-clicking on the drive symbol opens the properties of the DP slave (here: (7)SINAMICS S120). The telegrams for F communication are selected and displayed (e.g. Siemens telegram 105) under "Configuration". Select the PROFIsafe telegram 30 under the option column. As a result, the "PROFIsafe..." button at the center left is activated.

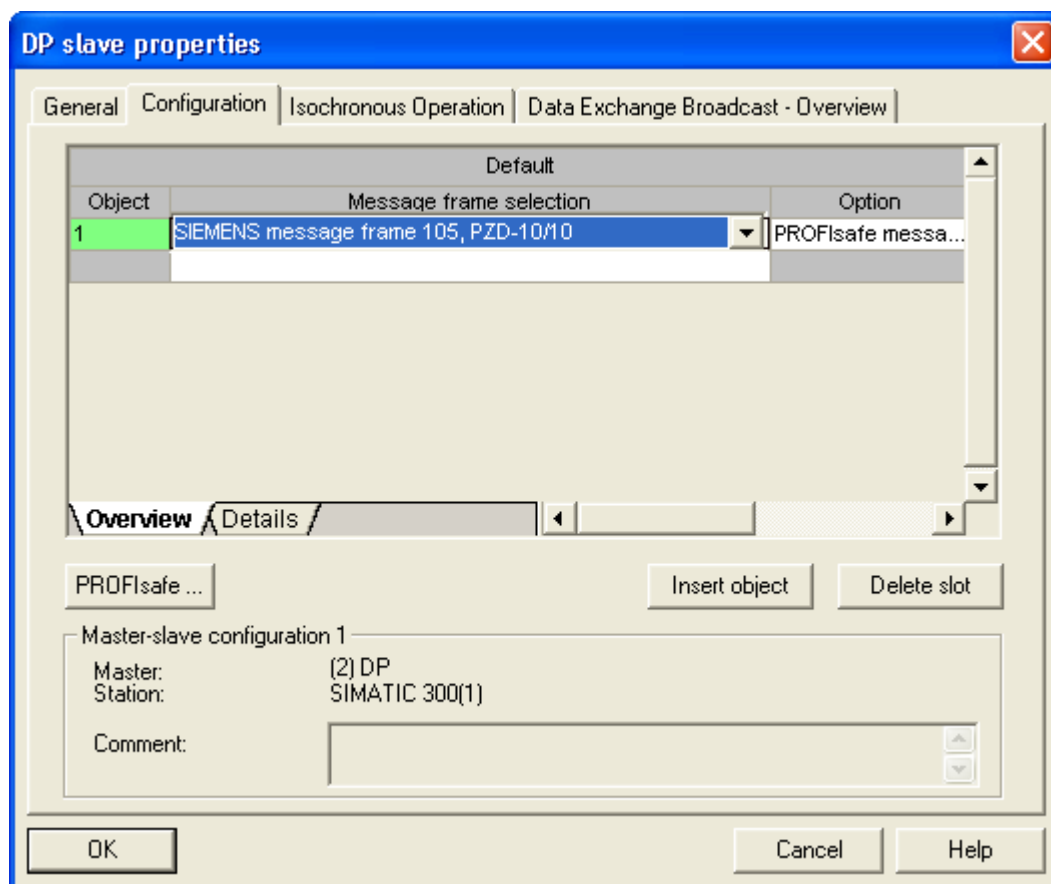


Figure 7-27 PROFIBUS DP slave properties

3. The F parameters important for F communication are set using the "PROFIsafe..." button.

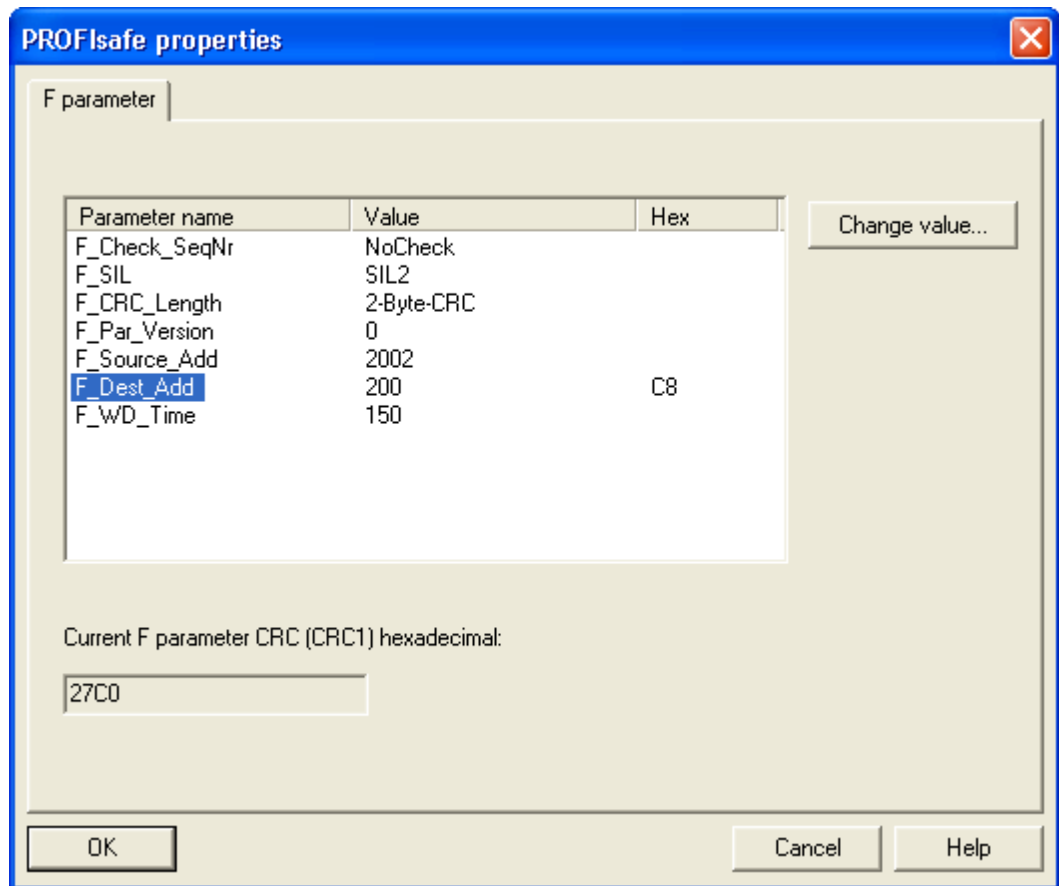


Figure 7-28 Setting the F parameters

**Selecting the PROFIsafe mode**

When selecting in HW Config, choose either the CU320-2 with PROFIsafe mode V1 or V2. Modes V1.0 and V2.0 are possible for PROFIsafe, for PROFINET only mode V2.0 is possible.

The following value ranges can be set for the last two parameters of the list:

**1. PROFIsafe destination address F\_Dest\_Add: 1-65534**

F\_Dest\_Add determines the PROFIsafe destination address of the drive object. Any value within the range is allowed, although it must be manually entered again in the Safety configuration of the drive in the SINAMICS drive unit. The F\_Dest\_Add value must be set in both p9610 and p9810. This can be done in a user-friendly fashion via the PROFIsafe STARTER screen form (refer to the following diagram). The PROFIsafe destination address of the F parameters must be entered here in the hexadecimal format (C8H in the example).

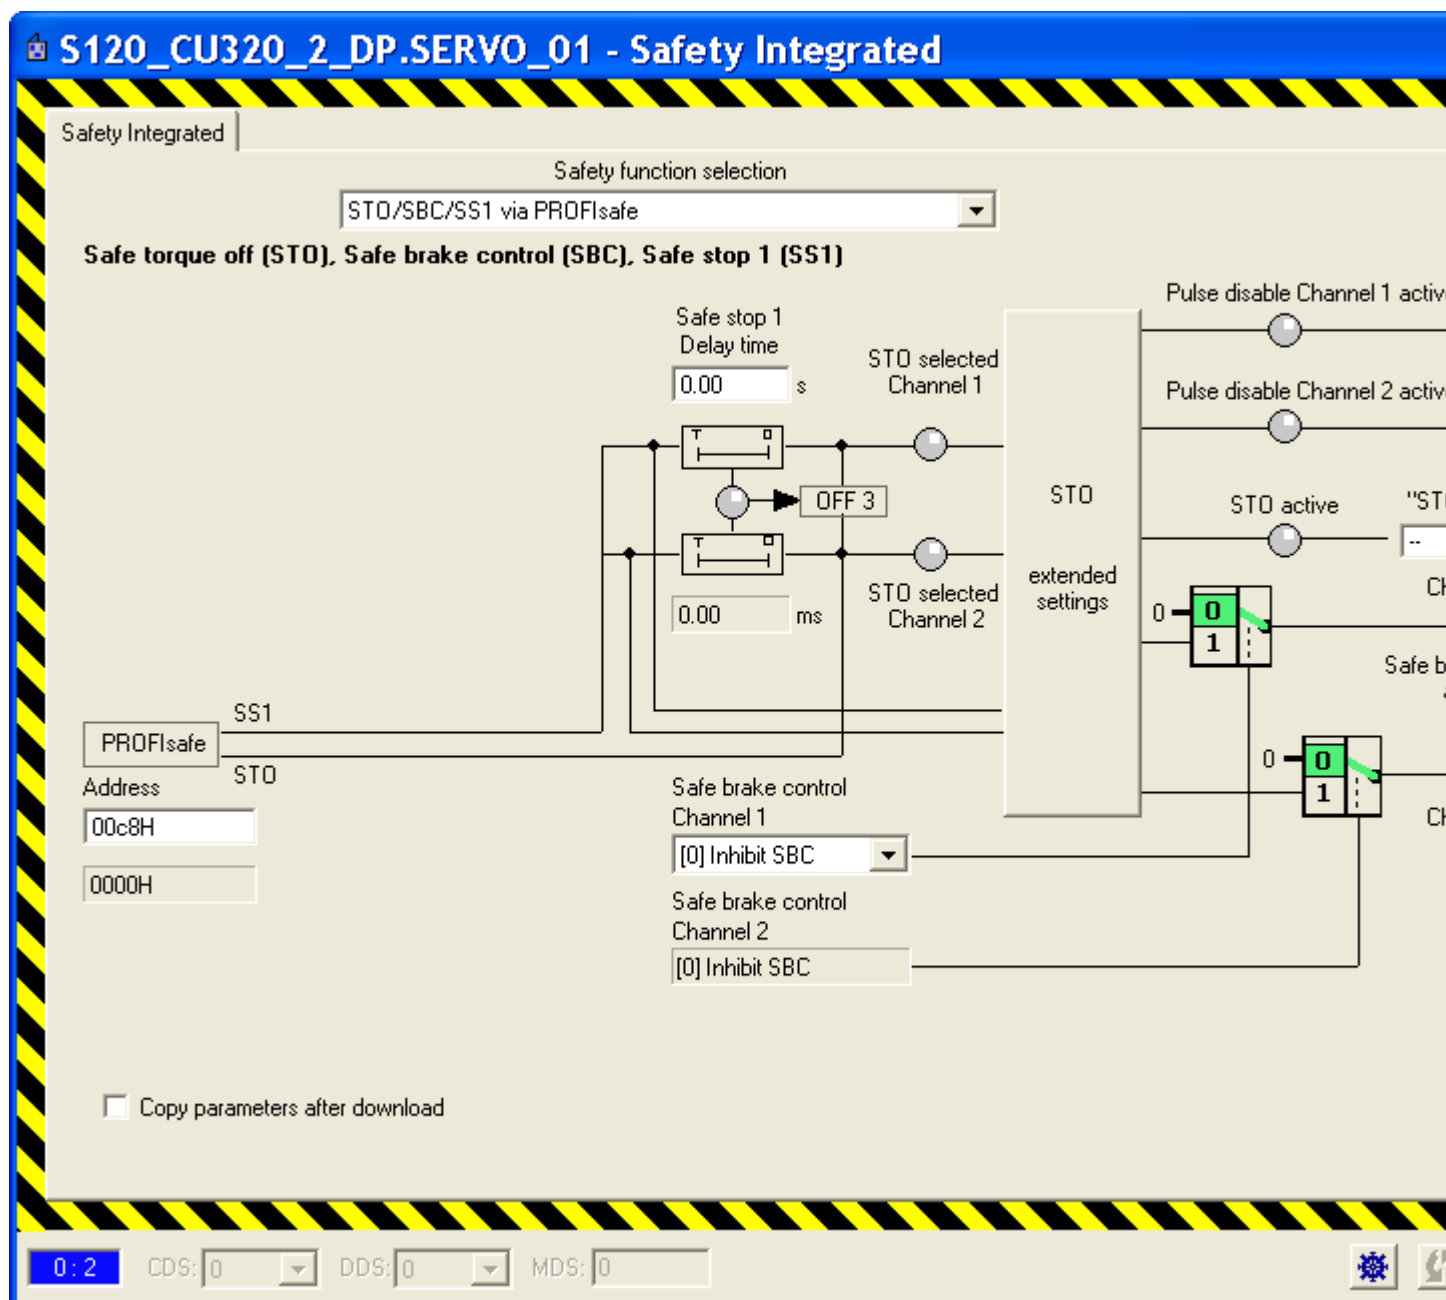


Figure 7-29 STARTER screen section from Safety Integrated: Setting the PROFIsafe address (example)

## 2. PROFIsafe monitoring time F\_WD\_Time: 10-65535

A valid current safety telegram must be received from the F-CPU within the monitoring time ("watchdog"). The drive will otherwise switch to the safe state.

The monitoring time should be of sufficient length to ensure not only that the communication functions tolerate telegram delays, but also that the fault response is triggered quickly enough if a fault occurs (e.g. interruption of the communication connection).

For additional information on F parameters, refer to the online help of the ("Help subjects" button).

## 7.5 PROFIsafe via PROFINET

The next sections deal with a sample configuration of PROFIsafe communication between a SINAMICS S120 drive unit and a higher-level SIMATIC F-CPU operating as PROFINET master.

HW Config can then be used to configure PROFIsafe telegram 30 (sub-module ID = 30) for the drive objects (abbreviation: DO).

### 7.5.1 Requirements for PROFIsafe communication

#### Requirements for PROFIsafe communication

The following minimum software and hardware requirements apply for the configuration and operation of safety-oriented communication (F communication):

Software:

- SIMATIC Manager STEP 7 V5.4 SP4 or higher
- S7 F Configuration Pack V5.5 SP5<sup>1)</sup> or higher
- S7 Distributed Safety Programming V5.4 SP5<sup>1)</sup> or higher
- STARTER V4.2 or SIMOTION SCOUT<sup>2)</sup> V4.2
- Drive ES Basic V5.4 SP4<sup>1)</sup> or higher

Hardware:

- A controller with safety functions (in our example, SIMATIC F-CPU 317F-2<sup>1)</sup>)
- SINAMICS S120 (in our example, a CU320-2)
- Correct installation of the devices

<sup>1)</sup> When using a SIMATIC F-CPU

<sup>2)</sup> If SIMOTION SCOUT is used however, SP6 cannot be used

|               |
|---------------|
| <b>NOTICE</b> |
|---------------|

|  |
|--|
| If a single software or hardware component is either older than those specified in this document or is missing, PROFIsafe cannot be configured via PROFIBUS or PROFINET. |
|--|

## 7.5.2 Configuring PROFI-safe via PROFINET

### Configuring PROFI-safe communication using SINAMICS S120 as an example

Configuring PROFI-safe via PROFINET is almost identical to configuring "PROFI-safe via PROFIBUS".

In this case however, the SINAMICS drive unit and the SIMATIC F-CPU are in the same PROFINET subnet and not in the same PROFIBUS subnet.

1. In HW Config, create a PROFINET-capable F-CPU, e.g. CPU 317F-2 PN/DP, corresponding to the hardware that has been installed. Create a PROFINET subnet and configure the F-CPU as an IO controller. Information about configuring an IO controller of F-CPU 317F-2 can be found in this reference:  
Reference: SIMATIC PROFINET IO Getting Started: Collection
2. In the standard module catalog, under PROFINET IO, choose the module that you want to connect to the PROFINET IO subnet as an IO device, e.g. a CU320-2.
3. Drag the module to the line of the PROFINET IO subnet. The IO device is inserted. The Properties -> Ethernet Interface SINAMICS S120 window opens. An IP address is defaulted here and the subnet selected. Confirm with "OK" to accept the setting.
4. Save and compile the settings in HW Config, and then load them to the target device.

This sets up a PROFINET connection between the F-CPU and the SINAMICS S120 drive.

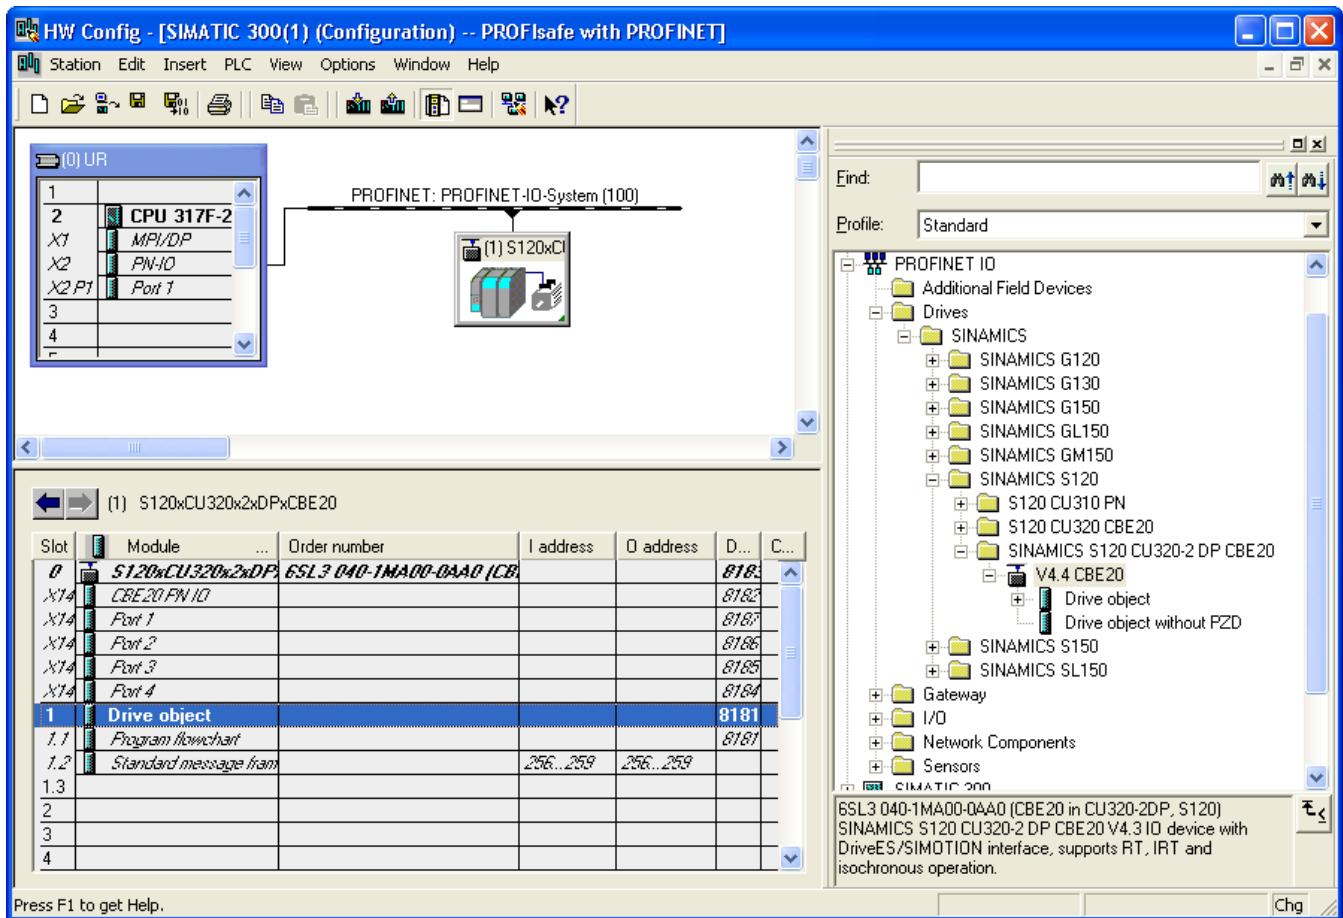


Figure 7-30 Configuration of the PROFINET connection in HW Config

1. Open the context menu of the drive object and select the command "Object properties": The "Properties – drive object" window appears. Select the PROFIsafe telegram via PROFINET in this window. Using the "Options" tab, create the "PROFIsafe telegram 30".

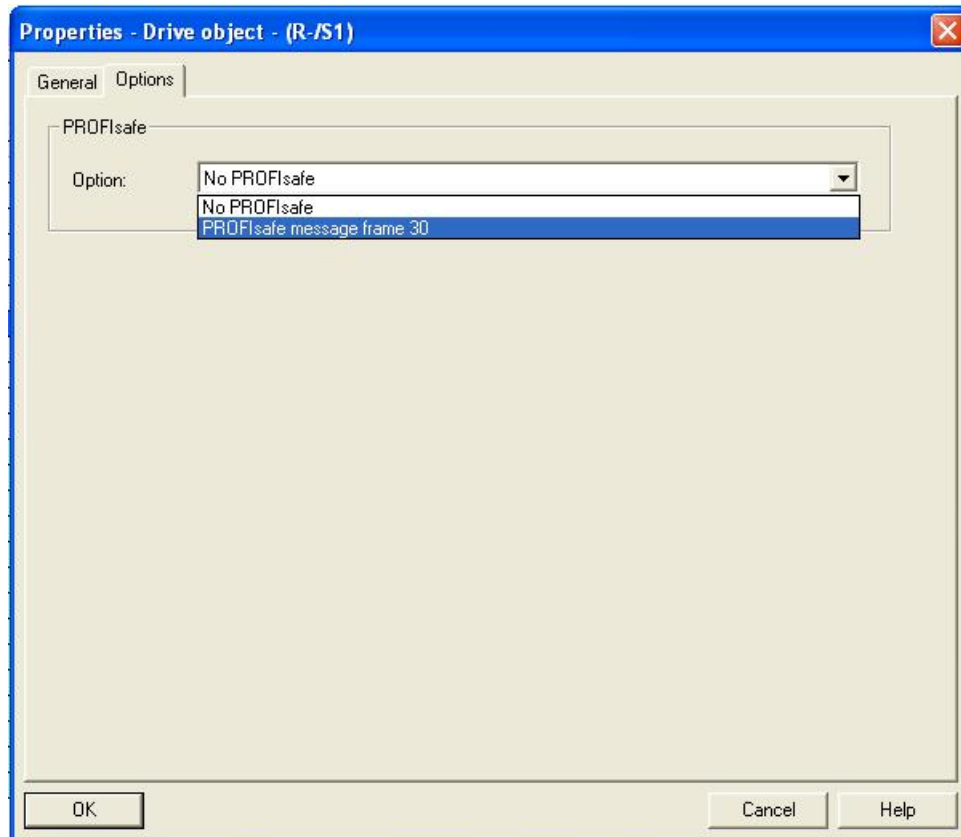


Figure 7-31 Drive object option "PROFIsafe telegram"

In the overview for the SINAMICS drive, a PROFIsafe slot that needs to be configured is displayed under "Drive object".

| Slot | Module                   | Order number               | I address | O address | D...        | C... |
|------|--------------------------|----------------------------|-----------|-----------|-------------|------|
| 0    | S120xCU320x2xDPx...      | 6SL3 040-1MA00-0AA0 (CB... |           |           | 818...      |      |
| X14  | CBE20 FW I/O             |                            |           |           | 8182        |      |
| X14  | Port 1                   |                            |           |           | 8187        |      |
| X14  | Port 2                   |                            |           |           | 8186        |      |
| X14  | Port 3                   |                            |           |           | 8185        |      |
| X14  | Port 4                   |                            |           |           | 8184        |      |
| 1    | <b>Drive object</b>      |                            |           |           | <b>8181</b> |      |
| 1.1  | Program flowchart        |                            |           |           | 8181        |      |
| 1.2  | <b>PROFIsafe</b>         |                            | 0..5      | 0..5      |             |      |
| 1.3  | Standard message fram... |                            | 256...259 | 256...259 |             |      |
| 1.4  |                          |                            |           |           |             |      |
| 2    |                          |                            |           |           |             |      |
| 3    |                          |                            |           |           |             |      |

Figure 7-32 Defining PROFIsafe for a drive

1. Under the drive module, select the "PROFIsafe" line and use the right-hand mouse key to call up the properties of the PROFIsafe slot.
2. Define the address area of the PROFIsafe telegram under the "Addresses" tab. The start address for inputs and output is identical. To confirm your entries, choose "OK".

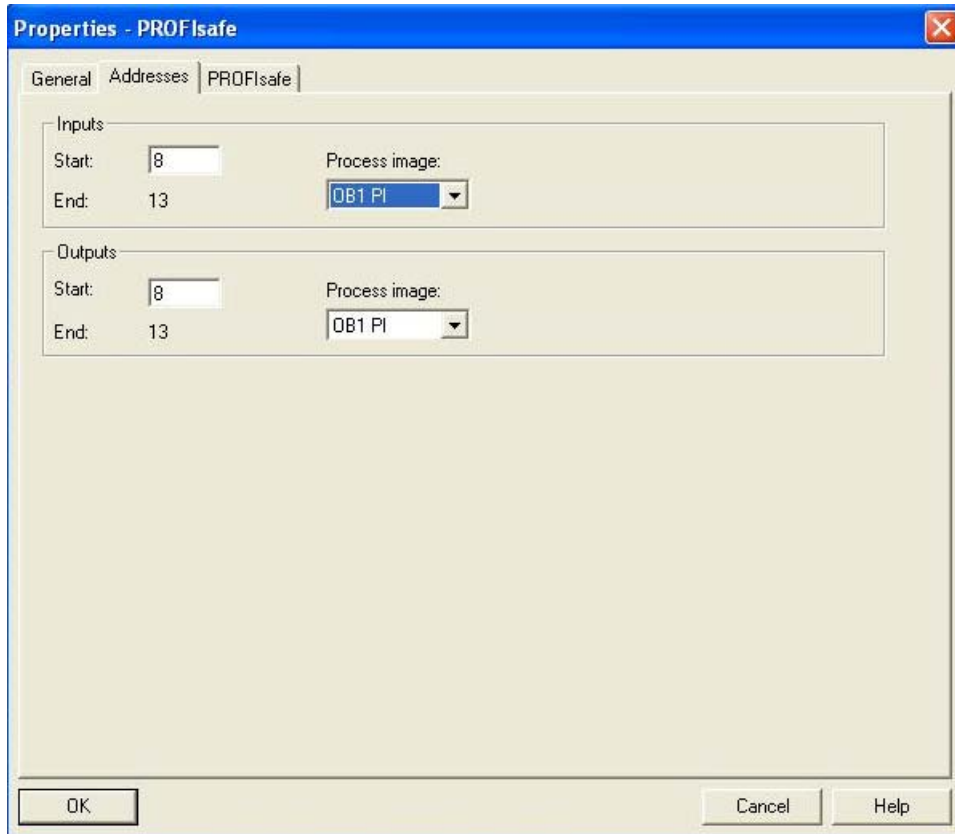


Figure 7-33 Setting PROFINET addresses



3. Using the "PROFIsafe" tab, define the parameters important for Safety communication ("F parameters"). If the "PROFIsafe..." tab is inactive, then you can activate this button for control using the "Activate..." button.

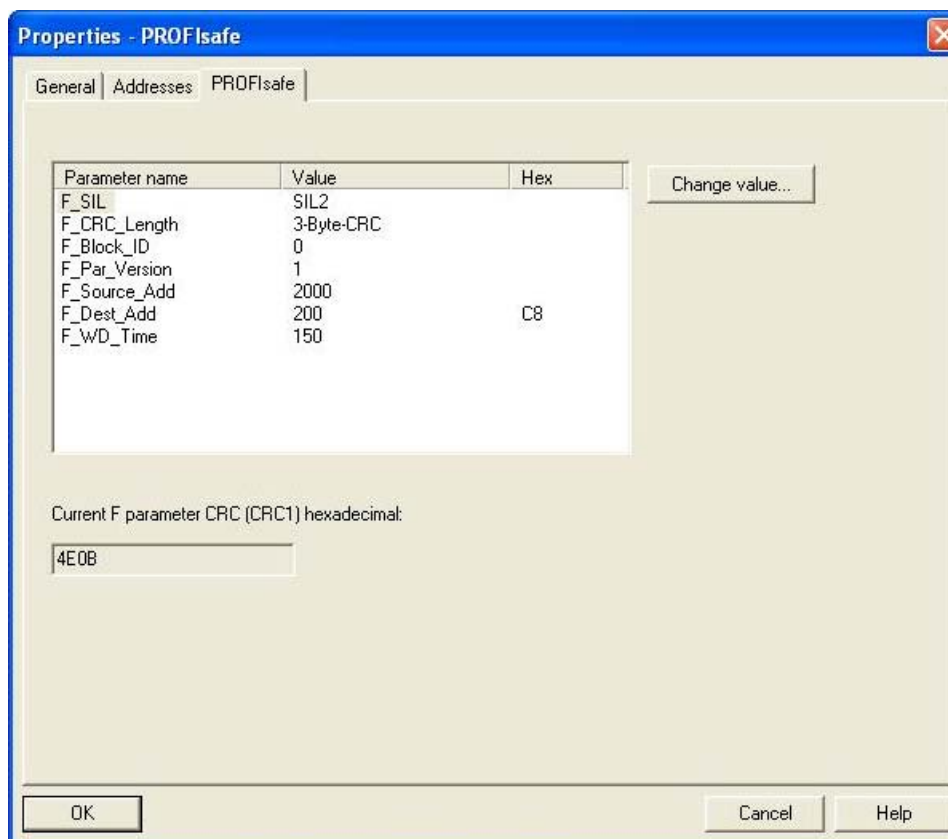


Figure 7-34 Setting F parameters

#### Setting F parameters:

The following range of values is valid for the the two last parameters of the list:

#### PROFIsafe destination address F\_Dest\_Add: 1 to 65534

F\_Dest\_Add determines the PROFIsafe destination address of the drive object.

Any value within the range is allowed, although it must be manually entered again in the Safety configuration of the drive in the SINAMICS drive unit. The F\_Dest\_Add value must be set in both p9610 and p9810. This can be done in a user-friendly fashion via the PROFIsafe STARTER screen form (refer to the diagram in the chapter, Commissioning PROFIsafe via PROFIBUS).

**PROFIsafe monitoring time F\_WD\_Time: 10 to 65535**

A valid current safety telegram must be received from the F-CPU within the monitoring time. The drive will otherwise switch to the safe state.

The monitoring time should be of sufficient length to ensure not only that the communication functions tolerate telegram delays, but also that the fault response is triggered quickly enough if a fault occurs (e.g. interruption of the communication connection).

---

**Note**

When you close the "PROFIsafe properties" dialog box, the fail-safe addresses (F\_Dest\_Add and F\_Source\_Add) are checked to ensure that they are unique. This function is only available, however, when the PROFINET link between SINAMICS S120 and SIMATIC F-CPU has already been established.

---

For additional information about creating a safety program and accessing PROFIsafe user data (e.g STW and ZSW) within the safety program, refer to the "SIMATIC, S7 Distributed Safety - Configuring and Programming" Programming and Operating Manual.

### Safety configuration (online) in the SINAMICS drive

The process of configuring the SINAMICS drive via PROFINET by means of Safety Integrated screen forms is identical to that for configuration via PROFIBUS. Here, refer to the following chapter, PROFIsafe configuration with STARTER.

### Acceptance inspection

Once configuring and commissioning have been successfully completed, you need to carry out an acceptance test of the drive safety functions (see Chapter "Acceptance tests and acceptance reports (Page 197)").

---

**Note**

If F parameters of the SINAMICS drive are changed in HW Config, the global signature of the safety program in the SIMATIC F-CPU changes. In this way, the global signature can be used to identify whether safety-relevant settings in the F-CPU (F parameters of the SINAMICS slave) have changed. The global signature does not, however, contain any changes to safety-relevant drive parameters set in SCOUT or STARTER.

---

## 7.5.3 Initializing the drives

In order that the master control can communicate with the drives, e.g. a CU317F-2 PN/DP with a SINAMICS S120, via PROFINET, the drives must have unique names (self-explanatory names are advantageous) and must be assigned their own IP addresses and set using STARTER or the PST initializing tool (so-called initialization).

Instructions regarding "initialization" can be found in the Commissioning Manual S120 (IH1) in Chapter "Establishing online operation - STARTER via PROFINET IO".

## 7.6 PROFIsafe configuration with STARTER

### Activating PROFIsafe via the expert list

In order to activate Safety Integrated functions via PROFIsafe, bit 3 of p9601 and p9801 must be set to "1" and bit 2 to "0" in the expert list. Bit 0 must be set to either "1" or "0", depending on whether the control via terminals is to be enabled in parallel via PROFIsafe or not.

### Saving and copying the Safety Integrated function parameters

After setting the specific parameters for Safety Integrated functions (e.g. the PROFIsafe address) using the "Copy parameters" button, these must be copied from the CU into the Motor/Power Module and activated using the "Activate settings" button.

### Acceptance test

An acceptance test needs to be carried out once configuration and commissioning are complete (see chapter Acceptance tests and acceptance reports (Page 197)).

---

#### Note

If F parameters of the SINAMICS drive are changed in HW Config, the global signature of the safety program in the SIMATIC F-CPU changes. This means that using the global signature it is possible to identify whether safety-relevant settings have changed in the F-CPU (F parameters of the SINAMICS slave). However, this global signature does not include the safety-relevant drive parameters so that their change cannot be checked in this way.

---

## 7.7 Commissioning a linear/rotary axis

The next section outlines the safety commissioning procedure for a linear axis/rotary axis when a TM54F is used.

1. Connect a PG to the drive and link it to the target device via STARTER.
2. In the STARTER project tree, select the required drive object and under **Functions** → **Safety Integrated** open the start screen to configure Safety Integrated.
3. Click on the **Change settings** button. The window for selecting Safety Integrated opens.

- It is only possible to change Safety parameters after entering the valid Safety password (parameter p9761 for the drives or p10061 for the TM54F).

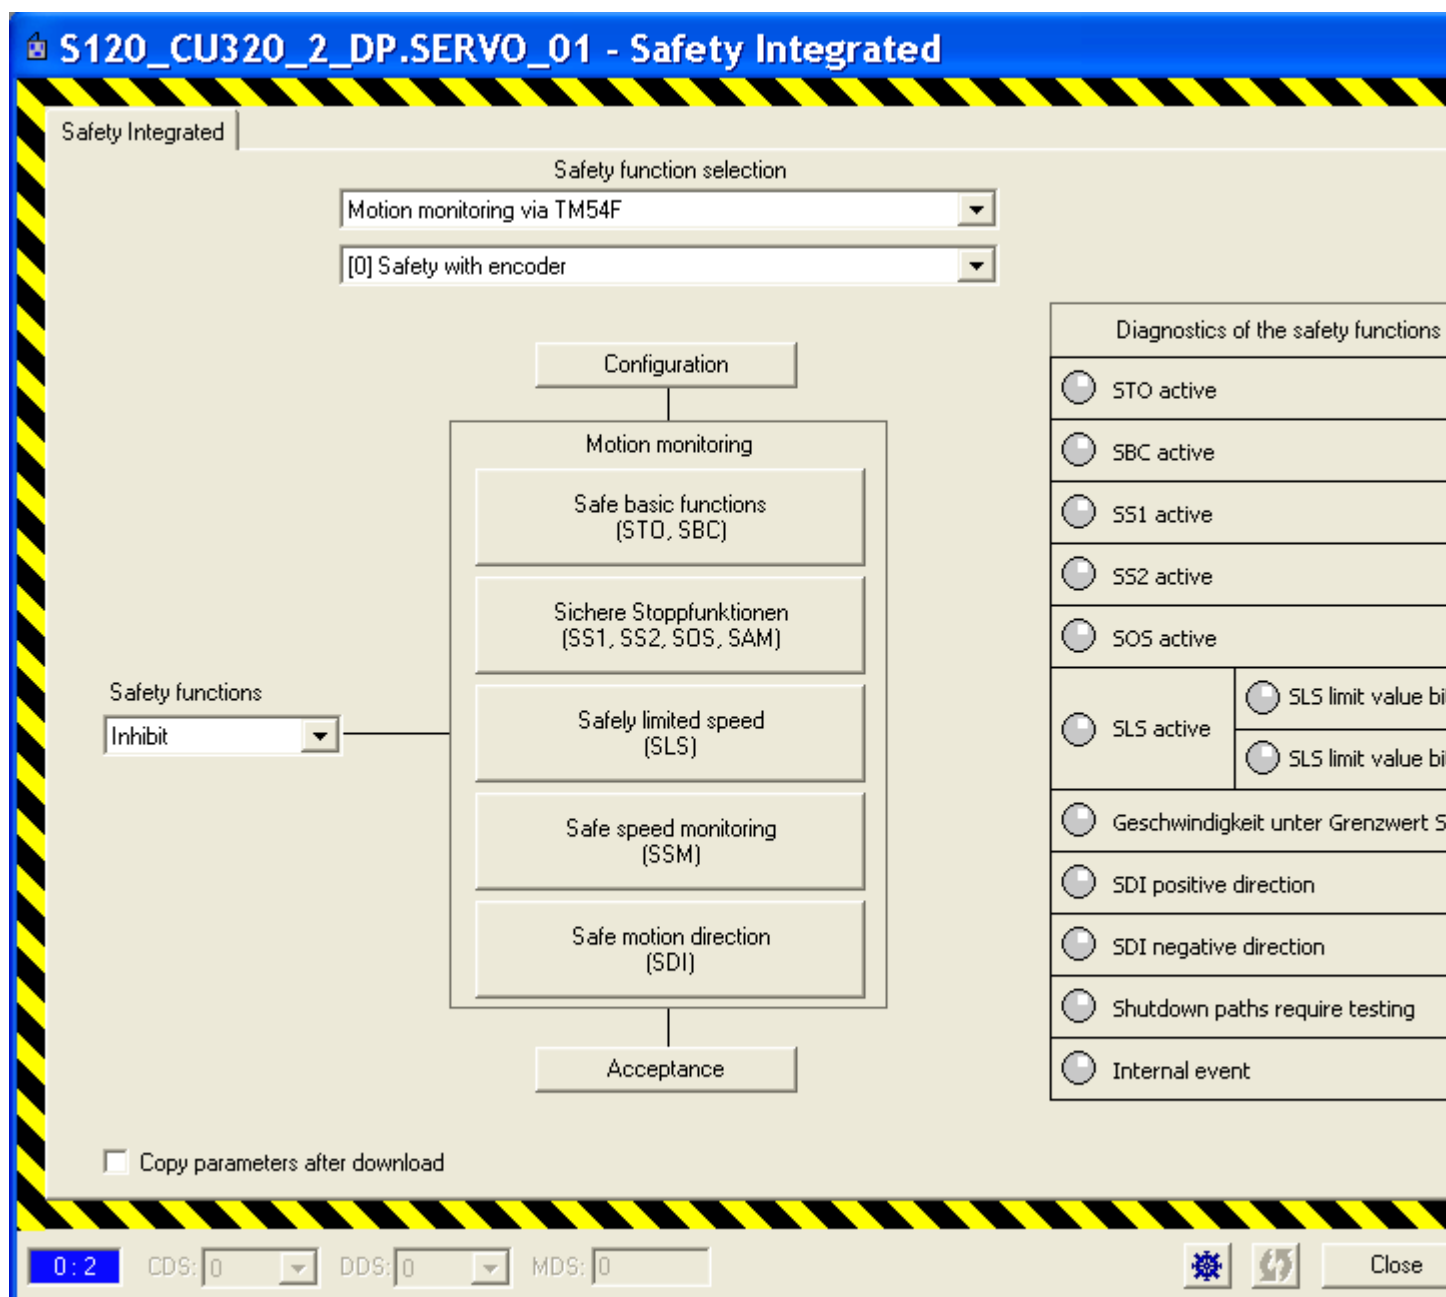


Figure 7-35 Safety Integrated commissioning of a linear/rotary axis

- Select **Motion Monitoring via TM54F** from the list **Select Safety Function**.
- Enable the the safety functions (p9501) via the list of **Safety functions**. Then click on the **Configuration** button.

7. The safety configuration screen of the drive opens.

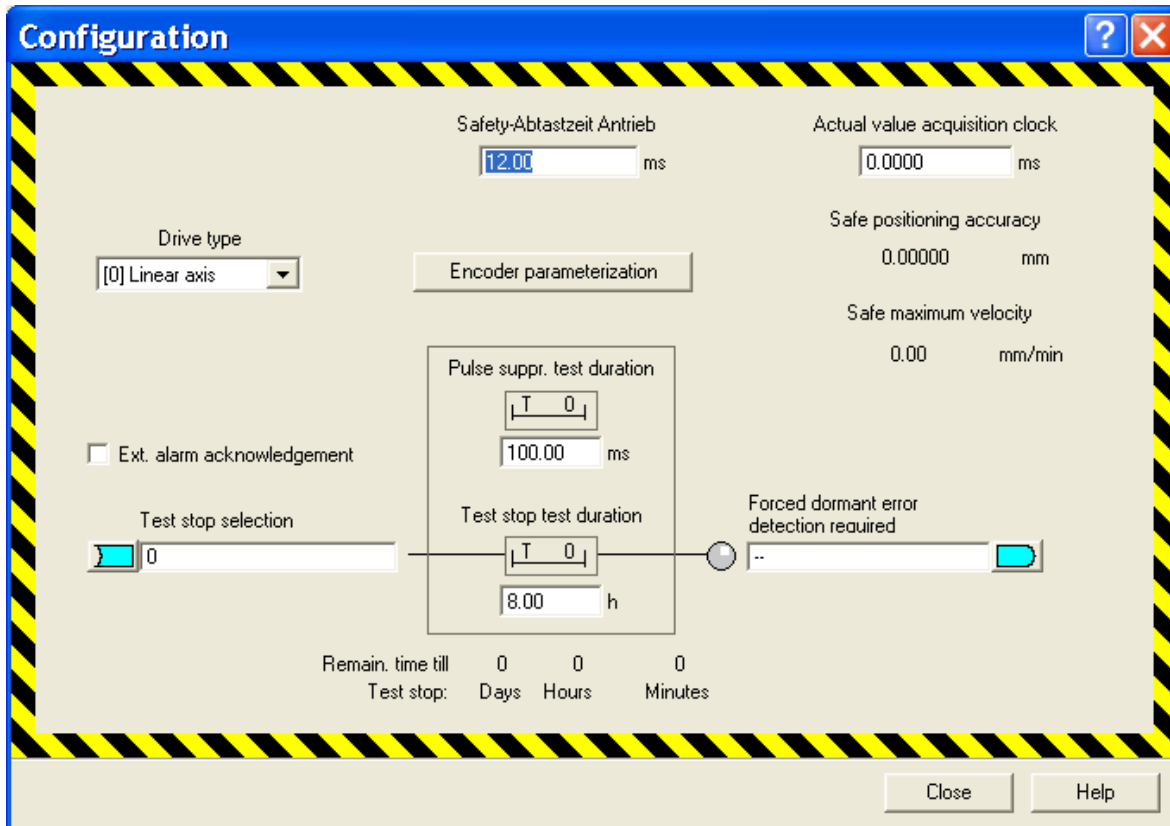


Figure 7-36 Safety configuration: Drive

8. For the drive, set the same **Monitoring clock cycle** (safety clock cycle) as for the TM54F (see "TM54F Configuration").
9. Set the required **Drive type** (linear axis / rotary axis) (p9502). Continue at item 15 if you have not changed the selected drive type.
10. Close the screen. Click on the **Copy parameters** and then click on **Activate settings** (exit commissioning mode, p0010=0).
11. Execute the "Copy RAM to ROM" function for the **Entire project** by clicking the "Entire project" button.
12. Perform a POWER ON. The new parameterization is now active.
13. Reconnect STARTER to the target device. The messages that are displayed indicate that safety commissioning was not completed (different actual and target checksum) can be ignored.
14. Load the project into the PG. The display of parameter units (rotary/linear axis) will be updated accordingly in STARTER.
15. Complete the configuration by adapting the parameterization of the required monitoring limits, timers, encoder settings, etc.

## 7.8 Modular machine concept Safety Integrated

The modular machine concept for Safety Integrated Basic Functions and Extended Functions provides support for commissioning modular machines. A complete machine, including all its available options, is created in a topology. Only those components that are actually implemented in the finished machine are later activated. Likewise, certain components can also be deactivated to begin with and reactivated if they are required at a later stage.

With the modular machine concept, a distinction is made between the following applications:

- Once the components with Safety functions have been activated for the first time after series commissioning, the hardware replacement needs to be confirmed (see "Information about replacing components" in this manual).
- Once all the drives (including Safety Integrated Extended Functions) have been commissioned, they are to be deactivated (p0105) without changing the hardware. They can only be activated again with a subsequent warm start or by means of POWER ON.

|  |
|--|
| <b>CAUTION</b>   |
| Deactivating drive objects or power unit components of p0895 with enabled Safety functions is not permitted. |

- The DOs of the TM54F can be deactivated by means of parameter p0105. The TM54F itself can only be deactivated when all the drives entered in p10010 "SI drive object assignment" were deactivated separately by means of p0105 beforehand.
- When spare parts are required and the drive is deactivated (p0105) during the delivery period for the required hardware component. Reactivation with subsequent warm start or POWER ON and confirmation of hardware replacement (see "Information about replacing components" in this manual).
- Component exchange on a Control Unit (e.g. to localize faults). For Safety Integrated, this is the same as a hardware replacement. After a warm start or POWER ON, the process of exchanging hardware must be confirmed in order to complete it (see "Information about replacing components" in this manual).

## 7.9 Information pertaining to component replacements

### Replacing a component from the perspective of Safety Integrated

---

**Note**

When replacing certain components (Control Unit, Motor Modules when using a TM54F, Sensor Modules or motors with DRIVE-CLiQ interface), this process must be acknowledged to safeguard the communication connections to be renewed within the device. When replacing other components, no acknowledgement is required since the communication connections to be renewed are saved automatically.

---

For information about component replacements, see "Example of component replacements" in the SINAMICS S120 Function Manual FH1.

**WARNING**

Observe the instructions with regard to changing or replacing software components in the chapter "Safety instructions".

1. The faulty component was replaced in accordance with safety regulations.
2. Switch on the machine, but first ensure that there are no persons in the danger zone.
3. Only when you control the Extended Functions via TM54F:
  - Alarm A35015 is output, indicating the replacement of a Motor Module.
  - With STARTER/SCOUT:
    - Click on "Acknowledge hardware replacement" in the start screen of the drive Safety functions.
    - The faults F01650/F30650 (acceptance test required) are output.
  - If you are working without STARTER for SINAMICS with BOP or for SIMOTION with HMI:
    - Start the copy function for node identifier on the TM54F (p9700 = 1D hex).
    - Confirm the hardware cyclic redundancy check on the TM54F (p9701 = EC hex).

You need to carry out these two steps when replacing a Sensor Module on the drive object, which corresponds to the appropriate drive, and when replacing a Motor Module on the drive object, which corresponds to the TM54F\_MA (if installed).



4. Alarm A01695 is output, indicating the replacement of a Sensor Module. As a consequence, a defect is also signaled in a monitoring channel (C30711 with message value 1031 and stop response STOP F).
  - With STARTER/SCOUT:
    - Click on "Acknowledge hardware replacement" in the start screen of the drive Safety functions.
    - The fault F30650(3003) (acceptance test required) is output.
  - If you are working without STARTER with SINAMICS with BOP or with SIMOTION with HMI:
    - Start the copy function for the node identifier on the drive (p9700 = 1D hex).
    - Confirm the hardware cyclic redundancy check on the drive (p9701 = EC hex).
5. Back up all parameters on the memory card:
  - With BOP: Set p0977 = 1.
  - With STARTER: "Copy RAM to ROM" function.
6. Carry out a POWER ON (power off/on) for all components.
7. Carry out an acceptance test and acceptance report according to Chapter "Acceptance test and acceptance report" and table "Effect of the acceptance test for certain measures".

|  |
|--|
|  <b>WARNING</b> |
|--|

|   |
|---|
| Before re-entering the danger area and before resuming operation, a partial acceptance test must be carried out for all the drives affected by the component replacement (see section "Acceptance test"). |
|---|


## 7.10 Information pertaining to series commissioning

A commissioned project that has been uploaded to STARTER can be transferred to another drive unit keeping the existing safety parameterization.

1. Load the STARTER project into the drive unit.
2. Switch on the machine, but first ensure that there are no persons in the danger zone.
3. The following alarms are only output if you are controlling the Extended Functions via TM54F:
  - F01650 (fault value 2005) indicates the replacement of a Control Unit.
  - A35015 indicates the replacement of a Motor Module.
  - A01695 indicates the replacement of a Sensor Module. As a consequence, a defect is also signaled in a monitoring channel (C30711 with fault value 1031 and stop response STOP F).

4. With STARTER/SCOUT:
  - Click on **Acknowledge hardware replacement** in the start screen of the Safety functions.
  - Faults F01650/F30650 are output (acceptance test required, see chapter "Acceptance test and acceptance report", table "Effect of the acceptance tests for specific measures").
5. If you are using SINAMICS with a BOP or SIMOTION with HMI, then you must perform the following steps:
  - Start the copy function for Node Identifier (p9700 = 1D hex)
  - Confirm the hardware CRC on the drive object (p9701 = EC hex)

Carry out these two tasks after having replaced a Sensor Module at drive object servo or vector, and after having replaced a Motor Module at drive object TM54F\_MA (if installed).
6. Back up all parameters on the memory card (p0977 = 1).
7. Carry out a POWER ON (power off/on) for all components.

|   |
|---|
|  <b>WARNING</b>  |
| Before re-entering the danger area and before resuming operation, a simplified function test must be carried out for all the drives affected by the component exchange (see chapter "acceptance test"). |

**Safety message for standard commissioning with Safety Integrated Extended Functions**

If third-party motors with absolute encoders are being used, a situation may arise where a Safety message prevents commissioning. One reason for this may be that a different serial number of the absolute encoder is saved on the memory card than that in the Control Unit which is to be commissioned. The Safety message can only be acknowledged once the serial number for the absolute encoder has been corrected manually (e.g. with STARTER). Instructions on this are provided in the chapter "Information about replacing components". You can then carry on with the commissioning.

## Application examples

### 8.1 Input/output interconnections for a safety switching device with TM54F

#### TM54F: interconnecting F-DO with safe input on safety switching device

**Note**

These typical circuit diagrams are only valid for version B of TM54F devices.

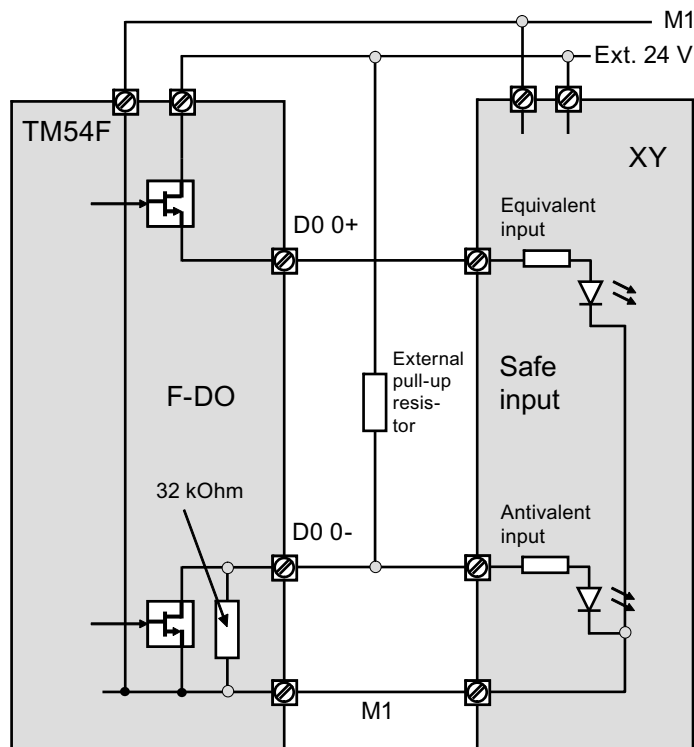


Figure 8-1 TM54F F-DO at equivalent/antivalent safe input on safety switching device (e.g. safety PLC)

The external pull-up resistor is only required in exceptional cases, see below.

### TM54F: Interconnecting F-DI with a plus-minus switching output on a safety switching device

 **WARNING**

In contrast to mechanical switching contacts (e.g. Emergency Stop switches), leakage currents can still flow in semiconductor switches such as those usually used at digital outputs even when they have been switched off. This can lead to false switching states if digital inputs are not connected correctly.

The conditions for digital inputs/outputs specified in the relevant manufacturer documentation must be observed.

**Note**

**Test pulses from F-DOs**

There are safety modules, whose F-DOs send test pulses for self-testing and for checking the circuit (transmission route). These test pulses can trigger incorrect alarms, which then require safe acknowledgement. In order to avoid these incorrect alarms, the discrepancy time p10002 should be set long enough so that a fault of the safety function itself is excluded. According to the experience that we have gained, a setting of approx. 150 ms has proven itself in practice; however, it is necessary to take into account the function description of the test pulses from the F-DOs of the safety control.

 **WARNING**

In accordance with IEC 61131 Part 2, Chapter 5.2 (2008), when interconnecting the digital inputs of the TM54F with digital semiconductor outputs, only outputs that have a maximum residual current of 0.5 mA when in the "OFF" state can be used.

**Input filter**

Test signals from the controls can be filtered out using parameter p10017 (SI digital inputs, debounce time) so that faults are not misinterpreted.

F-DI = safety-oriented dual-channel digital input  
F-DO = safety-oriented dual-channel digital output

If digital outputs from another device (e.g. F-DOs on a safety PLC) with a residual current greater than 0.5 mA in the "OFF" state are connected to the F-DIs of the TM54F, then F-DI load resistors should be connected up in the channel involved.

The maximum permissible voltage for a TM54F F-DI when "OFF" is 5 V (in accordance with IEC 61131-2, 2008).

The following two diagrams show exactly how the protective circuits for F-DIs with additional load resistors are wired.

8.1 Input/output interconnections for a safety switching device with TM54F

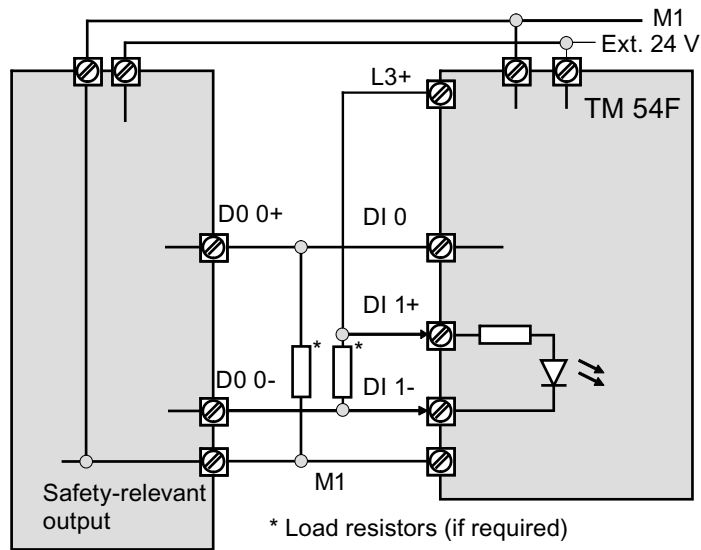


Figure 8-2 TM54F F-DI at plus-minus switching safe output on safety switching device (e.g. safety PLC)

TM54F: interconnecting F-DI with plus-plus switching output on safety switching device

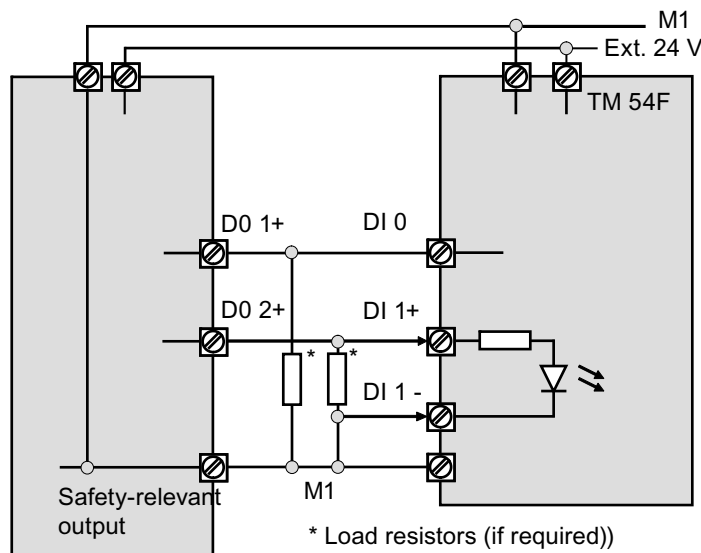


Figure 8-3 TM54F F-DI at plus-plus-switching safe output on a safety switching device (e.g. safety PLC).

**Dimensioning the load resistors - example 1:**

According to the manufacturer's documentation, the leakage current of an F-DO of a safety PLC for the P and F channels is 1 mA; in other words, it is around 0.5 mA higher than is permissible for the F-DI.

The necessary load resistance is therefore  $R = 5 \text{ V} / 0.5 \text{ mA} = 10 \text{ k}\Omega$ .

At the maximum supply voltage, the power loss for this resistor is:

$P = (28.8 \text{ V})^2 / R = 83 \text{ mW}$ . The resistor is to be permanently dimensioned for this power loss.

**Dimensioning the load resistors - example 2:**

If additional conditions for the digital output (e.g. a minimum load or a maximum load resistance) are specified in the manufacturer's documentation, then these must be taken into account.

For example, a load between  $12 \Omega$  and  $1 \text{ k}\Omega$  is specified for the SIMATIC ET200S I/O module 4 F-DO (6ES7138-4FB02-0AB0).

Therefore, two additional load resistors with a continuous load capacity of at least  $P = (28.8 \text{ V})^2 / R = 830 \text{ mW}$  are required to connect an F-DO of this kind to a TM54F F-DI.

When using a regulated 24 V power supply (e.g. SITOP) a resistor with a significantly lower power loss is sufficient.

---

**Note**

**Open-circuit detection during load resistance**

If the load resistance is greater than  $1 \text{ k}\Omega$ , F-DO open-circuit detection is no longer reliable and has to be switched off.

---

## 8.2 Application examples

Application examples can be found at the following Siemens website:

<http://support.automation.siemens.com/WW/view/en/20810941/136000t>

## Acceptance tests and acceptance reports

The acceptance test requirements (configuration check) for electrical drive safety functions emanate from DIN EN 61800-5-2, Chapter 7.1 Point f). The acceptance test "configuration check" is named in this standard.

- Description of the application including a picture
- Description of the safety relevant components (including software versions) which are used in the application
- List of the PDS(SR) [Power Drive System(Safety Related)] safety functions used
- Results of all tests of these safety functions, using the specified testing procedure
- List of all safety relevant parameters and their values in the PDS(SR)
- Checksum, test date and confirmation by testing personnel

The acceptance test for systems with Safety Integrated functions (SI functions) is focused on validating the functionality of Safety Integrated monitoring and stop functions implemented in the drive system. The test objective is to verify proper implementation of the defined safety functions and of test mechanisms (forced dormant error detection measures) and to examine the response of specific monitoring functions to the explicit input of values outside tolerance limits. The test must cover all drive-specific Safety Integrated motion monitoring functions and global Safety Integrated functionality of Terminal Module TM54F (if used).

|  |
|--|
|  <b>WARNING</b> |
|--|

|   |
|---|
| A new acceptance test must be carried out if any changes were made to SI function parameters and must be logged in the acceptance report. |
|---|

---

### Note

The acceptance test is designed to ensure that the safety functions are correctly parameterized. The measured values (e.g. distance, time) and the system behavior identified (e.g. initiation of a specific stop) can be used for checking the plausibility of the configured safety functions. The objective of an acceptance test is to identify potential configuration errors and/or to document the correct function of the configuration. The measured values are typical values (not worst case values). They represent the behavior of the machine at the time of measurement. These measurements cannot be used, for example, to derive maximum values for over-travel.

---

## 9.1 Acceptance test structure

### Authorized person, acceptance report

The test of each SI function must be carried out by an authorized person and logged in the acceptance report. The report must be signed by the person who carried out the acceptance test. The acceptance report must be kept in the logbook of the relevant machine. Access rights to SI parameters must be protected by a password. Only the procedure must be documented in the acceptance report – the password itself must not appear there. Authorized in this sense refers to a person who has the necessary technical training and knowledge of the safety functions and is authorized by the machine manufacturer to carry out the acceptance test.

---

#### Note

- Observe the information in the chapter "Procedures for initial commissioning".
  - The acceptance report presented below is both an example and recommendation.
  - An acceptance report template in electronic format is available at your local Siemens sales office.
- 

### Necessity of an acceptance test

A complete acceptance test (as described in this chapter) is required after initial commissioning of Safety Integrated functionality on a machine. Safety-related function expansions, transfer of the commissioning settings to other series machines, hardware changes, software upgrades or similar, permit the acceptance test to be performed with a reduced scope if necessary. A summary of conditions which determine the necessary test scope or proposals in this context is provided below.

In order to define a partial acceptance test, it is necessary in the first instance to specify the acceptance test objects, and in the second instance to define logical groups which represent the elements of the acceptance test. The acceptance test must be carried out separately for each individual drive (as far as the machine allows).

### Prerequisites for the acceptance test

- The machine is properly wired.
- All safety equipment such as protective door monitoring devices, light barriers or emergency limit switches are connected and ready for operation.
- Commissioning of the open-loop and closed-loop control should be completed, as e.g. the over-travel distance may otherwise change as a result of a changed dynamic response of the drive control. These include, for example:
  - Configuration of the setpoint channel
  - Position control in the higher-level controller
  - Drive control



### Note on the acceptance test mode

The acceptance test mode can be activated for a definable period (p9358/p9558) by setting the appropriate parameters (p9370/p9570). It tolerates specific limit violations during the acceptance test. For instance, the setpoint speed limits are no longer active in the acceptance test mode. To ensure that this state is not accidentally kept, the acceptance test mode is automatically exited after the time set in p9358/p9558.

It is only worth activating acceptance test mode during the acceptance test for functions SS2, SOS, SDI and SLS. It has no effect on other functions.

Normally, SOS can be selected directly or via SS2. In order to also be able to initiate violation of the standstill limits in the SS2 state when the acceptance test mode is active, it deactivates the braking ramp of SS2 so that the motor can be moved. The setpoint is enabled again after the transition into SOS. When an SOS violation is acknowledged in the active acceptance test mode, the current position is adopted as the new stop position so that an SOS violation is not immediately identified again.

|  |
|--|
|  <b>WARNING</b> |
|--|

|  |
|--|
| If a speed setpoint other than zero is present, the active stop function SS2 is set, and the motor is at a standstill (active SOS), the axis starts to move as soon as the acceptance test is activated. |
|--|

## 9.1.1 Content of the complete acceptance test

### A) Documentation

Documentation of the machine and of safety functions

1. Machine description (with overview)
2. Specification of the controller (if this exists)
3. Configuration diagram
4. Function table:
  - Active monitoring functions depending on the operating mode and the protective door,
  - Other sensors with protective functions,
  - The table is part or is the result of the configuring work.
5. SI functions for each drive
6. Information about safety equipment

## B) Functional testing of safety functions

Detailed function test and evaluation of SI functions used. For some functions this contains trace recordings of individual parameters. The procedure is described in detail in section Acceptance tests (Page 216).

### 1. Test of the SI function "Safe Torque Off" (STO)

- Required when used in Basic and/or Extended Functions
- This test is also required if you are not explicitly using STO, but just one function for which STOP A occurs as an error response.

Alternatively, you can also carry out the qualitative test using STOP A yourself, if you use the tables from sections Acceptance test for Safe Torque Off (STO) (Page 217) , Acceptance test Safe Torque Off with encoder (Extended Functions) (Page 222) or Acceptance test Safe Torque Off without encoder (Extended Functions) (Page 249).

- You do not need to prepare trace recording for this test.

### 2. Test of the SI function "Safe Stop 1" (SS1)

- Required when used in Basic and/or Extended Functions
- This test is also required if you are not explicitly using SS1, but just one function for which STOP B occurs as an error response.

Alternatively, you can also carry out the qualitative test using STOP B yourself, if you use the tables from sections Acceptance test for Safe Stop 1, time and acceleration controlled (Page 224) or Acceptance test for Safe Stop 1 without encoder (Extended Functions) (Page 251).

- Trace recording only required if Extended Functions are used

### 3. Test of the SI function "Safe Brake Control (SBC)"

- Required when using Basic and/or Extended Functions
- You do not need to prepare trace recording for this test.

### 4. Test of the SI function "Safe Stop 2" (SS2)

- Only required when used in Extended Functions
- This test is also required if you are not explicitly using SS2 but just one function for which STOP C occurs as an error response.

Alternatively, you can also carry out the qualitative test using STOP C yourself, if you use the table from section Acceptance test for Safe Stop 2 (SS2) (Page 227).

- Trace recording is required

### 5. Test of the SI function "Safe Operating Stop" (SOS)

- Only required when used in Extended Functions
- This test is also required if you are not explicitly using SOS, but just one function for which STOP D or STOP E occurs as an error response.

Alternatively, you can also carry out the qualitative test using STOP C, STOP D or STOP E yourself, if you use the table from section Acceptance test for Safe Operating Stop (SOS) (Page 229).

- Trace recording is required

6. Test of the SI function "Safely Limited Speed" (SLS)
  - Only required when used in Extended Functions
  - Trace recordings are required for each SLS limit used
7. Test of the SI function "Safe Direction" (SDI)
  - Only required when used in Extended Functions
  - Trace recordings are required for each stop response used
8. Test of the SI function "Safe Speed Monitor" (SSM)
  - Only required when used in Extended Functions
  - Trace recording is required

**C) Functional testing of forced dormant error detection**

Test of the forced dormant error detection of the safety functions on each drive (for each control mode) and the TM54F (if used).

1. Test of the forced dormant error detection of the safety function on the drive
  - If you are using Basic Functions, you need to activate and then deactivate STO once again.
  - If you are using Extended Functions, you need to carry out a test stop.
2. Test of the forced dormant error detection of the TM54F (if present)
  - Only if Extended Functions are used
  - Carry out test stop of the TM54F

**D) Conclusion of the report**

Report of the commissioning status tested and countersignatures

1. Inspection of SI parameters
2. Logging of checksums (for each drive)
3. Issuing of the Safety password and documenting this process (do not specify the Safety password in the report!)
4. RAM to ROM backup, upload of project data to STARTER, and backup of the project
5. Countersignature

## 9.1.2 Content of the partial acceptance test

### A) Documentation

Documentation of the machine and of safety functions

1. Extending/changing the hardware data
2. Extending/changing the software data (specify version)
3. Extending/changing the configuration diagram
4. Extending/changing the function table:
  - Active monitoring functions depending on the operating mode and the protective door
  - Other sensors with protective functions
  - The table is part or is the result of the configuring work
5. Extending/changing the SI functions per drive
6. Extending/changing the specifications of the safety equipment

### B) Functional testing of safety functions

Detailed function test and evaluation of SI functions used. For some functions this contains trace recordings of individual parameters. The procedure is described in detail in section Acceptance tests (Page 216).

The function test can be left out if no parameters of the individual safety functions have been changed. In the case that only parameters of individual functions have been changed, only these functions need to be tested anew.

1. Test of the SI function "Safe Torque Off" (STO)
  - Required when used in Basic and/or Extended Functions
  - This test is also required if you are not explicitly using STO, but just one function for which STOP A occurs as an error response.

Alternatively, you can also carry out the qualitative test using STOP A yourself, if you use the tables from sections Acceptance test for Safe Torque Off (STO) (Page 217) , Acceptance test Safe Torque Off with encoder (Extended Functions) (Page 222) or Acceptance test Safe Torque Off without encoder (Extended Functions) (Page 249).
  - You do not need to prepare trace recording for this test.
2. Test of the SI function "Safe Stop 1" (SS1)
  - Required when used in Basic and/or Extended Functions
  - This test is also required if you are not explicitly using SS1, but just one function for which STOP B occurs as an error response.

Alternatively, you can also carry out the qualitative test using STOP B yourself, if you use the tables from Acceptance test for Safe Stop 1, time and acceleration controlled (Page 224) or Acceptance test for Safe Stop 1 without encoder (Extended Functions) (Page 251).
  - Trace recording only required if Extended Functions are used

3. Test of the SI function "Safe Brake Control (SBC)"
  - Required when using Basic and/or Extended Functions
  - You do not need to prepare trace recording for this test.
4. Test of the SI function "Safe Stop 2" (SS2)
  - Only required when used in Extended Functions
  - This test is also required if you are not explicitly using SS2 but just one function for which STOP C occurs as an error response.  
  
Alternatively, you can also carry out the qualitative test using STOP C yourself, if you use the table from section Acceptance test for Safe Stop 2 (SS2) (Page 227).
  - Trace recording is required
5. Test of the SI function "Safe Operating Stop" (SOS)
  - Only required when used in Extended Functions
  - This test is also required if you are not explicitly using SOS, but just one function for which STOP D or STOP E occurs as an error response.  
  
Alternatively, you can also carry out the qualitative test using STOP C, STOP D or STOP E yourself, if you use the table from section Acceptance test for Safe Operating Stop (SOS) (Page 229).
  - Trace recording is required
6. Test of the SI function "Safely Limited Speed" (SLS)
  - Only required when used in Extended Functions
  - A trace recording is required for each SLS limit used
7. Test of the SI function "Safe Direction" (SDI)
  - Only required when used in Extended Functions
  - A trace recording is required for each stop response used
8. Test of the SI function "Safe Speed Monitor" (SSM)
  - Only required when used in Extended Functions
  - Trace recording is required

### **C) Functional testing of forced dormant error detection**

Test of the forced dormant error detection of the safety functions on each drive (for each control mode) and the TM54F (if used).


1. Test of the forced dormant error detection of the safety function on the drive
  - If you are using Basic Functions, you need to activate and then deactivate STO once again.
  - If you are using Extended Functions, you need to carry out a test stop.
2. Test of the forced dormant error detection of the TM54F (if present)
  - Only if Extended Functions are used
  - Carry out test stop of the TM54F

9.1 Acceptance test structure

**D) Functional testing of actual value acquisition**

1. General testing of actual value acquisition

- After exchanging the component, initial activation and brief operation in both directions.



2. Test of failsafe actual value acquisition

- Only necessary if Extended Functions are used
- If the motion monitoring functions are activated (e.g. SLS or SSM with hysteresis), briefly operate the drive in both directions.

**E) Conclusion of the report**

Report of the commissioning status tested and countersignatures

1. Extension of checksums (for each drive)
2. Countersignature

### 9.1.3 Test scope for specific measures

#### Scope of partial acceptance tests for specific measures

The measures and points specified in the table refer to the information given in section Content of the partial acceptance test.

Table 9- 1 Scope of partial acceptance tests for specific measures

| Measure  | A) Documentation     | B) Functional testing of safety functions                      | C) Functional testing of forced dormant error detection | D) Functional testing of actual value acquisition | E) Conclusion of the report |
|--|----------------------|--|---|---|-----------------------------|
| Replacement of the encoder system                                  | Yes, Points 1 and 2  | No   | No  | Yes   | Yes                         |
| Replacement of an SMC/SME  | Yes, Points 1 and 2  | No   | No  | Yes   | Yes                         |
| Replacement of a motor with DRIVE-CLiQ                             | Yes, Points 1 and 2  | No   | No  | Yes   | Yes                         |
| Replacement of the Control Unit / power unit hardware              | Yes, Points 1 and 2  | No   | Yes, only Point 1                                       | Yes, only Point 1                                 | Yes                         |
| Replacement of the Power Module or Safe Brake Relay                | Yes, Points 1 and 2  | Yes, Points 1 or 2 and 3                                       | Yes, only Point 1                                       | Yes, only Point 1                                 | Yes                         |
| Replacing the TM54F  | Yes, Points 1 and 2  | Yes, but only testing of the selection of the safety functions | Yes   | Yes, only Point 1                                 | Yes                         |
| Firmware - upgrade(CU/power unit/ Sensor Modules)                  | Yes, only Point 2    | Yes, if new safety functions are to be used                    | Yes   | Yes, only Point 1                                 | Yes                         |
| Change to a single parameter of a safety function (e.g. SLS limit) | Yes, Points 4 and 5. | Yes, test the appropriate function                             | No  | Yes   | Yes                         |
| Transfer of project data to other machines (series commissioning)  | Yes                  | Yes, but only testing of the selection of the safety functions | Yes   | Yes   | Yes                         |

## 9.2 Safety logbook

### Description

The "Safety Logbook" function is used to detect changes to safety parameters that affect the associated CRC sums. CRCs are only generated when p9601/p9801 (SI enable, functions integrated in the drive CU/Motor Module) is > 0.

Data changes are detected when the CRCs of the SI parameters change. Each SI parameter change that is to become active requires the reference CRC to be changed so that the drive can be operated without SI fault messages. In addition to functional safety changes, safety changes as a result of hardware being replaced can be detected when the CRC has changed.

The following changes are recorded by the safety logbook:

- Functional changes are recorded in the checksum r9781[0]:
  - Functional CRCs of the motion monitoring functions (p9729[0...1]), axis specific (Extended Functions)
  - Functional CRCs of the Basic safety functions integrated in the drive (p9799, SI setpoint checksum SI parameters CU), axial
  - Functional CRCs of the TM54F (p10005[0]), global (Extended Functions)
  - Enabling of functions integrated in the drive (p9601), axis specific (Basic and Extended Functions)
- Hardware-dependent changes are recorded in the checksum r9781[1]:
  - Hardware-dependent CRC of the motion monitoring functions (p9729[2]), axis specific (Extended Functions)
  - Hardware-dependent CRC of the TM54F (p10005[1]), global (Extended Functions)



## 9.3 Acceptance reports

### 9.3.1 Plant description - Documentation part 1

Table 9- 2 Machine description and overview diagram

|                             |  |
|-----------------------------|--|
| Designation                 |  |
| Type                        |  |
| Serial number               |  |
| Manufacturer                |  |
| End customer                |  |
| Electrical drives           |  |
| Other drives                |  |
| Overview diagram of machine |  |

Table 9- 3 Values of relevant parameters

| Versions of the firmware and of Safety Integrated |                  |                         |  |
|---|------------------|-------------------------|--|
| Component   | DO number        | Firmware version        | SI version   |
| Parameters<br>Control Unit                        |                  | r0018 =                 | r9590[0...3] =<br>r9770[0...3] =<br>Note: Parameters can be found in<br>the drive. |
|   | <b>DO number</b> | <b>Firmware version</b> | <b>SI version</b>  |
| Parameters<br>Motor Modules                       |                  | r0128 =                 | r9390[0...3] =<br>r9870[0...3] =   |
|   |                  | r0128 =                 | r9390[0...3] =<br>r9870[0...3] =   |
|   |                  | r0128 =                 | r9390[0...3] =<br>r9870[0...3] =   |
|   |                  | r0128 =                 | r9390[0...3] =<br>r9870[0...3] =   |
|   |                  | r0128 =                 | r9390[0...3] =<br>r9870[0...3] =   |
|   |                  | r0128 =                 | r9390[0...3] =<br>r9870[0...3] =   |

9.3 Acceptance reports

|   |                  |   |   |
|---|------------------|---|---|
| Parameters<br>Sensor Modules                        | <b>DO number</b> | <b>Firmware version</b>                           | <b>SI version</b>                                 |
|   |                  | r0148 =   | r9890[0...2] =                                    |
|   |                  | r0148 =   | r9890[0...2] =                                    |
|   |                  | r0148 =   | r9890[0...2] =                                    |
|   |                  | r0148 =   | r9890[0...2] =                                    |
|   |                  | r0148 =   | r9890[0...2] =                                    |
| TM54F parameters                                    | <b>DO number</b> | <b>Firmware version</b>                           | <b>SI version</b>                                 |
|   |                  | r0158 =   | r10090 =  |
| <b>Monitoring clock cycles of Safety Integrated</b> |                  |   |   |
|   | <b>DO number</b> | <b>SI monitoring clock cycle<br/>Control Unit</b> | <b>SI monitoring clock cycle<br/>Motor Module</b> |
| Basic Functions                                     |                  | r9780 =   | r9880 =   |
|   |                  | r9780 =   | r9880 =   |
|   |                  | r9780 =   | r9880 =   |
|   |                  | r9780 =   | r9880 =   |
|   |                  | r9780 =   | r9880 =   |
|   |                  | r9780 =   | r9880 =   |
|   | <b>DO number</b> | <b>SI monitoring clock cycle<br/>Motor Module</b> | <b>SI monitoring clock cycle<br/>Control Unit</b> |
| Extended<br>Functions                               |                  | p9300 =   | p9500 =   |
|   |                  | p9300 =   | p9500 =   |
|   |                  | p9300 =   | p9500 =   |
|   |                  | p9300 =   | p9500 =   |
|   |                  | p9300 =   | p9500 =   |
|   |                  | p9300 =   | p9500 =   |
| TM54F parameters                                    | <b>DO number</b> | <b>SI monitoring clock cycle TM54F</b>            |   |
|   |                  | p10000 =  |   |

## 9.3.2 Description of safety functions - Documentation Part 2

### Note

This description of a system is for illustration purposes only. In each case, the actual settings for the system concerned will need to be modified as required.

### 9.3.2.1 Function table

Table 9- 4 Example table: Active monitoring functions depending on the operating mode, the protective doors or other sensors

| Mode of operation | Protective door   | Drive  | Status of monitoring functions    |
|-------------------|-------------------|--------|-----------------------------------|
| Production        | closed and locked | 1<br>2 | All deactivated<br>SLS 1 enabled  |
|                   | unlocked          | 1<br>2 | SOS activated<br>STO switched off |
| Setup             | closed and locked | 1<br>2 | All deactivated<br>SLS 1 enabled  |
|                   | unlocked          | 1<br>2 | SLS 1 deselected,<br>enabled      |
| ...               | ...               | ...    | ...                               |

### 9.3.2.2 SI functions for each drive

Table 9- 5 Example: functional overview of the safety functions

| Drive | SI function | Limit         | Active if                   |
|-------|-------------|---------------|-----------------------------|
| 1     | SOS         | 100 mm        | refer to the function table |
|       | SLS 1       | 200000 mm/min | refer to the function table |
| 2     | SOS         | 100 mm        | refer to the function table |
|       | SLS 1       | 50 rpm        | refer to the function table |
| ...   | ...         | ...           | ...                         |

#### Comments:

All drives use the SI function SS1 for the EMERGENCY STOP functionality.

Drive 2 is equipped with a holding brake which is controlled by two channels via the corresponding Motor Module output.

**Drive-specific Safety parameters**

**Note**

You need to fill out this table for each axis.

Table 9- 6 Drive-specific data

| SI function  | Parameter Motor Modules / CU   | Motor Module value $\Delta$ CU value |
|--|--|--------------------------------------|
| Enable safety functions                              | p9301 / p9501  | 0000 bin                             |
| Axis type  | p9302 / p9502  | 0                                    |
| Function specification                               | p9306 / p9506  | 0                                    |
| Function configuration                               | p9307 / p9507  | 0000 bin                             |
| Behavior during pulse suppression                    | p9309 / p9509  | 0                                    |
| Actual value acquisition clock cycle                 | p9311 / p9511  | 0.0 ms                               |
| Coarse position value configuration                  | p9315 / p9515  | 0000 bin                             |
| Encoder configuration, safety functions              | p9316 / p9516  | 0000 bin                             |
| Linear scale graduations                             | p9317 / p9517  | 10 nm                                |
| Encoder pulses per revolution                        | p9318 / p9518  | 2048                                 |
| Fine resolution G1_XIST1                             | p9319 / p9519  | 11                                   |
| Leadscrew pitch                                      | p9320 / p9520  | 10 mm                                |
| Gearbox encoder (motor) / load denominator           | p9321[0] / p9521[0]<br>p9321[1] / p9521[1]<br>p9321[2] / p9521[2]<br>p9321[3] / p9521[3]<br>p9321[4] / p9521[4]<br>p9321[5] / p9521[5]<br>p9321[6] / p9521[6]<br>p9321[7] / p9521[7] | 1<br>1<br>1<br>1<br>1<br>1<br>1<br>1 |
| Gearbox encoder (motor) / load numerator             | p9322[0] / p9522[0]<br>p9322[1] / p9522[1]<br>p9322[2] / p9522[2]<br>p9322[3] / p9522[3]<br>p9322[4] / p9522[4]<br>p9322[5] / p9522[5]<br>p9322[6] / p9522[6]<br>p9322[7] / p9522[7] | 1<br>1<br>1<br>1<br>1<br>1<br>1<br>1 |
| Redundant coarse position value valid bits           | p9323 / p9523  | 9                                    |
| Redundant coarse position value fine resolution bits | p9324 / p9524  | -2                                   |
| Redundant coarse position value relevant bits        | p9325 / p9525  | 16                                   |
| Encoder assignment                                   | p9326 / p9526  | 1                                    |

| SI function  | Parameter Motor Modules / CU   | Motor Module value $\Delta$ CU value   |
|--|--|--|
| Sensor Module node identifier                                  | p9328[0]<br>p9328[1]<br>p9328[2]<br>p9328[3]<br>p9328[4]<br>p9328[5]<br>p9328[6]<br>p9328[7]<br>p9328[8]<br>p9328[9]<br>p9328[10]<br>p9328[11] | 0000 hex<br>0000 hex<br>0000 hex<br>0000 hex<br>0000 hex<br>0000 hex<br>0000 hex<br>0000 hex<br>0000 hex<br>0000 hex<br>0000 hex<br>0000 hex |
| SI Motion Gx_XIST1 coarse position safety most significant bit | p9329 / p9529  | 14   |
| SOS standstill tolerance                                       | p9330 / p9530  | 1.000°   |
| PLC limit values   | p9331[0] / p9531[0]<br>p9331[1] / p9531[1]<br>p9331[2] / p9531[2]<br>p9331[3] / p9531[3]   | 2000.00 mm/min<br>2000.00 mm/min<br>2000.00 mm/min<br>2000.00 mm/min   |
| Actual value comparison tolerance                              | p9342 / p9542  | 0.1000°  |
| SSM Filter time  | p9345 / p9545  | 0.0 ms   |
| SSM speed limit  | p9346 / p9546  | 20.00 mm/min   |
| SSM speed hysteresis   | p9347 / p9547  | 10 mm/min  |
| SAM actual speed tolerance                                     | p9348 / p9548  | 300.00 1/min   |
| Slip speed tolerance   | p9349 / p9549  | 6.0 rpm  |
| SLS changeover delay time                                      | p9351 / p9551  | 100.00 ms  |
| STOP C -> SOS delay time                                       | p9352 / p9552  | 100.00 ms  |
| STOP D -> SOS delay time                                       | p9353 / p9553  | 100.00 ms  |
| STOP E -> SOS transition time                                  | p9354 / p9554  | 100.00 $\mu$ s   |
| STOP F -> STOP B delay time                                    | p9355 / p9555  | 0.00 ms  |
| Pulse suppression delay time                                   | p9356 / p9556  | 100.00 ms  |
| Pulse suppression test time                                    | p9357 / p9557  | 100.00 ms  |
| Acceptance test mode time limit                                | p9358 / p9558  | 40000.00 ms  |
| Pulse suppression shutdown speed                               | p9360/p9560  | 0.0 rpm  |
| PLC stop response  | p9363[0] / p9563[0]<br>p9363[1] / p9563[1]<br>p9363[2] / p9563[2]<br>p9363[3] / p9563[3]   | 2<br>2<br>2<br>2   |
| SDI tolerance  | p9364 / p9564  | 0.1 mm   |
| SDI delay time   | p9365 / p9565  | 10.00 $\mu$ s  |
| SDI stop response  | p9366 / p9566  | 1  |
| SAM speed limit  | p9368 / p9568  | 0.0 mm/min   |

9.3 Acceptance reports

| SI function  | Parameter Motor Modules / CU   | Motor Module value $\pm$ CU value    |
|--|--|--------------------------------------|
| Forced dormant error detection timer                     | p9559  | 8.00 h                               |
| Pulse suppression delay bus failure                      | p9380 / p9580  | 100.00 $\mu$ s                       |
| Brakeramp reference value                                | p9381 / p9581  | 1500 rpm                             |
| Brake ramp delay time                                    | p9382 / p9582  | 250 ms                               |
| Brake ramp monitoring time                               | p9383 / p9583  | 10.00 s                              |
| Evaluation delay time without encoder                    | p9386 / p9586  | 100.00 ms                            |
| Actual value acquisition without encoder filter time     | p9387 / p9587  | 100.00 $\mu$ s                       |
| Minimum current actual value acquisition without encoder | p9388 / p9588  | 10.00 %                              |
| Acceleration voltage tolerance                           | p9389 / p9589  | 100.00 %                             |
| Test stop signal source                                  | p9705  | 1:722:5                              |
| Enable drive-integrated functions                        | p9801 / p9601  | 0000 bin                             |
| Enable safe brake control                                | p9802 / p9602  | 0                                    |
| PROFIsafe address  | p9810 / p9610  | 0000 hex                             |
| Signal source for STO/SBC/SS1                            | p9620[0]<br>p9620[1]<br>p9620[2]<br>p9620[3]<br>p9620[4]<br>p9620[5]<br>p9620[6]<br>p9620[7] | 0<br>0<br>0<br>0<br>0<br>0<br>0<br>0 |
| Signal source for SBA                                    | p9821 / p9621  | 0                                    |
| SBA relay wait times                                     | p9822[0] / p9622[0]<br>p9822[1] / p9622[1]   | 100.00 ms<br>65.00 ms                |
| SGE changeover tolerance time                            | p9850 / p9650  | 500.00 ms                            |
| STO/SBC/SS1 debounce time                                | p9851 / p9651  | 0.00 ms                              |
| Safe Stop 1 delay time                                   | p9852 / p9652  | 0.00 s                               |
| STOP F -> STOP A delay time                              | p9858 / p9658  | 0.00 $\mu$ s                         |
| Forced dormant error detection timer                     | p9659  | 8.00 h                               |

### 9.3.2.3 Parameterizing the SI functions via TM54F

Table 9- 7 Parameters for control via the TM54F (excerpt)

| SI function                                   | Parameters   | Value                      |
|---|--|----------------------------|
| Wait time for test stop on DO                 | p10001   | 500.00 ms                  |
| Monitoring time discrepancy                   | p10002   | 12.00 ms                   |
| Forced dormant error detection timer          | p10003   | 8.00 h                     |
| Acknowledging internal event input terminal   | p10006   | 0                          |
| Input terminal forced dormant error detection | p10007   | 0                          |
| Assignment of drive objects                   | p10010[0]<br>p10010[1]<br>p10010[2]<br>p10010[3]<br>p10010[4]<br>p10010[5] | 0<br>0<br>0<br>0<br>0<br>0 |
| Assignment of drive groups                    | p10011[0]<br>p10011[1]<br>p10011[2]<br>p10011[3]<br>p10011[4]<br>p10011[5] | 1<br>1<br>1<br>1<br>1<br>1 |
| Digital inputs debounce time                  | p10017   | 1.00 ms                    |
| STO input terminal                            | p10022[0]<br>p10022[1]<br>p10022[2]<br>p10022[3]                           | 0<br>0<br>0<br>0           |
| SS1 input terminal                            | p10023[0]<br>p10023[1]<br>p10023[2]<br>p10023[3]                           | 0<br>0<br>0<br>0           |
| SS2 input terminal                            | p10024[0]<br>p10024[1]<br>p10024[2]<br>p10024[3]                           | 0<br>0<br>0<br>0           |
| SOS input terminal                            | p10025[0]<br>p10025[1]<br>p10025[2]<br>p10025[3]                           | 0<br>0<br>0<br>0           |
| PLC input terminal                            | p10026[0]<br>p10026[1]<br>p10026[2]<br>p10026[3]                           | 0<br>0<br>0<br>0           |
| SLS_Limit(1) input terminal                   | p10027[0]<br>p10027[1]<br>p10027[2]<br>p10027[3]                           | 0<br>0<br>0<br>0           |

9.3 Acceptance reports

| SI function                          | Parameters   | Value                            |
|--------------------------------------|--|----------------------------------|
| SLS_Limit(2) input terminal          | p10028[0]<br>p10028[1]<br>p10028[2]<br>p10028[3]                           | 0<br>0<br>0<br>0                 |
| SI SDI positive input terminal       | p10030[0]<br>p10030[1]<br>p10030[2]<br>p10030[3]                           | 0<br>0<br>0<br>0                 |
| SI SDI negative input terminal       | p10031[0]<br>p10031[1]<br>p10031[2]<br>p10031[3]                           | 0<br>0<br>0<br>0                 |
| Safe state signal selection          | p10039[0]<br>p10039[1]<br>p10039[2]<br>p10039[3]                           | 1 hex<br>1 hex<br>1 hex<br>1 hex |
| F-DI input mode                      | p10040   | 0 hex                            |
| F-DI test enable                     | p10041   | 0 hex                            |
| F-DO 0 signal sources                | p10042[0]<br>p10042[1]<br>p10042[2]<br>p10042[3]<br>p10042[4]<br>p10042[5] | 0<br>0<br>0<br>0<br>0<br>0       |
| F-DO 1 signal sources                | p10043[0]<br>p10043[1]<br>p10043[2]<br>p10043[3]<br>p10043[4]<br>p10043[5] | 0<br>0<br>0<br>0<br>0<br>0       |
| F-DO 2 signal sources                | p10044[0]<br>p10044[1]<br>p10044[2]<br>p10044[3]<br>p10044[4]<br>p10044[5] | 0<br>0<br>0<br>0<br>0<br>0       |
| F-DO 3 signal sources                | p10045[0]<br>p10045[1]<br>p10045[2]<br>p10045[3]<br>p10045[4]<br>p10045[5] | 0<br>0<br>0<br>0<br>0<br>0       |
| Test Sensor feedback signal          | p10046.0<br>p10046.1<br>p10046.2<br>p10046.3                               | 0 hex<br>0 hex<br>0 hex<br>0 hex |
| Selection of test mode for test stop | p10047[0]<br>p10047[1]<br>p10047[2]<br>p10047[3]                           | 2<br>2<br>2<br>2                 |



#### 9.3.2.4 Safety equipment

|  |
|--|
| Protective door<br>The protective door is unlocked by means of single-channel request key  |
| Protective door switch<br>The protective door is equipped with a safety door switch. The safety door switch returns the dual-channel signal "Door closed and locked". Changeover and selection of safety functions in accordance with the table shown above. |
| Mode selector switch<br>The "Production" and "Setup" modes are set by means of a mode selector switch. The key switch features two contact levels. Changeover and selection of safety functions in accordance with the table shown above.                    |
| EMERGENCY-STOP pushbutton<br>The dual-channel EMERGENCY-STOP pushbuttons are wired in series. The EMERGENCY STOP signal activates SS1 for all drives. Then the external brakes and STO are activated.  |
| Test stop<br>Activation by means of: <ul style="list-style-type: none"><li>• Machine power on</li><li>• Unlocking the protective door</li></ul>  |

## 9.4 Acceptance tests

---

### Note

As far as possible, the acceptance tests are to be carried out at the maximum possible machine speed and acceleration rates to determine the maximum braking distances and braking times that can be expected.

---

### Note

If Basic Functions and Extended Functions are combined, the acceptance test for both types must be carried out for the functions used.

---

### Note

The trace recordings for the Extended Functions aid evaluation of the more complex functionality compared to the Basic Functions (for which trace recording is not required). Where necessary you can also use other recording options (e.g. via HMI).

---

### Note

#### Non-critical alarms

When evaluating the alarm buffer you can tolerate the following alarms:

- A01697 SI Motion: Motion monitoring test required
- A01796 SI Motion CU: Waiting for communication

These alarms occur after every system startup and can be evaluated as non-critical. You do not need to include these alarms in the acceptance report.

---

## 9.4.1 Acceptance tests – Basic Functions

### 9.4.1.1 Acceptance test for Safe Torque Off (STO)

Table 9- 8 "Safe Torque Off" acceptance test

| No.  | Description  | Status |
|--|--|--------|
| <b>Note:</b><br>The acceptance test must be individually conducted for each configured control.<br>The control can be realized via terminals and/or via PROFIsafe. |  |        |
| 1.   | Initial state  |        |
|  | • Drive in "Ready" state (p0010 = 0)   |        |
|  | • STO function enabled (on-board terminals / PROFIsafe p9601.0 = 1 and/or p9601.3 = 1)   |        |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7]); see note "non-critical alarms" in section Acceptance tests".                 |        |
|  | • r9772.17 = r9872.17 = 0 (STO deselection via terminals - DI CU / EP terminal Motor Module); only relevant for STO via terminal         |        |
|  | • r9772.20 = r9872.20 = 0 (STO deselection via PROFIsafe); only relevant for STO via PROFIsafe   |        |
|  | • r9772.0 = r9772.1 = 0 (STO deselected and inactive – Control Unit)   |        |
|  | • r9872.0 = r9872.1 = 0 (STO deselected and inactive – Motor Module)   |        |
|  | • r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)  |        |
| • r9774.0 = r9774.1 = 0 (STO deselected and inactive - group); only relevant for grouping  |  |        |
| 2.   | Run the drive  |        |
|  | • Ensure that the correct drive is running   |        |
|  | Select STO when you issue the traversing command and check the following:  |        |
|  | • The drive coasts to a standstill or is braked and stopped by the mechanical brake (if available and configured (p1215, p9602, p9802)). |        |
|  | • No Safety faults and alarms (r0945[0..7], r2122[0..7])   |        |
|  | • r9772.17 = r9872.17 = 1 (STO selection via terminal - DI CU / EP terminal Motor Module); only relevant for STO via terminal            |        |
|  | • r9772.20 = r9872.20 = 1 (STO selection via PROFIsafe); only relevant for STO via PROFIsafe   |        |
|  | • r9772.0 = r9772.1 = 1 (STO selected and active – Control Unit)   |        |
|  | • r9872.0 = r9872.1 = 1 (STO selected and active – Motor Module)   |        |
|  | • r9773.0 = r9773.1 = 1 (STO selected and active – drive)  |        |
| • r9774.0 = r9774.1 = 1 (STO selected and active - group); only relevant for grouping  |  |        |

9.4 Acceptance tests

| No. | Description  | Status |
|-----|--|--------|
| 3.  | Deselect STO and check the following: <ul style="list-style-type: none"> <li data-bbox="201 389 1209 430">• No Safety faults and alarms (r0945[0..7], r2122[0..7])</li> <li data-bbox="201 434 1209 510">• r9772.17 = r9872.17 = 0 (STO deselection via terminals - DI CU / EP terminal Motor Module); only relevant for STO via terminal</li> <li data-bbox="201 515 1209 591">• r9772.20 = r9872.20 = 0 (STO deselection via PROFIsafe); only relevant for STO via PROFIsafe</li> <li data-bbox="201 595 1209 636">• r9772.0 = r9772.1 = 0 (STO deselected and inactive – Control Unit)</li> <li data-bbox="201 640 1209 680">• r9872.0 = r9872.1 = 0 (STO deselected and inactive – Motor Module)</li> <li data-bbox="201 685 1209 725">• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)</li> <li data-bbox="201 730 1209 770">• r9774.0 = r9774.1 = 0 (STO deselected and inactive - group); only relevant for grouping</li> <li data-bbox="201 775 1209 815">• r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul> |        |
| 4.  | Acknowledge "switch-on inhibit" and run the drive. Ensure that the correct drive is running.<br>The following is tested: <ul style="list-style-type: none"> <li data-bbox="201 925 1209 952">• Correct DRIVE-CLiQ wiring between Control Unit and Motor Modules</li> <li data-bbox="201 956 1209 983">• Correct assignment of drive No. – Motor Module – motor</li> <li data-bbox="201 987 1209 1014">• The hardware is functioning properly</li> <li data-bbox="201 1019 1209 1046">• Correct wiring of the switch-off signal path (only via terminal)</li> <li data-bbox="201 1050 1209 1077">• Correct assignment of the terminals for STO on the Control Unit</li> <li data-bbox="201 1081 1209 1108">• Correct STO grouping (if available)</li> <li data-bbox="201 1113 1209 1140">• Correct parameterization of the STO function</li> </ul>  |        |

9.4.1.2 Acceptance test for Safe Stop 1, time controlled (SS1)

Table 9-9 "Safe Stop 1" function

| No.  | Description  | Status |
|--|--|--------|
| <b>Note:</b><br>The acceptance test must be individually conducted for each configured control.<br>The control can be realized via terminals and/or via PROFIsafe. |  |        |
| 1.   | Initial state <ul style="list-style-type: none"> <li>• Drive in "Ready" state (p0010 = 0)</li> <li>• STO function enabled (on-board terminals / PROFIsafe p9601.0 = 1 and/or p9601.3 = 1)</li> <li>• Enable SS1 function (p9652 &gt; 0, p9852 &gt; 0)</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7]); see note "non-critical alarms" in section Acceptance tests".</li> <li>• r9772.22 = r9872.22 = 0 (SS1 deselection via terminals – DI CU / EP terminal Motor Module); only relevant for SS1 via terminal</li> <li>• r9772.23 = r9872.23 = 0 (SS1 deselection via PROFIsafe); only relevant for SS1 via PROFIsafe</li> <li>• r9772.0 = r9772.1 = 0 (STO inactive – CU)</li> <li>• r9772.5 = r9772.6 = 0 (SS1 deselected and inactive – CU)</li> <li>• r9872.0 = r9872.1 = 0 (STO inactive – MM)</li> <li>• r9872.5 = r9872.6 = 0 (SS1 deselected and inactive – MM)</li> <li>• r9773.0 = r9773.1 = 0 (STO inactive – drive)</li> <li>• r9773.5 = r9773.6 = 0 (SS1 deselected and inactive – drive)</li> <li>• r9774.0 = r9774.1 = 0 (STO inactive - group); only relevant for grouping</li> <li>• r9774.5 = r9774.6 = 0 (SS1 deselected and inactive - group); only relevant for grouping</li> </ul> |        |
| 2.   | Run the drive <ul style="list-style-type: none"> <li>Check whether the correct drive is operational</li> <li>Select SS1 when you issue the traversing command and check the following:                             <ul style="list-style-type: none"> <li>• The drive is braked along the OFF3 ramp (p1135)</li> </ul> </li> <li>Before the SS1 delay time (p9652, p9852) expires, the following applies:                             <ul style="list-style-type: none"> <li>• r9772.22 = r9872.22 = 1 (SS1 selection via terminals – DI CU / EP terminal Motor Module); only relevant for SS1 via terminal</li> <li>• r9772.23 = r9872.23 = 1 (SS1 selection via PROFIsafe); only relevant for SS1 via PROFIsafe</li> <li>• r9772.0 = r9772.1 = 0 (STO active - CU)</li> <li>• r9772.5 = r9772.6 = 1 (SS1 selected and active – CU)</li> <li>• r9872.0 = r9872.1 = 0 (STO inactive - MM)</li> <li>• r9872.5 = r9872.6 = 1 (SS1 selected and active – MM)</li> </ul> </li> </ul>   |        |

9.4 Acceptance tests

| No. | Description  | Status |
|-----|--|--------|
|     | <ul style="list-style-type: none"> <li>• r9773.0 = r9773.1 = 0 (STO inactive)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9773.5 = r9773.6 = 1 (SS1 selected and active – drive)</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r9774.0 = r9774.1 = 0 (STO inactive - group); only relevant for grouping</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9774.5 = r9774.6 = 1 (SS1 selected and active - group); only relevant for grouping</li> </ul>  |        |
|     | STO is initiated after the SS1 delay time expires (p9652, p9852).  |        |
|     | <ul style="list-style-type: none"> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7])</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9772.0 = r9772.1 = 1 (STO active - CU)</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r9772.5 = r9772.6 = 1 (SS1 selected and active – CU)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9872.0 = r9872.1 = 1 (STO selected and active – MM)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9872.5 = r9872.6 = 1 (SS1 selected and active – MM)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9773.0 = r9773.1 = 1 (STO selected and active)</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r9773.5 = r9773.6 = 1 (SS1 selected and active – drive)</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r9774.0 = r9774.1 = 1 (STO selected and active - group); only relevant for grouping</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r9774.5 = r9774.6 = 1 (SS1 selected and active - group); only relevant for grouping</li> </ul>  |        |
| 3.  | Canceling SS1  |        |
|     | <ul style="list-style-type: none"> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7])</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9772.22 = r9872.22 = 0 (SS1 deselection via terminals – DI CU / EP terminal Motor Module); only relevant for SS1 via terminal</li> </ul> |        |
|     | <ul style="list-style-type: none"> <li>• r9772.23 = r9872.23 = 0 (SS1 deselection via PROFIsafe); only relevant for SS1 via PROFIsafe</li> </ul>                                   |        |
|     | <ul style="list-style-type: none"> <li>• r9772.0 = r9772.1 = 0 (STO inactive – CU)</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r9772.5 = r9772.6 = 0 (SS1 deselected and inactive – CU)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9872.0 = r9872.1 = 0 (STO inactive - MM)</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r9872.5 = r9872.6 = 0 (SS1 deselected and inactive – MM)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9773.0 = r9773.1 = 0 (STO inactive – drive)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9773.5 = r9773.6 = 0 (SS1 deselected and inactive – drive)</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r9774.0 = r9774.1 = 0 (STO inactive - group); only relevant for grouping</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• r9774.5 = r9774.6 = 0 (SS1 deselected and inactive - group); only relevant for grouping</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>   |        |
| 4.  | Acknowledge "switch-on inhibit" and run the drive. Ensure that the correct drive is running.   |        |
|     | The following is tested: <ul style="list-style-type: none"> <li>• Correct parameterization of the SS1 function</li> </ul>  |        |

### 9.4.1.3 Acceptance test for "Safe Brake Control" (SBC)

Table 9- 10 "Safe Brake Control" function

| No.   | Description   | Status |
|---|---|--------|
| <b>Note:</b>  |   |        |
| The acceptance test must be individually conducted for each configured control.           |   |        |
| The control can be realized via terminals and/or via PROFIsafe.                           |   |        |
| 1.  | Initial state   |        |
|   | • Drive in "Ready" state (p0010 = 0)  |        |
|   | • STO function enabled (on-board terminals / PROFIsafe p9601.0 = 1 and/or p9601.3 = 1)                      |        |
|   | • Enable SBC function (p9602 = 1, p9802 = 1)  |        |
|   | • Brake as in sequence control or brake always released (p1215 = 1 or p1215 = 2)                            |        |
|   | • No Safety faults and alarms (r0945, r2122); see note "Non-critical alarms" in section "Acceptance tests". |        |
|   | • r9772.4 = r9872.4 = 0 (SBC not requested)   |        |
|   | • r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)  |        |
|   | • r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)  |        |
|   | • r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)   |        |
| • r9774.0 = r9774.1 = 0 (STO deselected and inactive - group); only relevant for grouping |   |        |
| 2.  | Run drive (if applied, brake is released)   |        |
|   | • Check whether the correct drive is operational  |        |
|   | Select STO/SS1 when you issue the traversing command and check the following:                               |        |
|   | • The brake is applied (for SS1 the drive is previously decelerated along the OFF3 ramp)                    |        |
|   | • No Safety faults and alarms (r0945[0...7], r2122[0...7])  |        |
|   | • r9772.4 = r9872.4 = 1 (SBC requested)   |        |
|   | • r9772.0 = r9772.1 = 1 (STO selected and active – CU)  |        |
|   | • r9872.0 = r9872.1 = 1 (STO selected and active – MM)  |        |
| • r9773.0 = r9773.1 = 1 (STO selected and active – drive)                                 |   |        |
| • r9774.0 = r9774.1 = 1 (STO selected and active - group); only relevant for grouping     |   |        |
| 3.  | Deselect STO and check the following:   |        |
|   | • No Safety faults and alarms (r0945[0...7], r2122[0...7])  |        |
|   | • r9772.4 = r9872.4 = 0 (deselect SBC)  |        |
|   | • r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)  |        |
|   | • r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)  |        |
|   | • r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)   |        |
| • r9774.0 = r9774.1 = 0 (STO deselected and inactive - group); only relevant for grouping |   |        |

9.4 Acceptance tests

| No. | Description   | Status |
|-----|---|--------|
|     | <ul style="list-style-type: none"> <li>r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>  |        |
| 4.  | Acknowledge "switch-on inhibit" and run the drive. Check whether the correct drive is operational.<br>The following is tested: <ul style="list-style-type: none"> <li>The brake is connected properly</li> <li>The hardware is functioning properly</li> <li>The SBC is parameterized correctly</li> <li>Forced dormant error detection of the brake control</li> </ul> |        |

9.4.2 Acceptance tests for Extended Functions (with encoder)

9.4.2.1 Acceptance test Safe Torque Off with encoder (Extended Functions)

Table 9- 11 "Safe Torque Off" function

| No.  | Description   | Status |
|--|---|--------|
| <b>Notes:</b>  |   |        |
| The acceptance test must be individually conducted for each configured control.<br>The control can be realized via TM54F or via PROFIsafe. |   |        |
| 1.   | Initial state   |        |
|  | <ul style="list-style-type: none"> <li>Drive in "Ready" state (p0010 = 0)</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>Safety functions enabled (p9501.0 = 1)</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "non-critical alarms" in section</li> </ul> |        |
|  | <ul style="list-style-type: none"> <li>r9772.18 = r9872.18 = 0 (STO deselected via Safe Motion Monitoring)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>r9772.0 = r9772.1 = 0 (STO deselected and inactive – Control Unit)</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>r9872.0 = r9872.1 = 0 (STO deselected and inactive – Motor Module)</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>r9720.0 = 1 (STO deselected)</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>r9722.0 = 0 (STO inactive)</li> </ul>  |        |



| No. | Description   | Status |
|-----|---|--------|
| 2.  | <p>Run the drive</p> <ul style="list-style-type: none"> <li>• Check whether the correct drive is operational</li> </ul> <p>Select STO when you issue the traversing command and check the following:</p> <ul style="list-style-type: none"> <li>• The drive coasts to a standstill or is braked and stopped by the mechanical brake (if available and configured (p1215, p9602, p9802)).</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li>• r9772.18 = r9872.18 = 1 (STO selected via Safe Motion Monitoring)</li> <li>• r9772.0 = r9772.1 = 1 (STO selected and active – Control Unit)</li> <li>• r9872.0 = r9872.1 = 1 (STO selected and active – Motor Module)</li> <li>• r9773.0 = r9773.1 = 1 (STO selected and active – drive)</li> <li>• r9720.0 = 0 (STO selected)</li> <li>• r9722.0 = 1 (STO active)</li> </ul> |        |
| 3.  | <p>Deselect STO and check the following:</p> <ul style="list-style-type: none"> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li>• r9772.18 = r9872.18 = 0 (STO deselected via Safe Motion Monitoring)</li> <li>• r9772.0 = r9772.1 = 0 (STO deselected and inactive – Control Unit)</li> <li>• r9872.0 = r9872.1 = 0 (STO deselected and inactive – Motor Module)</li> <li>• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)</li> <li>• r9720.0 = 1 (STO deselected)</li> <li>• r9722.0 = 0 (STO inactive)</li> <li>• r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>   |        |
| 4.  | <p>Acknowledge "switch-on inhibit" and run the drive. Ensure that the correct drive is running.</p> <p>The following is tested:</p> <ul style="list-style-type: none"> <li>• Correct DRIVE-CLiQ wiring between Control Unit and Motor Modules</li> <li>• Correct assignment of drive No. – Motor Module – motor</li> <li>• The hardware is functioning properly</li> <li>• Correct parameterization of the STO function</li> <li>• Forced dormant error detection of the switch-off signal paths</li> </ul>   |        |

9.4.2.2 Acceptance test for Safe Stop 1, time and acceleration controlled

Table 9- 12 "Safe Stop 1" function

| No.  | Description  | Status |
|--|--|--------|
| <b>Note:</b>   |  |        |
| The acceptance test must be individually conducted for each configured control.<br>The control can be realized via TM54F or via PROFIsafe. |  |        |
| 1.   | Initial state  |        |
|  | <ul style="list-style-type: none"> <li>Drive in "Ready" state (p0010 = 0)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>Safety functions enabled (p9501.0 = 1)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section</li> </ul>                  |        |
| 2.   | Run the drive  |        |
|  | <ul style="list-style-type: none"> <li>Check whether the correct drive is operational</li> </ul>   |        |
| 3.   | Configure and activate trace recording.  |        |
|  | <ul style="list-style-type: none"> <li>Trigger: Trigger on variable - bit pattern (r9720.1 = 0)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>Record the following values: r9714[0], r9714[1], r9720, r9722</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>Select the time interval and pretrigger so you can recognize the selection of SS1 and the transition into the subsequent STO state</li> </ul> |        |
|  | For better analysis, display the following bit values:   |        |
|  | <ul style="list-style-type: none"> <li>r9720.1 (deactivation SS1)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>r9722.0 (STO active)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>r9722.1 (SS1 active)</li> </ul>   |        |
|  | Select SS1 while the drive is moving   |        |
|  | <ul style="list-style-type: none"> <li>The drive decelerates along the OFF3 ramp</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>Subsequent state STO is activated</li> </ul>  |        |
| 4.   | Analyze trace:   |        |
|  | <ul style="list-style-type: none"> <li>The STO is triggered after the SS1 timer (p9356/9556) has expired or if the speed drops below the shutdown speed (p9360/9560)</li> </ul>      |        |
|  | <ul style="list-style-type: none"> <li>r9714[0] is displayed in the unit [µm/Safety clock cycle or m°/Safety clock cycle]</li> </ul>   |        |
| 5.   | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |
| 6.   | Deselect SS1   |        |
|  | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> </ul>   |        |
|  | Acknowledge "switch-on inhibit" and run the drive  |        |
|  | <ul style="list-style-type: none"> <li>Ensure that the correct drive is running</li> </ul>   |        |

## Example Trace SS1 with encoder

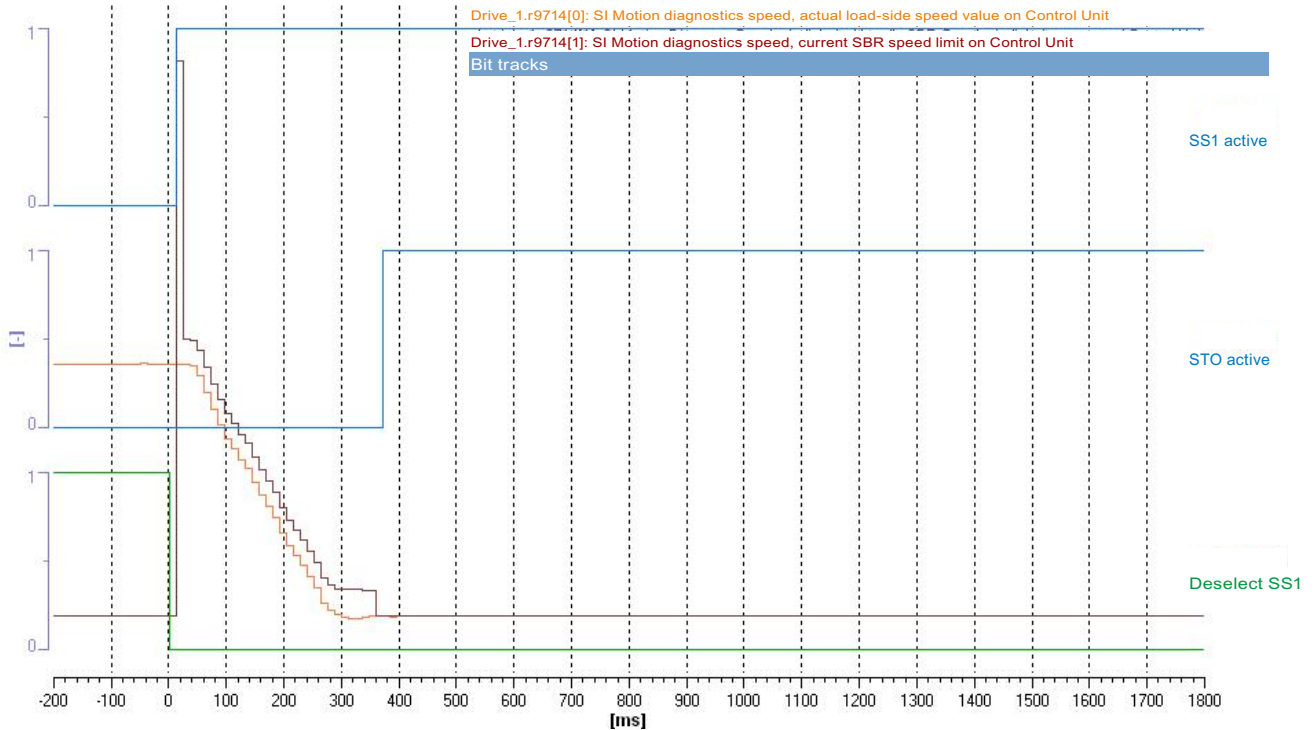


Figure 9-1 Example Trace SS1 with encoder

## Trace evaluation:

- SS1 function is selected (time axis 0 ms; see bit "deselection SS1")
- Response bit "SS1 active" is set (time axis approx 20 ms)
- The drive decelerates along the configured OFF3 ramp (p1135)
- Recording of r9714[0] (orange curve) shows whether the OFF3 ramp is active
- The STO is activated (time axis approx. 370 ms; see bit "STO active"); at this point the speed falls below the shutdown speed SS1 (p9560/p9360) (drops below the shutdown speed SS1 before SS1 timer p9556/p9356 has expired)
- A fault is generated if the envelope curve of function SAM (Drive\_1.r9714[1]) is exceeded by the actual speed (r9714[0])

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

9.4.2.3 Acceptance test for Safe Brake Control with encoder (Extended Functions)

Table 9- 13 "Safe Brake Control" function

| No.   | Description   | Status |
|---|---|--------|
| <p><b>Note:</b><br/>The acceptance test must be individually conducted for each configured control.<br/>The control can be realized via TM54F or via PROFIsafe.</p> |   |        |
| 1.  | <p>Initial state</p> <ul style="list-style-type: none"> <li>• Drive in "Ready" state (p0010 = 0)</li> <li>• Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> <li>• Safety functions enabled (p9501.0 = 1)</li> <li>• Enable SBC function (p9602 = 1, p9802 = 1)</li> <li>• Brake as in sequence control or brake always released (p1215 = 1 or p1215 = 2)</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section</li> <li>• r9772.18 = r9872.18 = 0 (STO deselected via Safe Motion Monitoring)</li> <li>• r9772.4 = r9872.4 = 0; r9773.4 = 0 (SBC not requested)</li> <li>• r9720.0 = 1 (STO deselected)</li> <li>• r9722.0 = 0 (STO inactive)</li> </ul> |        |
| 2.  | <p>Run drive (if applied, brake is released)</p> <ul style="list-style-type: none"> <li>• Check whether the correct drive is operational</li> </ul> <p>Select STO when you issue the traversing command and check the following:</p> <ul style="list-style-type: none"> <li>• Brake is applied</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li>• r9772.4 = r9872.4 = 1; r9773.4 = 1 (SBC requested)</li> <li>• r9772.18 = r9872.18 = 1 (STO selected via Safe Motion Monitoring)</li> <li>• r9720.0 = 0 (STO selected)</li> <li>• r9722.0 = 1 (STO active)</li> </ul>  |        |
| 3.  | <p>Deselect STO and check the following:</p> <ul style="list-style-type: none"> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li>• r9772.4 = r9872.4 = 0; r9773.4 = 0 (SBC deselected)</li> <li>• r9772.18 = r9872.18 = 0 (STO deselected via Safe Motion Monitoring)</li> <li>• r9720.0 = 1 (STO deselected)</li> <li>• r9722.0 = 0 (STO active)</li> <li>• r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>   |        |

| No. | Description  | Status |
|-----|--|--------|
| 4.  | Acknowledge "switch-on inhibit" and run the drive. Check whether the correct drive is operational.   |        |
|     | The following is tested:   |        |
|     | <ul style="list-style-type: none"> <li>• The brake is connected properly</li> <li>• The hardware is functioning properly</li> <li>• The SBC is parameterized correctly</li> <li>• Forced dormant error detection of the brake control</li> </ul> |        |

#### 9.4.2.4 Acceptance test for Safe Stop 2 (SS2)

Table 9- 14 "Safe Stop 2" function

| No.  | Description  | Status |
|--|--|--------|
| <b>Note:</b>   |  |        |
| The acceptance test must be individually performed for each configured control. Control may be via TM54F or PROFIsafe. |  |        |
| 1.   | Initial state  |        |
|  | <ul style="list-style-type: none"> <li>• Drive in "Ready" state (p0010 = 0)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>• Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>• Safety functions enabled (p9501.0 = 1)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>• SS2 deselected (r9720.2 = 1)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>• SS2 inactive (r9722.2 = 0)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>• SOS inactive (r9722.3 = 0)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section</li> </ul>                  |        |
| 2.   | Run the drive  |        |
|  | <ul style="list-style-type: none"> <li>• Ensure that the correct drive is running</li> </ul>   |        |
| 3.   | Configure and activate trace recording.  |        |
|  | <ul style="list-style-type: none"> <li>• Trigger: Trigger on variable - bit pattern (r9720.2 = 0)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>• Record the following values: r9714[0], r9714[1], r9720, r9722</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>• Select the time interval and pretrigger so you can recognize the selection of SS2 and the transition into the subsequent SOS state</li> </ul> |        |
|  | For better analysis, display the following bit values:   |        |
|  | <ul style="list-style-type: none"> <li>• r9720.2 (deselection SS2)</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>• r9722.2 (SS2 active)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>• r9722.3 (SOS active)</li> </ul>   |        |
|  | Select SS2 while the drive is moving   |        |
|  | <ul style="list-style-type: none"> <li>• The drive decelerates along the OFF3 ramp</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>• Subsequent SOS state is activated</li> </ul>  |        |
|  | <ul style="list-style-type: none"> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> </ul>   |        |

| No. | Description   | Status |
|-----|---|--------|
| 4.  | Analyze trace:  |        |
|     | • SOS is triggered after the SS2 timer (p9352/9552) has expired.  |        |
|     | • r9714[0] is displayed in the unit [ $\mu\text{m}/\text{Safety clock cycle}$ or $\text{m}^\circ/\text{Safety clock cycle}$ ] |        |
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)   |        |
| 6.  | Deselect SS2  |        |
|     | • Ensure that the drive is running with the setpoint again  |        |
|     | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])  |        |

Example Trace SS2

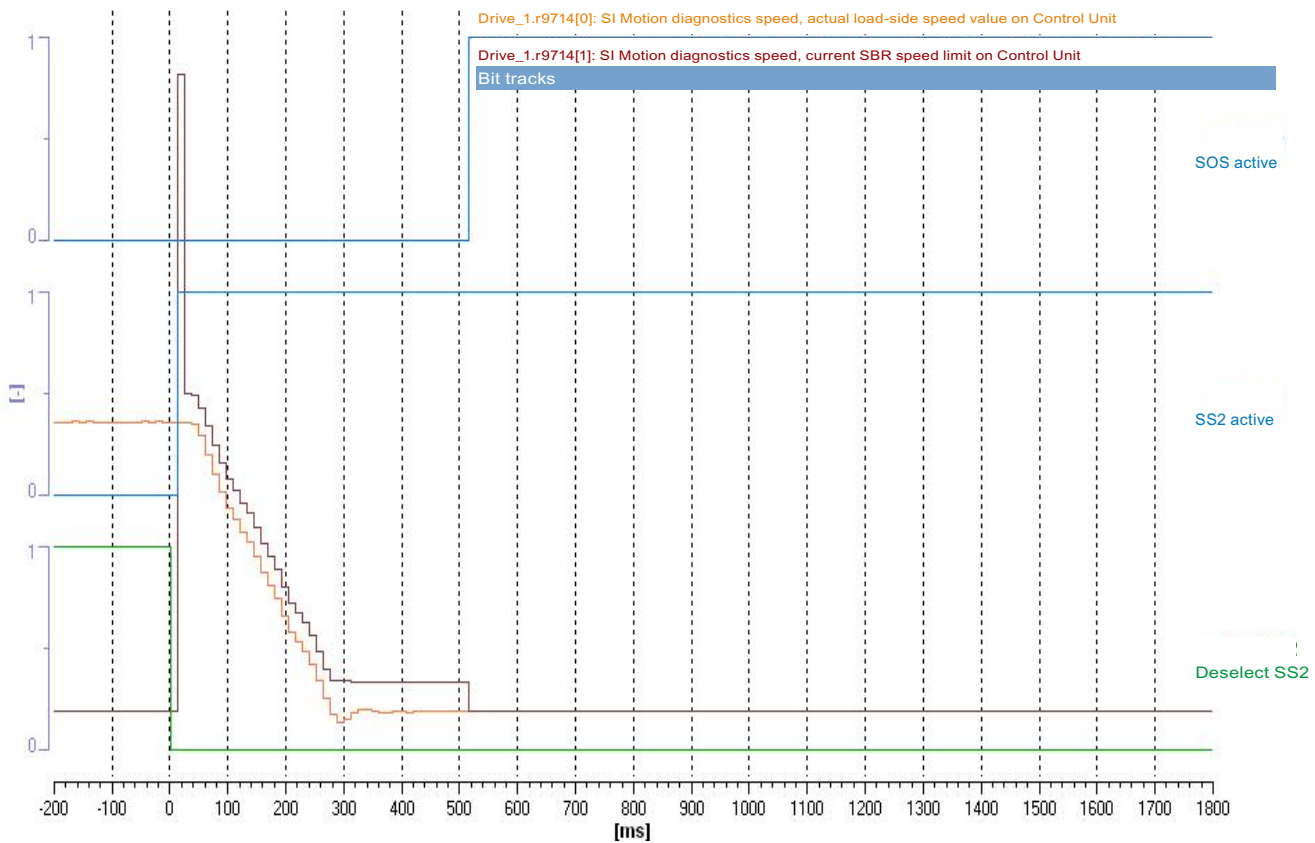


Figure 9-2 Example Trace SS2

Trace evaluation:

- SS2 function is selected (time axis 0 ms; see bit "deselection SS2")
- Response bit "SS2 active" is set (time axis approx 20 ms)
- The drive decelerates along the configured OFF3 ramp (p1135)
- Recording of r9714[0] (orange curve) shows whether the OFF3 ramp is active

- SOS is activated (time axis approx. 500 ms; see bit "SOS active"); at this point the SS2 timer (p9552/p9352) has expired
- A fault is generated if the envelope curve of function SAM/SBR (Drive\_1.r9714[1]) is exceeded by the actual speed (r9714[0])

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

### 9.4.2.5 Acceptance test for Safe Operating Stop (SOS)

Table 9- 15 "Safe Operating Stop" function

| No.  | Description   | Status |
|--|---|--------|
| <b>Note:</b><br>The acceptance test must be individually conducted for each configured control.<br>The control can be realized via TM54F or via PROFIsafe. |   |        |
| 1.   | Initial state   |        |
|  | • Drive in "Ready" state (p0010 = 0)  |        |
|  | • Safety Integrated Extended Functions enabled (p9601.2 = 1)  |        |
|  | • Safety functions enabled (p9501.0 = 1)  |        |
|  | • SOS inactive (r9722.3 = 0)  |        |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section   |        |
| 2.   | <ul style="list-style-type: none"> <li>• It may be necessary to take measures in the higher-level control to be able to run the drive with activated SOS.</li> <li>• Please ensure that the internal limits r9733.0 and r9733.1 are canceled by the selection "Start acceptance test".</li> </ul> |        |
| 3.   | Configure and activate trace recording.   |        |
|  | • Trigger: Trigger on variable - bit pattern (r9722.7 = 0)  |        |
|  | • Record the following values: r9713[0], r9720, r9721, r9722  |        |
|  | • Select the time interval and pretrigger so you can recognize start-up of the drive and violation of the SOS tolerance window (p9330/p9530)  |        |
|  | For better analysis, display the following bit values:  |        |
|  | • r9720.3 (deselect SOS)  |        |
|  | • r9721.12 (STOP A or B active)   |        |
|  | • r9722.0 (STO active; set for STOP A)  |        |
|  | • r9722.1 (SS1 active; set for STOP B)  |        |
| • r9722.3 (SOS active)   |   |        |

9.4 Acceptance tests

| No. | Description   | Status |
|-----|---|--------|
|     | <ul style="list-style-type: none"> <li>• r9722.7 (internal event; set on the occurrence of the first Safety message)</li> </ul> Select SOS<br>Run the drive beyond the standstill limit set in p9330/p9530<br><ul style="list-style-type: none"> <li>• Check that the drive moves briefly and then decelerates back to a standstill</li> </ul> Check whether the following Safety messages are pending: <ul style="list-style-type: none"> <li>• C01707, C30707 (Tolerance for safe operating stop exceeded)</li> <li>• C01701, C30701 (STOP B initiated)</li> <li>• C01700, C30700 (STOP A initiated)</li> </ul> |        |
| 4.  | Analyze trace: <ul style="list-style-type: none"> <li>• As soon as r9713[0] (unit <math>\mu\text{m}</math> or <math>\text{m}^\circ</math>) leaves the tolerance window, a Safety message (r9722.7 = 0) becomes active</li> <li>• As a consequence, the drive is brought to a standstill with STOP B and STOP A</li> </ul>   |        |
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)   |        |
| 6.  | Deselect SOS and acknowledge Safety messages <ul style="list-style-type: none"> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li>• r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul> Acknowledge "switch-on inhibit" and run the drive <ul style="list-style-type: none"> <li>• Check the drive is moving</li> </ul>   |        |



## Example trace

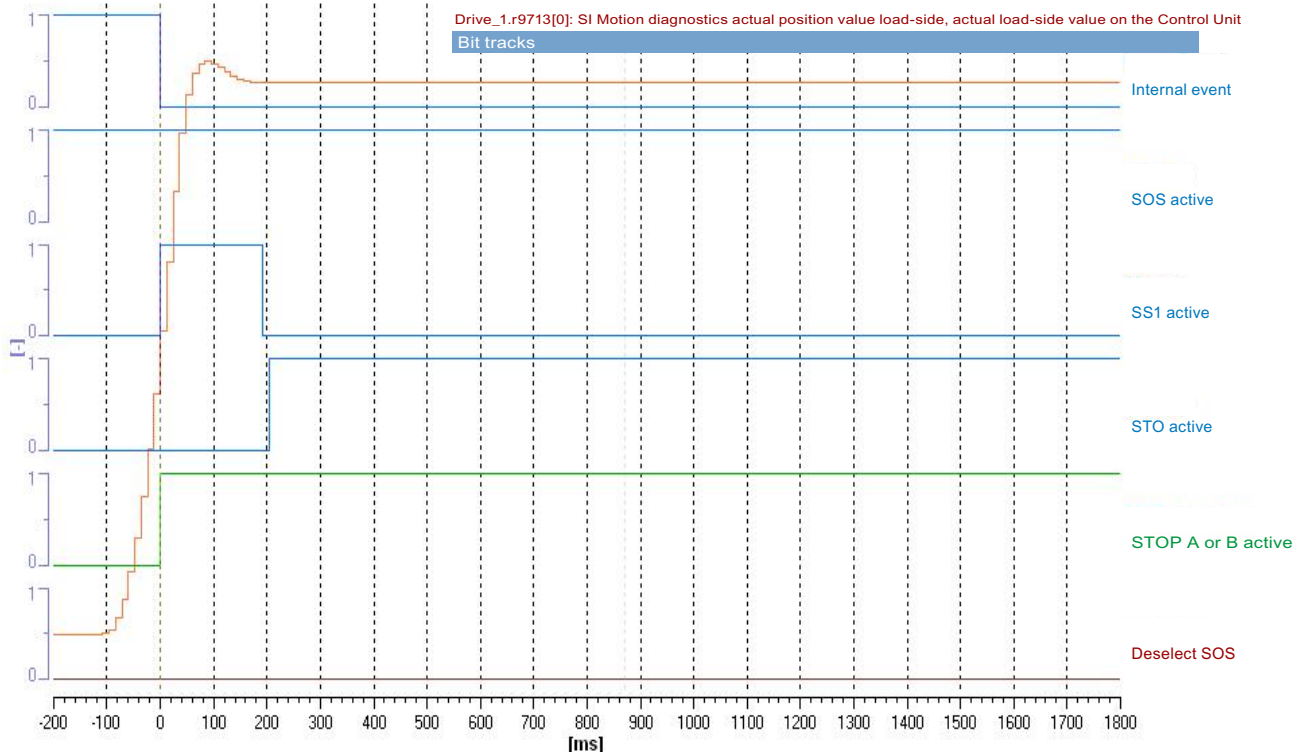


Figure 9-3 Example trace SOS

## Trace evaluation:

- SOS function is activated (see bits "deselect SOS" and "SOS active")
- The drive starts moving (time axis approx -100 ms)
- Exiting the SOS tolerance window is recognized (time axis approx 0 ms)
- Safety fault is initiated (time axis approx. 0 ms; bit "internal event" is set to 0)
- Fault response STOP B is initiated (see bit "STOP A or B active" and "SS1 active")
- The drive is decelerated to a standstill
- Standstill reached (time axis approx. 200 ms)
- STOP A (as follow-up response to STOP B) is activated (see bit "STO active"); at this point the speed falls below the shutdown speed SS1 (p9560/p9360) before the SS1 timer (p9556/p9356) has expired (drops below the shutdown speed SS1 before SS1 timer (p9556/p9356) has expired)

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

9.4.2.6 Acceptance tests for Safely Limited Speed with encoder (Extended Functions)

SLS with stop response "STOP A"

Table 9- 16 Function "Safely Limited Speed with encoder" with STOP A

| No.  | Description   | Status |
|--|---|--------|
| <p><b>Note:</b><br/>The acceptance test must be carried out separately for each configured control and each SLS speed limit used. Control may be via TM54F or PROFIsafe.</p> |   |        |
| 1.   | <p>Initial state</p> <ul style="list-style-type: none"> <li>• Drive in "Ready" state (p0010 = 0)</li> <li>• Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> <li>• Safety functions enabled (p9501.0 = 1)</li> <li>• SLS inactive (r9722.4 = 0)</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section</li> </ul>  |        |
| 2.   | <ul style="list-style-type: none"> <li>• It may be necessary to take measures in the higher-level control to be able to exceed the active speed limit.</li> <li>• Please ensure that the internal limits r9733.0 and r9733.1 are canceled by the selection "Start acceptance test".</li> </ul>  |        |
| 3.   | <p>Configure and activate trace recording</p> <ul style="list-style-type: none"> <li>• Trigger: Trigger on variable - bit pattern (r9722.7 = 0)</li> <li>• Record the following values: r9714[0], r9720, r9721, r9722</li> <li>• Select the time interval and pretrigger so you can recognize when the active SLS limit has been exceeded and the subsequent drive responses</li> </ul> <p>For better analysis, display the following bit values:</p> <ul style="list-style-type: none"> <li>• r9720.4 (deselection SLS) and r9720.9/.10 (selection SLS level)</li> <li>• r9721.12 (STOP A or B active)</li> <li>• r9722.0 (STO active; set for STOP A)</li> <li>• r9722.4 (SLS active) and r9722.9/.10 (active SLS level)</li> <li>• r9722.7 (internal event; set on the occurrence of the first Safety message)</li> </ul> <p>Select SLS with level x</p> <p>Switch on the drive and specify the setpoint above the SLS limit</p> <ul style="list-style-type: none"> <li>• Check that the drive is moving, and after the SLS limit (p9331[x]/9531[x]) has been exceeded that it is coasting or a configured holding brake is applied</li> </ul> <p>Check whether the following Safety messages are pending:</p> <ul style="list-style-type: none"> <li>• C01714 (x00), C30714 (x00); x = 1...4 depending on the SLS level (safely limited speed exceeded)</li> <li>• C01700, C30700 (STOP A initiated)</li> </ul> |        |

| No. | Description  | Status |
|-----|--|--------|
| 4.  | Analyze trace:   |        |
|     | <ul style="list-style-type: none"> <li>If r9714[0] (unit [<math>\mu\text{m}/\text{Safety clock cycle}</math>] or [<math>\text{m}^\circ/\text{Safety clock cycle}</math>]) exceeds the active SLS limit, a Safety message (r9722.7 = 0) becomes active</li> <li>STOP A is initiated as a consequence</li> </ul> |        |
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |
| 6.  | Deselect SLS and acknowledge Safety messages   |        |
|     | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li>r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>   |        |
|     | Acknowledge "switch-on inhibit" and run the drive  |        |
|     | Check the drive is moving  |        |

Example trace SLS with STOP A

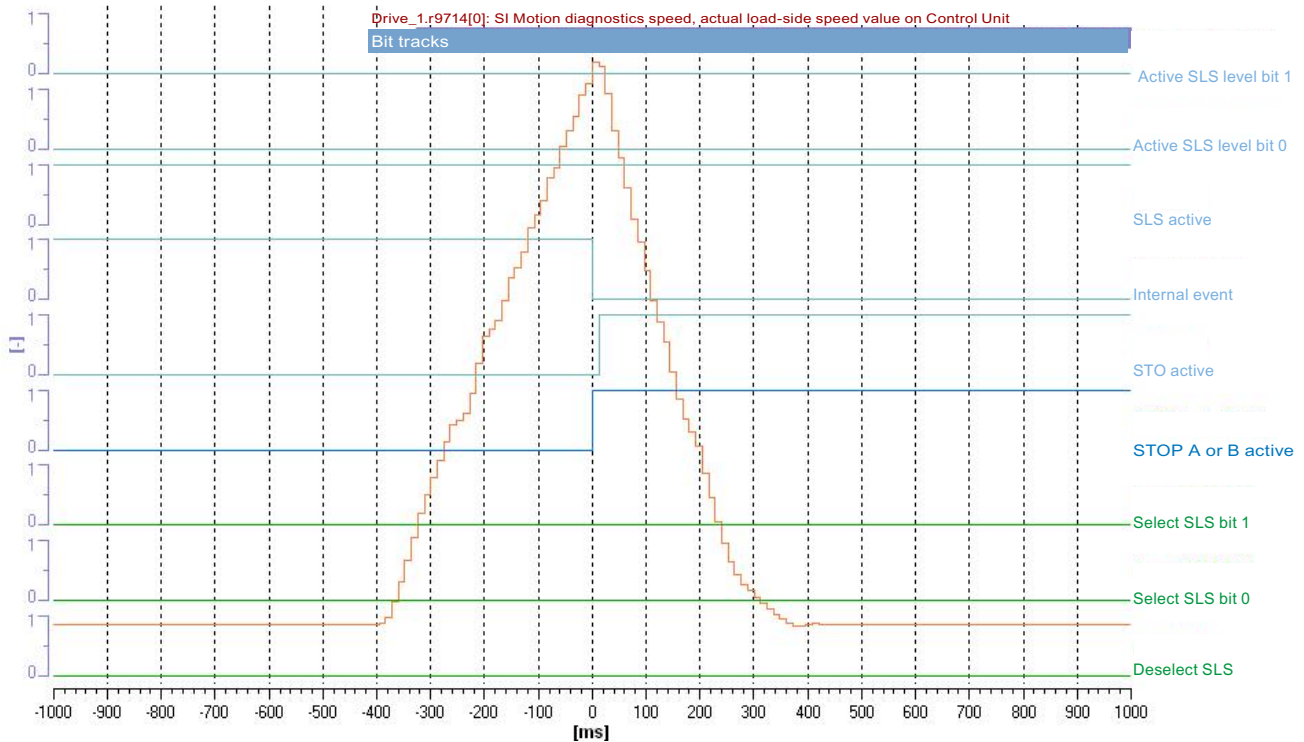


Figure 9-4 Example trace: SLS with STOP A

Trace evaluation:

- SLS function with SLS level 1 is active (see bits "deselection SLS", "selection SLS bit 0", "selection SLS bit 1" and "SLS active", "active SLS level bit 0" and "active SLS level bit 1")
- Drive is accelerated beyond the SLS limit (time axis from approx. -400 ms)
- Exceeding of the limit is recognized (time axis 0 ms)
- Safety fault is initiated (time axis 0 ms; bit "internal event" is set to 0)

*9.4 Acceptance tests*

- Fault response STOP A is initiated (time axis 0 ms; see bit "STOP A or B active" and "STO active")
- Drive coasts down (see curve of Drive\_1.r9714[0])

---

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

---

**SLS with stop response "STOP B"**

Table 9- 17 Function "Safely Limited Speed with encoder" with STOP B

| No.  | Description  | Status |
|--|--|--------|
| <b>Note:</b><br>The acceptance test must be carried out separately for each configured control and each SLS speed limit used. Control may be via TM54F or PROFIsafe. |  |        |
| 1.   | Initial state <ul style="list-style-type: none"> <li>• Drive in "Ready" state (p0010 = 0)</li> <li>• Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> <li>• Safety functions enabled (p9501.0 = 1)</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section</li> </ul>  |        |
| 2.   | It may be necessary to take measures in the higher-level control to be able to exceed the active speed limit.  |        |
| 3.   | Configure and activate trace recording. <ul style="list-style-type: none"> <li>• Trigger: Trigger on variable - bit pattern (r9722.7 = 0)</li> <li>• Record the following values: r9714[0], r9714[1], r9720, r9721, r9722</li> <li>• Select the time interval and pretrigger so you can recognize when the active SLS limit has been exceeded and the subsequent drive responses</li> </ul> For better analysis, display the following bit values: <ul style="list-style-type: none"> <li>• r9720.4 (deselection SLS) and r9720.9/.10 (selection SLS level)</li> <li>• r9721.12 (STOP A or B active)</li> <li>• r9722.0 (STO active; set for STOP A)</li> <li>• r9722.1 (SS1 active; set for STOP B)</li> <li>• r9722.4 (SLS active) and r9722.9/.10 (active SLS level)</li> <li>• r9722.7 (internal event; set on the occurrence of the first Safety message)</li> </ul> Select SLS with level x<br>Switch on the drive and specify the setpoint above the SLS limit <ul style="list-style-type: none"> <li>• Check that the drive is moving, and after the SLS limit (p9331[x]/9531[x]) has been exceeded that it is decelerated along the OFF3 ramp before STOP A becomes active</li> </ul> Check whether the following Safety messages are pending: <ul style="list-style-type: none"> <li>• C01714 (x00), C30714 (x00); x = 1...4 depending on the SLS level (safely limited speed exceeded)</li> <li>• C01701, C30701 (STOP B initiated)</li> <li>• C01700, C30700 (STOP A initiated)</li> </ul> |        |

9.4 Acceptance tests

| No. | Description  | Status |
|-----|--|--------|
| 4.  | Analyze trace:   |        |
|     | <ul style="list-style-type: none"> <li>If r9714[0] (unit [<math>\mu\text{m}/\text{Safety clock cycle}</math>] or [<math>\text{m}^\circ/\text{Safety clock cycle}</math>]) exceeds the active SLS limit, a Safety message (r9722.7 = 0) becomes active</li> </ul> |        |
|     | <ul style="list-style-type: none"> <li>A STOP B is initiated as a consequence (with subsequent stop STOP A)</li> </ul>   |        |
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |
| 6.  | Deselect SLS and acknowledge Safety messages   |        |
|     | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>   |        |
|     | Acknowledge "switch-on inhibit" and run the drive  |        |
|     | <ul style="list-style-type: none"> <li>Check the drive is moving.</li> </ul>   |        |

Example trace SLS with STOP B

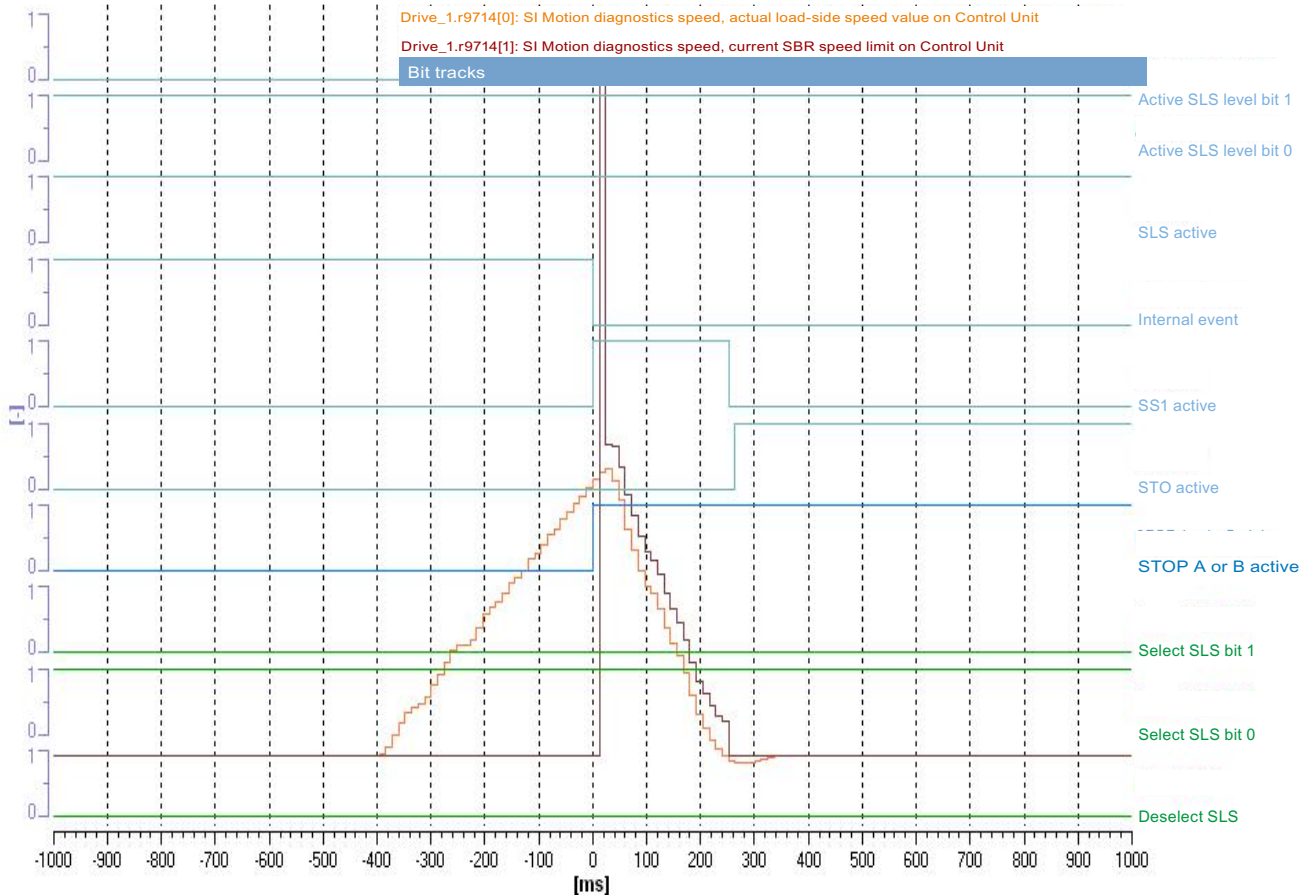


Figure 9-5 Example trace: SLS with STOP B

Trace evaluation:

- SLS function with SLS level 2 is active (see bits "deselection SLS", "selection SLS bit 0", "selection SLS bit 1" and "SLS active", "active SLS level bit 0" and "active SLS level bit 1")
- Drive is accelerated beyond the SLS limit (time axis from approx. -400 ms)
- Exceeding of the limit is recognized (time axis 0 ms)
- Safety fault is initiated (time axis 0 ms; bit "internal event" is set to 0)
- Fault response STOP B is initiated (time axis 0 ms; see bit "STOP A or B active" and "SS1 active")
- Drive is decelerated to a standstill (see curve of Drive\_1.r9714[0])
- Standstill reached (time axis from approx. 250 ms)
- STOP A (as follow-up response to STOP B) is activated (see bit "STO active"); at this point the speed falls below the shutdown speed SS1 (p9560/p9360) (drops below the shutdown speed SS1 before SS1 timer p9556/p9356 has expired)

---

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

---

**SLS with stop response "STOP C"**

Table 9- 18 Function "Safely Limited Speed with encoder" with STOP C

| No.  | Description   | Status |
|--|---|--------|
| <p><b>Note:</b><br/>The acceptance test must be carried out separately for each configured control and each SLS speed limit used. Control may be via TM54F or PROFIsafe.</p> |   |        |
| 1.   | <p>Initial state</p> <ul style="list-style-type: none"> <li>• Drive in "Ready" state (p0010 = 0)</li> <li>• Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> <li>• Safety functions enabled (p9501.0 = 1)</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "non-critical alarms" in section</li> </ul>  |        |
| 2.   | <p>It may be necessary to take measures in the higher-level control to be able to exceed the active speed limit</p>   |        |
| 3.   | <p>Configure and activate trace recording.</p> <ul style="list-style-type: none"> <li>• Trigger: Trigger on variable - bit pattern (r9722.7 = 0)</li> <li>• Record the following values: r9714[0], r9714[1], r9720, r9721, r9722</li> <li>• Select the time interval and pretrigger so you can recognize when the active SLS limit has been exceeded and the subsequent drive responses</li> </ul> <p>Select SLS with level x</p> <p>Switch on the drive and specify the setpoint above the SLS limit</p> <ul style="list-style-type: none"> <li>• Check that the drive is moving, and after the SLS limit (p9331[x]/9531[x]) has been exceeded that it is decelerated to a standstill along the OFF3 ramp</li> </ul> <p>Check whether the following Safety messages are pending:</p> <ul style="list-style-type: none"> <li>• C01714 (x00), C30714 (x00); x = 1...4 depending on the SLS level (safely limited speed exceeded)</li> <li>• C01708, C30708 (STOP C initiated)</li> </ul> |        |
| 4.   | <p>Analyze trace:</p> <ul style="list-style-type: none"> <li>• If r9714[0] (unit [<math>\mu</math>m/Safety clock cycle] or [m°/Safety clock cycle]) exceeds the active SLS limit, a Safety message (r9722.7 = 0) becomes active</li> <li>• STOP C is initiated as a consequence</li> </ul> <p>For better analysis, display the following bit values:</p> <ul style="list-style-type: none"> <li>• r9720.4 (deselection SLS) and r9720.9/.10 (selection SLS level)</li> <li>• r9721.13 (STOP C active)</li> <li>• r9722.2 (SS2 active; set for STOP C)</li> <li>• r9722.3 (SOS active)</li> <li>• r9722.4 (SLS active) and r9722.9/.10 (active SLS level)</li> <li>• r9722.7 (internal event; set on the occurrence of the first Safety message)</li> </ul>  |        |



| No. | Description  | Status |
|-----|--|--------|
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |
| 6.  | Deselect SLS and acknowledge Safety messages   |        |
|     | <ul style="list-style-type: none"> <li>• Ensure that the drive is running with the setpoint again</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> </ul> |        |

**Example trace SLS with STOP C**

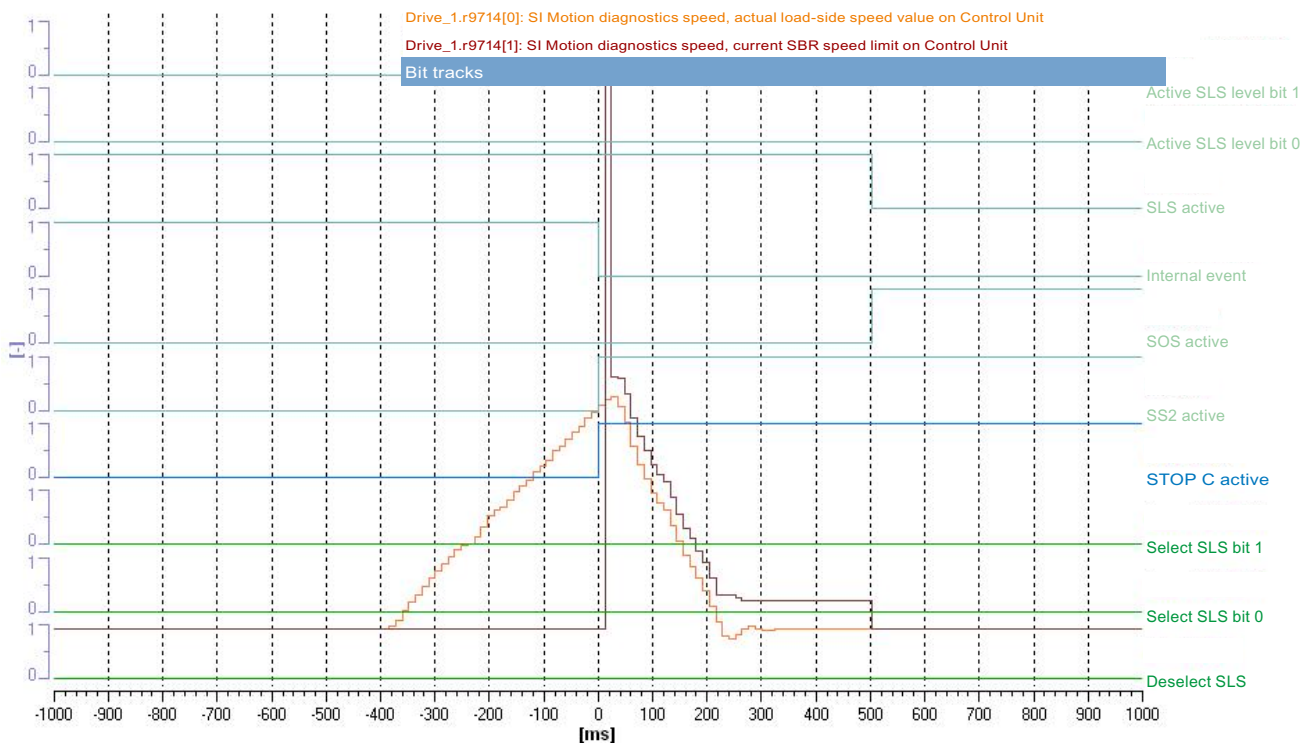


Figure 9-6 Example trace: SLS with STOP C

Trace evaluation:

- SLS function with SLS level 1 is active (see bits "deselection SLS", "selection SLS bit 0", "selection SLS bit 1" and "SLS active", "active SLS level bit 0" and "active SLS level bit 1")
- Drive is accelerated beyond the SLS limit (time axis from approx. -400 ms)
- Exceeding of the limit is recognized (time axis 0 ms)
- Safety fault is initiated (time axis 0 ms; bit "internal event" is set to 0)
- Fault response STOP C is initiated (see bit "STOP C active" and "SS2 active")
- Drive is decelerated to a standstill (see curve of Drive\_1.r9714[0])

*9.4 Acceptance tests*

- After the SS2 timer has expired the follow-up function SOS is activated (time axis 500 ms)
- The "SOS active" bit is set and "SLS active" is reset

---

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

---

## SLS with stop response "STOP D"

Table 9- 19 Function "Safely Limited Speed with encoder" with STOP D

| No.  | Description   | Status |
|--|---|--------|
| <b>Note:</b><br>The acceptance test must be carried out separately for each configured control and each SLS speed limit used. Control may be via TM54F or PROFIsafe. |   |        |
| 1.   | Initial state   |        |
|  | • Drive in "Ready" state (p0010 = 0)  |        |
|  | • Safety Integrated Extended Functions enabled (p9601.2 = 1)  |        |
|  | • Safety functions enabled (p9501.0 = 1)  |        |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section   |        |
| 2.   | It may be necessary to take measures in the higher-level control to be able to exceed the active speed limit  |        |
| 3.   | Configure and activate trace recording  |        |
|  | • Trigger: Trigger on variable - bit pattern (r9722.7 = 0)  |        |
|  | • Record the following values: r9714[0], r9720, r9721, r9722  |        |
|  | • Select the time interval and pretrigger so that the exceeding of the active SLS limit and the subsequent drive responses can be recognized  |        |
|  | For better analysis, display the following bit values:  |        |
|  | • r9720.4 (deselection SLS) and r9720.9/.10 (selection SLS level)   |        |
|  | • r9721.14 (STOP D active)  |        |
|  | • r9722.3 (SOS active; set for STOP D)  |        |
|  | • r9722.4 (SLS active) and r9722.9/.10 (active SLS level)   |        |
|  | • r9722.7 (internal event; set on the occurrence of the first Safety message)   |        |
|  | Select SLS with level x   |        |
|  | Switch on the drive and specify the setpoint above the SLS limit  |        |
|  | • Check that the drive is moving, and after the SLS limit (p9331[x]/9531[x]) and the SOS standstill tolerance window have been exceeded, that it is decelerated along the OFF3 ramp before STOP A becomes active as a consequence |        |
|  | Check whether the following Safety messages are pending:  |        |
|  | • C01714 (x00), C30714 (x00); x = 1...4 depending on the SLS level (safely limited speed exceeded)  |        |
|  | • C01709, C30709 (STOP D initiated)   |        |
| • C01707, C30707 (Tolerance for safe operating stop exceeded)  |   |        |
| • C01701, C30701 (STOP B initiated)  |   |        |
| • C01700, C30700 (STOP A initiated)  |   |        |

9.4 Acceptance tests

| No. | Description  | Status |
|-----|--|--------|
| 4.  | Analyze trace:   |        |
|     | <ul style="list-style-type: none"> <li>If r9714[0] (unit [<math>\mu\text{m}/\text{Safety clock cycle}</math>] or [<math>\text{m}^\circ/\text{Safety clock cycle}</math>]) exceeds the active SLS limit, a Safety message (r9722.7 = 0) becomes active</li> </ul> |        |
|     | <ul style="list-style-type: none"> <li>STOP D is initiated as a consequence.</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>As a consequence of STOP D (selection SOS) the above-described responses will be triggered if the drive is not stopped by the higher-level control on activation of STOP D</li> </ul>                                     |        |
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |
| 6.  | Deselect SLS and acknowledge Safety messages   |        |
|     | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>   |        |
|     | Acknowledge "switch-on inhibit" and run the drive  |        |
|     | <ul style="list-style-type: none"> <li>Check the drive is moving</li> </ul>  |        |

Example trace SLS with STOP D

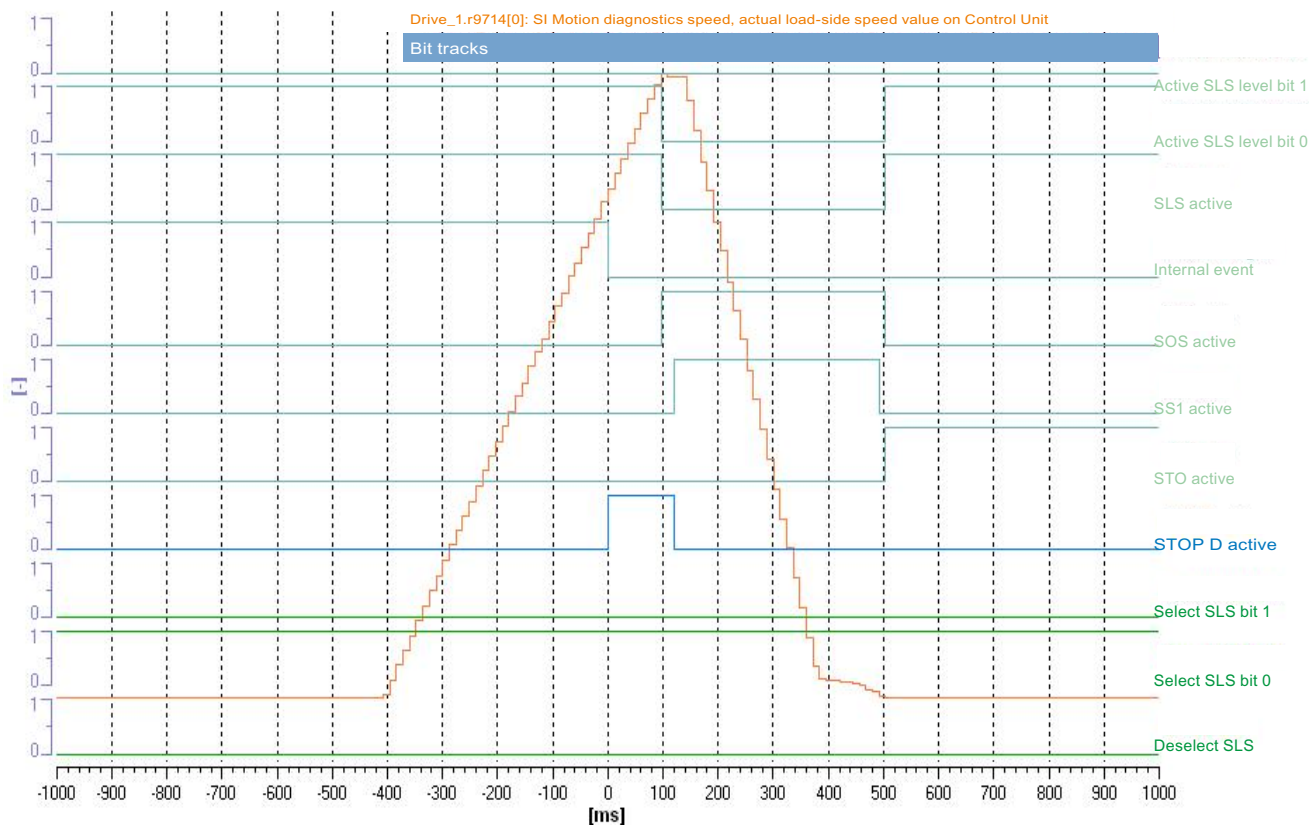


Figure 9-7 Example trace: SLS with STOP D

Trace evaluation:

- SLS function with SLS level 2 is active (see bits "deselection SLS", "selection SLS bit 0", "selection SLS bit 1" and "SLS active", "active SLS level bit 0" and "active SLS level bit 1")
- Drive is accelerated beyond the SLS limit (time axis from approx. -400 ms)
- Exceeding of the limit is recognized (time axis 0 ms)
- Safety fault is initiated (time axis 0 ms; bit "internal event" is set to 0)
- Fault response STOP D (corresponds to selection SOS) is initiated (see bit "STOP D active")
- Only after the delay time between selection and activation SOS (p9551/p9351) has expired is the standstill position safely monitored (time axis 100 ms; see bit "SOS active")
- But as the axis continues to turn, the standstill tolerance window is violated (time axis approx. 120 ms)
- STOP B is initiated (see bit "SS1 active")
- The drive is decelerated to a standstill
- Standstill is reached (time axis approx. 500 ms)
- STOP A (as follow-up response to STOP B) is activated (see bit "STO active"); at this point the speed falls below the shutdown speed SS1 (p9560/p9360) (drops below the shutdown speed SS1 before SS1 timer p9556/p9356 has expired).

---

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

---

**SLS with fault reaction "STOP E"**

Table 9- 20 Function "Safely Limited Speed with encoder" with STOP E

| No.  | Description  | Status |
|--|--|--------|
| <p><b>Note:</b><br/>The acceptance test must be carried out separately for each configured control and each SLS speed limit used. Control may be via TM54F or PROFIsafe.</p> |  |        |
| 1.   | <p>Initial state</p> <ul style="list-style-type: none"> <li>• Drive in "Ready" state (p0010 = 0)</li> <li>• Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> <li>• Safety functions enabled (p9501.0 = 1)</li> <li>• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section .</li> </ul>   |        |
| 2.   | <p>It may be necessary to take measures in the higher-level control to be able to exceed the active speed limit</p>  |        |
| 3.   | <p>Configure and activate trace recording</p> <ul style="list-style-type: none"> <li>• Trigger: Trigger on variable - bit pattern (r9722.7 = 0)</li> <li>• Record the following values: r9714[0], r9720, r9721, r9722</li> <li>• Select the time interval and pretrigger so that the exceeding of the active SLS limit and the subsequent drive responses can be recognized</li> </ul> <p>For better analysis, display the following bit values:</p> <ul style="list-style-type: none"> <li>• r9720.4 (deselection SLS) and r9720.9/.10 (selection SLS level)</li> <li>• r9721.15 (STOP E active)</li> <li>• r9722.3 (SOS active; set for STOP E)</li> <li>• r9722.4 (SLS active) and r9722.9/.10 (active SLS level)</li> <li>• r9722.7 (internal event; set on the occurrence of the first Safety message)</li> </ul> <p>Select SLS with level x</p> <p>Switch on the drive and specify the setpoint above the SLS limit</p> <ul style="list-style-type: none"> <li>• Check that the drive is moving, and after the SLS limit (p9331[x]/9531[x]) and the SOS standstill tolerance window have been exceeded, that it is decelerated along the OFF3 ramp before STOP A becomes active as a consequence</li> </ul> <p>Check whether the following Safety messages are pending:</p> <ul style="list-style-type: none"> <li>• C01714 (x00), C30714 (x00); x = 1...4 depending on the SLS level (safely limited speed exceeded)</li> <li>• C01710, C30710 (STOP E initiated)</li> <li>• C01707, C30707 (Tolerance for safe operating stop exceeded)</li> <li>• C01701, C30701 (STOP B initiated)</li> <li>• C01700, C30700 (STOP A initiated)</li> </ul> |        |

| No. | Description  | Status |
|-----|--|--------|
| 4.  | Analyze trace:   |        |
|     | <ul style="list-style-type: none"> <li>If r9714[0] (unit [<math>\mu\text{m}/\text{Safety clock cycle}</math>] or [<math>\text{m}^\circ/\text{Safety clock cycle}</math>]) exceeds the active SLS limit, a Safety message (r9722.7 = 0) becomes active</li> </ul> |        |
|     | <ul style="list-style-type: none"> <li>STOP E is initiated as a consequence.</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>As a consequence of STOP E (selection SOS) the above-described responses will be triggered if the drive is not stopped by the higher-level control on activation of STOP E</li> </ul>                                     |        |
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |
| 6.  | Deselect SLS and acknowledge Safety messages   |        |
|     | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>   |        |
|     | Acknowledge "switch-on inhibit" and run the drive  |        |
|     | <ul style="list-style-type: none"> <li>Check the drive is moving</li> </ul>  |        |

**Example trace SLS with STOP E**

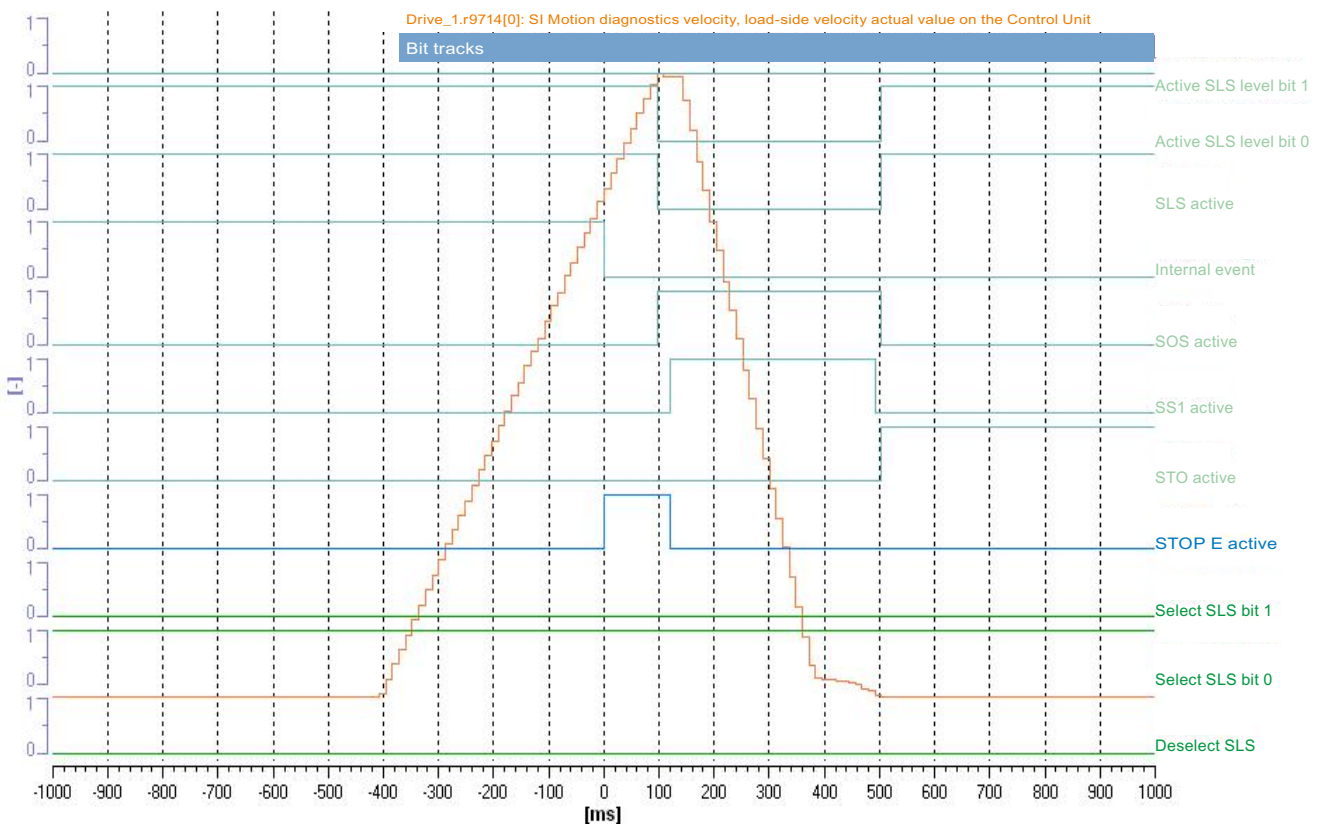


Figure 9-8 Example trace: SLS with STOP E

Trace evaluation:

- SLS function with SLS level 2 is active (see bits "deselection SLS", "selection SLS bit 0", "selection SLS bit 1" and "SLS active", "active SLS level bit 0" and "active SLS level bit 1")
- Drive is accelerated beyond the SLS limit (time axis from approx. -400 ms)
- Exceeding of the limit is recognized (time axis 0 ms)
- Safety fault is initiated (time axis 0 ms; bit "internal event" is set to 0)
- Fault reaction STOP E (corresponds to selection SOS) is initiated (see bit "STOP E active")
- Only after the delay time between selection and activation SOS (p9551/p9351) has expired is the standstill position safely monitored (time axis 100 ms; see bit "SOS active")
- But as the axis continues to turn, the standstill tolerance window is violated (time axis approx. 120 ms)
- STOP B is initiated (see bit "SS1 active")
- The drive is decelerated to a standstill
- Standstill is reached (time axis approx. 500 ms)
- STOP A (as follow-up response to STOP B) is activated (see bit "STO active"); at this point the speed falls below the shutdown speed SS1 (p9560/p9360) (drops below the shutdown speed SS1 before SS1 timer p9556/p9356 has expired).

---

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

---



### 9.4.2.7 Acceptance test for Safe Speed Monitor (SSM)

Table 9- 21 "Safe Speed Monitor" function

| No. | Description  | Status |
|-----|--|--------|
| 1.  | Initial state  |        |
|     | <ul style="list-style-type: none"> <li>• Drive in "Ready" state (p0010 = 0)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• Safety functions enabled (p9501.0 = 1)</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• No Safety message (r0945, r2122, r9747); see note "Non-critical alarms" in section</li> </ul>   |        |
| 2.  | Switch off the drive or specify speed setpoint = 0   |        |
|     | Configure and activate trace recording   |        |
|     | <ul style="list-style-type: none"> <li>• Trigger: Trigger on variable - bit pattern (r9722.15 = 1)</li> </ul>  |        |
|     | <ul style="list-style-type: none"> <li>• Record the following values: r9714[0], r9722</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• Select the time interval and pretrigger so you can recognize when the level exceeds the SSM limit (p9346/p9546) and subsequently falls below it again</li> </ul>              |        |
|     | Switch on the drive and specify the setpoint so that the level briefly exceeds the SSM limit and then drops below it once more   |        |
|     | <ul style="list-style-type: none"> <li>• Check the drive is turning</li> </ul>   |        |
| 3.  | Analyze trace:   |        |
|     | <ul style="list-style-type: none"> <li>• If r9714[0] violates the SSM limit p9346/p9546, r9722.15 = 0 applies</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• After the limit has been violated, r9722.15 = 1 is valid</li> </ul>   |        |
|     | <ul style="list-style-type: none"> <li>• If hysteresis is active, then r9722.15 only becomes 1 once more if r9714[0] no longer violates the limit p9346/p9546 offset with the hysteresis value p9347/p9547.</li> </ul> |        |
|     | For better analysis, display the following bit values:   |        |
|     | <ul style="list-style-type: none"> <li>• r9722.15 (SSM speed under the limit value)</li> </ul>   |        |
| 4.  | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |

### Example Trace SSM (with hysteresis)

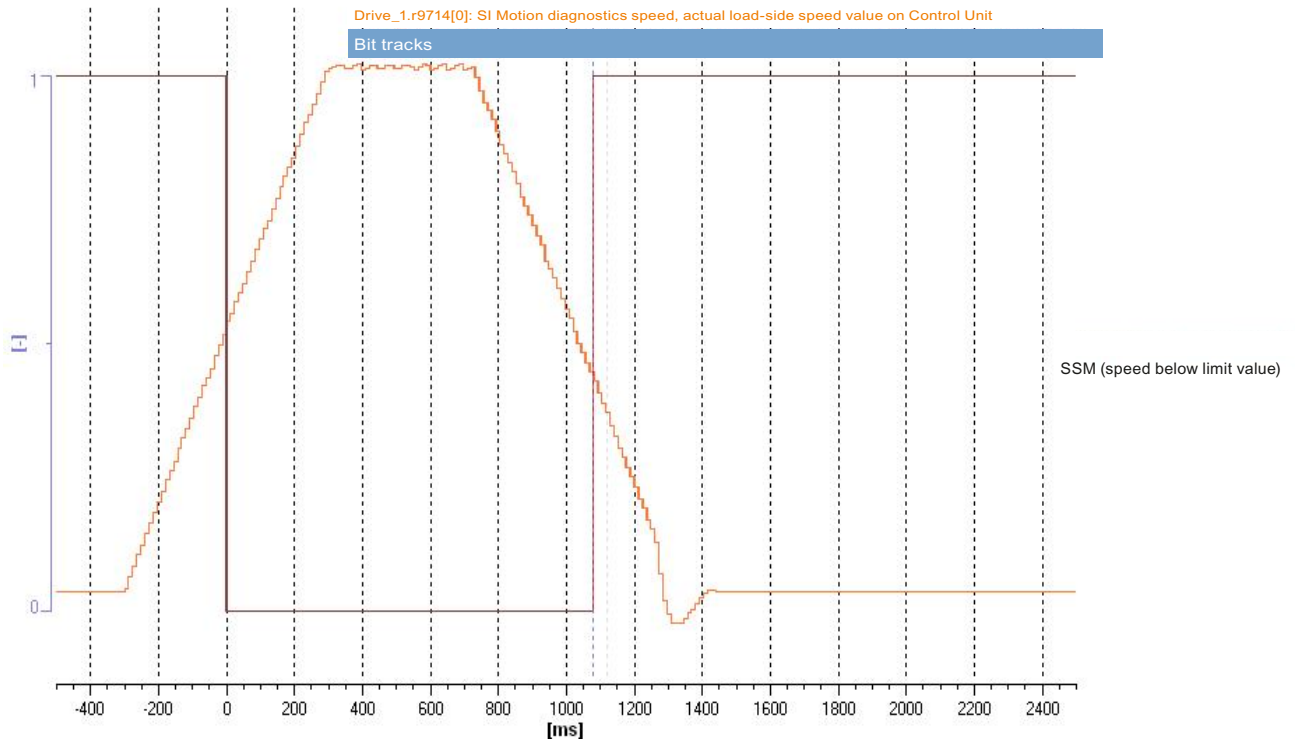


Figure 9-9 Example Trace SSM (with hysteresis)

Trace evaluation:

- Drive is accelerated (time axis from approx. -300 ms)
- SSM limit value (p9546/p9346) is exceeded (time axis 0 ms)
- Bit "SSM (speed below limit value)" is set to 0 (time axis 0 ms)
- Drive is decelerated again (time axis approx. 750 ms)
- Hysteresis active: The above named bit is only set to 1 once more if the speed falls below the SSM limit value minus the hysteresis value (p9547/p9347) (time axis approx. 1080 ms)

---

#### Note

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

---

### 9.4.3 Acceptance tests for Extended Functions (without encoder)

#### 9.4.3.1 Acceptance test Safe Torque Off without encoder (Extended Functions)

Table 9- 22 Function "Safe Torque Off without encoder"

| No.  | Description  | Status |
|--|--|--------|
| <b>Notes:</b>  |  |        |
| The acceptance test must be individually conducted for each configured control.<br>The control can be realized via TM54F or via PROFIsafe. |  |        |
| 1.   | Initial state  |        |
|  | • Drive in "Ready" state (p0010 = 0)   |        |
|  | • Safety Integrated Extended Functions enabled (p9601.2 = 1)   |        |
|  | • Safety functions enabled (p9501.0 = 1)   |        |
|  | • Safety configured without encoder (p9506 = 1 or p9506 = 3)   |        |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section                      |        |
|  | • r9772.18 = r9872.18 = 0 (STO deselected via Safe Motion Monitoring)  |        |
|  | • r9772.0 = r9772.1 = 0 (STO deselected and inactive – Control Unit)   |        |
|  | • r9872.0 = r9872.1 = 0 (STO deselected and inactive – Motor Module)   |        |
|  | • r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)  |        |
|  | • r9720.0 = 1 (STO deselected)   |        |
|  | • r9722.0 = 0 (STO inactive)   |        |
| 2.   | Run the drive  |        |
|  | • Check whether the correct drive is operational   |        |
|  | Select STO when you issue the traversing command and check the following:  |        |
|  | • The drive coasts to a standstill or is braked and stopped by the mechanical brake (if available and configured (p1215, p9602, p9802)). |        |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])   |        |
|  | • r9772.18 = r9872.18 = 1 (STO selected via Safe Motion Monitoring)  |        |
|  | • r9772.0 = r9772.1 = 1 (STO selected and active – Control Unit)   |        |
|  | • r9872.0 = r9872.1 = 1 (STO selected and active – Motor Module)   |        |
|  | • r9773.0 = r9773.1 = 1 (STO selected and active – drive)  |        |
|  | • r9720.0 = 0 (STO selected)   |        |
|  | • r9722.0 = 1 (STO active)   |        |

9.4 Acceptance tests

| No. | Description  | Status |
|-----|--|--------|
| 3.  | Deselect STO and check the following: <ul style="list-style-type: none"> <li data-bbox="201 389 1209 427">• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li data-bbox="201 434 1209 472">• r9772.18 = r9872.18 = 0 (STO deselected via Safe Motion Monitoring)</li> <li data-bbox="201 479 1209 517">• r9772.0 = r9772.1 = 0 (STO deselected and inactive – Control Unit)</li> <li data-bbox="201 524 1209 562">• r9872.0 = r9872.1 = 0 (STO deselected and inactive – Motor Module)</li> <li data-bbox="201 568 1209 607">• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)</li> <li data-bbox="201 613 1209 651">• r9720.0 = 1 (STO deselected)</li> <li data-bbox="201 658 1209 696">• r9722.0 = 0 (STO inactive)</li> <li data-bbox="201 703 1209 741">• r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul> |        |
| 4.  | Acknowledge "switch-on inhibit" and run the drive. Ensure that the correct drive is running.<br>The following is tested: <ul style="list-style-type: none"> <li data-bbox="201 860 1209 889">• Correct DRIVE-CLiQ wiring between Control Unit and Motor Modules</li> <li data-bbox="201 896 1209 925">• Correct assignment of drive No. – Motor Module – motor</li> <li data-bbox="201 931 1209 960">• The hardware is functioning properly</li> <li data-bbox="201 967 1209 996">• Correct parameterization of the STO function</li> <li data-bbox="201 1003 1209 1032">• Forced dormant error detection of the switch-off signal paths</li> </ul>  |        |

### 9.4.3.2 Acceptance test for Safe Stop 1 without encoder (Extended Functions)

Table 9- 23 Function "Safe Stop 1 without encoder"

| No.  | Description   | Status  |  |
|--|---|---|--|
| <b>Note:</b><br>The acceptance test must be individually conducted for each configured control.<br>The control can be realized via TM54F or via PROFIsafe. |   |   |  |
| 1.   | Initial state   |   |  |
|  | • Drive in "Ready" state (p0010 = 0)  |   |  |
|  | • Safety Integrated Extended Functions enabled (p9601.2 = 1)                          |   |  |
|  | • Safety functions enabled (p9501.0 = 1)  |   |  |
|  | • Safety configured without encoder (p9506 = 1 or p9506 = 3)                          |   |  |
| 2.   | Run the drive   |   |  |
|  | • Check whether the correct drive is operational                                      |   |  |
|  | 3.  | Configure and activate trace recording                          |  |
|  |   | • Trigger: Trigger on variable - bit pattern (r9720.1 = 0)      |  |
|  |   | • Record the following values: r9714[0], r9714[1], r9720, r9722 |  |
| • Select the time interval and pretrigger so you can recognize the selection of SS1 and the transition into the subsequent STO state                       |   |   |  |
| Select SS1 while the drive is moving   |   |   |  |
| • The drive decelerates along the OFF3 ramp  |   |   |  |
| • Subsequent state STO is activated  |   |   |  |
| For better analysis, display the following bit values:   |   |   |  |
| • r9720.1 (deactivation SS1)   |   |   |  |
| • r9722.0 (STO active)   |   |   |  |
| • r9722.1 (SS1 active)   |   |   |  |
| 4.   | Analyze trace:  |   |  |
|  | • STO is triggered if the speed drops below the shutdown speed (p9360/9560)           |   |  |
| 5.   | Save/print the trace and add it to the acceptance report (refer to the example below) |   |  |
| 6.   | Canceling SS1   |   |  |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])              |   |  |
|  | Acknowledge "switch-on inhibit" and run the drive                                     |   |  |
| • Ensure that the correct drive is running   |   |   |  |

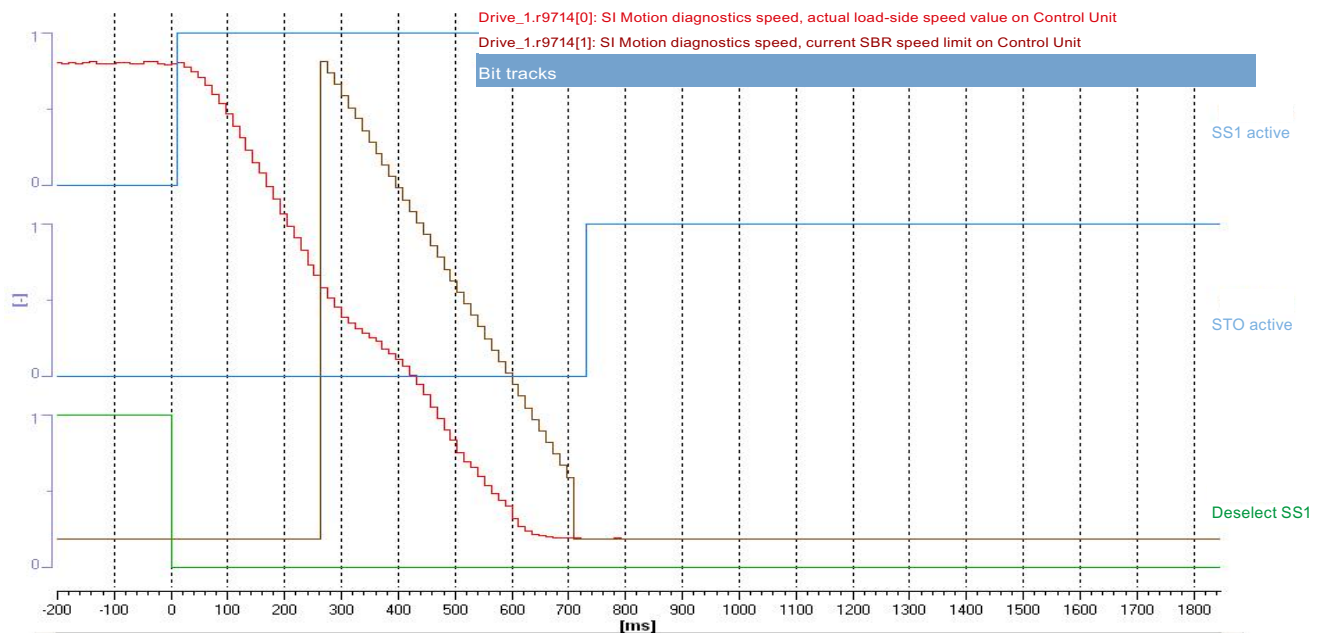


Figure 9-10 Example Trace SS1 without encoder

Trace evaluation:

- SS1 function is selected (time axis 0 ms; see bit "deselection SS1")
- Response bit "SS1 active" is set (time axis approx 20 ms)
- The drive decelerates along the configured OFF3 ramp (p1135)
- Recording of r9714[0] (orange curve) shows whether the OFF3 ramp is active
- STO is activated (time axis approx. 720 ms; see bit "STO active"); at this point the speed falls below the shutdown speed SS1 (p9560/p9360)
- A fault is generated if the envelope curve of function SBR (Drive\_1.r9714[1]) is exceeded by the actual speed (Drive\_1.r9714[0])

In contrast to the SAM for Safety with encoder, this curve is not tracked according to actual speed but calculated using Safety parameters. Furthermore, this monitoring only becomes active after a configurable time has elapsed (in this case the time is 250 ms).

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

### 9.4.3.3 Acceptance test for Safe Brake Control without encoder (Extended Functions)

Table 9- 24 Acceptance test "Safe Brake Control without encoder"

| No.  | Description   | Status |
|--|---|--------|
| <b>Note:</b>   |   |        |
| The acceptance test must be individually conducted for each configured control.<br>The control can be realized via TM54F or via PROFIsafe. |   |        |
| 1.   | Initial state   |        |
|  | • Drive in "Ready" state (p0010 = 0)  |        |
|  | • Safety Integrated Extended Functions enabled (p9601.2 = 1)  |        |
|  | • Safety functions enabled (p9501.0 = 1)  |        |
|  | • Safety configured without encoder (p9506 = 1 or p9506 = 3)  |        |
|  | • Enable SBC function (p9602 = 1, p9802 = 1)  |        |
|  | • Brake as in sequence control or brake always released (p1215 = 1 or p1215 = 2)                                    |        |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section |        |
|  | • r9772.18 = r9872.18 = 0 (STO deselected via Safe Motion Monitoring)   |        |
|  | • r9772.4 = r9872.4 = 0; r9773.4 = 0 (SBC not requested)  |        |
| • r9720.0 = 1 (STO deselected)   |   |        |
| • r9722.0 = 0 (STO inactive)   |   |        |
| 2.   | Run drive (if applied, brake is released)   |        |
|  | • Check whether the correct drive is operational  |        |
|  | Select STO when you issue the traversing command and check the following:   |        |
|  | • Brake is applied  |        |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])  |        |
|  | • r9772.4 = r9872.4 = 1; r9773.4 = 1 (SBC requested)  |        |
|  | • r9772.18 = r9872.18 = 1 (STO selected via Safe Motion Monitoring)   |        |
| • r9720.0 = 0 (STO selected)   |   |        |
| • r9722.0 = 1 (STO active)   |   |        |
| 3.   | Deselect STO and check the following:   |        |
|  | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])  |        |
|  | • r9772.4 = r9872.4 = 0; r9773.4 = 0 (SBC deselected)   |        |
|  | • r9772.18 = r9872.18 = 0 (STO deselected via Safe Motion Monitoring)   |        |
|  | • r9720.0 = 1 (STO deselected)  |        |
|  | • r9722.0 = 0 (STO inactive)  |        |
| • r0046.0 = 1 (drive in "switch-on inhibited" state)   |   |        |

9.4 Acceptance tests

| No. | Description  | Status |
|-----|--|--------|
| 4.  | Acknowledge "switch-on inhibit" and run the drive. Check whether the correct drive is operational.<br>The following is tested:   |        |
|     | <ul style="list-style-type: none"> <li>The brake is connected properly</li> <li>The hardware is functioning properly</li> <li>The SBC is parameterized correctly</li> <li>Forced dormant error detection of the brake control</li> </ul> |        |

9.4.3.4 Acceptance tests for Safely Limited Speed without encoder (Extended Functions)

SLS with stop response "STOP A"

Table 9- 25 Function "Safely Limited Speed without encoder" with "STOP A"

| No.  | Description  | Status |
|--|--|--------|
| <b>Note:</b><br>The acceptance test must be carried out separately for each configured control and each SLS speed limit used. Control may be via TM54F or PROFIsafe. |  |        |
| 1.   | Initial state  |        |
|  | <ul style="list-style-type: none"> <li>Drive in "Ready" state (p0010 = 0)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>Safety Integrated Extended Functions enabled (p9601.2 = 1)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>Safety functions enabled (p9501.0 = 1)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>Safety configured without encoder (p9506 = 1 or p9506 = 3)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section</li> </ul>  |        |
| 2.   | <ul style="list-style-type: none"> <li>It may be necessary to take measures in the higher-level control to be able to exceed the active speed limit.</li> <li>Please ensure that the internal limits r9733.0 and r9733.1 are canceled by the selection "Start acceptance test".</li> </ul> |        |
| 3.   | Configure and activate trace recording   |        |
|  | <ul style="list-style-type: none"> <li>Trigger: Trigger on variable - bit pattern (r9722.7 = 0)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>Record the following values: r9714[0], r9720, r9721, r9722</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>Select the time interval and pretrigger so you can recognize when the active SLS limit has been exceeded and the subsequent drive responses</li> </ul>  |        |
|  | Select SLS with level x  |        |
|  | Switch on the drive and specify the setpoint above the SLS limit   |        |
|  | <ul style="list-style-type: none"> <li>Check that the drive is moving, and after the SLS limit (p9331[x]/9531[x]) has been exceeded that it is coasting or a configured holding brake is applied</li> </ul>  |        |
|  | Check whether the following Safety messages are pending:   |        |
|  | <ul style="list-style-type: none"> <li>C01714 (x00), C30714 (x00); x = 1...4 depending on the SLS level (safely limited speed exceeded)</li> </ul>   |        |
|  | <ul style="list-style-type: none"> <li>C01700, C30700 (STOP A initiated)</li> </ul>  |        |



| No. | Description  | Status |
|-----|--|--------|
| 4.  | Analyze trace: <ul style="list-style-type: none"> <li data-bbox="264 389 1185 461">• If r9714[0] exceeds the active SLS limit, a Safety message (r9722.7 = 0) becomes active</li> <li data-bbox="264 472 707 501">• STOP A is initiated as a consequence</li> </ul> For better analysis, display the following bit values: <ul style="list-style-type: none"> <li data-bbox="264 562 983 591">• r9720.4 (deselection SLS) and r9720.9/.10 (selection SLS level)</li> <li data-bbox="264 607 632 636">• r9721.12 (STOP A or B active)</li> <li data-bbox="264 658 703 687">• r9722.0 (STO active; set for STOP A)</li> <li data-bbox="264 703 890 732">• r9722.4 (SLS active) and r9722.9/.10 (active SLS level)</li> <li data-bbox="264 754 1086 784">• r9722.7 (internal event; set on the occurrence of the first Safety message)</li> </ul> |        |
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |
| 6.  | Deselect SLS and acknowledge Safety messages. <ul style="list-style-type: none"> <li data-bbox="264 882 1015 911">• No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li data-bbox="264 927 807 956">• r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul> Acknowledge "switch-on inhibit" and run the drive <ul style="list-style-type: none"> <li data-bbox="264 1016 576 1046">• Check the drive is moving</li> </ul>  |        |

Example trace SLS without encoder (STOP A)

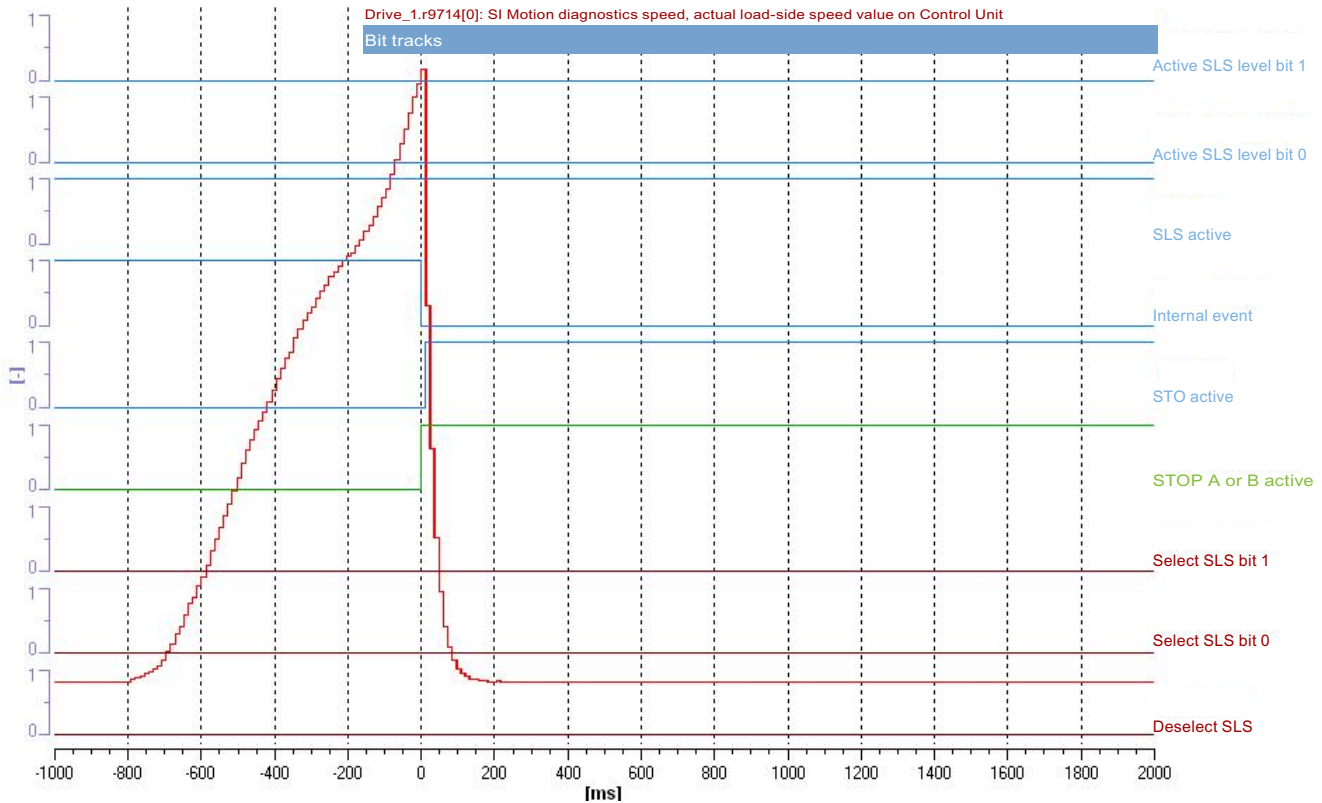


Figure 9-11 Example trace SLS without encoder with STOP A

Trace evaluation:

- SLS function with SLS level 1 is active (see bits "deselection SLS", "selection SLS bit 0", "selection SLS bit 1" and "SLS active", "active SLS level bit 0" and "active SLS level bit 1")
- Drive is accelerated beyond the SLS limit (time axis from approx. -800 ms)
- Exceeding of the limit is recognized (time axis 0 ms)
- Safety fault is initiated (time axis 0 ms; bit "internal event" is set to 0)
- Fault response STOP A is initiated (time axis 0 ms; see bit "STOP A or B active" and "STO active")
- Drive coasts (see red curve of r9714[0])

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

## SLS with stop response "STOP B"

Table 9- 26 Function "Safely Limited Speed without encoder" with "STOP B"

| No.   | Description  | Status |
|---|--|--------|
| <b>Note:</b><br>The acceptance test must be carried out separately for each configured control and each SLS speed limit used.<br>Control may be via TM54F or PROFIsafe. |  |        |
| 1.  | Initial state  |        |
|   | • Drive in "Ready" state (p0010 = 0)   |        |
|   | • Safety Integrated Extended Functions enabled (p9601.2 = 1)   |        |
|   | • Safety functions enabled (p9501.0 = 1)   |        |
|   | • Safety configured without encoder (p9506 = 1 or p9506 = 3)   |        |
|   | • No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7]); see note "Non-critical alarms" in section .  |        |
| 2.  | <ul style="list-style-type: none"> <li>It may be necessary to take measures in the higher-level control to be able to exceed the active speed limit.</li> <li>Please ensure that the internal limits r9733.0 and r9733.1 are canceled by the selection "Start acceptance test".</li> </ul> |        |
| 3.  | Configure and activate trace recording   |        |
|   | • Trigger: Trigger on variable - bit pattern (r9722.7 = 0)   |        |
|   | • Record the following values: r9714[0], r9714[1], r9720, r9721, r9722   |        |
|   | • Select the time interval and pretrigger so you can recognize when the active SLS limit has been exceeded and the subsequent drive responses  |        |
|   | Select SLS with level x  |        |
|   | Switch on the drive and specify the setpoint above the SLS limit   |        |
|   | • Check that the drive is moving, and after the SLS limit (p9331[x]/9531[x]) has been exceeded that it is decelerated along the OFF3 ramp before STOP A becomes active   |        |
|   | Check whether the following Safety messages are pending:   |        |
|   | • C01714 (x00), C30714 (x00); x = 1...4 depending on the SLS level (safely limited speed exceeded)   |        |
|   | • C01701, C30701 (STOP B initiated)  |        |
| • C01700, C30700 (STOP A initiated)   |  |        |
| 4.  | Analyze trace:   |        |
|   | • If r9714[0] exceeds the active SLS limit, a Safety message (r9722.7 = 0) becomes active  |        |
|   | • A STOP B is initiated as a consequence (with subsequent stop STOP A)   |        |
|   | For better analysis, display the following bit values:   |        |
|   | • r9720.4 (deselection SLS) and r9720.9/10 (selection SLS level)   |        |
|   | • r9721.12 (STOP A or B active)  |        |

9.4 Acceptance tests

| No. | Description  | Status |
|-----|--|--------|
|     | <ul style="list-style-type: none"> <li>r9722.0 (STO active; set for STOP A)</li> <li>r9722.1 (SS1 active; set for STOP B)</li> <li>r9722.4 (SLS active) and r9722.9/.10 (active SLS level)</li> <li>r9722.7 (internal event; set on the occurrence of the first Safety message)</li> </ul> |        |
| 5.  | Save/print the trace and add it to the acceptance report (refer to the example below)  |        |
| 6.  | Deselect SLS and acknowledge Safety messages   |        |
|     | <ul style="list-style-type: none"> <li>No Safety faults and alarms (r0945[0...7], r2122[0...7], r9747[0...7])</li> <li>r0046.0 = 1 (drive in "switch-on inhibited" state)</li> </ul>   |        |
|     | Acknowledge "switch-on inhibit" and run the drive  |        |
|     | <ul style="list-style-type: none"> <li>Check the drive is moving</li> </ul>  |        |

Example trace SLS without encoder (STOP B)

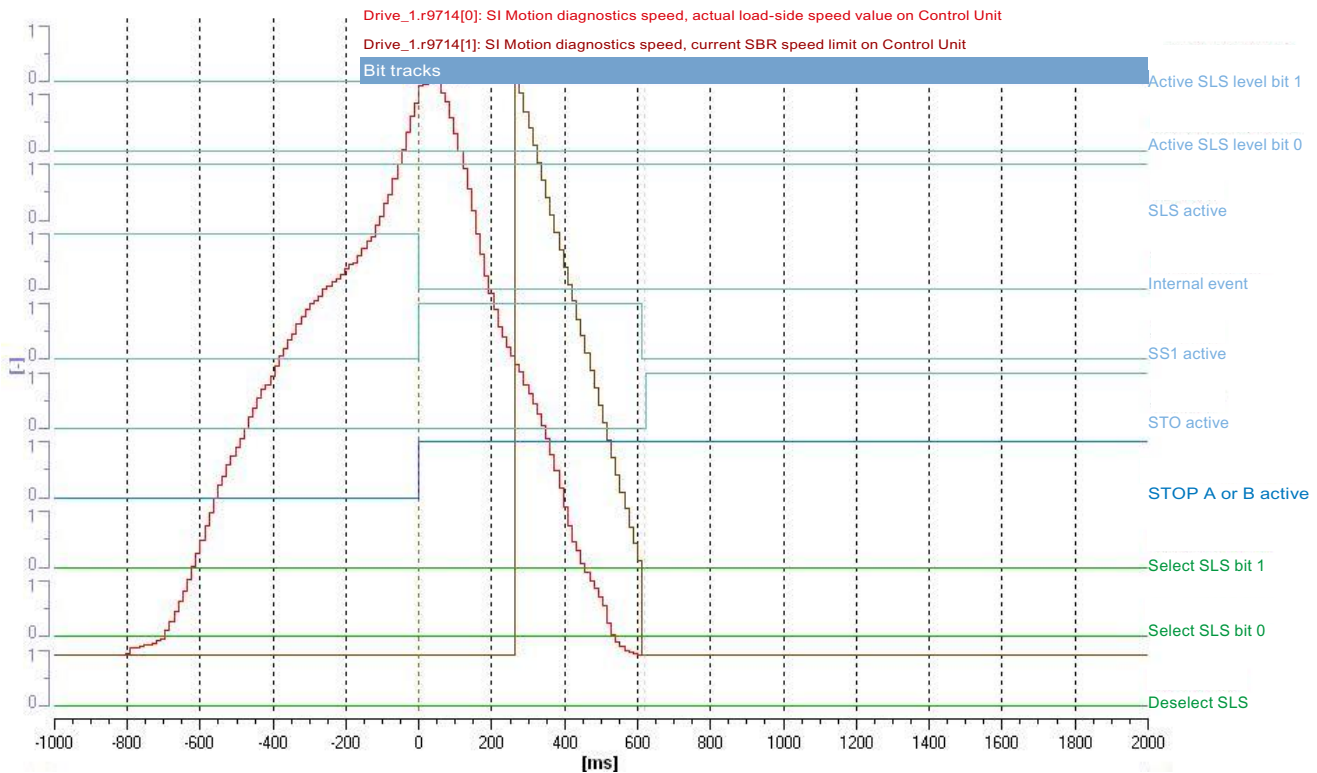


Figure 9-12 Example trace SLS without encoder with STOP B

Trace evaluation:

- SLS function with SLS level 1 is active (see bits "deselection SLS", "selection SLS bit 0", "selection SLS bit 1" and "SLS active", "active SLS level bit 0" and "active SLS level bit 1")
- Drive is accelerated beyond the SLS limit (time axis from approx. -800 ms)
- Exceeding of the limit is recognized (time axis 0 ms)
- Safety fault is initiated (time axis 0 ms; bit "internal event" is set to 0)
- Fault response STOP B is initiated (time axis 0 ms; see bit "STOP A or B active" and "SS1 active")
- Drive is decelerated to a standstill (see orange curve of r9714[0])
- Standstill reached (time axis from approx. 600 ms)
- STOP A (as follow-up response to STOP B) is activated (see bit "STO active"); at this point the speed falls below the shutdown speed SS1 (p9560/p9360)
- SBR monitoring is activated after 250 ms

---

**Note**

Small time differences (of the order of 2 to 3 Safety clock cycles (here up to 36 ms)) are caused by internal calculations and do not present a problem.

---

## 9.5 Completion of certificate

### SI parameters

|              | Specified values checked? |    |
|--------------|---------------------------|----|
|              | Yes                       | No |
| Control Unit |                           |    |
| Motor Module |                           |    |

### Checksums

| Basic Functions + Extended Functions |              |  |  |
|--------------------------------------|--------------|--|--|
| Drive name                           | Drive number | SI reference checksum SI parameters (Control Unit) | SI reference checksum SI parameters (Motor Module) |
|                                      |              | p9799 =  | p9899 =  |
|                                      |              | p9799 =  | p9899 =  |
|                                      |              | p9799 =  | p9899 =  |
|                                      |              | p9799 =  | p9899 =  |
|                                      |              | p9799 =  | p9899 =  |
|                                      |              | p9799 =  | p9899 =  |
|                                      |              | p9799 =  | p9899 =  |

| only Extended Functions |                            |  |  |
|-------------------------|----------------------------|--|--|
| Drive name              | Drive number               | SI reference checksum SI parameters (Control Unit) | SI reference checksum SI parameters (Motor Module) |
|                         |                            | p9399[0] =<br>p9399[1] =                           | p9729[0] =<br>p9729[1] =<br>p9729[2] =             |
|                         |                            | p9399[0] =<br>p9399[1] =                           | p9729[0] =<br>p9729[1] =<br>p9729[2] =             |
|                         |                            | p9399[0] =<br>p9399[1] =                           | p9729[0] =<br>p9729[1] =<br>p9729[2] =             |
|                         |                            | p9399[0] =<br>p9399[1] =                           | p9729[0] =<br>p9729[1] =<br>p9729[2] =             |
|                         |                            | p9399[0] =<br>p9399[1] =                           | p9729[0] =<br>p9729[1] =<br>p9729[2] =             |
|                         |                            | p9399[0] =<br>p9399[1] =                           | p9729[0] =<br>p9729[1] =<br>p9729[2] =             |
| <b>TM54F</b>            |                            |  |  |
|                         | <b>Reference checksum:</b> | p10005[0] =  | p10005[1] =  |

**Safety logbook**

|   | Functional <sup>1)</sup> |
|---|--------------------------|
| Checksum for functional tracking of changes           | r9781[0] =               |
| Checksum for hardware dependent tracking of changes   | r9781[1] =               |
| Time stamp for functional tracking of changes         | r9782[0] =               |
| Time stamp for hardware dependent tracking of changes | r9782[1] =               |

1) These parameters can be found in the expert list of the Control Unit.

**Data backup**

|                  | Storage medium |             |      | Storage location |
|------------------|----------------|-------------|------|------------------|
|                  | Type           | Designation | Date |                  |
| Parameter        |                |             |      |                  |
| PLC program      |                |             |      |                  |
| Circuit diagrams |                |             |      |                  |

**Countersignatures****Commissioning engineer**

This confirms that the tests and checks have been carried out properly.

| Date | Name | Company/dept. | Signature |
|------|------|---------------|-----------|
|      |      |               |           |

**Machine manufacturer**

This confirms that the parameters recorded above are correct.

| Date | Name | Company/dept. | Signature |
|------|------|---------------|-----------|
|      |      |               |           |





## Appendix A

### A.1 List of abbreviations

---

**Note:**

The following list of abbreviations includes all abbreviations and their meanings used in the entire SINAMICS user documentation.

---

| Abbreviation | Source of abbreviation                                    | Meaning  |
|--------------|---|--|
| <b>A</b>     |   |  |
| A...         | Alarm   | Alarm  |
| AC           | Alternating Current                                       | Alternating current                                    |
| ADC          | Analog Digital Converter                                  | Analog digital converter                               |
| AI           | Analog Input  | Analog input   |
| AIM          | Active Interface Module                                   | Active Interface Module                                |
| ALM          | Active Line Module  | Active Line Module                                     |
| AO           | Analog Output   | Analog output  |
| AOP          | Advanced Operator Panel                                   | Advanced Operator Panel                                |
| APC          | Advanced Positioning Control                              | Advanced Positioning Control                           |
| AR           | Automatic Restart   | Automatic restart                                      |
| ASC          | Armature Short Circuit                                    | Armature short circuit                                 |
| ASCII        | American Standard Code for Information Interchange        | American standard code for information interchange     |
| ASM          | Asynchronmotor  | Induction motor  |
| <b>B</b>     |   |  |
| BERO         | -   | Contactless proximity switch                           |
| BI           | Binector Input  | Binector input   |
| BIA          | Berufsgenossenschaftliches Institut für Arbeitssicherheit | Germany's Institute for Occupational Safety and Health |
| BICO         | Binector Connector Technology                             | Binector connector technology                          |
| BLM          | Basic Line Module   | Basic Line Module                                      |
| BO           | Binector Output   | Binector output  |
| BOP          | Basic Operator Panel                                      | Basic Operator Panel                                   |

A.1 List of abbreviations

| Abbreviation | Source of abbreviation               | Meaning                                |
|--------------|--------------------------------------|--|
| <b>C</b>     |                                      |  |
| C            | Capacitance                          | Capacitance                            |
| C...         | -                                    | Safety message                         |
| CAN          | Controller Area Network              | Serial bus system                      |
| CBC          | Communication Board CAN              | Communication board CAN                |
| CD           | Compact Disc                         | Compact Disc                           |
| CDC          | Crosswise data comparison            | Crosswise data comparison              |
| CDS          | Command Data Set                     | Command data set                       |
| CF Card      | CompactFlash Card                    | CompactFlash Card                      |
| CI           | Connector Input                      | Connector input                        |
| CLC          | Clearance Control                    | Clearance control                      |
| CNC          | Computer Numerical Control           | Computer numerical control             |
| CO           | Connector Output                     | Connector output                       |
| CO/BO        | Connector Output/Binector Output     | Connector/binector output              |
| COB ID       | CAN Object Identification            | CAN Object identification              |
| COM          | Common contact of a changeover relay | Center contact of a changeover contact |
| COMM         | Commissioning                        | Commissioning                          |
| CP           | Communication Processor              | Communication processor                |
| CPU          | Central Processing Unit              | Central processing unit                |
| CRC          | Cyclic Redundancy Check              | Cyclic redundancy check                |
| CSM          | Control Supply Module                | Control Supply Module                  |
| CU           | Control Unit                         | Control Unit                           |
| CUA          | Control Unit Adapter                 | Control Unit Adapter                   |
| CUD          | Control Unit DC MASTER               | Control Unit DC MASTER                 |
| <b>D</b>     |                                      |  |
| DAC          | Digital Analog Converter             | Digital analog converter               |
| DC           | Direct Current                       | DC current                             |
| DC link      | DC link                              | DC link                                |
| DCB          | Drive Control Block                  | Drive Control Block                    |
| DCC          | Drive Control Chart                  | Drive Control Chart                    |
| DCC          | Data Cross Check                     | Crosswise data comparison              |
| DCN          | Direct Current Negative              | DC current negative                    |
| DCP          | Direct Current Positive              | DC current positive                    |
| DDS          | Drive Data Set                       | Drive data set                         |
| DI           | Digital Input                        | Digital input                          |
| DI/DO        | Digital Input/Digital Output         | Digital input/output bidirectional     |
| DMC          | DRIVE-CLiQ Hub Module Cabinet        | DRIVE-CLiQ Hub Module Cabinet          |
| DME          | DRIVE-CLiQ Hub Module External       | DRIVE-CLiQ Hub Module External         |
| DO           | Digital Output                       | Digital output                         |
| DO           | Drive Object                         | Drive object                           |

| <b>Abbreviation</b> | <b>Source of abbreviation</b>    | <b>Meaning</b>                       |
|---------------------|----------------------------------|--------------------------------------|
| DP                  | Decentralized Peripherals        | Distributed IOs                      |
| DPRAM               | Dual Ported Random Access Memory | Memory with dual access ports        |
| DRAM                | Dynamic Random Access Memory     | Dynamic memory                       |
| DRIVE-CLiQ          | Drive Component Link with IQ     | Drive Component Link with IQ         |
| DSC                 | Dynamic Servo Control            | Dynamic Servo Control                |
| <b>E</b>            |                                  |                                      |
| EASC                | External Armature Short Circuit  | External armature short circuit      |
| EDS                 | Encoder Data Set                 | Encoder data set                     |
| ESD                 | Electrostatic Sensitive Devices  | Electrostatic sensitive devices      |
| ELCB                | Earth Leakage Circuit Breaker    | Earth leakage circuit breaker        |
| ELP                 | Earth Leakage Protection         | Earth leakage protection             |
| EMC                 | Electromagnetic Compatibility    | Electromagnetic compatibility        |
| EMF                 | Electromagnetic Force            | Electromagnetic force                |
| EMC                 | Electromagnetic compatibility    | Electromagnetic compatibility        |
| EN                  | European standard                | European standard                    |
| EnDat               | Encoder Data Interface           | Encoder interface                    |
| EP                  | Enable Pulses                    | Pulse enable                         |
| EPOS                | Einfachpositionierer             | Basic positioner                     |
| ES                  | Engineering System               | Engineering System                   |
| ESB                 | Equivalent circuit diagram       | Equivalent circuit diagram           |
| ESD                 | Electrostatic Sensitive Devices  | Electrostatic sensitive devices      |
| ESR                 | Extended Stop and Retract        | Extended stop and retract            |
| <b>F</b>            |                                  |                                      |
| F...                | Fault                            | Fault                                |
| FAQs                | Frequently Asked Questions       | Frequently asked questions           |
| FBL                 | Free Blocks                      | Free function blocks                 |
| FCC                 | Function Control Chart           | Function Control Chart               |
| FCC                 | Flux Current Control             | Flux current control                 |
| FD                  | Function Diagram                 | Function diagram                     |
| F-DI                | Failsafe Digital Input           | Fail-safe digital input              |
| F-DO                | Failsafe Digital Output          | Fail-safe digital output             |
| FEM                 | Fremderregter Synchronmotor      | Separately excited synchronous motor |
| FEPROM              | Flash EPROM                      | Non volatile read and write memory   |
| FG                  | Function Generator               | Function generator                   |
| FI                  | -                                | Fault current                        |
| FOC                 | Fiber-Optic Cable                | Fiber-optic cable                    |
| FP                  | Function diagram                 | Function diagram                     |
| FPGA                | Field Programmable Gate Array    | Field Programmable Gate Array        |

A.1 List of abbreviations

| Abbreviation | Source of abbreviation                    | Meaning   |
|--------------|---|---|
| FW           | Firmware                                  | Firmware  |
| <b>G</b>     |   |   |
| GB           | Gigabyte                                  | Gigabyte  |
| GC           | Global Control                            | Global Control Telegram (Broadcast Telegramm)   |
| GND          | Ground                                    | Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as G) |
| GSD          | Generic Station Description               | Generic station description: Describes the characteristics of a PROFIBUS slave                            |
| GSV          | Gate Supply Voltage                       | Gate Supply Voltage   |
| GUID         | Globally Unique Identifier                | Globally unique identifier  |
| <b>H</b>     |   |   |
| HF           | High Frequency                            | High frequency  |
| HFD          | Hochfrequenzdrossel                       | High-frequency reactor  |
| HMI          | Human Machine Interface                   | Human machine interface   |
| HTL          | High-Threshold Logic                      | Logic with a high fault threshold   |
| HW           | Hardware                                  | Hardware  |
| <b>I</b>     |   |   |
| I/O          | Input/Output                              | Input/output  |
| I2C          | Inter-Integrated Circuit                  | Internal serial data bus  |
| IASC         | Internal Armature Short Circuit           | Internal armature short circuit   |
| IBN          | Inbetriebnahme                            | Commissioning   |
| ID           | Identifier                                | Identification  |
| IE           | Industrial Ethernet                       | Industrial Ethernet   |
| IEC          | International Electrotechnical Commission | International Electrotechnical Commission   |
| IF           | Interface                                 | Interface   |
| IGBT         | Insulated Gate Bipolar Transistor         | Insulated gate bipolar transistor   |
| IGCT         | Integrated Gate-Controlled Thyristor      | Semiconductor power switch with integrated control electrode  |
| IL           | Impulslöschung                            | Pulse cancelation   |
| IP           | Internet Protocol                         | Internet Protocol   |
| IPO          | Interpolator                              | Interpolator  |
| IT           | Isolé Terré                               | Non-grounded three-phase power supply   |
| IVP          | Internal Voltage Protection               | Internal voltage protection   |
| <b>J</b>     |   |   |
| JOG          | Jogging                                   | Jogging   |

| Abbreviation | Source of abbreviation   | Meaning   |
|--------------|--|---|
| <b>K</b>     |  |   |
| KIP          | Kinetische Pufferung   | Kinetic buffering   |
| Kp           | -  | Proportional gain   |
| KTY          | -  | Special temperature sensor  |
| <b>L</b>     |  |   |
| L            | -  | Formula symbol for inductance   |
| LED          | Light Emitting Diode   | Light Emitting Diode  |
| LIN          | Linear motor   | Linear motor  |
| LSB          | Least Significant Bit  | Least significant bit   |
| LSC          | Line-Side Converter  | Line-side converter   |
| LSS          | Line Side Switch   | Line side switch  |
| LU           | Length Unit  | Length unit   |
| <b>M</b>     |  |   |
| M            | -  | Formula symbol for torque   |
| M            | Masse  | Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as GND) |
| MB           | Megabyte   | Megabyte  |
| MCC          | Motion Control Chart   | Motion Control Chart  |
| MDS          | Motor Data Set   | Motor data set  |
| MLFB         | Maschinenlesbare Fabrikatebezeichnung  | Machine-Readable Product Code   |
| MMC          | Man-Machine Communication  | Man-machine communication   |
| MMC          | Micro Memory Card  | Micro memory card   |
| MSB          | Most Significant Bit   | Most significant bit  |
| MSC          | Motor-Side Converter   | Motor-side converter  |
| MSCY_C1      | Master Slave Cycle Class 1   | Cyclic communication between master (Class 1) and slave   |
| MSR          | Motorstromrichter  | Motor-side converter  |
| MT           | Machine Tool   | Machine tool  |
| <b>N</b>     |  |   |
| N. C.        | Not Connected  | Not connected   |
| N...         | No Report  | No message or internal message  |
| NAMUR        | Normenarbeitsgemeinschaft für Mess- und Regeltechnik in der chemischen Industrie | Standardization association for measurement and control in the chemical industry                            |
| NC           | Normally Closed (contact)  | NC contact  |
| NC           | Numerical Control  | Numerical control   |
| NEMA         | National Electrical Manufacturers Association                                    | Standardization body in the US  |
| NM           | Nullmarke  | Zero mark   |
| NO           | Normally Open (contact)  | NO contact  |

| <b>Abbreviation</b> | <b>Source of abbreviation</b>      | <b>Meaning</b>                            |
|---------------------|------------------------------------|---|
| NSR                 | Netzstromrichter                   | Line-side converter                       |
| NVRAM               | Non-Volatile Random Access Memory  | Non-volatile read/write memory            |
| <b>O</b>            |                                    |   |
| OA                  | Open Architecture                  | Open Architecture                         |
| OC                  | Operating Condition                | Operating condition                       |
| OEM                 | Original Equipment Manufacturer    | Original Equipment Manufacturer           |
| OLP                 | Optical Link Plug                  | Fiber-optic bus connector                 |
| OMI                 | Option Module Interface            | Option module interface                   |
| <b>P</b>            |                                    |   |
| p...                | -                                  | Adjustable parameters                     |
| PB                  | PROFIBUS                           | PROFIBUS                                  |
| PC                  | Position Controller                | Position Controller                       |
| PcCtrl              | PC Control                         | Control for master                        |
| PD                  | PROFIdrive                         | PROFIdrive                                |
| PDS                 | Power unit Data Set                | Power unit data set                       |
| PE                  | Protective Earth                   | Protective earth                          |
| PELV                | Protective Extra Low Voltage       | Protective extra low voltage              |
| PEM                 | Permanenterregter Synchronmotor    | Permanent-magnet synchronous motor        |
| PG                  | Programmiergerät                   | Programming device                        |
| PI                  | Proportional Integral              | Proportional integral                     |
| PID                 | Proportional Integral Differential | Proportional integral differential        |
| PLC                 | Programmable Logic Controller      | Programmable logic controller             |
| PLL                 | Phase-Locked Loop                  | Phase-locked loop                         |
| PN                  | PROFINET                           | PROFINET                                  |
| PNO                 | PROFIBUS Nutzerorganisation        | PROFIBUS user organization                |
| PPI                 | Point-to-Point Interface           | Point-to-point interface                  |
| PRBS                | Pseudo Random Binary Signal        | White noise                               |
| PROFIBUS            | Process Field Bus                  | Serial data bus                           |
| PS                  | Power Supply                       | Power supply                              |
| PSA                 | Power Stack Adapter                | Power Stack Adapter                       |
| PTC                 | Positive Temperature Coefficient   | Positive temperature coefficient          |
| PTP                 | Point-To-Point                     | Point-to-Point                            |
| PWM                 | Pulse Width Modulation             | Pulse width modulation                    |
| PZD                 | Prozessdaten                       | Process data                              |
| <b>R</b>            |                                    |   |
| r...                | -                                  | Display parameters (read-only)            |
| RAM                 | Random Access Memory               | Read/write memory                         |
| RCCB                | Residual Current Circuit Breaker   | Residual current operated circuit breaker |
| RCD                 | Residual Current Device            | Residual current operated circuit breaker |
| RCM                 | Residual Current Monitor           | Residual current monitor                  |

| <b>Abbreviation</b> | <b>Source of abbreviation</b>     | <b>Meaning</b>   |
|---------------------|-----------------------------------|--|
| RFG                 | Ramp-Function Generator           | Ramp-function generator  |
| RJ45                | Registered Jack 45                | Term for an 8-pin socket system for data transmission with shielded or non-shielded multi-wire copper cables   |
| RKA                 | Rückkühlanlage                    | Cooling unit   |
| RO                  | Read Only                         | Read only  |
| RPDO                | Receive Process Data Object       | Receive process data object  |
| RS232               | Recommended Standard 232          | Interface standard for cable-connected serial data transmission between a sender and receiver<br>(also known under EIA232)   |
| RS485               | Recommended Standard 485          | Interface standard for a cable-connected differential, parallel, and/or serial bus system (data transmission between a number of senders and receivers, also known under EIA485) |
| RTC                 | Real Time Clock                   | Real time clock  |
| RZA                 | Raumzeigerapproximation           | Space vector approximation   |
| <b>S</b>            |                                   |  |
| S1                  | -                                 | Uninterrupted duty   |
| S3                  | -                                 | Intermittent duty  |
| SBC                 | Safe Brake Control                | Safe brake control   |
| SBH                 | Sicherer Betriebshalt             | Safe operating stop  |
| SBR                 | -                                 | Safe acceleration monitoring   |
| SCA                 | Safe Cam                          | Safe cam   |
| SD Card             | SecureDigital Card                | Secure digital memory card   |
| SE                  | Sicherer Software-Endschalter     | Safe software limit switch   |
| SG                  | Sicher reduzierte Geschwindigkeit | Safely reduced speed   |
| SGA                 | Sicherheitsgerichteter Ausgang    | Safety-related output  |
| SGE                 | Sicherheitsgerichteter Eingang    | Safety-related input   |
| SH                  | Sicherer Halt                     | Safe standstill  |
| SI                  | Safety Integrated                 | Safety Integrated  |
| SIL                 | Safety Integrity Level            | Safety Integrity Level   |
| SLM                 | Smart Line Module                 | Smart Line Module  |
| SLP                 | Safely-Limited Position           | Safely-limited position  |
| SLS                 | Safely Limited Speed              | Safely limited speed   |
| SLVC                | Sensorless Vector Control         | Vector control without encoder   |
| SM                  | Sensor Module                     | Sensor Module  |
| SMC                 | Sensor Module Cabinet             | Sensor Module Cabinet  |
| SME                 | Sensor Module External            | Sensor Module External   |
| SN                  | Sicherer Software-Nocken          | Safe software cam  |
| SOS                 | Safe Operating Stop               | Safe operating stop  |


A.1 List of abbreviations

| Abbreviation | Source of abbreviation             | Meaning  |
|--------------|------------------------------------|--|
| SP           | Service Pack                       | Service pack   |
| SPC          | Setpoint Channel                   | Setpoint channel   |
| SPI          | Serial Peripheral Interface        | Serial interface for connecting peripherals                |
| SS1          | Safe Stop 1                        | Safe stop 1<br>(monitored for time and ramping up)         |
| SS2          | Safe Stop 2                        | Safe stop 2  |
| SSI          | Synchronous Serial Interface       | Synchronous serial interface                               |
| SSM          | Safe Speed Monitor                 | Safe feedback for speed monitoring (n < nx)                |
| SSP          | SINAMICS Support Package           | SINAMICS support package                                   |
| STO          | Safe Torque Off                    | Safe torque off  |
| STW          | Steuerwort                         | Control word   |
| <b>T</b>     |                                    |  |
| TB           | Terminal Board                     | Terminal Board   |
| TIA          | Totally Integrated Automation      | Totally Integrated Automation                              |
| TM           | Terminal Module                    | Terminal module  |
| TN           | Terre Neutre                       | Grounded three-phase supply network                        |
| Tn           | -                                  | Integral time  |
| TPDO         | Transmit Process Data Object       | Transmit process data object                               |
| TT           | Terre Terre                        | Grounded three-phase supply network                        |
| TTL          | Transistor-Transistor Logic        | Transistor-transistor logic                                |
| Tv           | -                                  | Rate time  |
| <b>U</b>     |                                    |  |
| u.d.         | under development                  | Under development: This feature is not currently available |
| UL           | Underwriters Laboratories Inc.     | Underwriters Laboratories Inc.                             |
| UPS          | Uninterruptible Power Supply       | Uninterruptible power supply                               |
| UTC          | Universal Time Coordinated         | Universal time coordinated                                 |
| <b>V</b>     |                                    |  |
| VC           | Vector Control                     | Vector control   |
| Vdc          | -                                  | DC link voltage  |
| VdcN         | -                                  | Partial DC link voltage negative                           |
| VdcP         | -                                  | Partial DC link voltage positive                           |
| VDE          | Verband Deutscher Elektrotechniker | Association of German electrical engineers                 |
| VDI          | Verein Deutscher Ingenieure        | Association of German Engineers                            |
| VPM          | Voltage Protection Module          | Voltage Protection Module                                  |
| Vpp          | Volt peak-to-peak                  | Volt peak-to-peak  |
| VSM          | Voltage Sensing Module             | Voltage Sensing Module                                     |



| <b>Abbreviation</b> | <b>Source of abbreviation</b> | <b>Meaning</b>   |
|---------------------|-------------------------------|--|
| <b>X</b>            |                               |  |
| XML                 | Extensible Markup Language    | Standard language for Web publishing and document management |
| <b>Z</b>            |                               |  |
| ZM                  | Zero Mark                     | Zero mark  |
| ZSW                 | Zustandswort                  | Status word  |

## A.2 Document structure

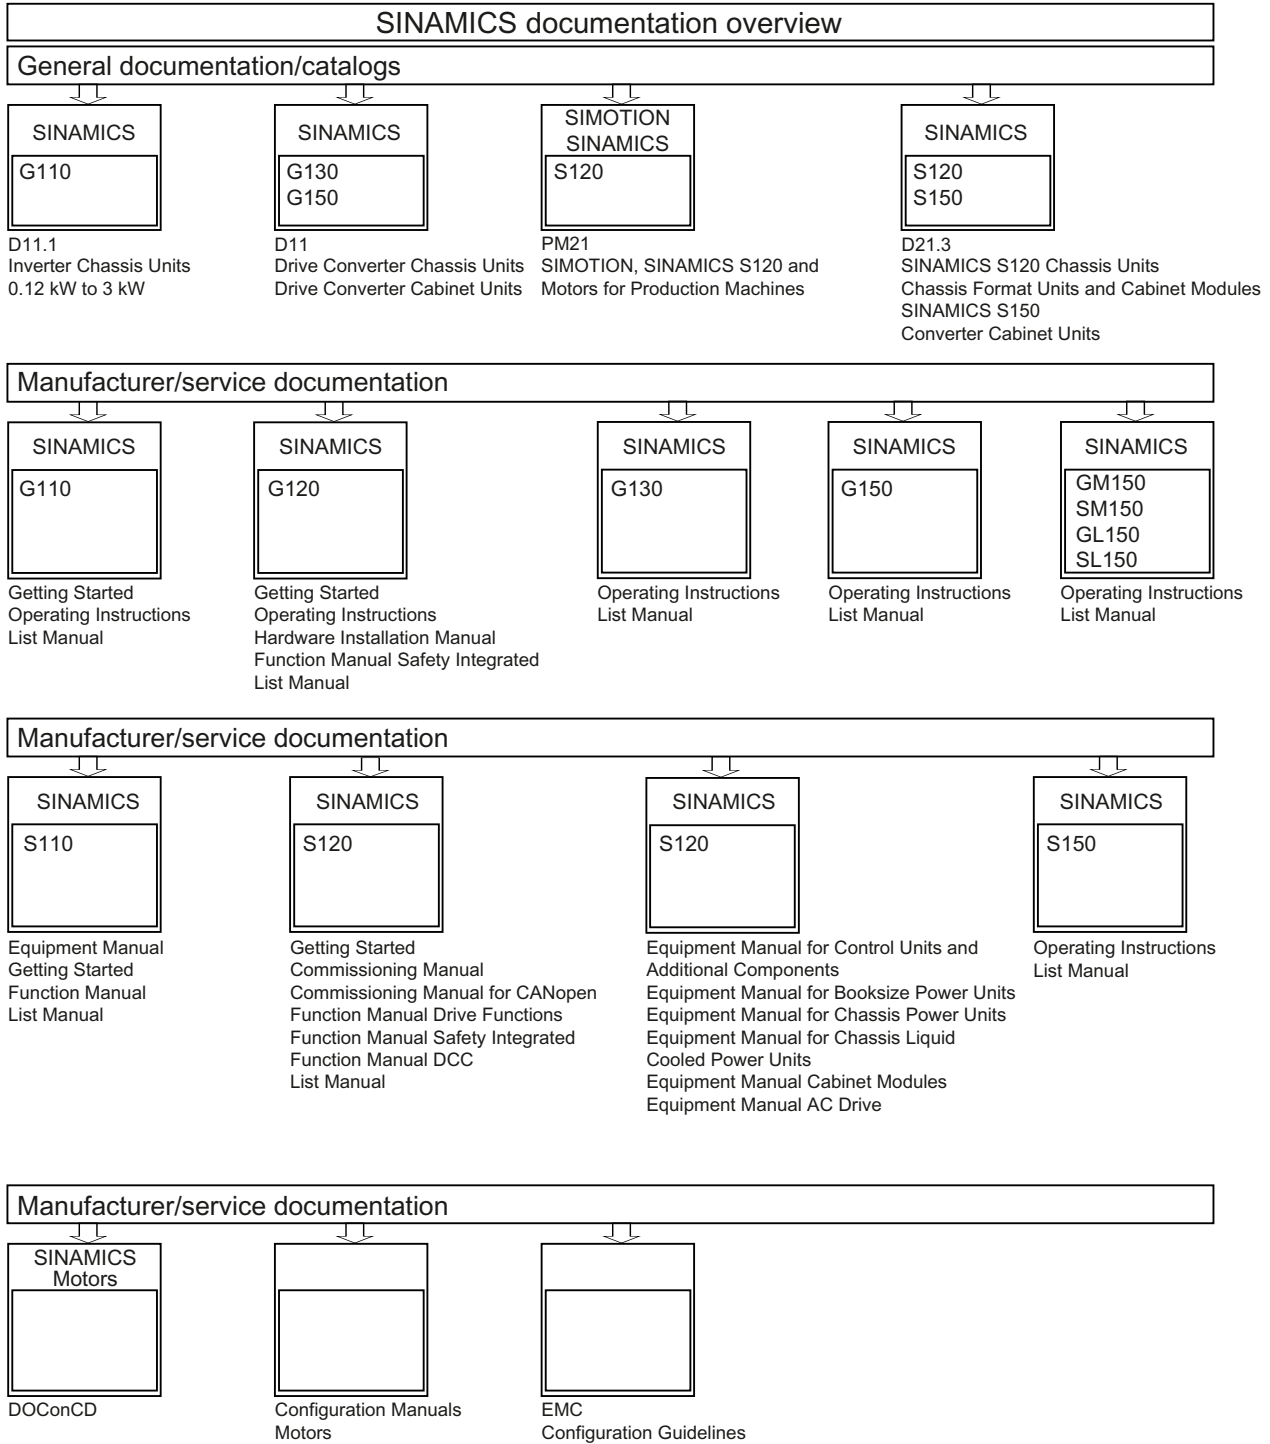

# Index

## A

- Acceptance test
  - SBC (Basic Functions), 221
  - SBC with encoder, 226
  - SBC without encoder, 253
  - SLS with encoder (STOP A), 232
  - SLS with encoder (STOP B), 235
  - SLS with encoder (STOP C), 238
  - SLS with encoder (STOP D), 241, 244
  - SLS without encoder (STOP A), 254
  - SLS without encoder (STOP B), 257
- SOS, 229
- SS1 with encoder, 224
- SS1 without encoder, 251
- SS1, time and acceleration controlled (Basic Functions), 219
- SS2 with encoder, 227
- SSM, 247
- STO (Basic Function), 217
- STO with encoder, 222
- STO without encoder, 249
- Acknowledgment:Extended, 109
- Activating PROFIsafe, 185
- Actual value acquisition, 111
- Actual value synchronization
  - Encoder, 115
- Alarm buffer, 110
- Alarm history, 110
- Alarm value, 110
- Alarms
  - Alarm buffer, 110
  - Alarm history, 110

## B

- Basic Functions via PROFIsafe and terminals, 132

## C

- Calling Safety Integrated, 143
- Change password
  - TM54F, 155
- Commissioning
  - Linear axis, 186

- Rotary axis, 186
- Safety Integrated, 146
- TM54F, 153
- Component replacement, 189
- CPU time, 151
  - Deactivated drive, 151

## D

- Deactivated drive
  - CPU time, 151
- Delay time, 73
- DOs
  - Deactivation/activation, 189
- DRIVE-CLiQ rules, 41

## E

- EDS, 47
- Enabling PROFIsafe, 131
- Encoder
  - Actual value synchronization, 115
- Encoder system, 112
- Encoder systems, 111
- Encoder types, 114
- EP terminal
  - Sampling time, 127
- Extended acknowledgment, 109
- Extended Functions
  - Deactivation/activation of DO, 189

## F

- F parameters, 176, 183
- F\_Dest\_Add, 183
- Fault acknowledgement on TM54F
  - Safe, 105
- Fault response, 105
- F-DI, 125
- F-DO, 125
- Filter
  - On/off test, 130
- Forced dormant error detection, 66, 119
- Forced dormant error detection interval timer, 158
- Function of Safely Limited Speed with encoder, 82
- Function test, 119
- Functions

Safe Torque Off, 55

## H

HW Config, 170

## I

Internal armature short-circuit, 58

## L

License for Basic Functions, 131

Limit exceeded, 105

Linear axis

Commissioning, 186

## M

Message buffer, 109

Modular machine concept, 189

Motion monitoring

Safe motion monitoring, 115

Motion monitoring functions

Safe motion monitoring, 39

## O

Overview of Safety Integrated functions, 36

## P

PFH value, 48

Preface, 3

Probability of failure, 48

Process data, control words

SI STW (PROFIsafe STW), 132, 134

Process data, status words

SI ZSW (PROFIsafe ZSW), 133, 135

PROFIsafe, 132

PROFIsafe address of the drive

F\_Dest\_Add, 176

PROFIsafe topology, 168

PROFIsafe version, 176

## R

Residual risk, 54

Response times, 48

Rotary axis

Commissioning, 186

## S

Safe Acceleration Monitor

SAM, 37

Safe Acceleration Monitor with encoder

SAM with encoder, 95

Safe actual value acquisition, 111

Safe Brake Adapter, 62

Safe Brake Control

SBC, 61

Safe Brake Ramp

SBR, 37, 97

Safe Brake Ramp without encoder

SBR without encoder, 97

Safe Direction, 100

With encoder, 100

Safe direction of motion, 100

Safe Operating Stop

SOS, 80, 81

Safe Stop 1

SS1, 59, 71

Time and acceleration controlled, 71

time controlled, 59

Safe Stop 1 with encoder, 71

Safe Torque Off

STO, 55

Safely Limited Speed with encoder

SLS with encoder, 82

Safety Info Channel, 123

Safety Integrated, 143

Acknowledging faults, 64

Commissioning, 146

Password, 39

Safe Stop 1, 59

Safe Torque Off, 55

Safety Integrated Basic Functions

Stop responses, 63

Safety Integrated password, 39

Safety logbook, 206

Safety Master

Creating a safety slot, 169

Safety slave, 174

Safety slot, 142

Safety Stop 1

SS1, 37

Safety with an encoder, 37

Safety without an encoder

Safety encoderless, 37

SAM

- Safe Acceleration Monitor with encoder, 95
  - SBA, 62
  - SBC
    - Acceptance test, 221
    - Safe Brake Control, 61
  - SBC with encoder
    - Acceptance test, 226
  - SBC without encoder
    - Acceptance test, 253
  - SDI, 100
    - With encoder, 100
    - Without encoder, 102
  - Series commissioning with third-party motor, 192
  - SIC
    - see Safety Info Channel, 123
  - Single-encoder system, 111
  - SLS
    - Safely Limited Speed, 82
  - SLS speed limit values, 83
  - SLS with encoder (STOP A)
    - Acceptance test, 232
  - SLS with encoder (STOP B)
    - Acceptance test, 235
  - SLS with encoder (STOP C)
    - Acceptance test, 238
  - SLS with encoder (STOP D)
    - Acceptance test, 241, 244
  - SLS without encoder (STOP A)
    - Acceptance test, 254
  - SLS without encoder (STOP B), 257
  - SOS
    - Acceptance test, 229
    - Safe Operating Stop, 80
  - SS1
    - Safe Stop 1, 59
  - SS1 (time controlled)
    - Safe Stop 1, 59
  - SS1 with encoder
    - Acceptance test, 224
  - SS1 without encoder
    - Acceptance test, 251
  - SS1, time and acceleration controlled
    - Acceptance test, 219
  - SS2
    - Safe Stop 2, 77
  - SS2 with encoder
    - Acceptance test, 227
  - SSM
    - Acceptance test, 247
  - STO
    - Safe Torque Off, 55
  - STO with encoder
    - Acceptance test, 222
  - STO without encoder
    - Acceptance test, 249
  - STOP A, 232
  - STOP B, 235
  - STOP C, 238
  - STOP D, 241, 244
  - STOP E, 105
  - STOP F, 64, 105
  - Stop response
    - Stop A, 64
    - Stop F, 64
  - Stop responses, 63
    - Priorities vis-à-vis extended functions, 107
    - Priority classes, 106
- ## T
- Telegram 700, 123
  - Test of switch-off signal paths, 66
  - Test stop, 119
  - Test stop modes, 158
  - Third-party motor with absolute encoder, 192
  - TM54F, 155
    - Change password, 155
    - Commissioning, 153
  - Two-channel brake control, 62
  - Two-encoder system, 111





Siemens AG  
Industry Sector  
Drive Technologies  
Motion Control Systems  
Postfach 3180  
91050 ERLANGEN  
GERMANY

Subject to change  
© Siemens AG, 2011

[www.siemens.com/motioncontrol](http://www.siemens.com/motioncontrol)