

Datasheet



Figure 1. BWA-UCT-900 and MQDMC-401

- Connects a Sure Cross Gateway, a MultiHop Radio, or an RS-485 sensor to a Windows PC USB port
- BWA-HW-006 supplies power to one Gateway, one MultiHop Radio operating at 250 mW, or one RS-485 sensor
- BWA-UCT-900 supplies power for one Gateway or one MultiHop Radio operating at 1 Watt
- Supports baud rates of 9600, 19200, and 38400
- Converts USB to RS-485 (2-wire) with a Euro-style connector
- Supports Windows XP and Vista
- Download the User Configuration Tool, MultiHop Configuration Tool, or Sensor Configuration Tool software free from Banner Engineering's Wireless I/O Products website
- Includes cordset MQDMC-401 for use with the DX80...C models

Do not use BWA-HW-006 to connect a Performance Gateway or MultiHop Radio operating in 1 Watt mode. Always configure the Performance and MultiHop models to operate in 250 mW mode before connecting them to your computer to avoid damaging your USB port.

To supply power to 1 Watt radios during configuration, use cable BWA-UCT-900.

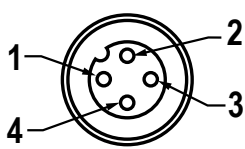
When plugging this cable into your computer for the first time, give the cable 1 to 2 minutes to check your computer for the proper driver, download the driver, then install it. Plug the cable into your Gateway; the cable should supply enough power to the Gateway to configure it.

For additional information, updated documentation, and accessories, refer to Banner Engineering's website, www.bannerengineering.com/surecross.

Models	Adapter	Length
BWA-HW-006	RS-485 to USB	1 meter
BWA-UCT-900	RS-485 to USB, with wall plug to power 1 Watt radios during configuration	

Both cordsets include cordset model MQDMC-401 for use with the DX80...C models.

4-pin M12/Euro-style Female Connection

	Pin	Wire Color	DX80 Wiring	DX80...C Wiring
	1	Brown	10 to 30 V dc	V+
	2	White	RS-485 Tx +	Tx
	3	Blue	dc common (GND)	V-
	4	Black	RS-485 Rx -	Rx
Connecting dc power to the communication pins will cause permanent damage.				



Specifications

Input Power

BWA-HW-006: 5 V dc from USB port
 BWA-UCT-900: 5 V dc from USB port; 100 to 240 V ac from the plug-in wall transformer

Output Power

BWA-HW-006: 10 V dc power output for a single device transmitting at 250 mW or less
 BWA-UCT-900: 24 V dc power output for a single device transmitting at 1 Watt

Operating Parameters

Temperature: -40 °C to +80 °C (-40 °F to +176 °F)
 Humidity: Up to 95% non-condensing

USB

Connector: USB type A plug
 Standard: 2.0

RS-485

2-wire; 9.6k, 19.2k, or 38.4k; 8 data bits; 1 stop bit; no parity
 Connector: M12/Euro-style connector compatible with Banner wireless Gateways and data radios

Banner Compatible Devices

DX80G*, DR9M, DR2M models
 M12FTH3Q Temperature and Humidity Sensor; M12FT3Q Temperature Sensor; GPS50M GPS Sensor
 BWA-HW-006 will not power a MultiHop radio in 1 Watt mode. Use BWA-UCT-900 to supply power to 1 Watt radios. To use BWA-HW-006 with a MultiHop radio, set the radio to operate at 250 mW.

Length

1 meter (This cable can be extended up to 30 meters.)

Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.

Copyright Notice

Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change. Banner reserves the right to modify product specifications or update documentation at any time. For the most recent version of any documentation, refer to: www.bannerengineering.com. © Banner Engineering Corp. All rights reserved.