

Installation Instructions

Original Instructions

POINT I/O One-piece Terminal Bases

Catalog Numbers 1734-TOP, 1734-TOPS, 1734-TOP3, 1734-TOP3S

Environment and Enclosure

	ATTENTION: This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in EN/IEC 60664-1), at altitudes up to 2000 m (6562 ft) without derating.
	This equipment is not intended for use in residential environments and may not provide adequate protection to radio communication services in such environments.
	This equipment is supplied as open-type equipment for indoor use. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present and appropriately designed to prevent personal injury resulting from accessibility to live parts. The enclosure must have suitable flame-retardant properties to prevent or minimize the spread of flame, complying with a flame spread rating of SVA or be approved for the application if nonmetallic. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain more information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.
	In addition to this publication, see the following:
	<ul style="list-style-type: none">• Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1, for more installation requirements.• NEMA Standard 250 and EN/IEC 60529, as applicable, for explanations of the degrees of protection provided by different types of enclosure.

Prevent Electrostatic Discharge

	ATTENTION: This equipment is sensitive to electrostatic discharge, which can cause internal damage and, affect normal operation. Follow these guidelines when you handle this equipment.
	<ul style="list-style-type: none">• Touch a grounded object to discharge potential static.• Wear an approved grounding wriststrap.• Do not touch connectors or pins on component boards.• Do not touch circuit components inside the equipment.• Use a static-safe workstation if available.• Store the equipment in appropriate static-safe packaging when not in use.

European Hazardous Location Approval

The following applies to products marked   II 3 G:

- Are intended for use in potentially explosive atmospheres as defined by European Union Directive 2014/34/EU and has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of Category 3 equipment that is intended for use in Zone 2 potentially explosive atmospheres, which are given in Annex II to this Directive.
- Compliance with the Essential Health and Safety Requirements has been assured by compliance with EN 60079-15 and EN 60079-0.
- Are Equipment Group II, Equipment Category 3, and comply with the Essential Health and Safety Requirements relating to the design and construction of such equipment that is given in Annex II to EU Directive 2014/34/EU. See the EU Declaration of Conformity at [rok.auto/certifications](#) for details.
- The type of protection is Ex nA IIC T4 Gc according to EN 60079-15.
- Comply to Standards EN 60079-0:2012+A11:2013, EN 60079-15:2010, reference certificate number DEMKO 04 ATEX 0330347X.
- Are intended for use in areas in which explosive atmospheres caused by gases, vapors, mists, or air are unlikely to occur, or are likely to occur only infrequently and for short periods. Such locations correspond to Zone 2 classification according to ATEX directive 2014/34/EU.

WARNING: Special Conditions for Safe Use:

- This equipment is not resistant to sunlight or other sources of UV radiation.
- This equipment shall be mounted in an ATEX/IECEx Zone 2 certified enclosure with a minimum ingress protection rating of at least IP54 (in accordance with EN/IEC 60079-15) and used in an environment of not more than Pollution Degree 2 (as defined in EN/IEC 60664-1) when applied in Zone 2 environments. The enclosure must be accessible only by the use of a tool.
- This equipment shall be used within its specified ratings that are defined by Rockwell Automation®.
- Provision shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 140% of the peak rated voltage when applied in Zone 2 environments.
- The instructions in the user manual shall be observed.
- This equipment must be used only with ATEX certified Rockwell Automation backplanes.
- Earthing is accomplished through mounting of modules on rail.
- Devices shall be used in an environment of not more than Pollution Degree 2.

ATTENTION: If this equipment is used in a manner that is not specified by the manufacturer, the protection that is provided by the equipment may be impaired.

ATTENTION: Read this document and the documents that are listed in the Additional Resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

ATTENTION: Installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

ATTENTION: In case of malfunction or damage, no attempts at repair should be made. The module should be returned to the manufacturer for repair. Do not dismantle the module.

ATTENTION: This equipment is certified for use only within the surrounding air temperature range of -20...+55 °C (-4...+131 °F). The equipment must not be used outside of this range.


ATTENTION: Use only a soft dry anti-static cloth to wipe down equipment. Do not use any cleaning agents.

About the Terminal Base

Read this publication for information about these POINT I/O™ terminal bases.

Catalog Number	Number of Terminations	Termination Type
1734-TOP	8	Screw-clamp
1734-TOPS	8	Spring-clamp
1734-TOP3	12	Screw-clamp
1734-TOP3S	12	Spring-clamp


1734-TOP and 1734-TOPS

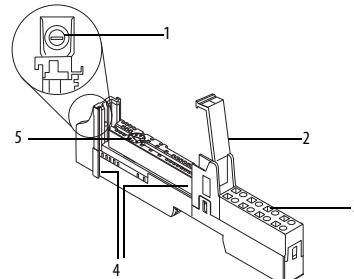

44047

1	DIN rail locking screw (orange)	4	Interlocking side pieces
2	Handle	5	Mechanical keying (orange)
3	Wiring block		


1734-TOP3 and 1734-TOP3S

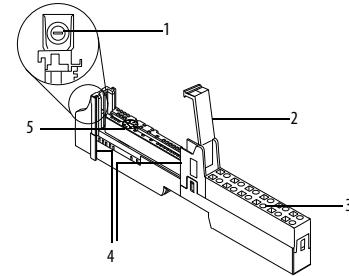

44050

1	DIN rail locking screw (orange)	4	Interlocking side pieces
2	Handle	5	Mechanical keying (orange)
3	Wiring block		

Prepare the Wires

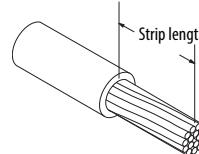

Wiring Without Wire End Ferrule

Wire Size Range	Number of Wires	Strip Length	
		8-position RTB	12-position RTB
0.25...2.5 mm² (22...14 AWG)	1	16±1 mm (0.63±0.03 in)	14±1 mm (0.55±0.03 in)
	2	18±1 mm (0.71±0.03 in)	16±1 mm (0.63±0.03 in)

Wiring With Wire End Ferrule

Wire Size Range	Number of Wires	Strip Length		Recommended Wire End Ferrule ⁽¹⁾
		8-position RTB	12-position RTB	
0.75 mm² (18 AWG)	1	16±1 mm (0.63±0.03 in)	14±1 mm (0.55±0.03 in)	Ferrule with insulating collar, in accordance with DIN 46228-4 and UL 486F. Sleeve length: 12 mm (0.47 in)
		18±1 mm (0.71±0.03 in)	16±1 mm (0.63±0.03 in)	

⁽¹⁾ TWIN wire end ferrules are not recommended for wiring.

Install the Terminal Base

To install the terminal base on the DIN rail (Allen-Bradley® part number 199-DR1; 46277-3; EN50022), proceed as follows.



ATTENTION: This product is grounded through the DIN rail to chassis ground. Use zinc-plated chrome-passivated steel DIN rail to assure proper grounding. The use of other DIN rail materials (for example, aluminum or plastic) that can corrode, oxidize, or are poor conductors, can result in improper or intermittent grounding. Secure DIN rail to mounting surface approximately every 200 mm (7.8 in.) and use end-anchors appropriately. Be sure to ground the DIN rail properly. See Industrial Automation Wiring and Grounding Guidelines, Rockwell Automation publication 1770-4.1, for more information.

1. Position the base vertically above the installed units, such as an adapter, power supply, or existing module.
2. Slide the base down, allowing the interlocking side pieces to engage the adjacent installed unit.
3. Press firmly to seat the base on the DIN rail until the base snaps into place.
4. Verify that the DIN rail locking screw is in a horizontal, locked position before inserting an I/O module.



DIN rail locking screw is in horizontal, locked position.



DIN rail locking screw is in vertical, unlocked position.



ATTENTION: Do not wire more than 2 conductors on any single terminal.

Remove a Terminal Base

To remove a terminal base from the DIN rail, you must remove the module that is installed to the right of the base, proceeding as follows.



ATTENTION: Do not remove or replace a Terminal Base unit while power is applied. Interruption of the backplane can result in unintentional operation or machine motion.



WARNING: For 1734-TOPS and 1734-TOP3S, to latch and unlatch the wire, insert a bladed screwdriver (catalog number 1492-N90 – 3 mm diameter blade) into the opening at approximately 73°(blade surface is parallel with top surface of the opening) and push up gently.



WARNING: Do not disconnect or replace component unless power is switched off or area is known to be nonhazardous. Do not pull on the installed wiring to remove a terminal base. A shock hazard exists if power is applied to the terminal base.

1. Squeeze the module locking mechanism of the module to the right of the base, pulling up to remove the module.
2. Turn the orange locking screw to a vertical position to unlock the base from the DIN rail.
3. Slide the base up to release it from its mating units.

Specifications

Attribute	Value
Dimensions (HxWxD) approx	49 x 12 x 144 mm (1.93 x 0.47 x 5.67 in.) – 1734-TOP, 1734-TOPS 49 x 12 x 168 mm (1.93 x 0.47 x 6.61 in.) – 1734-TOP3, 1734-TOP3S
Weight approx	63.8 g (2.25 oz) – 1734-TOP; 79.2 g (2.79 oz) – 1734-TOP3 55.68 g (1.96 oz) – 1734-TOPS; 66.8 g (2.36 oz) – 1734-TOP3S
Wire size	0.25... 2.5 mm² (22...14 AWG) solid or stranded copper wire that is rated at 75 °C (167 °F), or greater, 1.2 mm (3/64 in.) insulation max
Wire category ^{(1) (2)}	Dependent on I/O module installed in terminal base
Supply voltage	300V max terminal voltage
Supply power	8 A max terminal current
Isolation voltage	Capable of 240V (continuous), Reinforced Insulation Type, or the lesser of the installed module.
Enclosure type rating	None (open-style)

Attribute	Value
Field power bus supply voltage	28.8V DC, 120/240V AC
Terminal base screw torque	0.4 N·m (3.5 lb·in) – 1734-TOP and 1734-TOP3 only
ATEX temp code	T4

(1) Use this conductor category information for planning conductor routing as described in Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1.

(2) Use this Conductor Category information for planning conductor routing as described in the appropriate System Level Installation Manual.

Environmental Specifications

Attribute	Value
Temperature, operating	IEC 60068-2-1 (Test Ad, Operating Cold), IEC 60068-2-2 (Test Bd, Operating Dry Heat), IEC 60068-2-14 (Test Nb, Operating Thermal Shock): -20...+55 °C (-4...+131 °F)
Temperature, surrounding air max	55 °C (131 °F)
Temperature, nonoperating	IEC 60068-2-1 (Test Ab, Unpackaged Nonoperating Cold), IEC 60068-2-2 (Test Bb, Unpackaged Nonoperating Dry Heat), IEC 60068-2-14 (Test Na, Unpackaged Nonoperating Thermal Shock): -40...+85 °C (-40...+185 °F)
Relative humidity	IEC 60068-2-30 (Test Db, Unpackaged Damp Heat): 5...95% noncondensing
Vibration	IEC 60068-2-6 (Test Fc, Operating): 5 g @ 10...500 Hz
Shock, operating	IEC 60068-2-27 (Test Ea, Unpackaged Shock): 30 g
Shock, nonoperating	IEC 60068-2-27 (Test Ea, Unpackaged Shock): 50 g

Certifications

Certification (when the product is marked) ⁽¹⁾	Value
cUL-us	UL Recognized Component Industrial Control Equipment, certified for US and Canada. See UL File E65584.
CE	European Union 2014/30/EU EMC Directive, compliant with: EN 61311-2; Programmable Controllers (Clause 8, Zone A & B) EN 61326-1; Meas./Control/Lab., Industrial Requirements EN 61000-6-2; Industrial Immunity EN 61000-6-4; Industrial Emissions European Union 2014/35/EU LVD, compliant with: EN 61311-2; Programmable Controllers (Clause 11)
RCM	European Union 2011/65/EU RoHS, compliant with: EN 50581; Technical Documentation
Ex	Australian Radiocommunications Act, compliant with: AS/NZS CISPR 11; Industrial Emissions
CE Ex	European Union 2014/34/EU ATEX Directive, compliant with: EN 60079-0:2012+A11:2013; General Requirements EN 60079-15:2010; Potentially Explosive Atmospheres, Protection "n" II 3 G Ex nA IIC T4 G DEMKO 04 ATEX 0330347X
KC	Korean Registration of Broadcasting and Communications Equipment, compliant with: Article 58-2 of Radio Waves Act, Clause 3
EAC	Russian Customs Union TR CU 020/2011 EMCT Technical Regulation Russian Customs Union TR CU 004/2011 LV Technical Regulation

(1) See the Product Certification link at [rok.auto/certifications](#) for Declarations of Conformity, Certificates, and other certification details.

Waste Electrical and Electronic Equipment (WEEE)



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental information on its website at [rok.auto/pec](#).

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at [rok.auto/docfeedback](#). For technical support, visit [rok.auto/support](#).

Rockwell Otomasyon Ticaret A.Ş. Kar Plaza İş Merkezi E Blok Kat:6 34752, İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.

[rockwellautomation.com](#)

expanding human possibility™

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

ASIA PACIFIC: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Allen-Bradley, expanding human possibility, FactoryTalk, POINT I/O, Rockwell Automation, and TechConnect are trademarks of Rockwell Automation, Inc.
Trademarks not belonging to Rockwell Automation are property of their respective companies.