Plug-in Type




Due to the flow increase, the valve size can be reduced! Saves energy and space



SY3000/5000/7000 Series




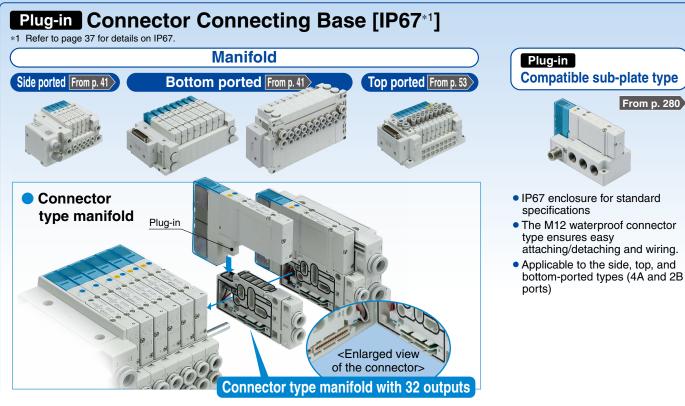




D-sub Connector Flat Ribbon Cable Terminal Block Box Lead Wire Circular Connector Serial Transmission

Serial Transmission Variations

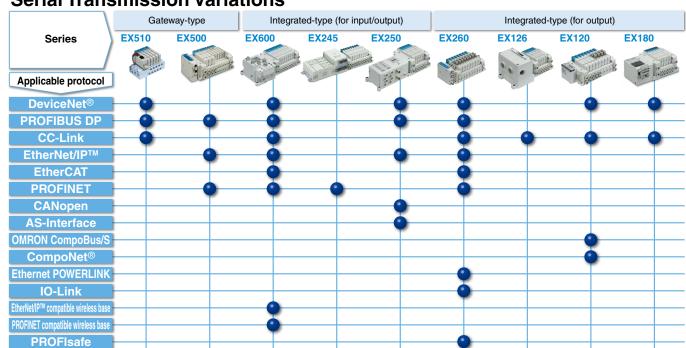

Power Saving

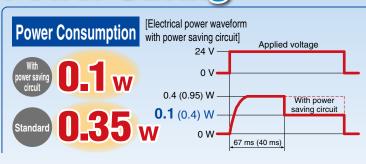

Power consumption is reduced by the power saving circuit.

Power consumption is decreased to approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.) Refer to the electrical power waveform to the left.

- * Only products with an indicator light are equipped with the power saving circuit.
- The value in () is for the quick response and high pressure types.

Long Service Life

Metal seal

(Service life: 200 million cycles)*1

- According to SMC life test conditions
- Please contact SMC if life test data is required.

Space Saving / Improved Operability


Wiring, piping, and operation are integrated on one side.

A multiple-layer type is available as an From p. 204 option that saves space Piping in the lateral direction. Can be operated from the top (Wiring) SUP stop valve spacer with residual pressure release valve Individual SUP/EXH

A 4-position dual 3-port valve is available.

(Only for the rubber seal type)


Two 3-port valves built into one body

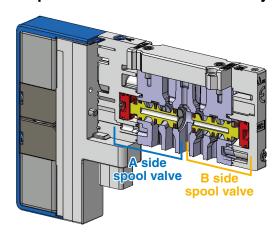


A bottom-ported type is available (A and B ports).

Space saving

By using the bottom-ported type, it is possible to reduce the amount of space required for installation.

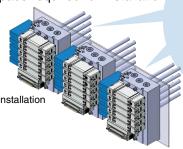

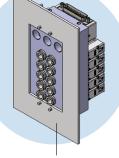

• 3-port valves on the A and B sides can be operated independently.

- When used as a 3-port valve, only half the number of stations is required.
- Can also be used as a 4-position, 5-port valve
- A 4-position dual 3-port valve with a back pressure check valve is also available.
- Combination examples


Series	A side	B side
SY□A ₃ 0	N.C. valve	N.C. valve
SY□B ₃ 0	N.O. valve	N.O. valve
SY□C ₃ 0	N.C. valve	N.O. valve


Different sizes (SY3000/5000 or SY5000/7000) can be mixed! From p. 165

2 sets

Panel fitting

It is possible to reduce installation space, the number of serial units, and the amount of wiring. SY5000 manifold SY3000 manifold For serial transmission EX260

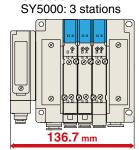

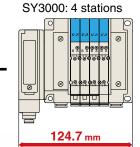


Mixed manifold

SY5000: 3 stations, SY3000: 4 stations

Overall manifold length

Approx. 29%

reduction

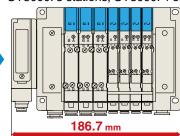

Number of serial units

Installation











Improved Safety

Back Pressure Check Valve

This prevents actuator and air operated valve malfunctions caused by the exhaust from other valves.*1

Indicator

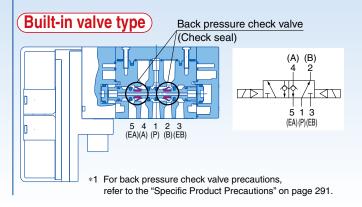


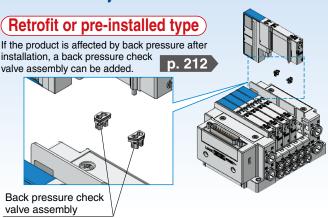


With residual pressure release valve (SY5000/7000) p. 24

For residual pressure release of the 3-position closed center valve

- ·The pressure of the 4 (A) and 2 (B) ports is exhausted automatically when the pressure of the 1 (P) port is exhausted.
- ·The pressure can be visualized using the indicator (red).
- ·Since this valve is not a spacer type, the flow rate is equivalent to that of the normal closed center valve.

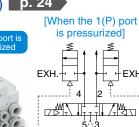

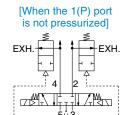


IP67 compliant

LOCK Lever Type SUP Stop Valve Spacer (With residual pressure release valve) A lever has been added to manual override button! Solenoid valves can be replaced individually Easy to visually check without shutting off the main pressure!*1 2-action operation Push STEP No tools are required. Locked Turn

Air for solenoid valves can be shut off individually!

The operation of an actuator can be checked by individually shutting off the air for the solenoid valves on the base while the main air is being supplied during a trial operation.

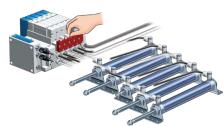

Solenoid valves can be replaced individually!

The solenoid valves can be replaced individually without stopping the equipment during maintenance.

For air operated valves, such as sanitary valves, and automatic valve



^{*1} This product is only for internal pilot specifications as the external pilot air cannot be shut off.




Improved Safety

Slotted Type

SUP Stop Valve Spacer


(With residual pressure release valve) p. 205

Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.

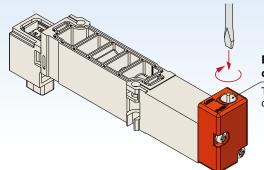

Button for manual release of residual pressure

To exhaust residual pressure on the cylinder side

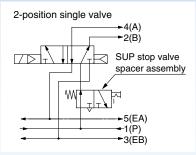


2-position single valve example

Slotted Type

Double Check Spacer

(With residual pressure release valve) p. 206

Long intermediate stops and position holding are possible.

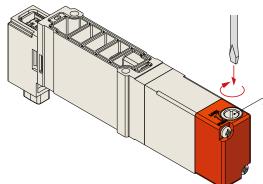

Button for manual release of residual pressure

To exhaust residual pressure on the cylinder side


[Intermediate stop]

Double check spacer assembly

Exhaust center

-1(P)


[Drop prevention]

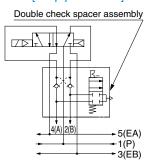



2-position single/double

With slide locking manual override

ON/OFF operation and locking can be performed manually.

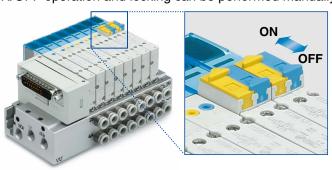

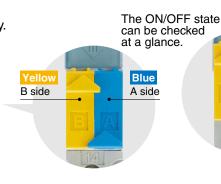

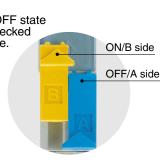

Improved Safety

Made to Order

With safety slide locking manual override SY3000/5000/7000-X13 p. 34

The double action manual override prevents accidental operation!

SY7000-X13 on! SY3000-X13

Double-action operation

Before operation
The slide locking manual overrides cannot be turned ON with the safety slide cover in place. (OFF status: Locked)


Safety slide cover

Slide locking manual overrides
Slide locking manual overrides

The safety slide cover is operated and moves upward. (Unlocked)

Operation 2 The slide locking manual overrides can be operated.


<Horizontal sliding>

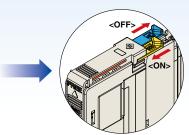


* The safety slide cover cannot be locked when the slide locking manual override is turned ON.

Visual check

Red lines visible from three directions can be checked to confirm whether the safety slide cover is unlocked (FREE).

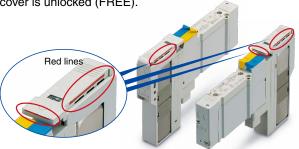

Safety slide covers can be checked from their raised and lowered positions.

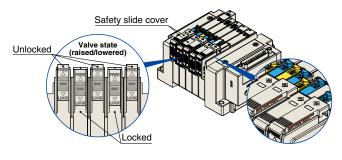


Made to Order

2-Position Single Solenoid Valve with Built-in Return Spring (Only rubber seal type) SY3000/5000/7000-X350 p. 34

<Vertical sliding>


The main valve returns to the OFF position when it is not pressurized.

The main valve has a built-in spring which allows it to return to origin (the OFF position) when the supply pressure is stopped. This product can be used in SRP/CS (safety-related parts of control systems) constructions in accordance with safety standards (ISO 13849).

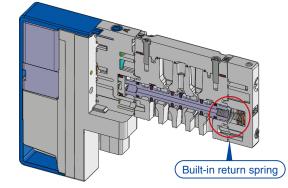





To mount the piping on top

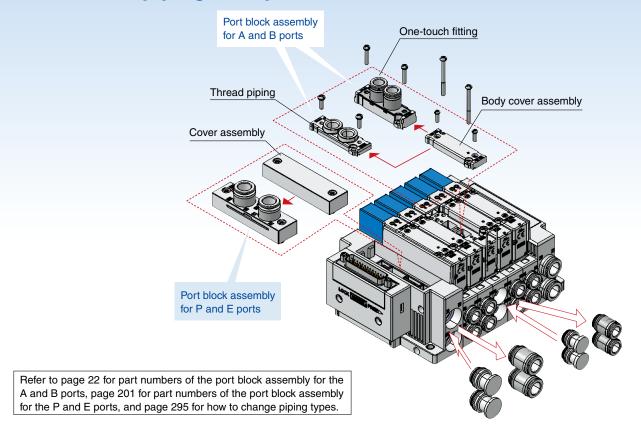

To mount the piping on the side

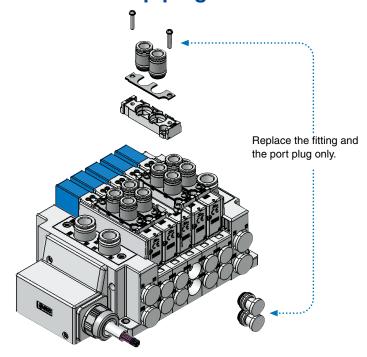

Mixed top-ported and sideported mounting is possible.

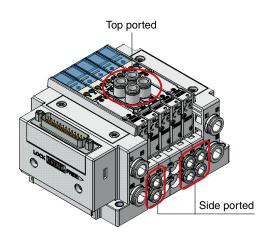

For SY3000 Blanking Plate with Output p.211

■ The blanking plate extracts the individual signal of the manifold valve.








Application Examples

For the control of separately mounted valves

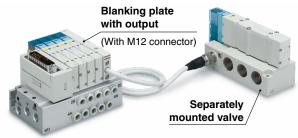

For the control of vacuum ejectors by means of Fieldbus unit signals



Vacuum unit ZK2 Series

Valve with Pressure Sensor p.32

Monitoring the output pressure of the solenoid valve contributes to preventive maintenance.

• The output pressure of the 4(A) and 2(B) ports can be detected.

 Detects errors such as incorrect switching, response delay, back pressure interference, pressure drop, etc.

• Identifies faulty parts of actuators, solenoid valves, etc.

• The required amount of space and installation labor can be reduced by directly mounting pressure switches on the solenoid valves.

■ Space saving, Reduced installation labor

Mountable manifolds

Metal base

Side ported/Type 50□

Connector

Bottom ported/Type 51□ Side ported/Type 10□ connecting base Bottom ported/Type 11□

Pressure sensor Rated pressure range:

- 0 to 1 MPa
- Power supply voltage: 12 to 24 VDC ±10%
- Output specifications: Analog output 1 to 5 V (In rated pressure range) Output impedance: Approx. 1 $k\Omega$

Application Examples


For the detection of output pressure Operation can be checked by monitoring the pressure



For the identification of faulty parts

A faulty part can quickly be identified by monitoring the operation of solenoid valves.




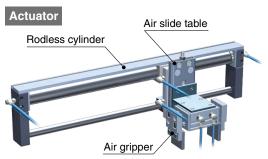




Only for External Pilot Vacuum Release Valve with Restrictor SY 5 A R Series P. 26

Vacuum suction and release can be controlled with a single valve!

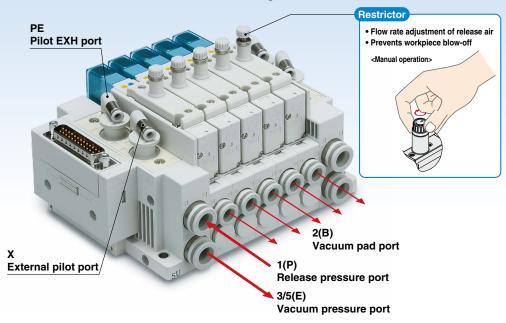

- Can be mounted on the same manifold as standard valves
 - * When an individual EXH spacer is used

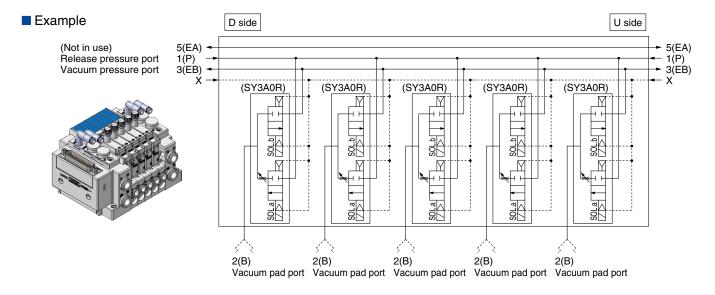

Mountable manifolds Side ported Bottom ported Top ported Type 10 Type 11 Type 12 * External pilot specification

Applicable to EX600-W Series Wireless Systems p. 113 p. 123 p. 165 p. 169 p. 177

Noise resistance

- Uses the 2.4 GHz ISM frequency band
- Frequency hopping: Every 5 ms

Communication cables not required

- Reduced wiring work, space, and cost
- Minimized disconnection risk

■ High-speed connection

 From the remote power supply ON to start of communication:

Min. 250 ms

■ Number of I/O points

• Max. 1280 inputs/1280 outputs (Max. 128 inputs/128 outputs per module)

■ Communication response

 Wireless communication signal Response time: 5 ms

■ Compatible protocol

EtherNet/IP









Application Examples


For tool changing

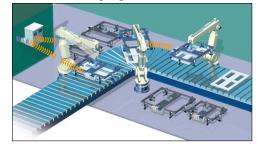

For spot welding

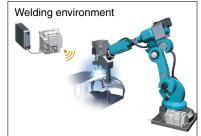

For rotary tables

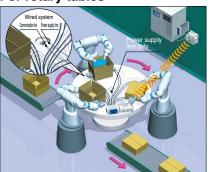

The EX260 series supports safety communication (PROFIsafe). p. 135-1

■ This is a Fieldbus unit which supports safety standard ISO 13849-compliant safety circuit constructions.



PROFIsafe is established as an international standard (IEC 61784-3-3). It is a communication protocol that transmits safety-related data by PROFINET communication and can be used up until safety standards ISO 13849-1 PL e and IEC 61508/IEC 62061 SIL 3.

Using the safety communication protocol

Refer to the EX260 Web Catalog for details on units that support the safety communication protocol.

When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole. The use of valves that have been validated as being compliant with ISO 13849-2 may be required.

For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.



Variations

CS Straight piping CS
Straight piping
Straight piping
Straight pipin
_
_ 0
_

Standard ○ Option ▲ Made to order (Refer to page 34.)


Ро	rt S	Size	•								١	/lar	nifo	ld	Ор	tio	ns	pp	. 20	3-21	8	р	p. 20	68-2	78			V	alv	e C	Opt	ion	s			ves v incti	
On	e-t	oud	ch f	fitti	ng	s					spacer	ıcer	release valve	release valve		or	sembly	sembly	output	disk	disk	installed type)	-	ction type)			ounting	ounting	turbine oil)	cification	es	Э.	S		ase valve	restrictor	sensor
C3 (N1)			C (N		C (N		(N		C1			H spa	al pressure	al pressure	plate	gulat	ock as	ock as	with c	king	king	ıly (Manifolo	fitting	od conne		late	ed m	ed mo	signated	ire spe	essur	nssə.	g size	9 IP67	re relea	e with	
Straight piping	Straight piping	Elbow piping*1	traight piping	Elbow piping*1	Straight piping	Elbow piping*1	Straight piping	Elbow piping*1	Straight piping	Elbow piping*1	Individual SUP	Individual EXH spacer	SUP stop valve spacer with residual pressure release valve	Double check spacer with residual pressure release valve	Blanking plate	Interface regulator	Individual SUP block assembly	Individual EXH block assembly	Blanking plate with output	SUP/EXH blocking disk	Label for blocking disk	Back pressure check valve assembly (Manifold installed type)	Dual flow fitting	Silencer (One-touch fitting connection type)	Plug	Name plate	SY3000/5000 mixed mounting	SY5000/7000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum/Low-pressure specification	Different pressures	Reverse pressure	Mixed fitting sizes	Enclosure IP67	With residual pressure release valve	Vacuum release valve with restrictor	With pressure
S	S	E	S	<u>Ш</u>	S	ш	S	Ш	တ	Ш			3	ă			ㅁ	드	0			Bac		S			S	S	ö	×					>	Š	
	•			•			_	_	-	_	0	0	0			0	0	0	_	0		0	0	0	0		p. 165	-	A		0			*2	*3	*4	
	_	_	•	•	•	•			•										_				_					p. 169		External Pilot	O Individual SUP	External Pilot					
																												p. 103									
_				_		_		_		_	0	0	0	0	0	0	0	0		0	0	0	-	0	0	0	p. 165		•	External	O	Evternal		*2	*3	*4	
	_								•										_								_	p. 169		Pilot	Individual SUP	Pilot					
	•				_		_												0															*2		*4	
_	•	_		—		_		_		_	0	0	0	_	0	0	0	0	_	0	0	0	-	0	0	-	p. 177		•	External	Individual SUP	External					
	_		•																_								_	p. 177		Pllot	50P	PIIOT			\dashv		
							_		_		(0																*3	*4	
_				_		_					0	0	0	0	0	0									0					External Pilot	Individual SUP	External Pilot					
																			0																+		
		_		_		_	_	_	-		0	0	0			0		_		_	_	_		_	0				•	_	0			_	*3		
_									•										_												Individual SUP						
			•		_														0																		
	•	_		_		_	_	_	-	_	0	0	0	_	0	0	_	_	_	_	_	_	_	_	0	_	_	_	▲		0			_		*4	
									•										_											Pilot	Individual SUP	Pilot					
_	_	_	-	_	_	_	_	-	-	-	_	_	0	0	_	0	_	-	-	-	-	-	$\left -\right $	-	-	-	-	-	•	External	_	External	-		*3	-	-
																														Pilot		Pilot					

- *1 For elbow piping, the size can only be specified in millimeters for certain port sizes. Refer to "How to Order Manifolds" for details.

 *2 Refer to the "Manifold Specifications" on page 37 for details on IP67.

 *3 Only the SY5000/7000 applies.

- *4 Only the SY3000/5000 applies.

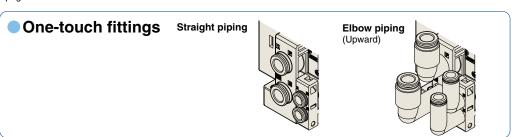





CONTENTS

Optimum Actuation Size Chart of Air Cylinder ·····	p. ⁻	13
Valve Specifications (Specifications, Response Time, Weight)	p. ⁻	15
Valve Construction	р. ⁻	19



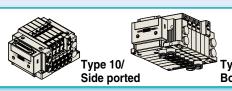

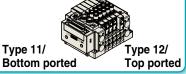


Type 10/Side Ported, Type 11/Bottom Ported, Type 12/Top Ported

	4		
	D-sub	Plug-in Connector Connecting Base	37
- Junio	connecto	D-sub Connector, Flat Ribbon Cable [IP40/67]	41
Flat ribbon ca	Terminal block box	Terminal Block Box (Spring Type) [IP67]p. !	59
		Terminal Block Box [IP67]p. (64
Lead wire		Lead Wire [IP67]p. 7	77
	Circular	Circular Connector [IP67]	87
	connector	EX500 Gateway Decentralized System 2 (128 Points) [IP67]pp. 97, 10	09
A Great	EX500	EX500 Gateway Decentralized System (64 Points) [IP67]pp. 103, 1	11
	a salah	EX600 Integrated Type (For Input/Output) Serial Transmission System (Fieldbus System) [IP67] ···· p. 1	13
min.	EX600	EX245 Integrated Type (For Input/Output) Serial Transmission System [IP65] p. 124	-1
EX245	EX250	EX250 Integrated Type (For Input/Output) Serial Transmission System [IP67] p. 12	25
CHHIEF &		EX260 Integrated Type (For Output) Serial Transmission System [IP67]	33
EX260	EX126	EX126 Integrated Type (For Output) Serial Transmission System [IP67]	41
HILLIAM	EXIZO	EX120 Integrated Type (For Output) Serial Transmission System [IP20]	49
EX120	A HILL	EX180 Integrated Type (For Output) Serial Transmission System [IP20] p. 156	i-1
	EX180	Type 10/Side Ported: Common Dimensions	
		(External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override)	57
		Type 11/Bottom Ported: Common Dimensions	60
		Type 12/Top Ported: Common Dimensions	62
	Mixed	Plug-in Mixed Mounting Type Manifoldp. 10	65
	mounting	Manifold Exploded View [Exploded View, Manifold Parts Nos.]	81
		How to Increase Connector Type Manifoldsp. 19	97
		One-touch Fitting, Plug Assembly Part Nos	02
		Manifold Optionsp. 20	03

Manifold

Plug-in Metal Base p. 220



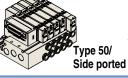











EX510

Type 50/Side Ported, Type 51/Bottom Ported, Type 52/Top Ported

Plug-in Metal Base	27
D-sub Connector, Flat Ribbon Cable [IP40]	
Type 50/Side Portedp. 22	23
Type 51/Bottom Ported ····· p. 22	23
Type 52/Top Ported	13
Wiring Specificationsp. 24	18
EX510 Gateway Type Serial Transmission System [IP20]	
Type 50/Side Portedp. 25	51
Type 51/Bottom Portedp. 25	51
Type 52/Top Ported	31
Manifold Exploded View [Exploded View, Manifold Parts Nos.] p. 26	36
One-touch Fitting, Plug Assembly Part Nosp. 26	3 7
Manifold Optionsp. 26	38

Sub-plate

Plug-in Sub-plate p. 280



M12 connector

	Plug-in Sub-plate Specifications (M12 Connector)	p. 281
	Sub-plate Parts Nos.	p. 283
Valve Replacement Parts		p. 22
With Residual Pressure Release	· Valve·····	····· p. 24
Vacuum Release Valve with Res	strictor ·····	····· p. 26
Valve with Pressure Sensor		····· p. 32
Made to Order for Valves		····· p. 34
Specific Product Precautions		p. 290
Model Index ·····		p. 298
		40



Optimum Actuation Size Chart of Air Cylinder

Applicable	Main valve			Арр	licable cyli	inder		
cylinder speed	seal type	Series	ø 6	ø 10	ø 16	ø 20	ø 25	
		SY3000						
	Rubber seal	SY5000						
100 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
	Rubber seal	SY3000						
		SY5000						
300 mm/s		SY7000						
or less	Metal seal	SY3000						
		SY5000						
		SY7000						
		SY3000						
	Rubber seal	SY5000						
500 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						

[Common conditions]


Pressure: 0.5 MPa
Piping length: 1 m
Load ratio: 50%
Stroke: 200 mm

Connector type manifold (for the side and bottom-ported types)

* Use as a guide for selection.

Please check the actual conditions with SMC Model Selection Software.



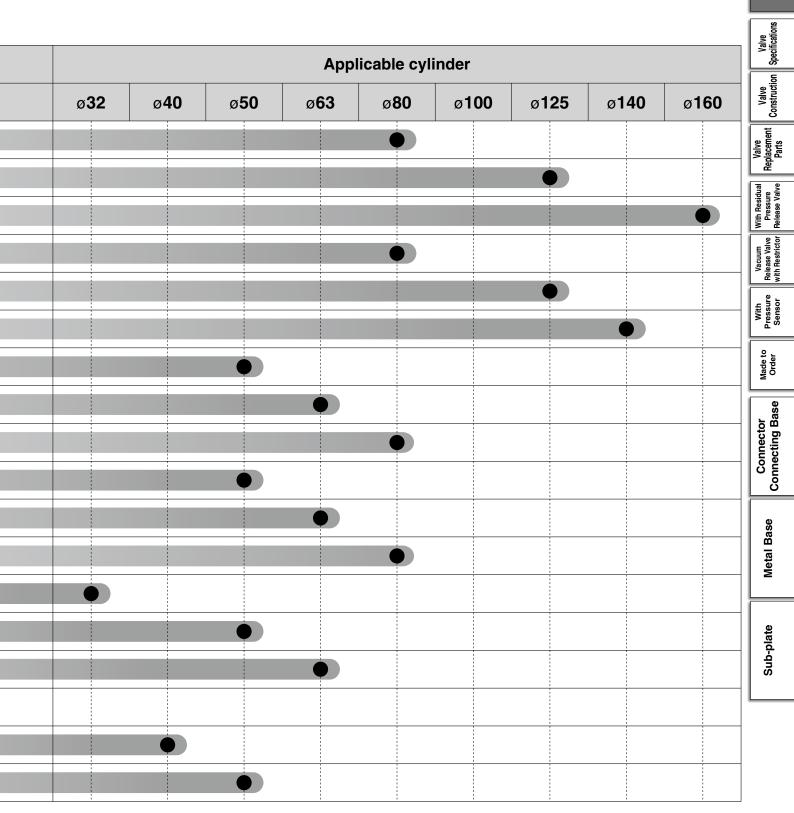

Specific Product Precautions



SY3000/5000/7000 Series Valve Specifications

Valve Specifications

V	alve type		Rubber seal	Metal seal				
Fluid			А	ir				
	2-position	single	0.15 to 0.7					
Internal pilot operating pressure range	2-position	double	0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)				
[MPa]	3-position		0.2 to 0.7					
[iiii w]	4-position	dual 3-port valve	0.15 to 0.7	_				
	Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)				
External pilot	Pilot	2-position single						
operating pressure range	pressure	2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)				
[MPa]	range	3-position						
		4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	_				
Ambient and fluid tempera	tures [°C]		–10 to 50 (ľ	(No freezing)				
	SY3000	2-position single/double	5	20*1				
SY5000		4-position dual 3-port valve	-	-				
Max. operating frequency		3-position	3	10*1				
[Hz]		2-position single/double	5	10*1				
	SY7000	4-position dual 3-port valve	3	_				
		3-position	3	10*1				
				g push type				
Manual override			Push-turn locking slotted type					
Manual override			Push-turn locking lever type					
			Slide locking type					
Pilot exhaust type	Internal pi		Main/Pilot valve common exhaust	Main/Pilot valve individual exhaust				
	External p	ilot		vidual exhaust				
Lubrication			Not re	quired				
Mounting orientation*2			Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.				
Impact/Vibration resistance	e*2 [m/s²]		150)/30				
Enclosure			IP67 (Based o	n IEC60529)* ³				
Coil rated voltage [DC]			24,					
Allowable voltage fluctuat	ion [V]		±10% of rat	ed voltage*4				
Standard			0.35 (With indi	cator light: 0.4)				
Power consumption [W]	High pressu	re type, Quick response type	0.9 (With indic	ator light: 0.95)				
Tomor consumption [w]	With power	er saving circuit	Standard: 0.1*5 (With indicator light only) [Inrush 0.4, Holding 0.1], High pressure type: 0.4*5 (With indicator light only) [Inrush 0.95, Holding 0.4]					
Surge voltage suppressor			Diode (Varistor fo	or non-polar type)				
Indicator light			LE	ED				
*1 Use below 5 Hz for with the			-					

^{*1} Use below 5 Hz for with the power saving circuit.

*3 In the case of a metal seal, there are restrictions in the operating environment. Refer to the "Specific Product Precautions" on page 290.

*5 For details, refer to page 292.



^{*2} Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. The test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Refer to page 295 for the fixation of DIN rail mounting type manifold.

^{*4} Due to voltage drops by the internal circuit in S/Z type and T type (with power saving circuit), use within the allowable voltage fluctuation as follows.

S/Z type

24 VDC: -7% to +10%
12 VDC: -4% to +10%
T type

24 VDC: -6% to +10%

Connector Connecting Base

Metal Base

Sub-plate

Valve Specifications **SY3000/5000/7000 Series**

Response Time

					Resp	onse time [n	ns] (at 0.5 MPa)	k1				
					Standard	•			ре			
Series	Seal type	Seal type	Seal type	Model	Type of actuation	Without light/ surge voltage	With light voltage su	nt/surge uppressor	Without light/ surge voltage	With light/surge voltage suppressor		
				suppressor	S/Z type	R/U type	suppressor	response typ	R/U type			
	Rubber seal	SY31□0	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less			
	Metal seal	SY31□1	z-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less			
	Rubber seal	SY32□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less			
SY3000	Metal seal	SY32□1	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less			
	Rubber seal	SY33/4/5□0	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less			
	Metal seal	SY33/4/5□1	0-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less			
	Rubber seal	SY3A/B/C□0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less			
	Rubber seal	SY51□0	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less			
	Metal seal	SY51□1	z-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less			
	Rubber seal	SY52□0	2-position double	12 or less	15 or less	12 or less	10 or less	voltage s S/Z type 15 or less 15 or less 15 or less 13 or less 18 or less 18 or less 25 or less 26 or less 35 or less 43 or less 17 or less 16 or less 46 or less	10 or less			
SY5000	Metal seal	SY52□1	z-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less			
	Rubber seal	SY53/4/5□0	3-position	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less			
	Metal seal	SY53/4/5□1	0-position	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less			
	Rubber seal	SY5A/B/C□0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less			
	Rubber seal	SY71□0	2-position single	47 or less	58 or less	53 or less	42 or less	52 or less	44 or less			
	Metal seal	SY71□1	2-position single	39 or less	48 or less	39 or less	34 or less	43 or less	34 or less			
	Rubber seal	SY72□0	2-position double	18 or less	19 or less	19 or less	18 or less	17 or less	17 or less			
SY7000	Metal seal	SY72□1	2-position double	17 or less	17 or less	16 or less	16 or less	16 or less	16 or less			
	Rubber seal	SY73/4/5□0	3-position	52 or less	54 or less	47 or less	42 or less	46 or less	40 or less			
	Metal seal	SY73/4/5□1	3-position	38 or less	45 or less	39 or less	33 or less	38 or less	34 or less			
	Rubber seal	SY7A/B/C□0	4-position dual 3-port valve	52 or less	60 or less	54 or less	49 or less	53 or less	48 or less			

^{*1} Based on dynamic performance test, JIS B 8419-2010 (Coil temperature: 20°C, at rated voltage)
Since the response time of the external pilot type of the 4-position dual 3-port valve differs from the above table, please contact SMC.



Valve Weight

SY3000 series

Valve model	Seal type	Тур	oe of actuation	Weight [g]
SY3□00		2-position	Single	74
		2-005111011	Double	83
	Rubber seal		Closed center	
31300		3-position	Exhaust center	87
			Pressure center	
		4-position	Dual 3-port valve	83

				1		
Valve model	Seal	Type	e of actuation	Port size	Weight	
	type	. 76		4, 2 (A, B)	[g]	
		2-position	Single		74	
		_ poomon	Double		83	
SY3□30-M5			Closed center	M5 x 0.8		
		3-position	Exhaust center	1110 X 0.0	87	
			Pressure center			
		4-position	Dual 3-port valve		83	
		2-position	Single		82	
		2-position	Double	C2	91	
SY3□30-C2			Closed center	ø2 One-touch		
313030-02		3-position	Exhaust center	fitting	95	
		Pressure center fitting				
		4-position	Dual 3-port valve		91	
		2-position	Single		85	
		2-position	Double	C3	94	
SY3□30-C3	Rubber	3-position	Closed center	ø3.2 One-touch		
313030-03	seal		Exhaust center		98	
			Pressure center	illing		
		4-position	Dual 3-port valve	fitting	94	
		2-position	Single		77	
		2-position	Double	C4	86	
SY3□30-C4			Closed center	ø4 One-touch		
3 T3 □ 3U-C4		3-position	Exhaust center		90	
			Pressure center	fitting		
		4-position	Dual 3-port valve		86	
		Onsoition	Single		80	
		2-position	Double	C6	89	
cvallan ce			Closed center	ø6 One-touch		
SY3□30-C6		3-position	Exhaust center		93	
		'	Pressure center	fitting		
		4-position	Dual 3-port valve		89	

Valve model	Seal type	Type of actuation		Weight [g]
	Metal seal	2-position	Single	76
			Double	86
SY3□01		3-position	Closed center	
			Exhaust center	90
			Pressure center	

Valve model	Seal type	Туре	of actuation	Port size 4, 2 (A, B)	Weight [g]
	- 7 -	2-position	Single	., _ (, ., _)	76
		2-position	Double		86
SY3□31-M5			Closed center	M5 x 0.8	
		3-position	Exhaust center		90
			Pressure center		
		2-position	Single		84
		2-position	Double	C2	94
SY3□31-C2			Closed center	ø2 One-touch	
	3-position	Exhaust center	fitting	98	
			Pressure center		
		2-position	Single		87
	Metal	2-position	Double	C3	97
SY3□31-C3	seal		Closed center	ø3.2 One-touch	
		3-position	Exhaust center	fitting	101
			Pressure center		
		2-position	Single		79
		2-position	Double	C4	89
SY3□31-C4			Closed center	ø4 One-touch	
		3-position	Exhaust center	fitting	93
			Pressure center		
		2-position	Single		82
		2-position	Double	C6	92
SY3□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	96
			Pressure center		

SY5000 series

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	82
			Double	90
CVE DO	Rubber seal	3-position	Closed center	
SY5□00			Exhaust center	100
			Pressure center	
		4-position	Dual 3-port valve	90

V.1	Seal	_		Port size	Weight
Valve model	type	Type of actuation		4, 2 (A, B)	[g]
		2-position	Single		102
		2-position	Double		110
SY5□30-01			Closed center	1/8	
3130-01		3-position	Exhaust center	1/0	120
			Pressure center		
		4-position	Dual 3-port valve		110
		2-position	Single		115
		2-005111011	Double	C4	123
SY5□30-C4		3-position	Closed center	ø4 One-touch fitting	133
313030-04			Exhaust center		
	Rubber seal		Pressure center		
		4-position	Dual 3-port valve		123
		2-position	Single		110
			Double	C6	118
SY5□30-C6			Closed center	ø6 One-touch	
313030-00		3-position	Exhaust center	fitting	128
			Pressure center	IIIIIIII	
		4-position	Dual 3-port valve		118
		2-position	Single		99
		2-position	Double	C8	107
SY5□30-C8			Closed center	ø8 One-touch	
		3-position	Exhaust center	fitting	117
			Pressure center	littiig	
		4-position	Dual 3-port valve		107

	Valve model	Seal type	Type of actuation		Weight [g]
	SY5□01	Metal seal	2-position	Single	91
				Double	101
			3-position	Closed center	
				Exhaust center	111
				Pressure center	

Valve model	Seal type	Туре	of actuation	Port size 4, 2 (A, B)	Weight [g]
	-7,6-0		Single	1, 2 (71, 2)	111
		2-position	Double		121
SY5□31-01			Closed center	1/8	
		3-position	Exhaust center		131
			Pressure center		
		2-position	Single		124
		z-position	Double	C4	134
SY5□31-C4		3-position	Closed center	ø4 One-touch	
			Exhaust center	fitting	144
	Metal		Pressure center		
	seal	2-position	Single		120
			Double	C6	130
SY5□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	140
			Pressure center		
		2-position	Single		108
		2 position	Double	C8	118
SY5□31-C8			Closed center	ø8 One-touch	
		3-position	Exhaust center	fitting	128
			Pressure center		



Valve Weight

SY7000 series

Valve model	Seal type	Type of actuation		Weight [g]
	Rubber seal	2-position	Single	110
			Double	118
SY7□00		3-position	Closed center	
317 🗆 00			Exhaust center	133
			Pressure center	
		4-position	Dual 3-port valve	114

	Seal	_		Port size	Weight
Valve model	type	Type of actuation		4, 2 (A, B)	[g]
		0 '''	Single		125
		2-position	Double	1	133
SY7□30-02			Closed center	1/4	
317 - 30-02		3-position	Exhaust center	1/4	147
			Pressure center		
		4-position	Dual 3-port valve] [129
		2-position	Single		163
		2-position	Double	C6	171
SY7□30-C6			Closed center	ø6 One-touch	
317 - 30-00		3-position	Exhaust center	fitting	186
			Pressure center	littiig	
		4-position	Dual 3-port valve		167
		2-position	Single		151
	Rubber seal		Double	C8 - ø8 One-touch - fitting	159
SY7□30-C8		3-position	Closed center		
317 - 30-00			Exhaust center		174
			Pressure center		
		4-position	Dual 3-port valve		155
		2-position	Single]	136
		2-position	Double	C10	144
SY7□30-C10			Closed center	ø10 One-touch	
317 - 30-010		3-position	Exhaust center	fitting	159
			Pressure center	littiig	
		4-position	Dual 3-port valve		140
		2-position	Single		146
SY7□30-C12		2°PUSITION	Double	C12	154
			Closed center	ø12 One-touch	
		3-position	Exhaust center	fitting	169
			Pressure center	litting	
		4-position	Dual 3-port valve		150

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	122
			Double	133
SY7□01	Metal seal	3-position	Closed center	
			Exhaust center	150
			Pressure center	


Valve model	Seal	Type	of actuation	Port size	Weight
valve model	type	Турс	or actuation	4, 2 (A, B)	[g]
		2-position	Single		136
		2-position	Double		148
SY7□31-02			Closed center	1/4	
		3-position	Exhaust center		164
			Pressure center		
		2-position	Single		174
		2-position	Double	C6	186
SY7□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	202
			Pressure center		
		2-position	Single		162
	Metal	2-position	Double	C8	174
SY7□31-C8	seal	3-position	Closed center	ø8 One-touch	
	Seai		Exhaust center	fitting	190
			Pressure center		
		2-position	Single		148
		2-position	Double	C10	159
SY7□31-C10			Closed center	ø10 One-touch	
		3-position	Exhaust center	fitting	176
			Pressure center		
		2-position	Single		157
		2-position	Double	C12	169
SY7□31-C12			Closed center	ø12 One-touch	
		3-position	Exhaust center	fitting	185
			Pressure center		




SY3000/5000/7000 Series Valve Construction


Rubber Seal


2-position double

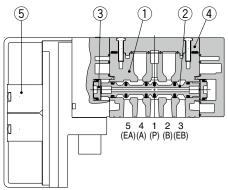


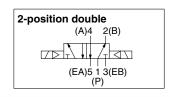


3-position closed center/exhaust center/pressure center

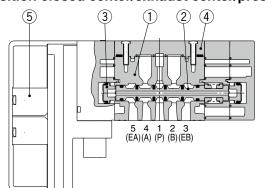

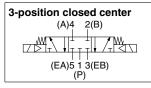

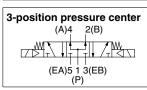

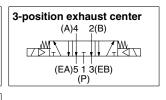


Component Parts


No.	Description	Material	Note
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminum die-casted	
2	Spool valve	Special resin/HNBR (3-position valve: (Aluminum/HNBR)	
3	Piston	Resin	
	Body cover assembly	Resin	For the side/bottom-ported type
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted (Thread piping) SY5000: Resin (Fitting) SY7000: Aluminum die-casted	For the top-ported type
5	Pilot valve assembly	_	Refer to page 23.



Rubber Seal


4-position dual 3-port valve

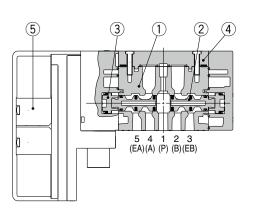


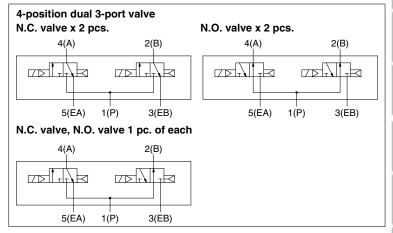

Valve Construction **SY3000/5000/7000 Series**


2-position double with back pressure check valve (Built-in valve type)

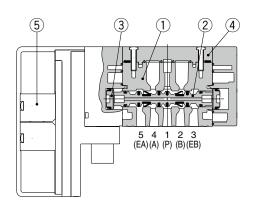


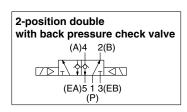

* The built-in valve type back pressure check valve is not available for the SY7000.

4-position dual 3-port valve with back pressure check valve (Built-in valve type)

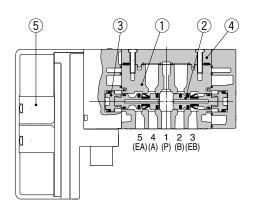

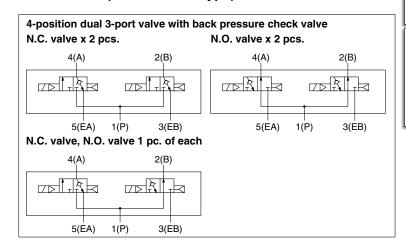



* The built-in valve type back pressure check valve is not available for the SY7000.




Metal Seal


2-position single

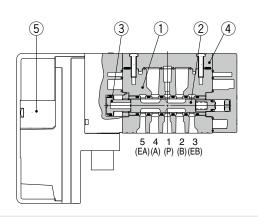


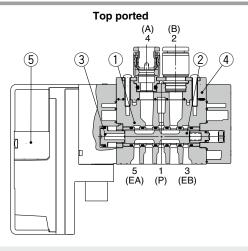

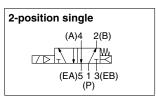



2-position double

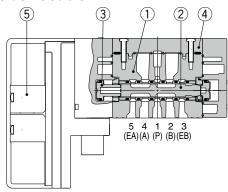


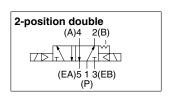


3-position closed center/exhaust center/pressure center

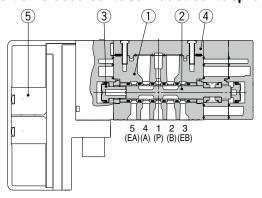

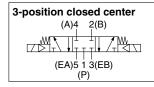

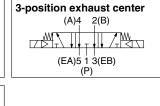

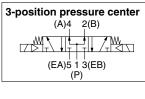


Component Parts

No.	Description	Material	Note
INO.	Description	ivialeriai	Note
1	Body	SY3000: Zinc die-casted SY5000/7000: Aluminum die-casted	
2	Spool, Sleeve Stainless steel/HNBR		
3	Piston	Resin	
	Body cover assembly	Resin	For the side/bottom-ported type
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted (Thread piping) SY5000: Resin (Fitting) SY7000: Aluminum die-casted	For the top-ported type
5	Pilot valve assembly	_	Refer to page 23.



SY3000/5000/7000 Series Valve Replacement Parts

How to Order Port Block Assembly

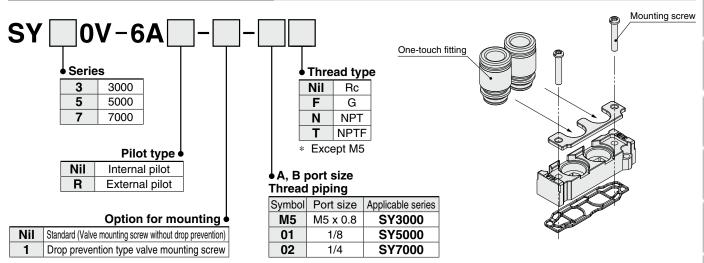

Metric size (One-touch fitting)

wethe size (one todon nitting)					
Symbol	Port size	plicable ser	able series		
Syllibol	FOIT SIZE	SY3000	SY5000	SY7000	
C2	ø2	•	_	_	
C3	ø3.2	•	_	_	
C4	ø4	•	•	_	
C6	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_		•	
C12	ø12	_	_	•	

Inch size (One-touch fitting)

IIICII 3	men size (one-toden niting)					
Cumahal	Dowt size	Ар	Applicable series			
Symbol	Port size	SY3000	SY5000	SY7000		
N1	ø1/8"	•	_	_		
N3	ø5/32"	•	•	_		
N7	ø1/4"	•	•	•		
N9	ø5/16"	_	•	•		
N11	ø3/8"	_	_	•		

Possible to replace only the One-touch fitting


	Port size	SY3000	SY5000	SY7000
	ø2	VVQ1000-50A-C2		_
	ø3.2	VVQ1000-50A-C3	ı	_
	ø4	VVQ1000-50A-C4	VVQ1000-51A-C4	_
Metric size	ø6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
	ø8	_	VVQ1000-51A-C8	VVQ2000-51A-C8
	ø10	_	ı	VVQ2000-51A-C10
	ø12	_		KQ2H12-17-X224
	ø1/8"	VVQ1000-50A-N1	1	_
	ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	_
Inch size	ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
	ø5/16"	_	VVQ1000-51A-N9	VVQ2000-51A-N9
	ø3/8"	_	_	VVQ2000-51A-N11

Refer to pages 295 and 296 for how to replace the port block assembly, One-touch fitting, and body cover assembly.



Body Cover Assembly


* Used when the top-ported type is changed to the side or bottom-ported type

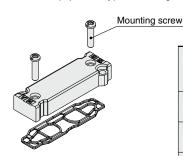

Series		Part no.		
		Standard (Valve mounting screw without drop prevention)	Drop prevention type valve mounting screw	
SY3000	Internal pilot	SY30V-16A	SY30V-16A-1	
313000	External pilot	SY30V-16AR	SY30V-16AR-1	
SY5000	Internal pilot	SY50V-16A	SY50V-16A-1	
515000	External pilot	SY50V-16AR	SY50V-16AR-1	
SY7000	Internal pilot	SY70V-16A	SY70V-16A-1	
317000	External pilot	SY70V-16AR	SY70V-16AR-1	

^{*} The part number is not indicated on the product.


How to Order Pilot Valve Assembly (With a gasket and two mounting screws)

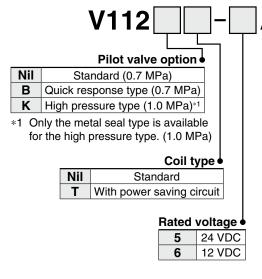

⚠ Caution

- The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.
- When selecting the coil type with power saving circuit, it is not possible to change to high pressure/power saving circuit type.



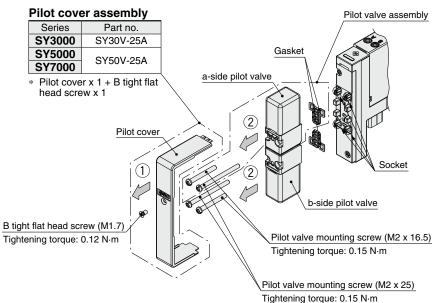


- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow ①.
- Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow 2.
- * Assemble by following the removal procedure in reverse.
- Ensure the gasket is mounted, and take care not to bend the socket.
- Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.



With Residual Pressure Release Valve

Mountable manifold SS5Y5/7-50/51 type manifold SS5Y5/7-(M)10/11 type manifold Sub-plate single unit (Except top-ported type)

How to Order (With mounting screw)

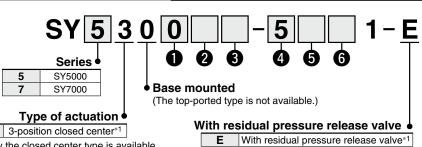

SY5000/7000 Series

*1 Only the closed center type is available.

Rubber seal

Metal seal

Standard (0.7 MPa)

Quick response type (0.7 MPa)

High pressure type (1.0 MPa)

Standard With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type

Only the metal seal type is available for the

if the valve is to be continuously energized for

Be careful of the energizing time when the

power saving circuit is selected. Refer to page

5

Seal type

Nil

Pilot valve option


high pressure type.

long periods of time.

292 for details.

Coil type Nil

Mounting screw types, hexagon socket head cap screw B and drop prevention type K, H are not available.

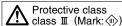

Rated voltage

12 VDC The applicable rated voltage varies depending on the manifold wiring type. Refer to the "How

24 VDC

to Order Manifolds" pages.


Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- * For the non-polar type, be careful of surge voltage intrusion. Refer to page 293 for details. (Excludes when an SI unit manifold is used)
- Only "Z" and "NZ" types are available with a power saving circuit.

Thread type Port size Port location Wiring specification With sub-plate Make selections for items 15 to 18 on page 282. With sub-plate

6 Manual override

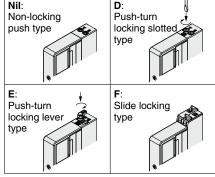

- Refer to page 34 for the safety slide locking manual override.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the

manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 or 266 for base gasket part numbers

Refer to Table 1 for mounting screw part numbers.

Table 1. Valve mounting screw


SY5000	SY7000
SY5000-221-2A	SY7000-221-10A
(2 pcs.)	(3 pcs.)

Valve Specifications

Valve construction		Rubber seal	Metal seal
		3-position closed center valve with residual pressure release val	
Fluid		Air	
Operating pressu	re range [MPa]*2	2 0.3 to 0.7 0.3 to 0.7 (High pressure: 0.3 to	
Woight [g]	SY5000	117	128
Weight [g]	SY7000	156	177

- *1 Rubber seal is used for the residual pressure release valve.
- *2 Internal pilot type only
- Other specifications are common to the valve specifications on page 15.
- When using in combination with an individual SUP/EXH spacer or an interface regulator, the length of the required mounting screws will differ. Please contact SMC for details.

Symbol

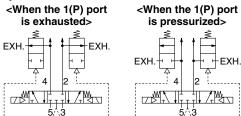

A mechanism is used that exhausts the pressure of the cylinder port when the P port supply pressure of the 3-position closed center valve is exhausted.






SY5000/7000 Series

Dimensions SY5000 (Light/surge voltage suppressor) 116.6 84.5 Manual override Push-turn locking slotted 39.8 30.7 type: Press, then rotate it. 4(A) port side : Blue 2(B) port side : Yellow 2 x ø3.2 Manual override part (For manifold mounting) A side indicator (Red)*1 Exhausted: Concave EXH port Pressurized: End face EXH port B side indicator (Red)*1 . . 47. Exhausted: Concave 62.3 (For F type) (For E type: 60.2) 30.1 Pressurized: End face 56.6

SY7000

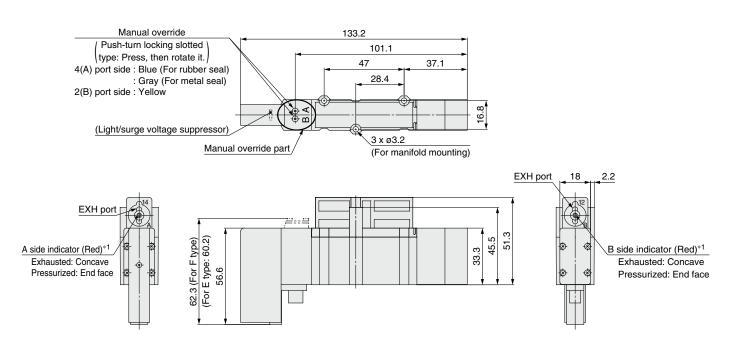

*1 The indicator shows the pressurization status. Do not push it.

RoHS


SY3000/5000 Series

Only for External Pilot

Vacuum Release Valve with Restrictor

Mountable manifold [External pilot] SS5Y3/5-50/52 type manifold SS5Y3/5-(M)10/11/12 type manifold Sub-plate single unit (Except SS5Y3-11 type)

How to Order (With mounting screw)

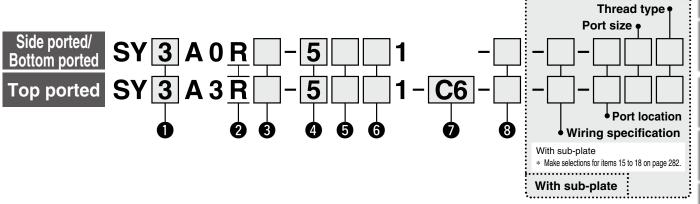

Series

_	
3	SY3000
5	SY5000


2 Pilot type			
R	External pilot		

4 Rated voltage 5 24 VDC 6 12 VDC

3 Coil type

Nil Standard	
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected.
 Refer to page 292 for details.

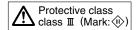


5 Light/surge voltage suppressor and common specification

Symbol With light Surge voltage suppressor Nil — — Non-polar R — Non-polar S — Positive common Negative common				
R	Symbol	With light		
U	Nil	_	_	
S — Positive common NS — Negative	R			Non-polar
Z	U	•		
NS — Negative	S	_		Docitivo common
1 3	Z	•	_	Positive confinion
NZ common	NS	_		Negative
	NZ	•		common


- For the non-polar type, be careful of surge voltage intrusion. Refer to page 293 for details. (Excludes when an SI unit manifold is used)
- * Only "Z" and "NZ" types are available with a power saving circuit.

6 Manual override

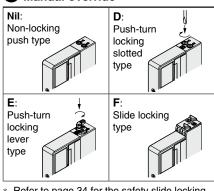

 Refer to page 34 for the safety slide locking manual override.

How to Order Manifold Assembly

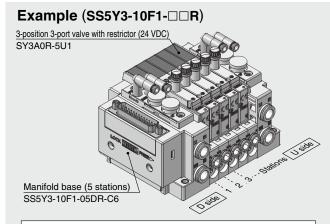

SS5Y3-10F1-05DR-C6---1 set (Type 10 5-station manifold base part no.) *SY3A0R-5U1 (3-position 3-port with restrictor part no.)---5 sets

- → The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting
 with the 1st station as shown in the figure above. If the arrangement becomes
 too complicated, specify the details on a manifold specification sheet.

B port size One-touch fitting (Metric size)

Symbol	B port	SY3000	SY5000
C4	ø4 One-touch fitting	•	•
C6	ø6 One-touch fitting	•	•
C8	ø8 One-touch fitting	_	•

One-touch fitting (Inch size)

Symbol	B port	SY3000	SY5000
N3	ø5/32" One-touch fitting	•	•
N7	ø1/4" One-touch fitting	•	•
N9	ø5/16" One-touch fitting	_	•

- When selecting the port size for each station, specify on a manifold specification sheet separately.
- When mounting on the manifold base or sub-plate, the A port is plugged. When a manifold base or sub-plate is ordered separately, mount a plug on the A port.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw

- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 or 266 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Specific Product Precautions



SY3000/5000 Series



Valve Specifications

Valve construction		3-position 3-port valve with restrictor	
Seal		Rubber seal	
Fluid		Air	
Type of actuation		Normally closed	
Operating pressure range [MPa]	Release pressure port 1(P)	0 to 0.6	
	Vacuum pressure port 3(EB), 3/5(E)	-100 kPa to 0.7*1	
Talige [WFa]	Pilot X port	Release pressure + 0.1 or more (Min. 0.25) to 0.7	
Restrictor operation		Manual	

- *1 Can be used with positive pressure to suit the application
- * Other specifications are common to the valve specifications on page 15.
- * Quick response type is not available.

Weight

Valve model	Weight [g]	
SY3A0R	90	
Malesa and all	Port size	M/-:-b+ F-3
Valve model	2(B) port	Weight [g]
SY3A3R	C4	91
STOAGE	C6	93
Valve model	Weight [g]	
SY5A0R	94	
	Port size	
Valve model	2(B) port	Weight [g]
	C4	118
SY5A3R	C6	115
	C8	121

Release pressure

2(B)

Vacuum pad port

Symbol

port

Response Time

Valve model	Without light/surge	With light/surge voltage suppressor		
valve model	voltage suppressor	S/Z type	R/U type	
SY3A□R	18	26	18	
SY5A□R	27	32	27	

^{*} P = 0.1 MPa X = 0.5 MPa

Manifold Flow Rate Characteristics*1

3(EB) Vacuum pressure

port

Flow Rate Characteristics (When restrictor is fully open)

1) Plug-in Metal Base

<u> </u>						
	Port size		Valve flow rate characteristics			
Manifold type	1, 3	2	1→2 (P→B))	2→3 (B→EB	3)
	(P, EB)	(B)	C [dm3/(s·bar)]	b	C [dm ³ /(s·bar)]	b
SS5Y3-50R (Side ported)	1/8	C6	0.7	0.24	1.0	0.16
SS5Y3-52R (Top ported)	1/8	C6	1.0	0.25	1.1	0.25
SS5Y5-50R (Side ported)	1/4	C8	1.0	0.30	2.3	0.10
SS5Y5-52R (Top ported)	1/4	C8	1.4	0.16	2.4	0.14

2 Plug-in Connector Connecting Base

	Port size		Valve flow rate characteristics			
Manifold type	1, 3	2	1→2 (P→B))	2→3 (B→EB)
	(P, EB)	(B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b
SS5Y3-10R (Side ported)	C8	C6	0.7	0.36	1.2	0.22
SS5Y3-12R (Top ported)	C8	C6	1.0	0.26	1.2	0.20
SS5Y5-10R (Side ported)	C10	C8	1.0	0.20	2.9	0.17
SS5Y5-11R (Bottom ported)	C10	C8	1.0	0.30	3.3	0.24
SS5Y5-12R (Top ported)	C10	C8	1.4	0.15	2.6	0.24

^{*1} The value is for manifold base with 5 stations.

^{*} Calculation of effective area S and sonic conductance C: S = 5.0 x C




Connector Connecting Base

Metal Base


Sub-plate

Restrictor Flow Rate Characteristics [Fluid passage: 1(P)→2(B)]


SY3A0R

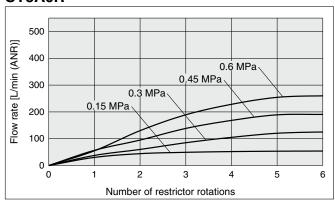


SY5A0R

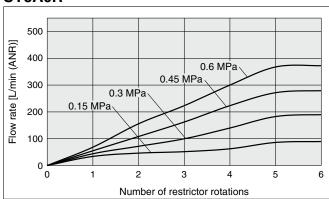


SY3A3R-C4

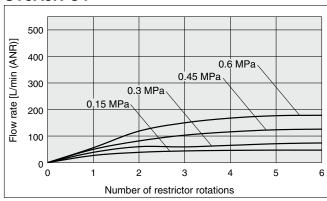


SY5A3R-C4

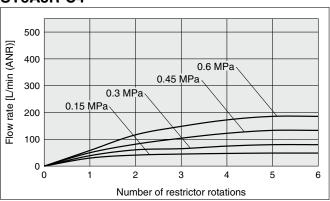


SY3A3R-C6

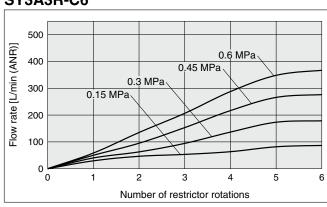

SY5A3R-C6

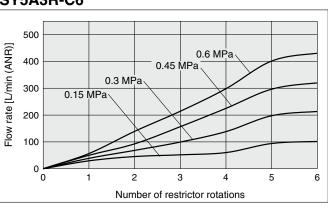

SY5A3R-C8

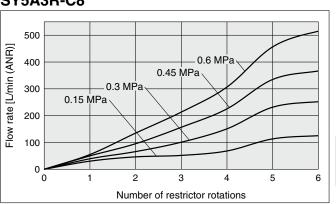





SY3000/5000 Series

Circuit Example

<Example 1: When the 2-position double solenoid valve is combined with the individual EXH spacer>

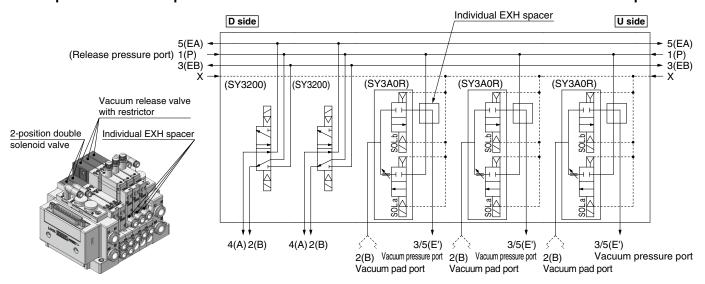

<Example 2: When the 2-position double solenoid valve is combined with the individual EXH block and blocking disk>

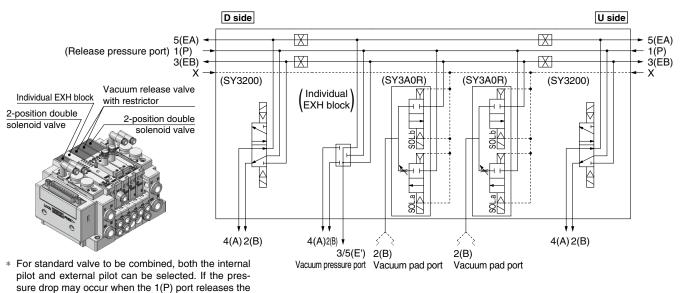


vacuum, use the external pilot type.

Metal Base


Sub-plate


Dimensions: SY3000

Side ported SY3A0R

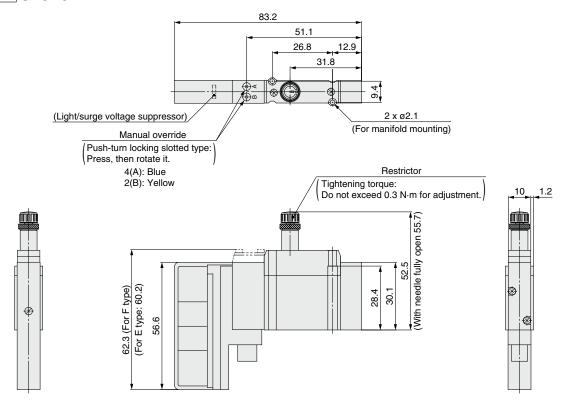

Top ported SY3A3R

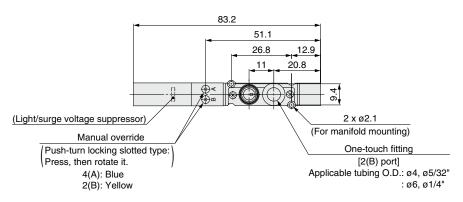

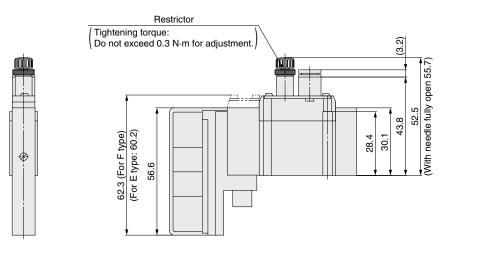




Specific Product Precautions




SY3000/5000 Series

Dimensions: SY5000

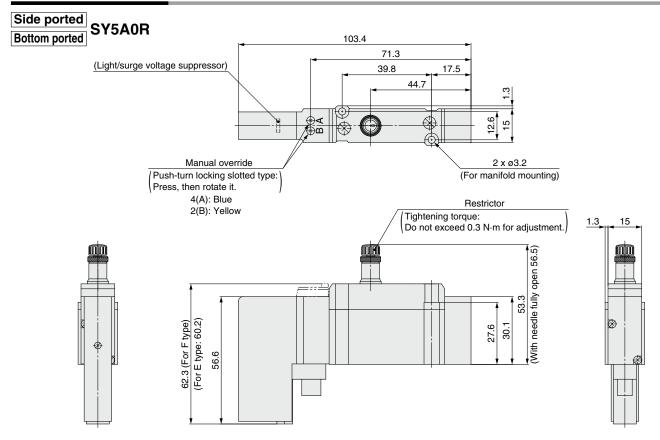


Top ported SY5A3R

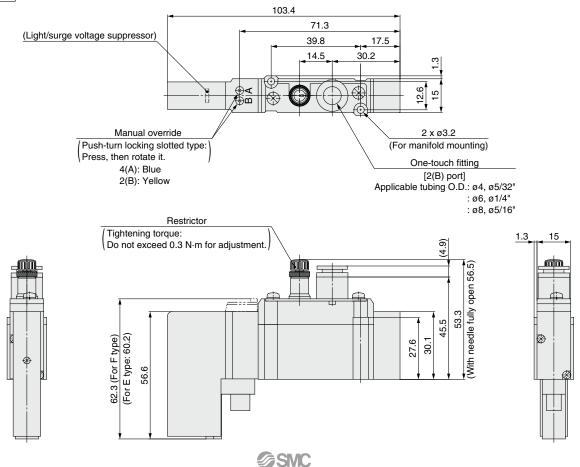

SY5000/7000 Series Valve with Pressure Sensor

Mountable manifold Metal base: SS5Y5/7-50/51 type manifold Connector connecting base: SS5Y5/7-10/11 type manifold

How to Order Valves (With mounting screw)

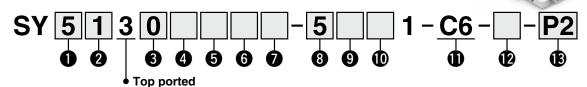

Series

OCI ICO		
5	SY5000	
7	SY7000	

Type of actuation

1	2-position	Single
2	z-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A *1	4 '''	N.C./N.C.
B*1 C*1	4-position dual 3-port	N.O./N.O.
C*1	duai 3-port	N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	7:	
Nil	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type

O cen type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Rated voltage

5	24 VDC
6	12 VDC


* The applicable rated voltage varies depending on the manifold wiring type.

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_	•	Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- * For the non-polar type, be careful of surge voltage intrusion. Refer to page 293 for details. (Excludes when an SI unit manifold is used)
- Only "Z" and "NZ" are available with a power saving circuit.
- Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.

Manual override

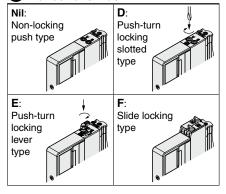

(II) A, B port size One-touch fitting (Metric)

Symbol	A, B port	SY5000	SY7000
C6	ø6	•	•

12 Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

(13) Pressure sensor

Symbol	Included quantity
P1	1 pc.
P2	2 pcs.

- * The top-ported type valve and the C6 (ø6) One-touch fitting are used.
- The PSE540-R06 pressure sensor is included in the product package.
- When "P1" is selected, one plug (KQ2P-06) is included in the product package.

How to Order Manifold Assembly


Example (SS5Y5-10F1)

SS5Y5-10F1-05D-C8

- ···1 set (Type 10 5-station manifold base part no.)
- *SY5130-5U1-C6-P1 ··· 2 sets (2-position single part no.)
- *SY5130-5U1-C6-P2
- ···1 set (2-position double part no.)

 * SY5230-5U1-C6-P2
- set (2-position double part no.)
- *SY5330-5U1-C6-P2
- ···1 set (3-position closed center part no.)
 - The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the

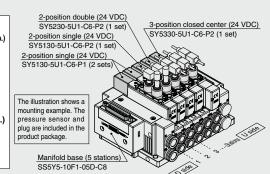

For the valve arrangement, the valve closest to the D side is considered the 1st station.

Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.



SY5000/7000 Series


Pressure Sensor Specifications


Mo	del	PSE540
Rated pressur	e range	0 to 1 MPa*1
Power supply	voltage	12 to 24 VDC ±10%, Ripple (p-p) 10% or less (with reverse connection protection)
Current consu	mption	15 mA or less
Output specifications		Analog output 1 to 5 V (within rated pressure range), 0.6 to 1 V (within extension analog output range), Output impedance: Approx. 1 k Ω
Linearity		±0.7% F.S. or less
Environment	Enclosure*2	IP40
Temperature characteristics		±2% F.S. (25°C reference)
Sensor cable		Oilproof heavy-duty vinyl cable (ellipse), 3 cores, 2.7 x 3.2, 3 m, Conductor area: 0.15 mm², Insulator O.D.: 0.9 mm

^{*1} Set the pressure within the operating pressure range of the valve.


Dimensions

SY5000-P2

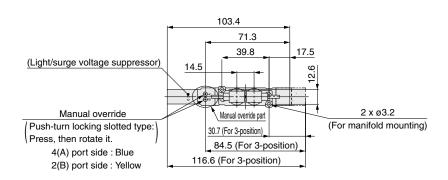


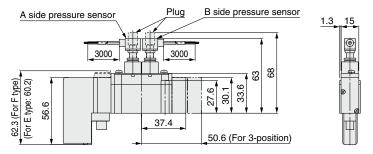


SY7000-P2

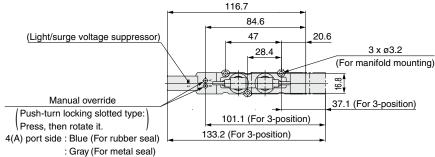

2(B) port side : Yellow

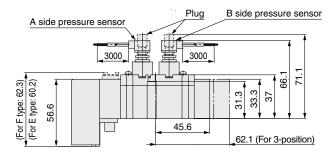

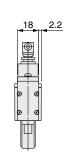

^{*2} Please note that even if the manifold is IP67, the product will remain IP40.

Chart

Valve Specifications

SY3000/5000/7000 Series Made to Order

Please contact SMC for detailed dimensions, specifications, and lead times.

1 Main Valve Fluororubber Specification


Symbol -X90

Made to Order

Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

· When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.

Applicable valves series SY3 \bigcirc_3^0 0, SY5 \bigcirc_3^0 0, SY7 \bigcirc_3^0 0 (Only rubber seal type)

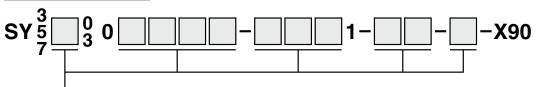


Entry is the same as standard products.


Specifications and performance are the same as standard products.

2 With Safety Slide Locking Manual Override

A safety lock is added to the slide locking manual override. (Refer to page 4.)

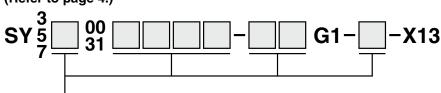

Entry is the same as standard products. Specifications and performance are the same as standard products.

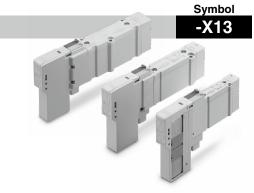


Symbol


3 2-Position Single Solenoid Valve with Built-in Return Spring (Only rubber seal type)

-X350

A 2-position single solenoid valve with a spring built into the main valve The main valve returns to origin (the OFF position) via the spring when it is not pressurized.

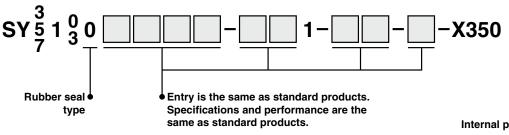

Internal pilot type

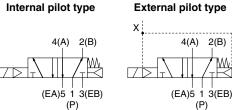

* For the external pilot type, exhaust the external pilot (X) port and the main pressure simultaneously.

If the main pressure cannot be exhausted due to the system specifications, please contact SMC separately.

* The manual option is only applicable to the non-locking push type.



2(B)





35

Valve Specifications

Plug-in Connector Connecting Base

Side ported

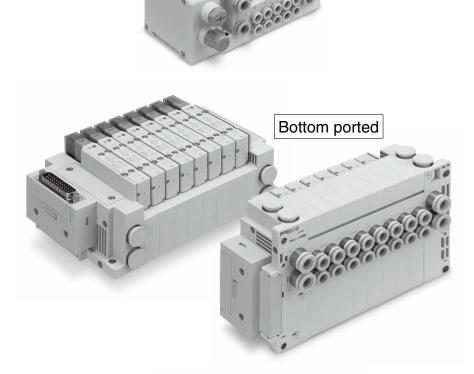

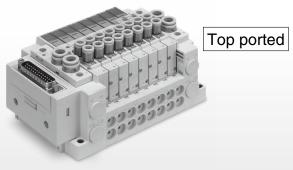

Specific Product Precautions



SY3000/5000/7000 Series Type 10, 11, 12 Plug-in Connector Connecting Base

Manifold Specifications

				sub ector	Flat	ribbon c	able	Terminal block box (Spring type)	Terminal block box	Lead wire	Circular connector		S	erial wirir	ng	
Model			F type	FW type	P type	PG type	PH type			L type	M type	S6□ type (EX600)	SA□ type (EX245)	SA2 type (EX500) S4□ type (EX126)	SA3 type (EX500) S□ type (EX250) (EX260)	S3□ type (EX120) S8□ type (EX180)
Manifol	d type							Plug-in c	onnector	connec	ting base	•				
SUP/EX	(H port type						Con	nmon SU	P/EXH (Commor	n for 3/5 p	oort)				
Valve stations			2 to	o 24 statio	ons	2 to 18 stations	2 to 8 stations	2 to 24 stations			2 to 24	stations			2 to 24 stations	
Applicable connector			D-sub connector Conforming to MIL-C-24308 JIS-X-5101 (Refer to page 55.)	Dedicated connector (Refer to page 55.)	wit Conformi (Ref Socket: 26 pins	Socket: 20 pins	elief C-83503 e 57.) Socket:					_				
Internal	l wiring			Positive common, Negative common Regative common Regative common Negative common												
		SY3000		ø8 One-touch fitting ø5/16" One-touch fitting												
	1(P), 3/5(E) port	SY5000		ø10 One-touch fitting ø3/8" One-touch fitting												
Port		SY7000		ø12 One-touch fitting ø1/2" One-touch fitting												
size		SY3000					ting, ø3.2 e-touch fi			•		•		•		
	4(A), 2(B)	SY5000				ø4 O	ne-touch	fitting, ø	6 One-to	uch fittin	ıg, ø8 Or	e-touch	fitting			
	port	313000			Ø	5/32" On	e-touch f	itting, ø1	/4" One-	touch fitt	ing, ø5/1	6" One-to	ouch fittir	ng		
		SY7000					ting, ø8 C e-touch fi		•			•		·		
Enclosure (Based on IEC60529)			IP40	IP67*1		IP40			IP6	37* ¹		IP67*1 I/O Unit: partially IP40	IP65	IP67*1 (EX500 GW) Unit, Input Unit: IP65	IP67*1 EX260 D-sub communication connector: IP40 EX500 GW Unit: IP65	IP20

^{*1} In the case of a metal seal, there are restrictions in the operating environment. Refer to the "Specific Product Precautions" on page 290.

Connector Connecting Base

Base

Metal

Sub-plate

Manifold Flow Rate Characteristics*1/Manifold Weight

Valve Seal Type: Rubber Seal

Side Ported (Type 10)

		Port	size		Flow rate ch	aracteristics		Weight: W [g]*2	
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P -	→ A/B)	4/2 → 3/5 (A/E	3 → E)	Weight: W [g]*2 (n: stations)	
model	model	(P, E)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	(II. Stations)	
	SY3100 SY3200			1.4	0.30	1.6	0.19		
	SY3300			1.3	0.28	1.2	0.40		
SS5Y3	SY3400	C8	C6	1.2	0.27	1.6	0.29	28.9 n + 293	
33313	SY3500	Co	08	1.4	0.31	1.1	0.36	20.9 11 + 293	
	SY3A00			1.3	0.26	1.5	0.27		
	SY3B00			1.3	0.26	1.5	0.27		
	SY3C00			1.3	0.26	1.5	0.27		
	SY5100 SY5200			3.3	0.30	3.6	0.17		
	SY5300			3.1	0.32	2.9	0.31		
SS5Y5	SY5400	C10	C8	3.1	0.32	3.7	0.23	74.7 n + 398	
33313	SY5500			3.4	0.32	2.9	0.31	74.711 + 396	
	SY5A00			2.9	0.32	3.2	0.25		
	SY5B00			2.8	0.31	2.9	0.26		
	SY5C00			2.9	0.32	3.1	0.25		
	SY7100 SY7200			6.2	0.23	5.9	0.20		
	SY7300			4.8	0.25	4.4	0.36		
SS5Y7	SY7400	C12	C12	4.8	0.25	6.6	0.27	106.6 n + 400	
33317	SY7500	012	012	7.1	0.25	4.4	0.36	106.6 n + 496	
	SY7A00			5.4	0.25	5.1	0.29		
	SY7B00			5.4	0.24	5.1	0.31		
	SY7C00			5.4	0.25	5.1	0.29		

Valve Seal Type: Rubber Seal **Bottom Ported (Type 11)**

Dottomi	ited (Type T	' <i>)</i>								
NA = 15 = 1 = 1	Value	Port	Port size		Flow rate characteristics					
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P → A/B)		$4/2 \rightarrow 3/5 \text{ (A/B} \rightarrow \text{E)}$		Weight: W[g]*2 (n: stations)		
model	model	(P, E)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	(ii. stations)		
SS5Y5	SY5100 SY5200	C10	C8	3.3	0.29	4.2	0.26	76.8 n + 445		
SS5Y7	SY7100 SY7200	C12	C12	6.2	0.25	6.6	0.21	117.9 n + 532		

Valve Seal Type: Rubber Seal Top Ported (Type 12)

Top Ported (Type 12)							
		Port size						
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P −	→ A/B)	4/2 → 3/5 (A/I	3 → E)	Weight: W [g]*2 (n: stations)
model	model	(P, E)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	(II. Stations)
SS5Y3	SY3130 SY3230	C8	C6	1.2	0.29	1.3	0.19	25.1 n + 314
SS5Y5	SY5130 SY5230	C10	C8	2.8	0.27	3.8	0.23	66.3 n + 417
SS5Y7	SY7130 SY7230	C12	C12	5.6	0.31	5.7	0.24	84.1 n + 519

*1 The value is for manifold base with 5 stations and individually operated 2-position type.

^{*} Calculation of effective area S and sonic conductance C: S = 5.0 x C



^{*2} Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type. To obtain the weight with valves attached, add the valve weights given on page 17 for the appropriate number of stations.

Manifold Flow Rate Characteristics*/Manifold Weight

Valve Seal Type: Metal Seal Side Ported (Type 10)

Side Ported	(1)pc 10)	Port size Flow rate characteristics							
Manifold	Valve	1, 3/5	4, 2	1 → 4/2 (P →		4/2 → 3/5 (A/E	Weight: W [g]*2		
model	model	(P, E)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm³/(s·bar)] b		(n: stations)	
	SY3101 SY3201			1.2	0.19	1.3	0.18		
SS5Y3	SY3301	C8	C6	0.8	0.19	0.8	0.35	28.9 n + 293	
	SY3401		,	0.8	0.19	1.1	0.26		
	SY3501			0.9	0.21	0.7	0.32		
	SY5101 SY5201			2.7	0.24	3.1	0.17		
SS5Y5	SY5301	C10	C8	2.3	0.21	2.0	0.24	74.7 n + 398	
	SY5401			2.3	0.21	2.7	0.18		
	SY5501			2.5	0.21	2.0	0.24		
	SY7101 SY7201			4.4	0.14	4.4	0.17		
SS5Y7	SY7301	C12	C12	3.4	0.12	3.3	0.24	106.6 n + 496	
	SY7401			3.4	0.12	4.9	0.18		
	SY7501			5.0	0.12	3.3	0.24		

Valve Seal Type: Metal Seal Bottom Ported (Type 11)

		Port size			144 · 1 · 144 · 1*2			
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P −	→ A/B)	4/2 → 3/5 (A/I	3 → E)	Weight: W [g]*2 (n: stations)
model	model model		(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	(II. Stations)
SS5Y5	SY5101 SY5201	C10	C8	2.8	0.25	3.5	0.15	76.8 n + 445
SS5Y7	SY7101 SY7201	C12	C12	4.6	0.16	4.7	0.18	117.9 n + 532

Valve Seal Type: Metal Seal Top Ported (Type 12)

· · · · · · · · · · · · · · · · · · ·								
N 4 15 - 1 -1	.,,	Port size			Maiabt M [a]*2			
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P1 -	→ A/B)	4/21 → 3/5 (A/I	31 → E)	Weight: W [g]*2 (n: stations)
model	iniodei	(P, E)	(A, B)	C [dm³/(s·bar)]	b	C [dm³/(s·bar)]	b	(ii. stations)
SS5Y3	SY3131 SY3231	C8	C6	1.2	0.16	1.3	0.18	25.1 n + 314
SS5Y5	SY5131 SY5231	C10	C8	2.6	0.18	3.0	0.16	66.3 n + 417
SS5Y7	SY7131 SY7231	C12	C12	3.9	0.21	4.1	0.14	84.1 n + 519

^{*1} The value is for manifold base with 5 stations and individually operated 2-position type.

^{*2} Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type. To obtain the weight with valves attached, add the valve weights given on page 17 for the appropriate number of stations.


^{*} Calculation of effective area S and sonic conductance C: S = 5.0 x C




Connector Wiring Layout

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring. (in the case of all double wiring)

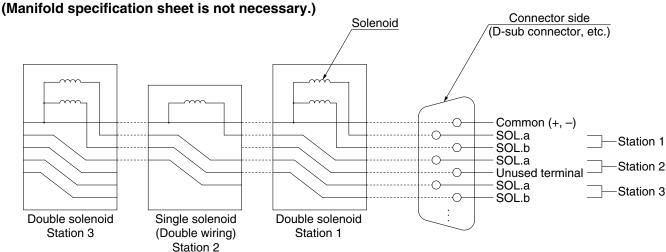

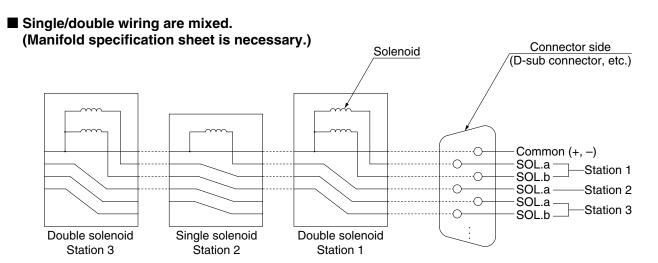

* These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.



Specific Product Precautions



Type 10 **Side Ported** Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

D-sub Connector | Flat Ribbon Cable |


SY3000/5000/7000 Series

CE CR CRUS ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

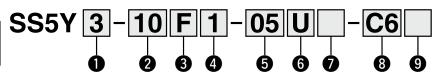


Series SY3000 SY5000 SY7000

② Ty _l	ре
10	Side ported
11	Bottom ported*1


*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).


4 Connector entry direction

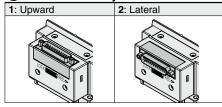

The connector entry direction for connector type "FW" D-sub connector <IP67> cannot be rotated. If it is necessary to change, order the connector block assembly (page 183) separately.

Connector type

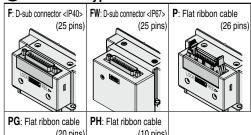

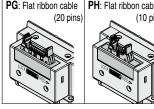

Valve stations

F/FW: D-sub connector (25 pins) **P**: Flat ribbon cable (26 pins)

TT TT. D Gab Goriniootor (Lo pino)								
ymbo	Stations	Note	Syr					
02	2 stations		0					
:	1	Double wiring*1						
12	12 stations		1					
02	2 stations	Specified layout*2	0					
:	1	(Up to 24 solenoids						
24	24 stations	available)	2					

	Symbol	Stations	Note
	02	2 stations	
	- E	:	Double wiring*1
	12	12 stations	
	02	2 stations	Specified layout*2
	:	:	(Up to 24 solenoids
	24	24 stations	available)

PG: Flat ribbon cable (20 pins) PH: Flat ribbon cable (10 pins)

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:	:	Double wiring*1	:	:	Double wiring*1
09	9 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
:	:	(Up to 18 solenoids	•	:	(Up to 8 solenoids
18	18 stations	available)	08	8 stations	available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

How to Order Manifold Assembly

Example (SS5Y3-10F1-	□)
	2-position double (24 VDC)
2-position single (24 VDC)	SY3200-5U1 (1 set)
SY3100-5U1 (3 sets)	3-position closed center (24 VDC)
	SY3300-5U1 (1 set)
Manifold base (5 stations) SS5Y3-10F1-05D-C6	

SS5Y3-10F1-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) *SY3100-5U1------3 sets (2-position single part no.) *SY3200-5U1------ 1 set (2-position double part no.) *SY3300-5U1------1 set (3-position closed center part no.)

- The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- For the valve arrangement, the valve closest to the D side is considered the 1st station. • Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 54. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.



Circular Connecto

EX500 EX600

EX250

EX126 EX120

Mixed Mounting

Manifold Exploded View Fitting,

Manifold

Protective class class Ⅲ (Mark:﴿﴾)

6 P, E port entry

	. ,
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

SUP/EXH block assembly

O 00.	/EXII DIOCK GSSCIIID
Nil	Internal pilot
s	Internal pilot, Built-in silencer
R	External pilot

* 3/5(E) port is plugged for the built-in silencer type.

9 Mounting and Option

Cumbal	Mounting	Option		
Symbol	INIOUTILITY	Name plate	Station number	
Nil	D: .	_	_	
AA	Direct mounting	•	•	
BA		•	_	
D□	DIN	_	_	
A□	DIN rail mounting	•	•	
В□	Iniounting	•	_	

* Enter the number of stations inside \square when it is larger than the number

DIN Rail Option

Nil 0

3

Direct mounting

Without DIN rail (with bracket)

For 3 stations Specify a longer rail

than the total length For 24 stations of specified stations.

- of valve stations. (Refer to "DIN Rail Option" above.) * Only direct mounting is available for the type 11 bottom-ported type.
- * Refer to page 295 for the fixation of DIN rail mounting type manifold.

<u>8</u>	Α, Ι	Вp	ort size	(Metri	c/One	-touch	fitting	<u>a)</u>	
Symbol	A, B port			0/Side					
Syllibol		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_		_		
СЗ			ø3.2	•	_	_	_	_	
C4			ø4	•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	200
C10			ø10	_	_	•	_	•	S SEE
C12			ø12	_	_	•	_	•	V
CM*1		Straight port, mixed sizes		•	•	•	•	•	
L4			ø4	•	•		_		
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	-	
L10			ø10	_	_	•	_		
L12	01		ø12	_	_	•	_	_	المعتقلون
B4	Elbow*2		ø4	•	•	_	_	_	
B6	릚	arc	ø6	•	•	•	_		
B8		Downward	ø8	_	•	•	_	_	
B10		Do	ø10	_	_	•	_	_	
B12	2		ø12	_	_	•	_	_	
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
P, E port size (One-touch fittings)				ø8	ø10	ø12	ø10	ø12	


<u>A, B</u>	po	<u>ort</u>	size (Inc	:h/One	e-touch	<u>n fittin</u>	g)		
Symbol	A, B port		Type '	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	ight		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	0)		ø3/8"	_	_	•	_	•	0 158
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9		Μď	ø5/16"	_	•	_	_	_	
LN11	01		ø3/8"	_	_	•	_	_	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
BN3	Elbow*2	ō	ø5/32"	•	_	_	_	_	
BN7	all	wa	ø1/4"	•	•	_	_	_	
BN9		Downward	ø5/16"	_	•	_	_	_	
BN11		$ \check{\Box} $	ø3/8"	_	_	•	_	_	
LM*1		(Incl	w port, mixed sizes uding upward and wwnward piping)	•	•	•	_	_	
			rt size h fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

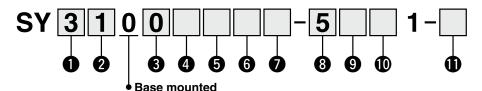

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>	O Type of actuation					
1	0 141	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
A *1	4-position	N.C./N.C.				
B*1	dual	N.O./N.O.				
C *1	3-port	N.C./N.O.				

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

6 Pilot valve option

	эт тапто орион
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)


*1 Only the metal seal type is available for the high pressure type.

Coil type

	, po
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Manual override

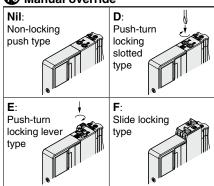

Refer to page 34 for the safety slide locking manual override.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None Built-in					
Н						

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

8 Rated voltage

	· · · · · · · · · · · · · · · · · · ·
5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
N7	•		common

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 293 for details.
 Only "Z" and "NZ" types are available with a power saving circuit.

Type of mounting screw

	· · · · · · · · · · · · · · · · · · ·
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



Plug-in

Connector Connecting Base

D-sub Connector (IP40)

Valve Specifications

Valve Construction

Made to Order

Connector Connecting Base

Circular Connecto

EX500

EX600 EX250

EX260

EX126 EX120

Mixed Mounting Manifold


Fitting,


Manifold

Type 10/Side Ported

Dimensions: SY3000 Series

SS5Y3-10F₂¹-Stations D-C₂², N₁ (D)

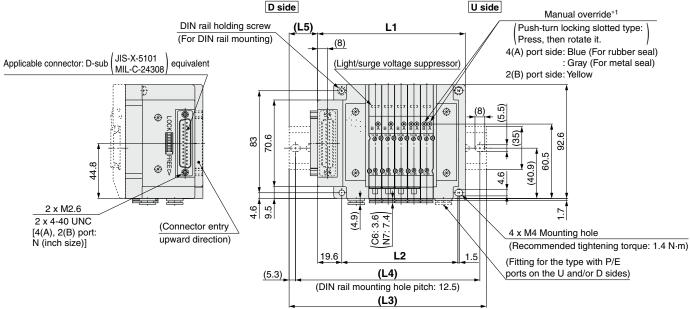

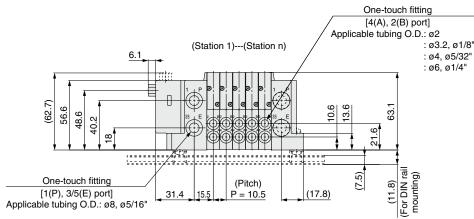

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10F2-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5


Dimensions: SY5000 Series


Plug-in
Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP40)

SS5Y5-10F₂-Stations D-C6, N7 (D)

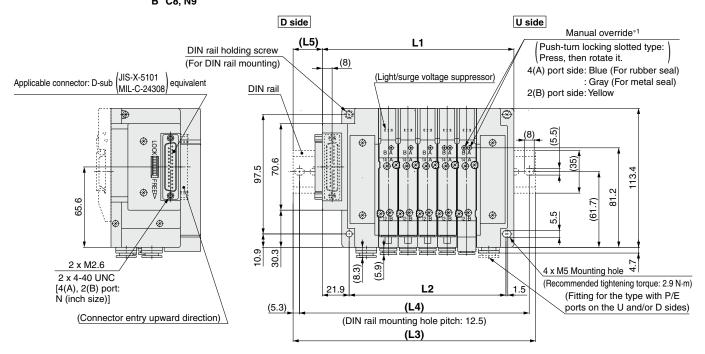

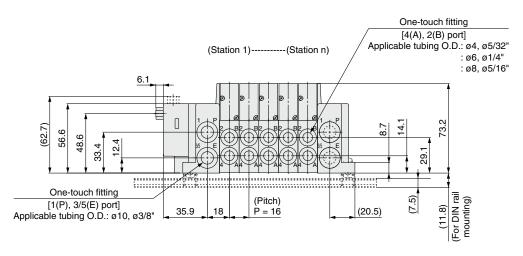

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10F2-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22



Type 10/Side Ported

D-sub Connector (IP40)


Plug Part Nos. Manifold Options


Specific Product ecautions

Plug-in Connector Connecting Base

SS5Y7-10F₂¹-Stations B-C₂₁₀, N₁₁(D)

Dimensions: SY7000 Series

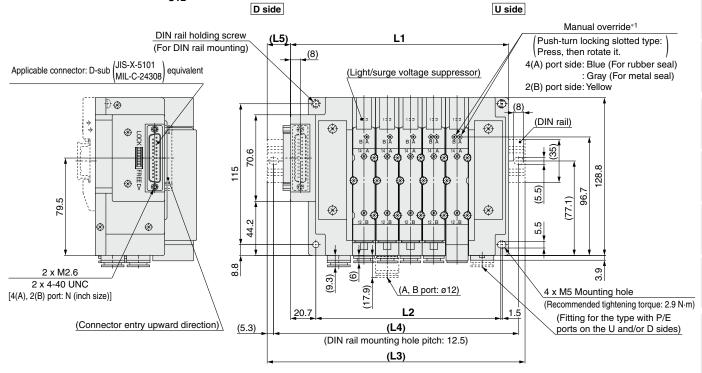

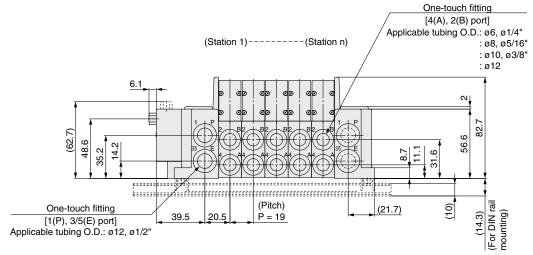

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10F2-05D-C10."
- Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20




Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP67)

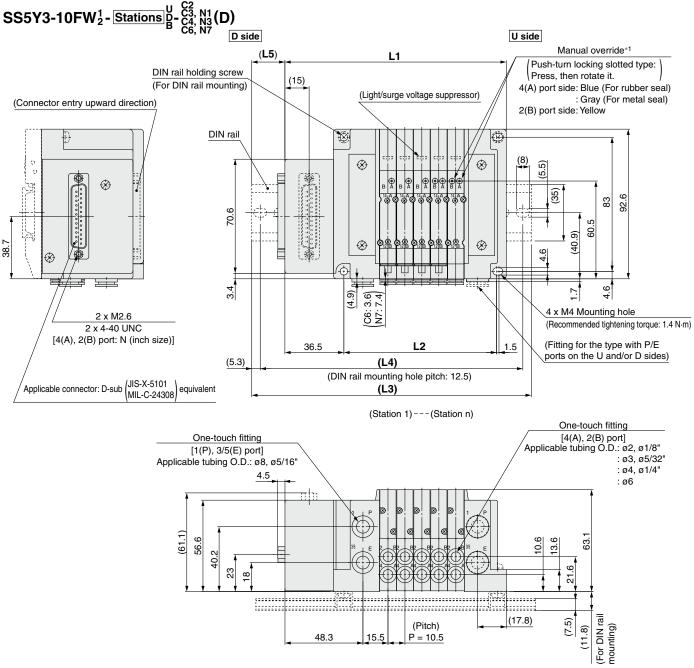

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- These figures show the "SS5Y3-10FW2-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5



Type 10/Side Ported


D-sub Connector (IP67)

Options


Plug-in Connector Connecting Base

Dimensions: **SY5000** Series

SS5Y5-10FW₂¹-Stations D-C6, N7 (D)

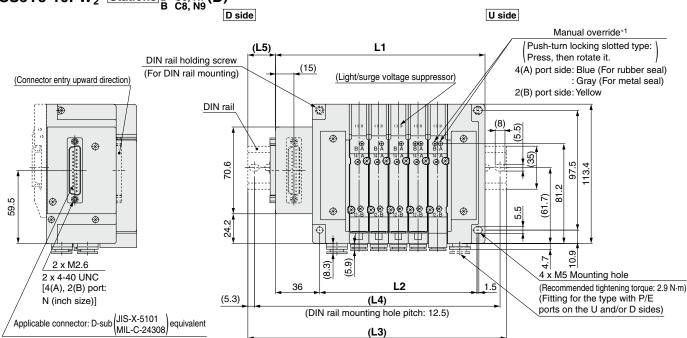

(Station 1)---(Station n)

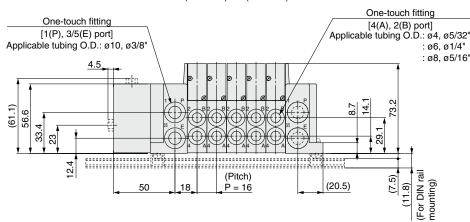

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10FW2-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5


Dimensions: SY7000 Series


Plug-in Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP67)

SS5Y7-10FW₂¹-Stations D-C₀₁₀, N₁₁(D)

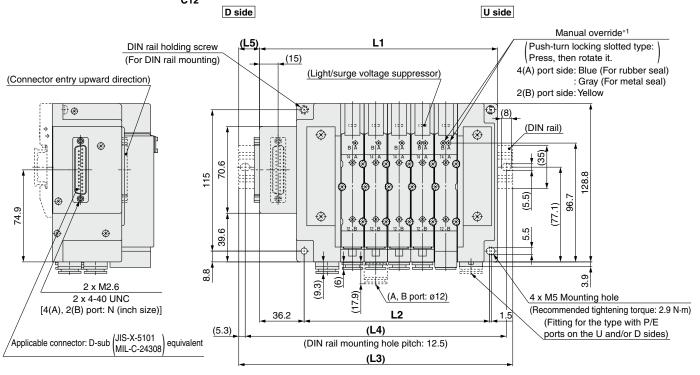

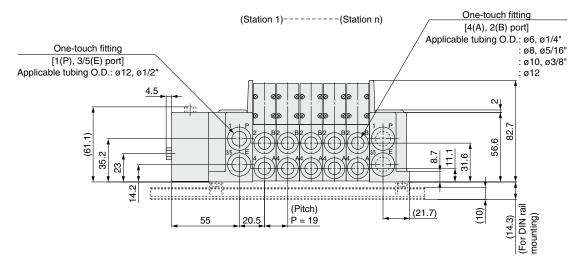

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10FW2-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	136.7	155.7	174.7	193.7	212.7	231.7	250.7	269.7	288.7	307.7	326.7	345.7	364.7	383.7	402.7	421.7	440.7	459.7	478.7	497.7	516.7	535.7	554.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	223	248	260.5	285.5	298	323	335.5	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	212.5	237.5	250	275	287.5	312.5	325	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5



Chart

Type 10/Side Ported

Flat Ribbon Cable

Valve Specifications

Valve Construction

With Residual
Pressure
Release Valve

With Vessure Rele

Pressu Senso

Made to Order

Connector Connecting Base

D-sub, Flat Ribbon

Terminal Block

Circular Connector

EX500

EX600

EX260

EX120

Dimensions

Mixed Mounting Manifold Exploded

Fitting, Plug Part Nos.


Manifold Options

Specific Product Precautions




Plug-in Connector Connecting Base


 $\textbf{SS5Y3-10} \overset{P}{\underset{PH}{\text{PG}}} \overset{1}{\underset{2}{\text{-}}} \overset{-}{\underbrace{\textbf{Stations}}} \overset{\text{U}}{\underset{D}{\text{D}}} \overset{\text{C2}}{\underset{\text{C3}, \text{ N3}}{\text{C3}}} (\textbf{D)}$

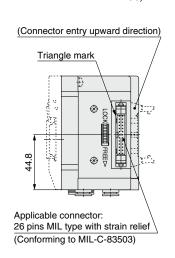

D side U side Manual override*1 (L5)Push-turn locking slotted type: DIN rail holding screw Press, then rotate it. (For DIN rail mounting) 4(A) port side: Blue (For rubber seal) : Gray (For metal seal) (Light/surge DIN rail (8)2(B) port side: Yellow voltage suppressor) (%) (%) 92.6 32) 70.6 83 60.5 (40.9)4.6 9.5 (Fitting for the type with P/E ports on the U and/or D sides) 19.6 4 x M4 Mounting hole (Recommended tightening torque: 1.4 N·m) (5.3)(L4) (DIN rail mounting hole pitch: 12.5) (L3)

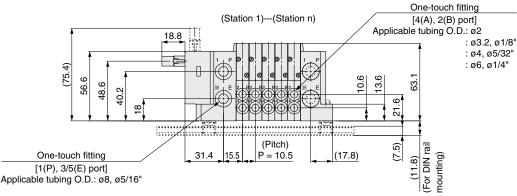

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10P2-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.
- Only connectors are different for 10PG and 10PH. L1 to L5 dimensions are the same as 10P type.

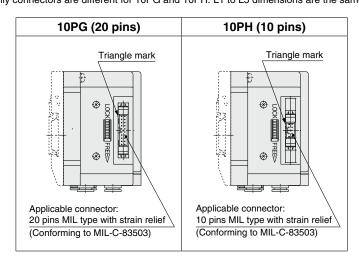


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5

Dimensions: SY5000 Series


Plug-in Connector Connecting Base

Type 10/Side Ported

Flat Ribbon Cable

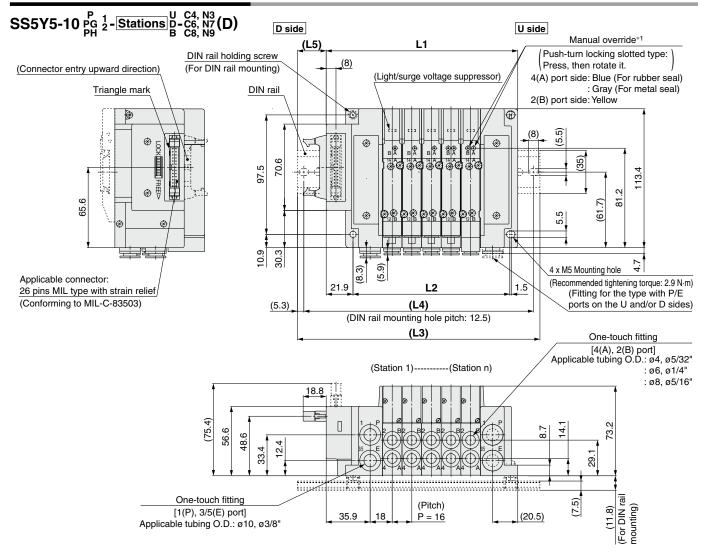

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10P2-05D-C8."
- Refer to page 163 for dimensions of A or B port top-ported type.
- Only connectors are different for 10PG and 10PH.
 L1 to L5 dimensions are the same as 10P type.

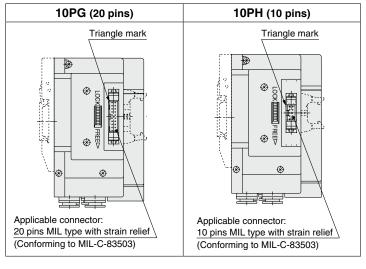

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

Chart

Type 10/Side Ported

Flat Ribbon Cable

One-touch fitting

[4(A), 2(B) port]

: ø8, ø5/16" : ø10, ø3/8"

: ø12

Applicable tubing O.D.: ø6, ø1/4"

56.6

9

(21.7)

(For DIN rail mounting)

Valve Specifications

cement Valve

With Residual
Ne Pressure
tor Release Valve

With Vessure Rele

Pressu Senson

> Made to Order

Connector
Connecting Base

Flat Ribbon Terminal

_ead Vire

Circular Connector

EX600

EX260

EX120

Common Dimensions

Mixed Mounting Manifold Exploded


View Fitting, Plug Part Nos.

Manifold Options

Specific Product Precautions

Plug-in
Connector Connecting Base

Dimensions: SY7000 Series

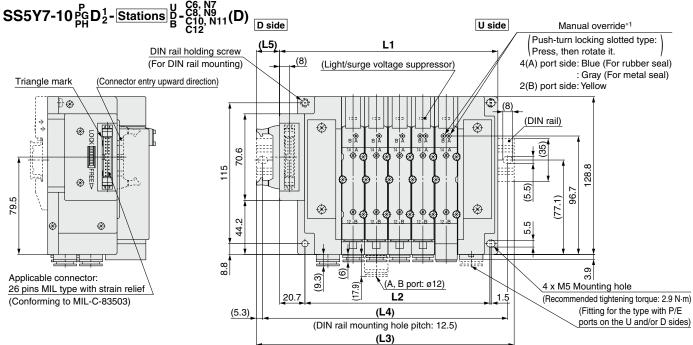


(Station 1)----(Station n)

(Pitch)

) P = 19

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10P2-05D-C8."
- * Refer to page 164 for dimensions of A or B port top-ported type.
- Only connectors are different for 10PG and 10PH. L1 to L5 dimensions are the same as 10P type.

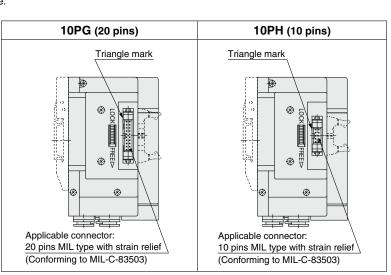

One-touch fitting

[1(P), 3/5(E) port]

Applicable tubing O.D.: ø12, ø1/2'

48.6

35.2

(75.4)

18.8

E----

39.5

20.5

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20

52

Plug-in Connector Connecting Base

D-sub Connector | Flat Ribbon Cable

SY3000/5000/7000 Series 5






How to Order Manifolds

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

Type 12


Top Ported

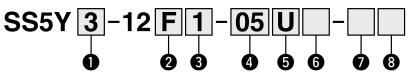



Series

3	SY3000
5	SY5000
7	SY7000

2 Connector type

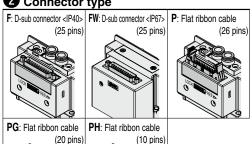

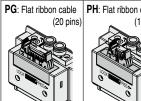

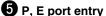

O i , = port ontry				
U *1	U side (2 to 10 stations)			
D *1	D side (2 to 10 stations)			
B	Both cidos (2 to 24 stations)			

*1 6 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

How to Order Manifold Assembly

Example (SS5Y3-12F1-□) 2-position double (24 VDC) 2-position single (24 VDC) SY3230-5U1-C6 (1 set) SY3130-5U1-C6 (3 sets) 3-position closed center (24 VDC) SY3330-5U1-C6 (1 set) Manifold base (5 stations) SS5Y3-12F1-05D

SS5Y3-12F1-05D 1 set (Type 12 5-station manifold base part no.)


*SY3130-5U1-C6 3 sets (2-position single part no.) *SY3230-5U1-C6 1 set (2-position double part no.)

*SY3330-5U1-C6 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

• For the valve arrangement, the valve closest to the D side is considered the 1st station. • Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

3 Connector entry direction

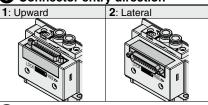

The connector entry direction for connector type "FW" D-sub connector <IP67> cannot be rotated. If it is necessary to change, order the connector block assembly (page 183) separately.

4 Valve stations

F/FW: D-sub connector (25 pins) **P**: Flat ribbon cable (26 pins)

Stations	Note	Symbol	Stations	Note
2 stations		02	2 stations	
:	Double wiring*1		:	Double wiring*1
12 stations		12	12 stations	
2 stations	Specified layout*2	02	2 stations	Specified layout*2
	(Up to 24 solenoids		:	(Up to 24 solenoids
24 stations	available)	24	24 stations	available)
	2 stations 12 stations 2 stations	2 stations 12 stations 2 stations 2 stations Specified layout*2 (Up to 24 solenoids)	2 stations Double wiring*1 12 stations 2 stations Specified layout*2 (Up to 24 solenoids 12 stations 13 stations 14 stations 15 stations 15 stations 16 stations 17 stations 17 stations 18 stations	2 stations Double wiring*1 .

PG: Flat ribbon cable (20 pins) **PH**: Flat ribbon cable (10 pins)

G. Flat hobbin cable (20 pins)			 <u>гп.</u>	rial II	bbon cable (10 pins)
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
-	:	Double wiring*1	- E	:	Double wiring*1
09	9 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
•	:	(Up to 18 solenoids		:	(Up to 8 solenoids
18	18 stations	available)	08	8 stations	available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been
- This also includes the number of the blanking plate assembly.

6 SUP/EXH block assembly

	,=,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
Nil	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)

8 Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a length	
- i	i longer than that of		
D24	For 24 stations the standard rail.		

Refer to page 295 for the fixation of DIN rail mounting type manifold.

P, E port size (One-touch fittings)

			<u>_</u>
Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"



* For N, sizes are in inches.

Valve Specifications

Valve Construction

Refer to page 15 for valve specifications.

SY 3 1 3 0 -5 1 -C6 - Top ported 1 -

How to Order Valves (With mounting screw)

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
A *1	4-position dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C*1		N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal	
1	Metal seal	

4 Pilot type

	7.
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type

O com type		, po
	Nil	Standard
	Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•	•	
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- For the non-polar type, be careful of surge voltage intrusion.
 Refer to page 293 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

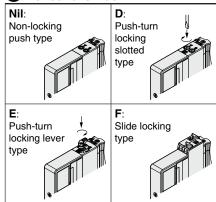

* Refer to page 34 for the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

0110	one todon numg (metric)			
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3 C4	ø3.2	•	_	_
	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•
	`			

One-touch fitting (Inch)

0	me teach many			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

* Only Nil is available for M5.

Type of mounting screw

Nil	Round head combination screw
B Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (iii))

Specification



ssidual V sure Repla

Vacuum With F lease Valve Pres n Restrictor Releas

With Pressure Sensor

> nade to Order

Connec

Ribbon Terminal Block

Wire

EX500

EX250

EX126

EX120


Common Dimensions

Mixed Mounting Manifold Exploded View

View Fitting, Plug Part Nos.


Manifold Options

Electrical Wiring Specifications

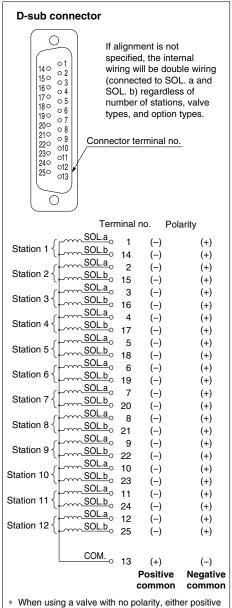

common or negative common can be used.

Specified Layout

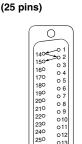


 \bigcirc

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

COM.

Cable Assembly

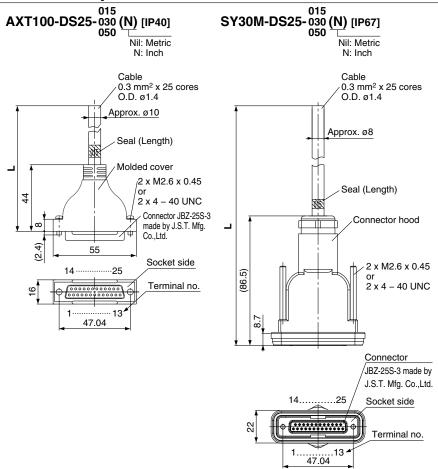

D-sub connector cable assembly [IP40]

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	
3 m	AXT100-DS25-030	Cable 0.3 mm ² x 25 cores
5 m	AXT100-DS25-050	0.5 11111 x 25 00165

- When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.
- Cannot be used for movable wiring
- Lengths other than the above are also available. Please contact SMC for details.

D-sub connector cable assembly [IP67]

		· · / L · 1
Cable length (L)	Assembly part no.	Note
1.5 m	SY30M-DS25-015	0.11
3 m	SY30M-DS25-030	Cable 0.3 mm ² x 25 cores
5 m	SY30M-DS25-050	0.5 111111 X 25 00165

- Be sure to use the connector cable assembly in the table, to satisfy enclosure **IP67**
- * Cannot be used for movable wiring

Electrical characteri		
Item	Property	
Conductor resistance Ω/km, 20°C	65 or less	
Voltage limit V, 1 minute, AC	1000	
Insulation resistance MΩ/km, 20°C	5 or more	

The minimum bending radius of the D-sub connector cable is 20 mm

Electrical characteristics | Connector Manufacturer's Example

- Fuiitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.


D-sub connector cable assembly terminal numbers

Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
Lead wire color	Black	Brown	Red	Orange	Yellow	Pink	Blue	Purple	Gray	White	White	Yellow	Orange	Yellow	Pink	Blue	Purple	Gray	Orange	Red	Brown	Pink	Gray	Black	White
Dot marking	None	None	None	None	None	None	None	White	Black	Black	Red	Red	Red	Black	Black	White	None	None	Black	White	White	Red	Red	White	None



Specific Product ecautions

Electrical Wiring Specifications

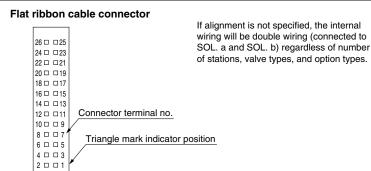


P: Flat ribbon cable (26 pins) <Double wiring> Terminal no. Polarity SOL.a SOL.b Station 1 2 (-) (+) SOL.a 3 (-)(+)SOL.b o Station 2 -(-) (+) SOL.a 5 (-) (+) SOL.b Station 3 -6 (-) (+) SOL.a (-)(+)SOL.b o Station 4 -8 (-)(+) SOL.a (-)(+) SOL.b Station 5 10 (–) (+) SOL.a (-) (-) 11 (+) SOL.b o Station 6 -(+) 12 SOL.a 13 (-) (+) SOL.b Station 7 14 (–) (+) SOL.a (–) 15 (+) SOL.b o Station 8 -(-) (+) 16 SOL.a 17 (-)(+) SOL.b Station 9 18 (–) (+) SOL.a (–) 19 (+) SOL.b o Station 10 -20 (-) (+) SOL.a 21 (-)(+) Station 11 SOL.b 22 (–) (+) SOL.a 23 (-) (+) SOL.b Station 12 < (+) 24 (-) COM. 25 (+) (-)COM. 26 (-)(+) Positive Negative common common

PG: Flat ribbon	cable (20 pins)
<double< th=""><th>wiring></th></double<>	wiring>
Sola	Terminal no. Polarity 1 (-) (+) 2 (-) (+) 3 (-) (+) 4 (-) (+) 5 (-) (+) 6 (-) (+) 7 (-) (+) 8 (-) (+) 9 (-) (+) 10 (-) (+)
Station 6 { SOL.a	11 (-) (+) 12 (-) (+) 13 (-) (+) 14 (-) (+) 15 (-) (+)
Station 8 SOL.b SOL.b SOL.b COM.	16 (-) (+) 17 (-) (+) 18 (-) (+)
COM.	19 (+) (-) 20 (+) (-) Positive Negative common common

PH: Flat ribbon cable (10 pins)	┵
<double wiring=""></double>	
Station 1 {	
Positive Negati common comm	

 When using a valve with no polarity, either positive common or negative common can be used.

Flat Ribbon Cable Assembly

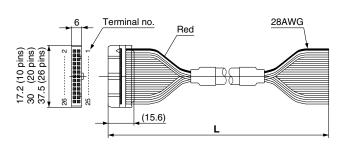

Flat ribbon cable connector assembly


Cable	Assembly part no.							
length (L)	26 pins	20 pins	10 pins					
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1					
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2					
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3					

- * When using a standard commercial connector, use a 26-pin, 20-pin, or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- * Cannot be used for movable wiring
- * Lengths other than the above are also available. Please contact SMC for details.

Connector Manufacturer's Example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

Specified Layout

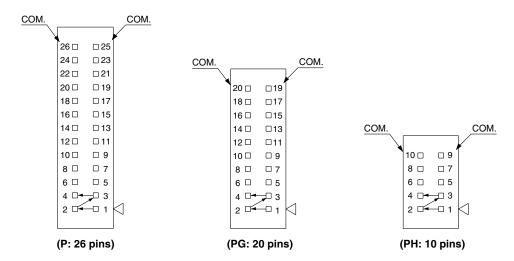

A mixture of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for PG, and 8 or less for PH. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position, and 4-position.



EX260

EX126

EX120 Common Dimensions

Mixed Mounting

Manifold Exploded View Fitting, Plug Part Nos.

Manifold Options

Specific Product Precautions

Type 10 Side Ported

Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

Terminal Block Box (Spring Type)

SY3000/5000/7000 Series

CE CH CHSUS ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

SS5Y

Series

3	SY3000
5	SY5000
7	SY7000

1 Type

	• •
10	Side ported
11	Bottom ported *1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).

4 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

6 SUP/EXH block assembly

_	
Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

3 Valve stations

TC: Spring type terminal block box

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring *1
16	16 stations	_
02	2 stations	Specified layout *2
:	i	(Up to 32 solenoids
24	24 stations	available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
 - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been speci-
- This also includes the number of the blanking plate assembly.

Mounting and Option

Symbol Mounting Option Nil Direct AA Name plate (with station number) mounting Name plate (without station number) BA DIN rail Mithout name plate Name plate (with station number) Name plate (without station number) $\mathsf{D}\Box$ В□

DIN Rail Option

Nil	DIN rail mou	inting (with DIN rail)
		iting (without DIN rail)
3		Specify a length
:	:	longer than that of
24	For 24 stations	the standard rail.

- Enter the number of stations inside

 . (Refer to "DIN Rail Option" above.)
- Only direct mounting is available for the type 11 bottom-ported type.

6 A, B port size (Metric/One-touch fitting)

	_	<u> </u>							
Cumbal		^	Durant				Type 11/Bo		
Symbol		Α	, B port	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	_
СЗ			ø3.2	•	_	_	_	_	
C3 C4	=		ø4	•	•	_	•	_	
C6	ig		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	
C10	0)		ø10	_	_	•	_	•	O STATE
C12			ø12	_	_	•	_	•	•
CM*1		Strai	ght port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		DE DE	ø6	•	•	•	_	_	
L8		Jpward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_	_	
L12	*		ø12	_	_	•	_		J Jalon
B4	Elbow	ج	ø4	•	•		_		
B6	흶	Downward	ø6	•	•	•	_		
B8	_	🗧	ø8	_	•	•	_		
B10		Š	ø10	_	_	•	_	_	
B12		二	ø12	_	_	•	_		
LM*1		Elbow upw	port, mixed sizes (Including ard and downward piping)	•	•	•	_	_	
P, E p	ort si	ze (C	One-touch fittings)	ø8	ø10	ø12	ø10	ø12	

A R nort size (Inch/One-touch fitting)

Symbol		^	, B port					ttom ported										
Syllibol		А	, Б роп	SY3000	SY5000	SY7000	SY5000	SY7000										
N1			ø1/8"	•	_	_	_	_										
N3	±	ø5/32"		•	•	_	•	_										
N7	Straight		ø1/4"	•	•	•	•	•										
N9	tra		ø5/16"	_	•	•	•	•										
N11	ഗ		ø3/8"	_	_	•	_	•	e B									
CM*1		Strai	ght port, mixed sizes	•	•	•	•	•										
LN3		ъ	ø5/32"	•	_	_	_	_										
LN7		/ar	ø1/4"	•	•	_	_	_										
LN9		J.	Upward	ø5/16"	_	•	_	_	_									
LN11	۲ *			\neg	7		2					× []		ø3/8"	_	_	•	_
BN3	Š	ard	ø5/32"	•	_	_	_	_	S									
BN7	Elbow	W	ø1/4"	•	•		_	_										
BN9	ш	ownward	ø5/16"	_	•		_	_										
BN11		۵	ø3/8"	_	_	•	_	_	The state of the s									
LM*1			port, mixed sizes (Including ard and downward piping)	•	•	•		_										
P, E po	ort si	ze (C	ne-touch fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"										

- *1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.
- *2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly.

How to Order Manifold Assembly

Example (SS5Y3-10TC-

2-position double (24 VDC) 3-position closed center (24 VDC) SY3200-5U1 (1 set) SY3300-5U1 (1 set) 2-position single (24 VDC) SY3100-5U1 (3 sets) Manifold base (5 stations) SS5Y3-10TC-05D-C6 SS5Y3-10TC-05D-C6.....1 set (Type 10 5-station manifold base part no.) * SY3100-5U1 ----- 3 sets (2-position single part no.) * SY3200-5U1 1 set (2-position double part no.) * SY3300-5U1 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.


- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Valve Specifications

Valve Construction

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

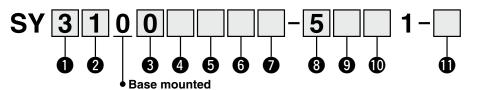

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Opposition	Single					
2-position	Double					
	Closed center					
3-position	Exhaust center					
	Pressure center					
4	N.C./N.C.					
	N.O./N.O.					
dual 5-port	N.C./N.O.					
	2-position 3-position 4-position dual 3-port					

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa)								
В	Quick response type (0.7 MPa)							
K *1	High pressure type (1.0 MPa)							

*1 Only the metal seal type is available for the high pressure type.

∩ Coil type

• • • •	ii type
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Rated voltage


•	iou ronago
5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
Nil	_	_			
R	_		Non-polar		
U	•				
S	_		Positive		
Z	•	_	common		
NS	_		Negative		
NZ	•		common		

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 293 for details.
 Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

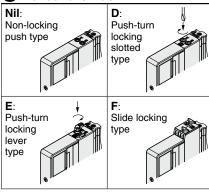

Refer to page 34 for the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

Connecting Base Connector D-sub, Flat Ribbon

EX500 EX600

EX250


EX126

EX120

Mixed Mounting Manifold Exploded

Fitting,

Manifold

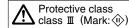




Dimensions: SY3000 Series


Plug-in T
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y3-10TC-Stations $\stackrel{\text{U}}{\stackrel{\text{C2}}{\stackrel{\text{C3}}{\stackrel{\text{N1}}{\stackrel{\text{N1}}{\stackrel{\text{CD}}{\stackrel{\text{C2}}{\stackrel{\text{N1}}{\stackrel{\text{N1}}{\stackrel{\text{CD}}{\stackrel{\text{C2}}{\stackrel{\text{N1}}{\stackrel{\text{CD}}{\stackrel{\text{C2}}{\stackrel{\text{N1}}{\stackrel{\text{CD}}{\stackrel{\text{C2}}{\stackrel{\text{C3}}{\stackrel{\text{N1}}{\stackrel{\text{CD}}{\stackrel{\text{C3}}}{\stackrel{\text{C3}}{\stackrel{\text{C3}}}{\stackrel{\text{C3}}}{\stackrel{\text{C3}}}\stackrel{\text{C3}}{\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}{\stackrel{\text{C3}}{\stackrel{\text{C3}}{\stackrel{\text{C3}}{\stackrel{\text{C3}}{\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}{\stackrel{\text{C3}}}\stackrel{\text{C3}}{\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}}\stackrel{\text{C3}}\stackrel{\text{C3}$

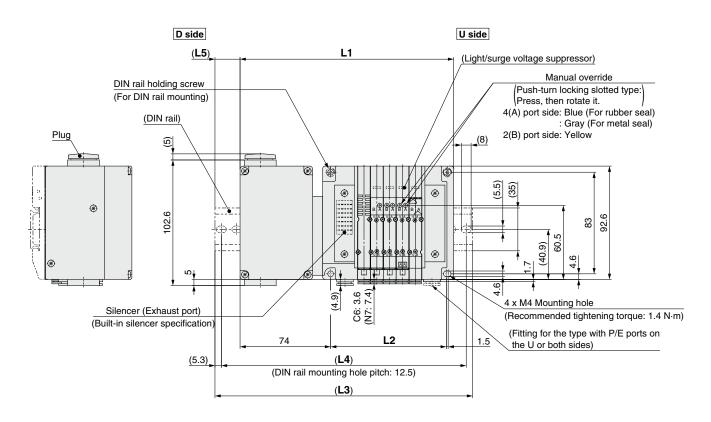

(Station 1) ---- (Station n)

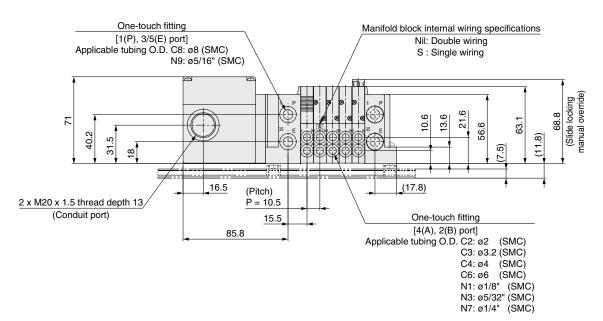

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5	290	300.5	311	321.5	332	342.5	353	363.5	374
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5
L4	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350	350	362.5	375	387.5	400
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5

Connector Connecting Base SY3000/5000/7000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

Valve Specifications

Chart

Valve Construction

Valve Replacement Parts

With Residual
Pressure

With self

Made to Order

Connecting Base

D-sub, Flat Ribbon

> ead Vire

Connector

EX600

EX250

EX126

Common Dimensions

Mixed Mounting


Manifold Exploded View Fitting, Plug

Part Nos.


Manifold
Options

Product ecautions

Dimensions: SY5000 Series

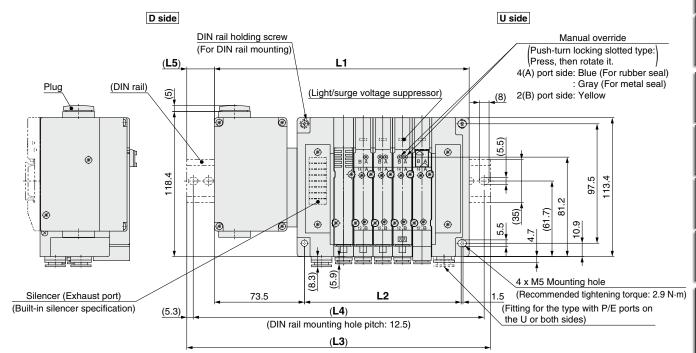

(Station 1) ----- (Station n)

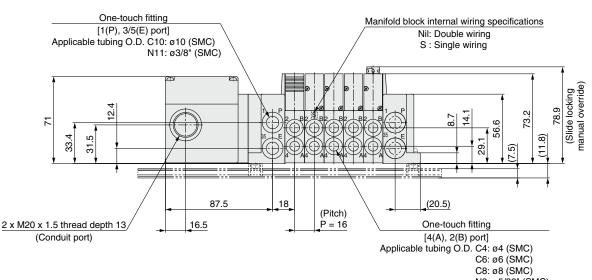



		N3: ø5/32" (SMC) N7: ø1/4" (SMC)
		N9: ø5/16" (SMC)

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432	448	464	480	496	512
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5	548
L4	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525	537.5
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5

Dimensions: SY7000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base Terminal Block Box

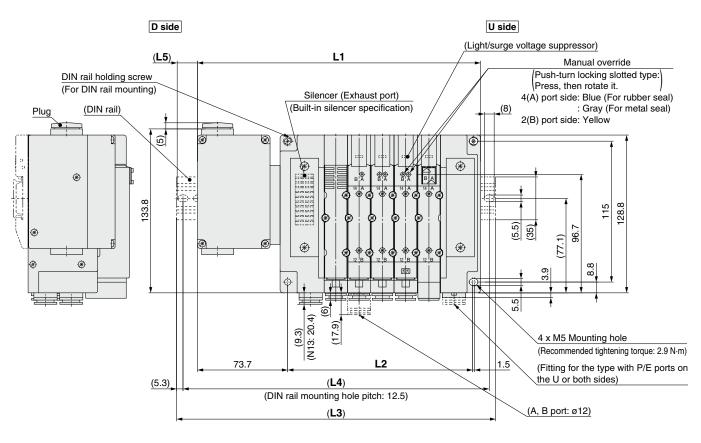

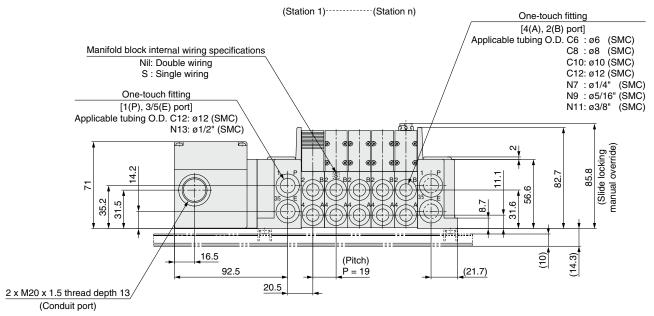

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	174.2	193.2	212.2	231.2	250.2	269.2	288.2	307.2	326.2	345.2	364.2	383.2	402.2	421.2	440.2	459.2	478.2	497.2	516.2	535.2	554.2	573.2	592.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	210.5	223	248	260.5	285.5	298	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623
L4	200	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575	600	612.5
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5

Type 12 op Ported


SY3000/5000/7000 Series

CE CH CHS ROHS



How to Order Manifolds

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

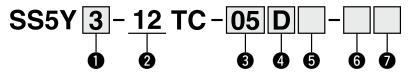

Series

3	SY3000
5	SY5000
7	SY7000

2 Туре		_
12	Top ported	

3 Valve stations

TC: Spring type terminal block box

Stations	Note				
2 stations					
÷	Double wiring *1				
16 stations					
2 stations	Consisted laws #2				
:	Specified layout *2 (Up to 32 solenoids available)				
24 stations	(Op to 32 soleriolds available)				
	2 stations : 16 stations 2 stations :				

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- *2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

4 P, E port entry

	1
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

How to Order Manifold Assembly

Example (SS5Y3-12TC	:-□)
2-position double (24 VDC) SY3230-5U1-C6 (1 set)	3-position closed center (24 VDC) SY3330-5U1-C6 (1 set)
2-position single (24 VDC) SY3130-5U1-C6 (3 sets)	
	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
SS5Y3-12TC-05D 1 set (Tyr	pe 12 5-station manifold base part no.)

- * SY3130-5U1-C63 sets (2-position single part no.)
- * SY3230-5U1-C6 ·······1 set (2-position double part no.)
- * SY3330-5U1-C61 set (3-position closed center part no.)
 - The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

6 P. E port size (One-touch fittings)

		J-,	
Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"

* For N, sizes are in inches.

Mounting

Nil	Direct mounting					
D	DIN rail r	DIN rail mounting (with DIN rail)				
D0	DIN rail mounting (without DIN rail)					
D3	For 3 stations					
:	: than that of the standard					
D24	For 24 stations	rail.				

Refer to page 295 (SY3000/5000/7000 series: Specific product precautions 6) for instructions on fastening the DIN rail mounting type

Connecting Base

Ribbor

EX500 EX600

EX250

EX126 EX120


Manifold Exploded Fitting,

Manifold



How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

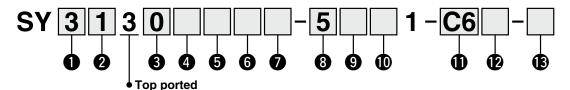

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>						
1	2-position	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
A *1	4	N.C./N.C.				
B *1	4-position dual 3-port	N.O./N.O.				
C*1	duai 3-port	N.C./N.O.				

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type

Con type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- For the non-polar type, be careful of surge voltage intrusion.
 Refer to page 293 for details.
- * Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

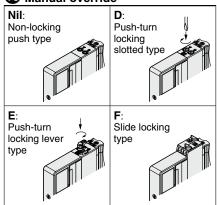

 Refer to page 34 for the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-touch fitting (Metric)

		,		
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10		_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

	one reason maning (men)				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	

12 Thread type


Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

Type of mounting screw

Nil Round head combination screw	
B Hexagon socket head cap scre	
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

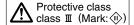




Terminal Block Connection

Step 1. Remove the terminal block cover


Loosen the 4 mounting screws (M3) to remove the terminal block cover.

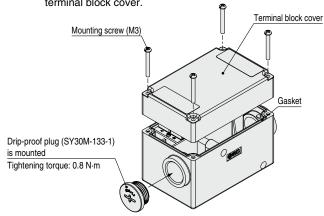

Step 2. The diagram below shows the terminal block wiring. All stations are provided with double wiring regardless of the mounted valves.

> Connect each wire to the power supply side, according to the markings provided inside the terminal block.

> Be sure to connect the wire with the push button pressed down.

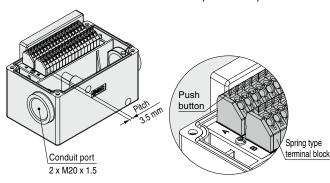

Step 3. Mount the terminal block cover

Securely tighten the mounting screws (M3) to the torque shown in the table below only after confirming that the gasket is installed correctly.

Proper tightening torque [N·m] 0.54 to 0.66

• Applicable wire range: Conductor diameter Ø0.5 to Ø1.2 mm, Stranded wire AWG24 to 16

Electrical Wiring Specifications (IP67 compatible)

0

If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.

* When using a valve with no polarity, either positive common or negative common can be used.

Standard wiring				
Terminal no. Polarity				
(SOL.a _o	1A	(-)	(+)
Station 1	SOL.b	1B	(-)	(+)
(SOL.a _o	2A	(-)	(+)
Station 2	SOL.b	2B	(-)	(+)
(SOL.a _o	3A	(-)	(+)
Station 3	SOL.b	3B	(-)	(+)
(SOL.a _o	4A	(-)	(+)
Station 4	SOL.b	4B	(-)	(+)
(SOL.a	5A	(-)	(+)
Station 5	SOL.b	5B	(-)	(+)
(1	SOL.a	6A	(-)	(+)
Station 6	SOL.b	6B	(-)	(+)
(1	SOL.a	7A	(-)	(+)
Station 7	SOL.b	7B	(-)	(+)
(SOL.a	8A	(-)	(+)
Station 8	SOL.b	8B	(-)	(+)
(1	SOL.a	9A	(-)	(+)
Station 9	SOL.b	9B	(-)	(+)
(1	SOL.a	10A	(-)	(+)
Station 10	SOL.b	10B	(-)	(+)
(SOL.a _o	11A	(-)	(+)
Station 11	SOL.b _o	11B	(-)	(+)
(1	SOL.a _o	12A	(-)	(+)
Station 12	SOL.b _o	12B	(-)	(+)
(SOL.a _o	13A	(-)	(+)
Station 13	SOL.b _o	13B	(-)	(+)
(•	SOL.a _o	14A	(-)	(+)
Station 14	SOL.b	14B	(-)	(+)
(•	SOL.a _o	15A	(-)	(+)
Station 15	SOL.b	15B	(-)	(+)
(1	SOL.a _o	16A	(-)	(+)
Station 16	SOL.b _o	16B	(-)	(+)
		-	` '	
•	-	COM.	(+)	(-)
	<u> </u>	COM.	(+)	(-)
			Positive	Negative

Specified Layout

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

	>
#((D)	\$(D)
<u> </u>	Z©\$
#(D)	\$ (D)
	\$(D)
	\$(D)
	*(D)\(\text{\tin}\text{\tex{\tex
	13 (CD N
	W51
)

common common

Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

Terminal Block Box


SY3000/5000/7000 Series

CE CH CHSUS ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

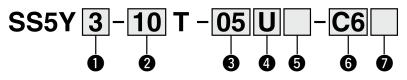

Series

3	SY3000
5	SY5000
7	SY7000

1 Type

<u> </u>			
10	Side ported		
11	Bottom ported*1		

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).

3 Valve stations

Symbol	Stations	Note	
02	2 stations		
:	- :	Double wiring*1	
10	10 stations		
02	2 stations	0	
:	:	Specified layout*2	
20	20 stations	(Up to 20 solenoids available)	

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

4 P. E port entry

• : , = port ont. ,		
U	U side (2 to 10 stations)	
D	D side (2 to 10 stations)	
В	Both sides (2 to 20 stations)	


5 SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- * 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 6.

How to Order Manifold Assembly

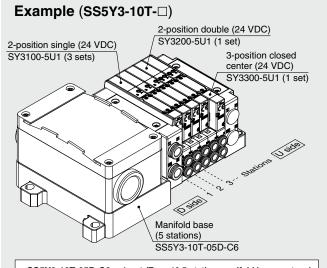

SS5Y3-10T-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) *SY3100-5U1------ 3 sets (2-position single part no.) *SY3200-5U1 1 set (2-position double part no.) *SY3300-5U1------1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 74. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

Mounting and Option

Symbol	Mounting	Option		
		Name plate	Station number	
Nil	Direct mounting	_	_	
AA		•	•	
BA	mounting	•	_	
D□	DIN well	_	_	
A□	DIN rail mounting	•	•	
B□	mounting	•	_	

- * Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

		-		
ſ	Nil	Standard length		
	0	Without DIN rail (with bracket)		
	3	For 3 stations	Charles a language wall them the	
		:	Specify a longer rail than the total length of specified stations.	
	20	For 20 stations	total length of specified stations.	



Eugen Connector Connecting Base SY3000/5000/7000 Series

Valve Specifications

Chart

Connector Connecting Base

D-sub, Flat Ribbon

Lead Wire Circular Connecto

EX500

EX600 EX250

EX260

EX126 EX120

Manifold

Exploded View Fitting,

Manifold

6 A, B port size (Metric/One-touch fitting)									
Symbol	A, B port		Type ⁻	10/Side	ported	Type 11/Bo	ttom ported		
Syllibol		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4	_		ø4	•	•	_	•	_	
C6	ig		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	
C10			ø10	_	_	•	_	•	S SEE
C12			ø12	_		_	•		
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		g	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		2	ø10	_	_	•	_	_	
L12			ø12	_	_	•	_	_	المحالية الم
B4	Elbow*2		ø4	•	•	_	_	_	
B6	e e	Downward	ø6	•	•	•	_	_	
B8		VI.	ø8	_	•	•	_	_	
B10		Ď	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	Type Type Type Type Type Type Type Type
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

A, B port size (Inch/One-touch fitting)										
Cumbal	A D nort		Type 1	10/Side	ported	Type 11/Bo	ttom ported			
Symbol	A, B port			SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•	_	•	_		
N7	ight		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"	_	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	0 1500	
CM*1		Straight port, mixed sizes		•	•	•	•	•		
LN3			ø5/32"	•	_	_	_	_		
LN7			Jpward	ø1/4"	•	•	_	_	_	
LN9			ఠ	ø5/16"	_	•	_	_	_	
LN11		_	ø3/8"	_	_	•	_	_	019055	
BN3		Downward	ø5/32"	•	_	_	_	_		
BN7	ä		ø1/4"	•	•	_	_	_		
BN9			ø5/16"	_	•	_	_	_		
BN11	1		۵	ø3/8"	_	_	•	_	_	The state of the s
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	-		
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		


SMC

^{*1} Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

^{*2} To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

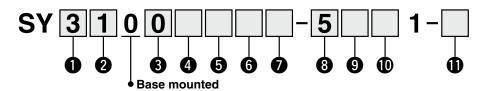

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• Type of dotadion			
1	2-position	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
A *1	4	N.C./N.C.	
B *1	4-position dual 3-port	N.O./N.O.	
C*1	duai 5-port	N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	71
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

Coil type

Con type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage

5	24 VDC
6	12 VDC


9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	_	common	
NS	_		Negative	
NZ	•		common	

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 293 for details.

 * Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

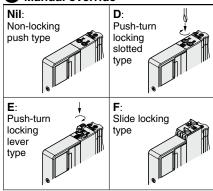

 Refer to page 34 for the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

 When ordering a valve individually, the
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



Plug-in
Connector Connecting Base


Chart


Type 10/Side Ported

Terminal Block Box

Dimensions: SY3000 Series

SS5Y3-10T-Stations D-C3, N1 (D)

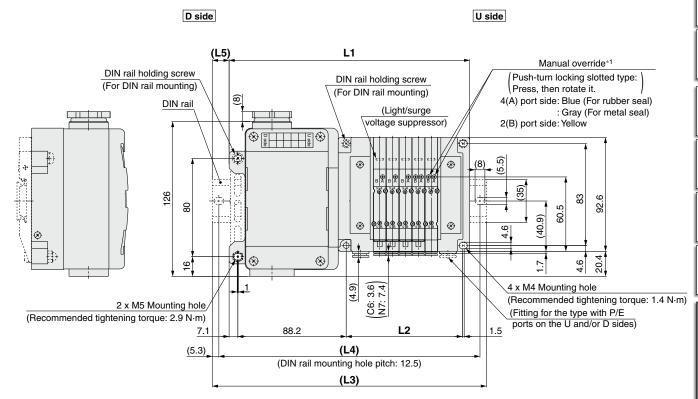

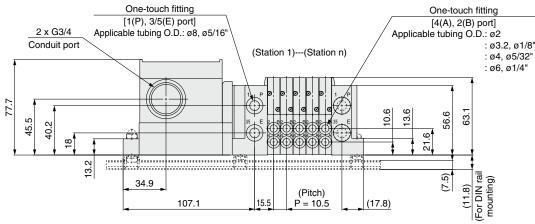

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10T-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16

Valve Specifications Valve Construction

Connector Connecting Base

D-sub, Flat Ribbon

EX500 EX600

EX250

EX126

EX120

Manifold

Exploded View Fitting,


Manifold


Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y5-10T-Stations D-C6, N7 (D)

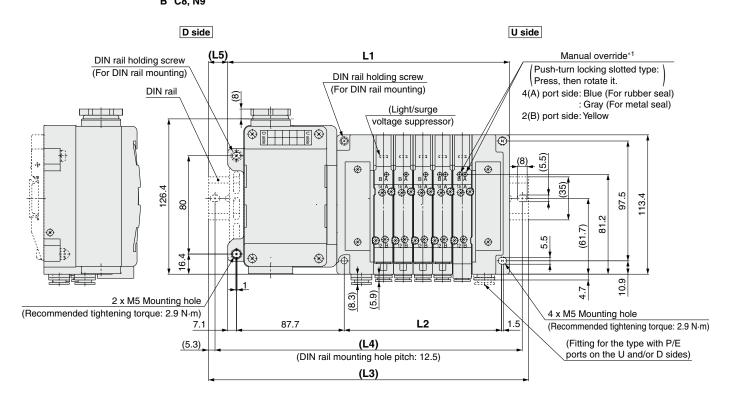

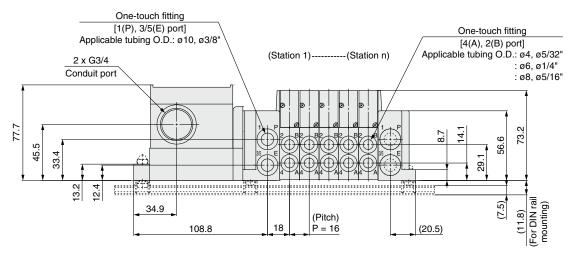

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10T-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5





Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

Dimensions: SY7000 Series

SS5Y7-10T-Stations D C6, N7 C8, N9 C10, N11 (D)

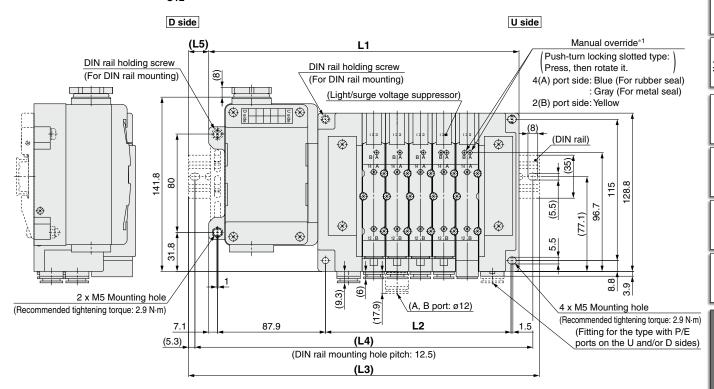

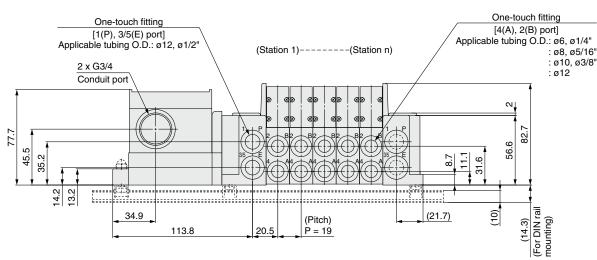

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10T-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5	480.5	499.5	518.5	537.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	562.5
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12	15	12	15	18

SMC

Valve Valve Construction Specifications

Valve Replacement Parts

we Pressure Felease Valve

Vacuum Release Valve with Restrictor

With Pressure Sensor

> Made to Order

Connecting Base

D-sub, Flat Ribbon Terminal

Lead Wire Circular Connector

EX500

EX250

EX126

EX120 Common

Mixed Mounting

Manifold Exploded View Fitting, Plug Part Nos.

Part Nos.

Manifold
Options

Specific Product Precaution

Plug-in Connector Connecting Base

Terminal Block Box

Type 12 Top Ported


SY3000/5000/7000 Series

CE CH CHSUS ROHS



How to Order Manifolds

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

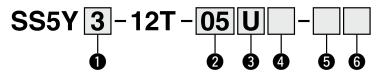

Series

3	SY3000
5	SY5000
7	SY7000

P. E port entry

U *1	U side (2 to 10 stations)
D *1	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

*1 4 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P,

Valve stations

Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring*1
10	10 stations	
02	2 stations	0
:	:	Specified layout*2 (Up to 20 solenoids available)
20	20 stations	(Op to 20 solellolds available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

4 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot


- * The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"

For N, sizes are in inches.

How to Order Manifold Assembly

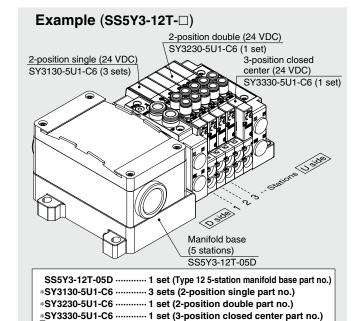

• For the valve arrangement, the valve closest to the D side is considered the 1st station. • Under the manifold part number, state the valves to be mounted in

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.


6 Mounting

Nil		Direct mounting						
D		DIN rail mounting						
D		(With DIN rail)						
DO		DIN rail mounting						
D0		(Without DIN rail)						
D3	For 3 stations	Specify a length longer						
:	:	than that of the standard						
D20	For 20 stations	rail.						

Refer to page 295 for the fixation of DIN rail mounting type manifold.

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

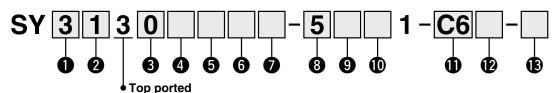

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
A *1	4	N.C./N.C.				
B*1	4-position dual 3-port	N.O./N.O.				
C*1	duai 3-port	N.C./N.O.				

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
B Quick response type (0.7 M	
K *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

Coil type

Con type		
	Nil	Standard
	Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details

8 Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- For the non-polar type, be careful of surge voltage intrusion.
 Refer to page 293 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

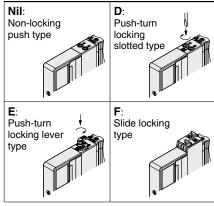

 Refer to page 34 for the safety slide locking manual override.

A, B port size

Thread piping

	· · · · ·	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•
_				

One-touch fitting (Inch)

One-touch fitting (inten)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•
_		_	_	•

1 Thread type

Rc
G
NPT
NPTF

* Only Nil is available for M5.

B Type of mounting screw

Nil	Round head combination screw
B Hexagon socket head cap sc	
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

↑ Protective class class II (Mark:﴿﴾)

rotective class



Valve

Valve Construction

Valve Replacement Parts

With Residual
Pressure
Release Valve

Vacuum Release Valve with Restrictor

With Pressure Sensor

> Made to Order

Connector Connector Connecting Base

Ribbon Terminal Block

Lead Wire

EX500

EX250

EX260

EX120

Common Dimensions Mixed

Mixed Mounting Manifold Exploded View


View
Fitting,
Plug
Part Nos.

Manifold Options

Terminal Block Connection


Step 1. Remove the terminal block cover

Loosen the 4 mounting screws (M4) to remove the terminal block cover.

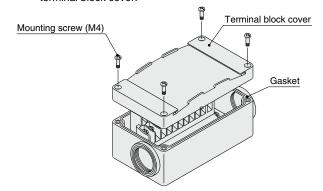

Step 2. The diagram below shows the terminal block wiring. All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

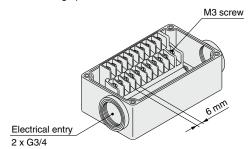

Step 3. Mount the terminal block cover


Securely tighten the screws to the torque shown in the table below only after confirming that the gasket is installed correctly.

Proper tightening torque [N·m]

0.7 to 1.2


- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G3/4): AXT100-B06A

Electrical Wiring Specifications (IP67 compatible)

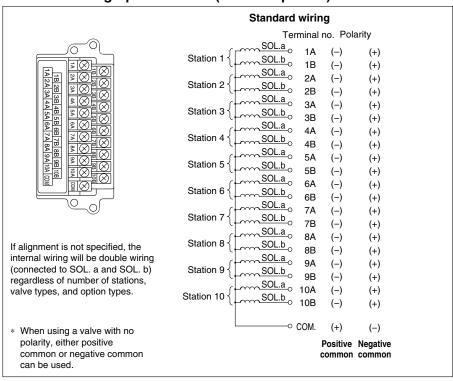

Specified Layout

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

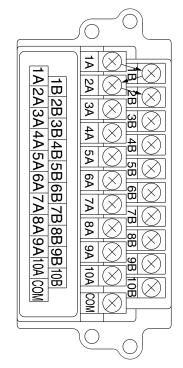

With Pressure Sensor

Made to Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Lead Wire

Circular Connector EX500

EX600

EX250 EX260

EX126

EX120

Common Dimensions Mixed Mounting

Manifold Exploded View

Fitting, Plug Part Nos.

Manifold Options

Specific Product Precautions

Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

Lead Wire


SY3000/5000/7000 Series

CE CH CHSUS ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

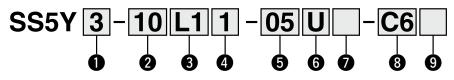

Series

O 001100		
3	SY3000	
5	SY5000	
7	SY7000	

3 Number of cores (Lead wire)

L1	34 cores
L2	17 cores
L3	9 cores

10 Side ported	<u> </u>	
11 Pottom portod*1	10	Side ported
Bottom ported	11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).

Load wire langth

Lead wife leftgill						
1	0.6 m					
2	1.5 m					
3	3 m					

Valve stations

<u>(L I L</u>	<u> </u>					
Symbol	Stations	Note				
02	2 stations					
- E	- :	Double wiring*1				
16	16 stations					
02	2 stations	Specified layout*2				
:	:	(Up to 32 solenoid				
24	24 stations	available)				

(L3L	」)						
Symbol	Stations	Note					
02	2 stations						
:	:	Double wiring*1					
04	4 stations						
02	2 stations	Specified layout*2					
:	:	(Up to 8 solenoids					
08	8 stations	available)					


(L2□)

<u> </u>		
Symbol	Stations	Note
02	2 stations	
	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
:	:	(Up to 16 solenoids
16	16 stations	available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * This also includes the number of the blanking plate assembly.

Example (SS5Y3-10L11-□)

How to Order Manifold Assembly

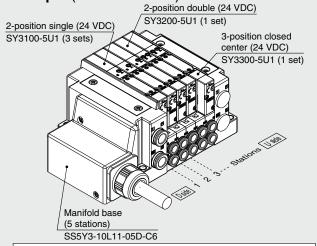

SS313-10L11-05D-C6
SS5Y3-10L11-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) *SY3100-5U1 ············ 3 sets (2-position single part no.)
*SY3200-5U1
The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
Frenk it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 84. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on

6 P, E port entry

	1
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.



Connecting Base D-sub, Flat Ribbon

Terminal Block

EX500 EX600

EX250 EX260

EX126 EX120

Mixed Mounting Manifold Exploded View

Fitting, Manifold

A B port size (Metric/One-touch fitting)

<u> </u>	A, B port size			(wetri	c/One	-toucn	ititting	3)				
Cusahal	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported					
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000					
C2			ø2	•	_	_	_	_	_			
СЗ			ø3.2	•	_	_	_	_				
C4			ø4	•	•	_	•	_				
C6	Straight		ø6	•	•	•	•	•				
C8	ìtra		ø8	_	•	•	•	•				
C10	0)		ø10	_	_	•	_	•	ON SERVICE			
C12			ø12	_	_	•	_	•	915			
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•				
L4			ø4	•	•	_	_	_				
L6		Elbow*² Downward Upward	ø6	•	•	•	_	_				
L8			ø8	_	•	•	_	_				
L10			ø10	_	_	•	_	_				
L12			Elbow*2	ø12	_	_	•	_	_	e issue		
B4	**			ø4	•	•	_	_	_			
В6	elbc			ard	ard	ø6	•	•	•	_	_	
B8				ø8	_	•	•	_	_			
B10			ø10	<u> </u>	_	•	_	_				
B12		_	ø12	_	_	•	_	_				
LM*1		(Incli	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_				
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12					

A, B port size (Inch/One-touch fitting)

Symbol	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported					
Syllibol			SY3000	SY5000	SY7000	SY5000	SY7000					
N1			ø1/8"	•	_	_	_	_				
N3	_		ø5/32"	•	•	_	•	_				
N7	igh		ø1/4"	•	•	•	•	•				
N9	Straight		ø5/16"	_	•	•	•	•				
N11	0,		ø3/8"	_	_	•	_	•	o South			
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•				
LN3			ø5/32"	•	_	_	_	_				
LN7		arc	ø1/4"	•	•	_	_	_				
LN9	Elbo	Jpward	ø5/16"	_	•	_	_	_				
LN11		rd l	ø3/8"	_	_	•	_	_	el Sassa			
BN3			ø5/32"	•	-	-	_	_				
BN7		Elbo	Ma Wa	ø1/4"	•	•	ı	_	_			
BN9			_	_	ownward	ø5/16"		•	_	_	_	
BN11			Ď	ø3/8"	_	_	•	_	_	Tel P		
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_				
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"					

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).

9 Mounting and Option

	<u> </u>	10			
0	Mounting	Option			
Symbol	Mounting	Name plate	Station number		
Nil	D:	_	_		
AA	Direct mounting	•	•		
BA	mounting	•	_		
D□	5	_	_		
A□	DIN rail mounting	•	•		
B□	mounting	•	_		


DIN Rail Option

Nil	Standard length												
0	Without DIN rail (with bracket)												
3	For 3 stations Specify a longer rail than the												
i	:	total length of specified											
24	For 24 stations stations.												

- * Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
 * Only direct mounting is available for the type 11 bottom-ported type.
 * Refer to page 295 for the fixation of DIN rail mounting type manifold.

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

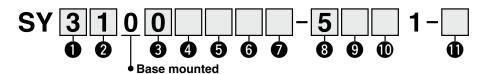

Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

O manitian	Single						
2-position	Double						
	Closed center						
3-position	Exhaust center						
	Pressure center						
4 manitian	N.C./N.C.						
	N.O./N.O.						
duai 5-port	N.C./N.O.						
	2-position 3-position 4-position dual 3-port						

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa)								
В	Quick response type (0.7 MPa)							
K *1	High pressure type (1.0 MPa)							

*1 Only the metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification				
Nil	_	_					
R	_		Non-polar				
U	•						
S	_		Positive common				
Z	•	•					
NS	_		Negative				
NZ	•		common				

- For the non-polar type, be careful of surge voltage intrusion.
 Refer to page 293 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

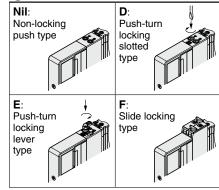


 Refer to page 34 for the safety slide locking manual override.

Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
 When ordering a valve individually, the
- when ordering a vaive individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 198 for base gasket and mounting screw part numbers.
- mounting screw part numbers.

 "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

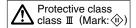



Elugin Connector Connecting Base SY3000/5000/7000 Series


Plug-in Connector Connecting Base


Type 10/Side Ported

Lead Wire

SS5Y3-10L $_{3}^{1}$ - Stations $_{D}^{U}$ - $_{C4, N3}^{C2}$ (D)

Dimensions: SY3000 Series

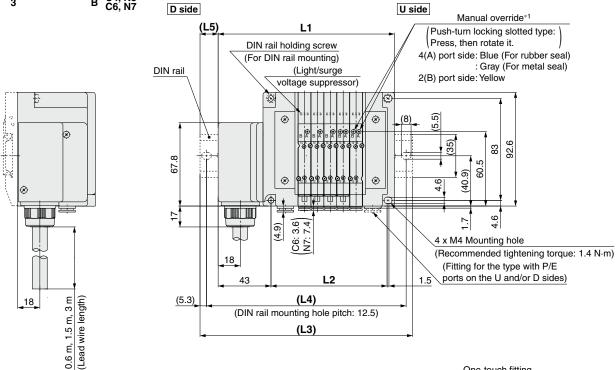

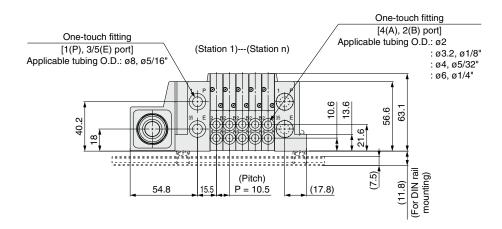

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10L1□-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15



Valve Specifications

Chart

rement Valve Construction

With Residual
Pressure
Release Valve

Vacuum
Release Valve
with Restrictor

With Pressure Sensor

Made to Order

Connecting Base

D-sub, Flat Ribbon Terminal Block

> Wire Circular Connector

EX500

EX250

EX126

EX120

Dimensions

Mixed

Mounting

Mounting

Manifold
Exploded
View

Fitting,

Plug Part Nos. Manifold Options


Specific Product recautions


Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Lead Wire

 $\textbf{SS5Y5-10L}_{3}^{1} \square \textbf{-} \underbrace{\textbf{Stations}}_{\substack{\textbf{D} - \textbf{C6}, \, \textbf{N7} \\ \textbf{D} \in \textbf{C8}, \, \textbf{N9}}}^{\textbf{C4}, \, \textbf{N3}} \textbf{(D)}$

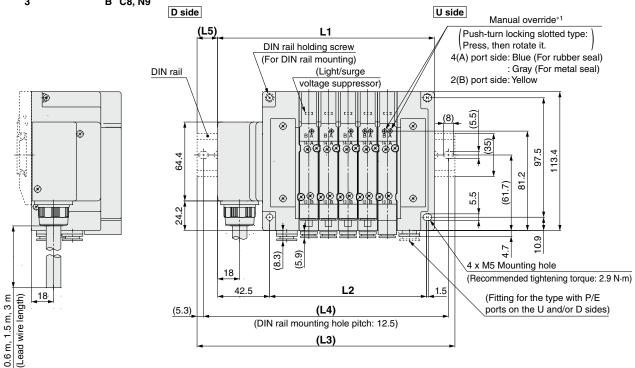

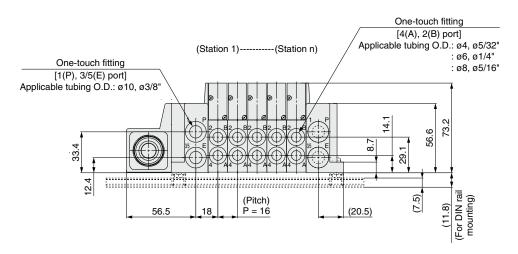

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10L1□-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15




Eugen Connector Connecting Base SY3000/5000/7000 Series

Plug-in Connector Connecting Base


Type 10/Side Ported

Lead Wire

Dimensions: SY7000 Series

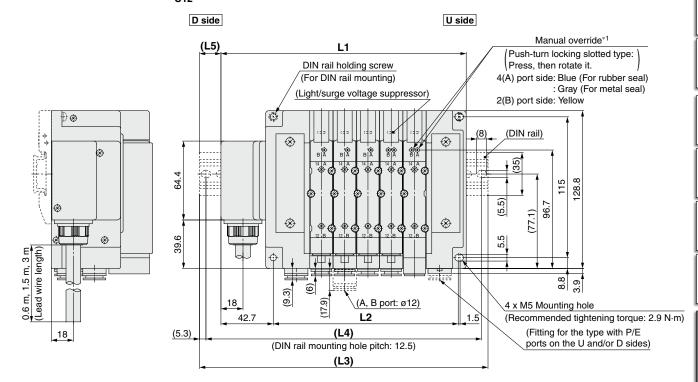

(Station 1)-----(Station n)

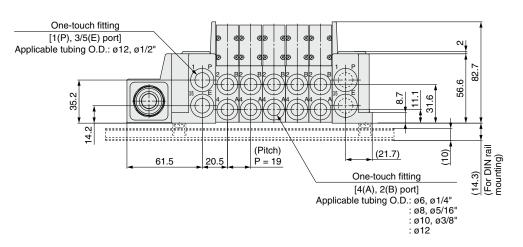

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10L1□-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

Valve Specifications

Chart

Valve Construction

Valve Replacement Parts

With Residual
Pressure
or Release Valve

Vacuum Release Valve with Restrictor

With Pressure Sensor

> Made to Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

> ead Vire

EX500

EX250

EX260

EX120

Common Dimensions

Mixed Mounting Manifold Exploded View

Fitting, Plug Part Nos. Manifold Options

Specific Product Precautions

Plug-in Connector Connecting Base

Lead Wire


Type 12 Type 12
Top Ported

SY3000/5000/7000 Series

CE UK CHS ROHS



How to Order Manifolds

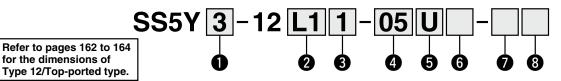

Series

3	SY3000
5	SY5000
7	SY7000

2 Number of cores (Lead wire)

L1	34 cores
L2	17 cores
L3	9 cores

3 Lead wire length

1	0.6 m
2	1.5 m
3	3 m

6 P. E port entry

U*1	U side (2 to 10 stations)
D *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

*1 6 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P,

How to Order Manifold Assembly

Example (SS5Y3-12L11-□) 2-position double (24 VDC) SY3230-5U1-C6 (1 set) 2-position single (24 VDC) 3-position closed SY3130-5U1-C6 (3 sets) center (24 VDC) SY3330-5U1-C6 (1 set) Manifold bas (5 stations) SS5Y3-12L11-05D

SS5Y3-12L11-05D ··· 1 set (Type 12 5-station manifold base part no.)

*SY3130-5U1-C6 3 sets (2-position single part no.) *SY3230-5U1-C6 1 set (2-position double part no.)

*SY3330-5U1-C6 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

• For the valve arrangement, the valve closest to the D side is considered the 1st station.

• Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Valve stations

(L1□) **02** 2 stations Double wiring*1 16 16 stations 02 2 stations Specified layout*2 (Up to 32 solenoids available) **24** 24 stations

<u>(∟</u> 3∟	<u> </u>	
Symbol	Stations	Note
02	2 stations	
i :	:	Double wiring*1
04	4 stations	
02	2 stations	Specified layout*2
:	:	(Up to 8 solenoids
08	8 stations	available)

(L2□)

<u>\</u>		
Symbol	Stations	Note
02	2 stations	
1	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
1	:	(Up to 16 solenoids
16	16 stations	available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been
- * This also includes the number of the blanking plate assembly.

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"



For N, sizes are in inches.

Mounting

<u> </u>	iounting						
Nil	Direct mounting						
D	DIN rail	DIN rail mounting (With DIN rail)					
D0	DIN rail m	ounting (Without DIN rail)					
D3	For 3 stations	Specify a length longer					
	:	than that of the standard					
D24	For 24 stations	rail.					


Refer to page 295 for the fixation of DIN rail mounting type manifold.



ons ons

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

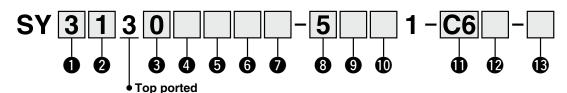

Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

• Type of detadlien				
1	2-position	Single		
2	2-position	Double		
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
A *1	4-position dual 3-port	N.C./N.C.		
B*1 C*1		N.O./N.O.		
		N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	71
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	B Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type

• con type		
Nil Standard		
T	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5	24 VDC	
6	12 VDC	

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

- For the non-polar type, be careful of surge voltage intrusion.
 Refer to page 293 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

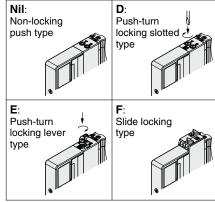

* Refer to page 34 for the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

one teach many (metric)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

	<u> </u>			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.


13 Type of mounting screw

<u> </u>	oo or mounting oor on
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (iv))

Electrical Wiring Specifications

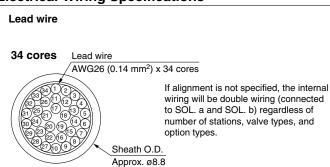

Lead Printed mark

		D 1		wire	(Both sid	des)
	wire no.	Polarit	У	color	Type	Color
Station 1 SOL.a SOL.b	1 (-)	(+)	Orango		Red
(2 (-)	(+)	Orange	_	Black
Station 2 SOL.b	3 (-)	(+)	Light		Red
(+7111	4 (-)	(+)	gray		Black
Station 3 SOL.a	5 (-)	(+)	White	_	Red
(+m	6 (-)	(+)	vviille		Black
Station 4 SOL.b	7 (-)	(+)	Yellow	_	Red
(8 (-)	(+)	Tellow		Black
Station 5 SOL.a SOL.b	9 (-)	(+)	Pink	_	Red
(#111	10 (–)	(+)	I IIIK	_	Black
Station 6 SOL.b	11 (-)	(+)	Orange		Red
(12 (-)	(+)	Orange		Black
Station 7 SOL.a SOL.b	13 (-)	(+)	Light		Red
	14 (–)	(+)	gray		Black
Ctation 0 / COLb	15 (–		(+)	White		Red
9OL 0	16 (-		(+)			Black
Station 9 ₹ SOLb	17 (-)	(+)	Yellow		Red
Sidiloii 3 (m SOL.b o	18 (–		(+)	TCHOW		Black
Station 10 SOL.b	19 (–		(+)	Pink		Red
(+mm)	20 (-		(+)			Black
Station 11 SOL.b	21 (–		(+)	Orange		Red
(+m0;	22 (-)	(+)	Orange		Black
Station 12 SOL.b	23 (–)	(+)	Light		Red
(- 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	24 (-)	(+)	gray		Black
Station 13 SOL.b			(+)	White		Red
(m <u>****</u> ********************************	26 (-)	(+)	· · · · · · · · · · · · · · · · · · ·		Black
Station 14 COLL	27 (-)	(+)	Yellow		Red
201.0	28 (-)	(+)	1011011		Black
Station 15 SOL h	29 (–)	(+)	Pink		Red
(+~~~~~~ :	30 (–		(+)			Black
Station 16 SOL.b)	(+)	Orange		Red
(+mm	32 (-)	(+)	Clarige		Black
COM.	33 (+)	(-)	Light		Red
COIVI.	34 (+)	(-)	gray		Black
	Posi	tive N	egative			

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance MΩ/km, 20°C	10 or more

 Cannot be used for movable wiring The minimum bending radius of the cable is 55 mm.

Specified Layout

 For negative common specification, a valve for negative common or a valve without polarity should be used.

A mixture of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

common common



9 cores

Electrical characteristics

Conductor resistance

 Ω /km, 20°C

Voltage limit

V, 1 minute, AC Insulation resistance Property

143 or less

2000

10 or more

Color

Red

Black

Red

Black

Red

Black


Red

Black

Red

Manifold



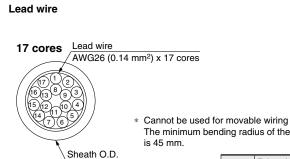

ø6.8	<u>J.D.</u>			Lead wire	Printed r (Both sid	
	Lead w	ire no.	Polarity	color	Type	Color
SOL.		1 (–)	(+)		,	Red
Station 1 { SOL.I	_0 ;	2 (–)	(+)	Orange	_	Black
SOL.	–∪ ,	3 (–)	(+)	Light		Red
Station 2	_O 4	4 (–)	(+)	gray	_	Black
SOL.	–∪ ;	5 (-)	(+)	140-11-		Red
Station 3	–∪ (6 (-)	(+)	White	_	Black
SOL.	− 0	7 (-)	(+)	V-11		Red
Station 4	— ი ;	B (-)	(+)	Yellow	_	Black
SOL.	_o ;	9 (–)	(+)	Pink		Red
Station 5	–∪ 10	0 (–)	(+)	PILIK	_	Black
SOL.	—∪ 1	1 (-)	(+)	Orongo		Red
Station 6	–∪ 12	2 (-)	(+)	Orange		Black
SOL.:	–∪ 1;	3 (–)	(+)	Light		Red
Station 7	⊸ 1،	4 (-)	(+)	gray		Black
SOL.	–∪ 1:	5 (-)	(+)	White		Red
Station 8	—° 10	6 (-)	(+)	vville		Black
COM	l. ⊸ 1	7 (+)	(-)	Yellow		Red

B) (5) MΩ/km, 20°C * Cannot be used for movable wiring The minimum bending radius of the cable The minimum bending radius of the cable is 40 mm. Sheath O.D. Printed mark Lead rk
s)
lor
ed
ack
ed
ack
ed
ack
ed
ack
ed
ack
ed
ack ø6.3 (Both sides) wire Lead wire no. Polarity color Type SOL.a 0 1 (-)(+)∽SOL.b o 2 Station 1 Orange (-)(+)∽SOL.a o 3 (-)(+) Light Station 2 SOL.b 0 4 (-)(+)gray SOL.a o 5 (-)(+) SOL.b 6 White Station 3 (-)(+)∽ SOL.a o 7 (-)(+) Station 4 SOL.b 8 Yellow (+)____о ₉ Pink (+)(-)Positive Negative common common

Lead wire

AWG26 (0.14 mm²) x 9 cores

* For negative common specification, a valve for negative common or a valve without polarity should be used.

Positive

Negative

common common

86

Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

Circular Connector


SY3000/5000/7000 Series

CE CH CHSUS ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

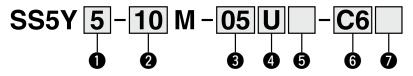

Series

3	SY3000			
5	SY5000			
7	SY7000			

1 Type

וני ע	JC
10	Side ported
11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page

3 Valve stations

Symbol	Stations	Note
02	2 stations	
•	:	Double wiring*1
12	12 stations	
02	2 stations	Considered lawaretes?
1	:	Specified layout*2 (Up to 24 solenoids available)
24	24 stations	(Op to 24 soleriolds available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- 3/5(E) port is plugged for the built-in silencer
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 6.

How to Order Manifold Assembly

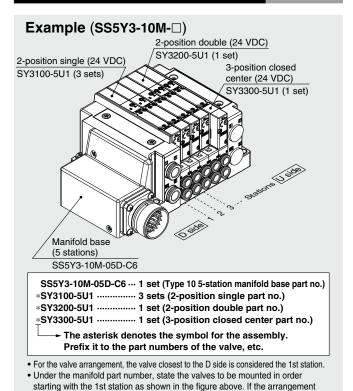

When mixing top-ported configurations, select from those listed on page 94. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on

becomes too complicated, specify the details on a manifold specification sheet.

Mounting and Option

• mounting and option						
Symbol	Mounting	Option				
		Name plate	Station number			
Nil	Direct mounting	_	_			
AA		•	•			
BA		•	_			
D□	DIN rail mounting	_	_			
A□		•	•			
ВП		•	_			

- Enter the number of stations inside \square when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

Nil	Standard length				
0	With	Without DIN rail (with bracket)			
3	For 3 stations	Chaoift a langer rail than the			
:	:	Specify a longer rail than the total length of specified station			
24	For 24 stations	total length of specified stations.			



Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

EX500 EX600

EX250

EX126

EX120

Mixed Mounting

Manifold Exploded View Fitting,

Manifold Options

<u> </u>	A, B	port size	(Met	ric/One-	touch	fitting)	

<u>U</u>	A, B port size				c/One	-toucn	titting	<u>3) </u>	-	
Cumahal	Symbol A, B port		Type ⁻	0/Side	ported	Type 11/Bo	ttom ported			
Syllibol			SY3000	SY5000	SY7000	SY5000	SY7000			
C2			ø2	•	_	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_		
C4	١		ø4	•	•	_	•	_		
C6	ight		ø6	•	•	•	•	•		
C8	Straight		ø8	_	•	•	•	•		
C10	0,		ø10	<u> </u>	_	•	_	•	000	
C12			ø12	_	_	•	_	•	400	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		5	ø6	•	•	•	_	_		
L8		Upward	ø8	_	•	•	_	_		
L10			ø10	_	_	•	_	_		
L12			ø12	_	_	•	_	_	O Jel Sale	
B4	Elbow*2		ø4	•	•	_	_	_		
B6	읦	arc	ard	ø6	•	•	•	_		
B8	_	Downward	ø8	_	•	•	_			
B10		0	ø10	_	_	•	_	_		
B12			ø12	_	_	•	_	ı	Tel P	
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	-			
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12			

Type 10/Side ported Type 11/Bottom ported

A, B port size (Inch/One-touch fitting)

Symbol	A, B port		туре	i u/Side	ported	туре пло	llom porteu			
Syllibol			SY3000	SY5000	SY7000	SY5000	SY7000			
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•	_	•	_		
N7	ight		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"	_	•	•	•	•		
N11	0)		ø3/8"	_	_	•	_	•	o British	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_		
LN7		Jpward	ø1/4"	•	•	_	_	_		
LN9		βď	ø5/16"	_	•	_	_	_		
LN11	•	-	ø3/8"	_	_	•	_	_	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_		
BN7	Ma Na	ø1/4"	•	•	_	_	_			
BN9	_	JWC	Downward	ø5/16"	_	•	_	_	_	
BN11	١	۵	ø3/8"	_	_	•	_	_	To the second	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

SMC


^{*1} Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM."

The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

^{*2} To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

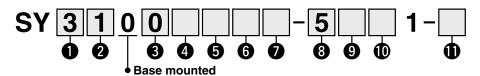

Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

<u> </u>				
1	O position	Single		
2	2-position	Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
A *1	4	N.C./N.C.		
B *1	4-position dual 3-port	N.O./N.O.		
C*1	duai 5-port	N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

O I not vaive option				
Nil	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
K *1	High pressure type (1.0 MPa)			

*1 Only the metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	_	common	
NS	_		Negative	
NZ	•		common	

- For the non-polar type, be careful of surge voltage intrusion. Refer to page 293 for details.
- Only "Z" and "NZ" types are available with a
- power saving circuit.

Manual override

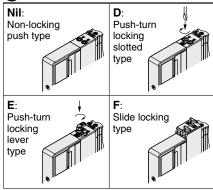


Refer to page 34 for the safety slide locking manual override.

Type of mounting screw

- 71	
Nil Round head combination screw	
B Hexagon socket head cap sc	
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

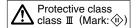




Plug-in Connector Connecting Base

Type 10/Side Ported

Circular Connector

Dimensions: SY3000 Series

SS5Y3-10M-<u>Stations</u> D C2 C3, N1 (D)

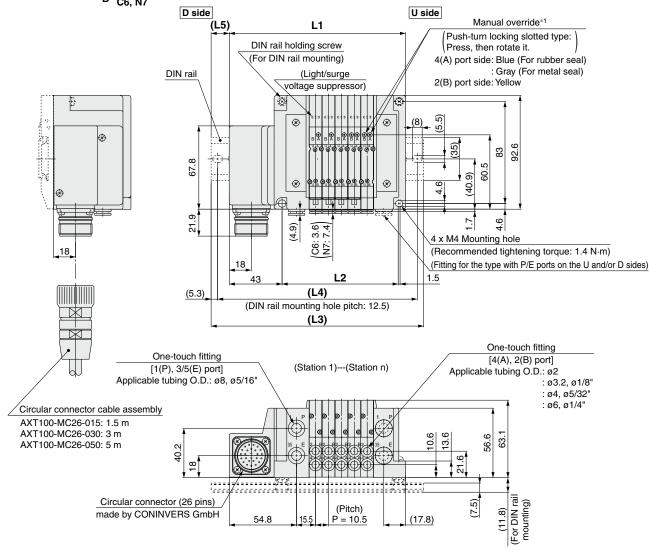

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10M-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15



ement Construction

Chart

Valve Specifications

With Residual
Pressure
or Release Valve

n Vacuu ure Release \ or with Resti

With Pressure Sensor

Made to Order

Connector

D-sub, Flat Ribbon Terminal Block

Lead Wire

Connector

EX600

EX260

EX126

Common Dimensions

Mixed Mounting Manifold

Exploded View Fitting, Plug Part Nos. Manifold

Options

Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported **Circular Connector**

SS5Y5-10M-<u>Stations</u> D-C6, N7 (D) D side U side Manual override*1 (L5) Push-turn locking slotted type: Press, then rotate it. DIN rail holding screw 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) : Gray (For metal seal) DIN rail (Light/surge voltage suppressor) 2(B) port side: Yellow (8) ⊗ 32) 97.5 113.4 64.4 81.2 61 24.2 10.9 (8.3) 4 x M5 Mounting hole 18 (Recommended tightening torque: 2.9 N·m) L2 1.5 42.5 (Fitting for the type with P/E (L4) (5.3) ports on the U and/or D sides) (DIN rail mounting hole pitch: 12.5) (L3) Circular connector cable assembly AXT100-MC26-015: 1.5 m AXT100-MC26-030: 3 m AXT100-MC26-050: 5 m One-touch fitting [4(A), 2(B) port] Applicable tubing O.D.: ø4, ø5/32" (Station 1)----(Station n) : ø6, ø1/4" : ø8, ø5/16" One-touch fitting [1(P), 3/5(E) port] Applicable tubing O.D.: ø10, ø3/8' 56.6 59. (For DIN rail mounting)

*1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

(Pitch)

P = 16

(7.5)

(20.5)

* These figures show the "SS5Y5-10M-05D-C8."

Circular connector (26 pins)

made by CONINVERS GmbH

* Refer to page 163 for dimensions of A or B port top-ported type.

56.5


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15



Plug-in Type 10/Side Ported
Connector Connecting Base Circular Connector

Dimensions: SY7000 Series

SS5Y7-10M-Stations D C6, N/ D C8, N9 D C10, N11 (D)

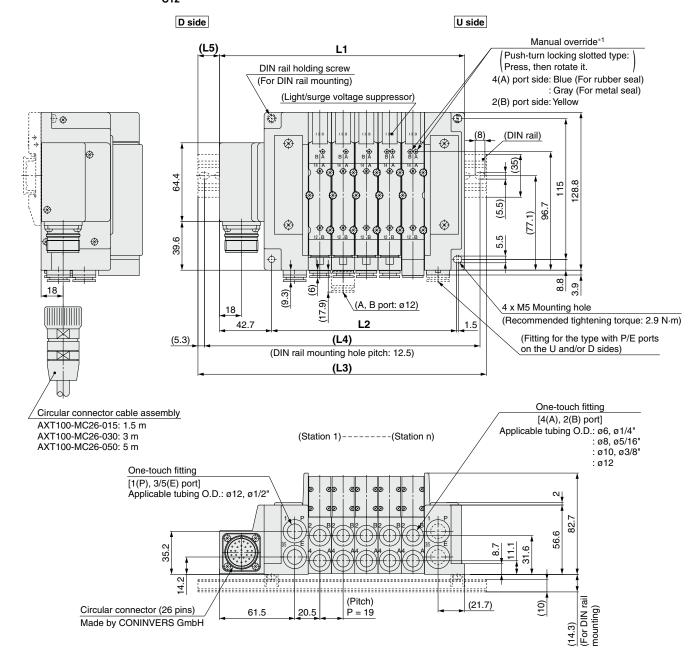

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10M-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



Ons

Valve Valve Construction Specifications

varve Replacement Parts

With Residual
Pressure

h Vacu sure Release sor with Re

Pressure Sensor

Order

Connecting Base

D-sub, Flat Ribbon Terminal Block

> ead /ire

Connector EX500

EX600

EX260

EX126

Common

Mixed Mounting

Manifold Exploded View Fitting, Plug

Part Nos.

Manifold
Options

Specific Product Precaution

Plug-in Connector Connecting Base

Circular Connector

Type 12 Top Ported

SY3000/5000/7000 Series

CE CR CRUS ROHS



How to Order Manifolds



Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

Series

3	SY3000
5	SY5000
7	SY7000

Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
12	12 stations	
02	2 stations	0
:	:	Specified layout*2 (Up to 24 solenoids available)
24	24 stations	(Op to 24 solellolds available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

P. E port entry

	1
U *1	U side (2 to 10 stations)
D *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


*1 4 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

4 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

How to Order Manifold Assembly

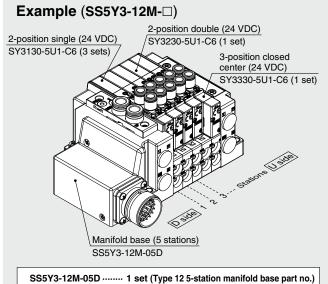

*SY3130-5U1-C6 3 sets (2-position single part no.) *SY3230-5U1-C6 1 set (2-position double part no.)

*SY3330-5U1-C6 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

5 P. E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

* For N, sizes are in inches.

6 Mounting


Nil		Direct mounting								
D		IN rail mounting (With DIN rail)								
D0		DIN rail mounting (Without DIN rail)								
D3	For 3 stations	Specify a length longer								
:	:	than that of the standard								
D24	For 24 stations	rail.								

* Refer to page 295 for the fixation of DIN rail mounting type manifold.



How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

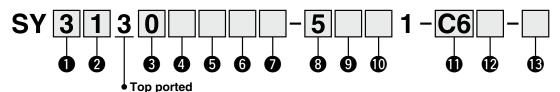

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0	Single					
2	2-position	Double					
3		Closed center					
4	3-position	Exhaust center					
5		Pressure center					
A *1	4	N.C./N.C.					
B*1	4-position dual 3-port	N.O./N.O.					
C*1	duai 3-port	N.C./N.O.					

*1 Only the rubber seal is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

• I not type		
	Nil	Internal pilot
	R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

7 Coil type

Con type	
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- For the non-polar type, be careful of surge voltage intrusion.
 Refer to page 293 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

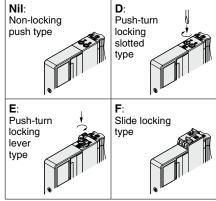

* Refer to page 34 for the safety slide locking

1 A, B port size

Thread piping

	~~ p.p9	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

ene teach name (means)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	-	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

One-touch fitting (inten)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type

• • • • • • • • • • • • • • • • • • • •		
	Nil	Rc
	F	G
	N	NPT
	Т	NPTF

* Only Nil is available for M5.

Type of mounting screw

Nil Round head combination screw	
B Hexagon socket head cap sci	
K Round head combination screw (Falling-out-prevent	
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (1))

Specific Specific Production



Valve Specifications

Valve Construction

Valve Replacement Parts

With Residual
Pressure

Vacuum Release Valve with Restrictor

With Pressure Sensor

> Made to Order

Connecting Base

D-sub, Flat Ribbon Terminal Block

Lead

Circular Connector

EX500

EX250

EX260

EX120


Common Dimensions

> Mixed Mounting Manifold


Exploded View Fitting, Plug Part Nos.

Manifold Options

Electrical Wiring Specifications

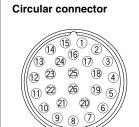

If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.

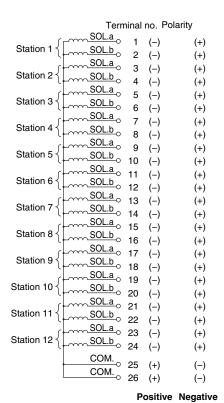

* When using a valve with no polarity, either positive common or


negative common can be used.

Specified Layout

common common

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

Cable Assembly

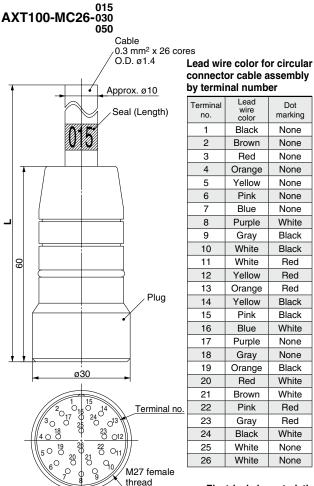

Circular connector cable assembly

On Guidi Goil	nootor ouble decembly
Cable	Assembly part no.
length (L)	26 pins
1.5 m	AXT100-MC26-015
3 m	AXT100-MC26-030
5 m	AXT100-MC26-050

- * Cannot be used for movable wiring
- Lengths other than the above is also available. Please contact SMC for details.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

* The minimum bending radius of the circular connector cable is 20





With Pressure Sensor

Made to Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Lead Wire

Circular Connector

EX500

EX600

EX250 EX260

EX126

EX120

Common Dimensions Mixed Mounting

Manifold Exploded View Fitting, Plug Part Nos.

Manifold Options

Specific Product Precautions



Гуре 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

EX500 Gateway Decentralized System 2 (128 Points)


SY3000/5000/7000 Series

CE CH CRUS ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

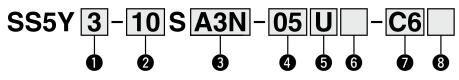

Series

3	SY3000
5	SY5000
7	SY7000

*	For mixed	mounting,	refer to	page	165	and
	later.	•				

10	Side ported
11	Bottom ported*1

- *1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).
- * When mixing top-ported configurations, select from those listed on page 110. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

SI unit (Number of outputs, Output polarity, May number of valve stations)

max. Humber of various						
0	Without SI unit					
A3N	32 outputs*1*4, 2 to 16 stations (24 stations*3), Negative common*2					


- *1 16 outputs can be set by switching the built-in setting switch.
- Ensure a match with the common specification of the valve.
- (): Maximum number of stations for mixed single and double wiring
- *4 When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

4 Valve stations

		Stations	Note				
	02	2 stations					
Ī	:	:	Double wiring*1				
ĺ	16	16 stations					
	02	2 stations	Connection delegants				
		:	Specified layout*2 (Up to 32 solenoids available)				
	24	24 stations	(Up to 32 solenoids available)				

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- This also includes the number of the blanking plate assembly.

How to Order Manifold Assembly

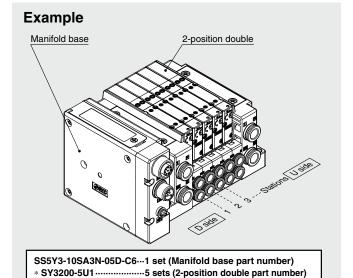

For the valve arrangement, the valve closest to the D side is considered

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

• Under the manifold base part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer*1*2
R	External pilot

- *1 3/5(E) port is plugged for the built-in silencer type.
- *2 When built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.
- A separate GW unit and communication cable are required.

For details on the EX500 Gateway Type Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 188. Please download the Operation Manual via the SMC website, https://www.smcworld.com



Specific Product Precautions

A, B port size (Metric/One-touch fitting)

•	<u>~, </u>	<u> </u>	011 3120	(INICELL)	o, onc	touci		<i>11</i>	
		A, B port					Type 11/Bo		
				SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4	Ì.,		ø4	•	•	_	•	_	
C6	ig		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	200
C10	0,		ø10	_	_	•	_	•	O S SEE
C12	ĺ		ø12	_	_	•	_	•	المالية
CM*1	ĺ	Mi	xed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6	1	9	ø6	•	•	•	_	_	
L8		Upward	ø8	<u> </u>	•	•	_	_	
L10		ŋ	ø10	_	_	•	_	_	
L12	Ī		ø12	_	_	•	_	_	De 1988
B4	Elbow*2		ø4	•	•	_	_	_	
B6		ard	ø6	•	•	•	_	_	
B8	10 Numo	WU/	ø8	_	•	•	_	_	
B10		Oo	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	Tell Services
L NAs1	ĺ	N 4:							
LM*1		IVII	xed sizes					_	
		P, E	E port*3	ø8	ø10	ø12	ø10	ø12	

A, B port size (Inch/One-touch fitting)

Type 10/Side ported Type

	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported			
		A, b port		SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3	Ì		ø5/32"	•	•	_	•	_		
N7	igh		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"	_	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	0 15055	
CM*1	1	Mi	xed sizes	•	•	•	•	•		
LN3			ø5/32"	•	_	_	_	_		
LN7	9	Jpward	ø1/4"	•	•	_	_	_		
LN9)	췹	ø5/16"	_	•	_	_	_	
LN11			ø3/8"	_	_	•	_	_	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
BN3	Elbow*2	ē	ø5/32"	•	_	_	_	_		
BN7	읦	Downward	ø1/4"	•	•	_	_	_		
BN9	"	nwc	ø5/16"	_	•	_	_	_		
BN11		△	ø3/8"	_	_	•	_	_		
LM*1		Mi	xed sizes	•	•	•	_	_		
		Р, Е	E port*3	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

- *1 Indicate the sizes on the manifold specification sheet.
- *2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).
- *3 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

8 Mounting and Option

	Mounting	Option		
	Mounting	Name plate	Station number	
Nil	Diament.	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D □*1	DIN "	_	_	
A □*1	DIN rail mounting	•	•	
B □*1	mounting	•	_	

- *1 Refer to "DIN Rail Option" below.
- * Select the direct mounting type for Type 11 (Bottom ported).


DIN Rail Option

Nil	With DIN bracket, DIN rail with standard length
0	With DIN bracket, without DIN rail
3 *1	With DIN bracket, DIN rail for 3 stations
i :	i i
24*1	With DIN bracket, DIN rail for 24 stations

- *1 Specify a longer rail than the length of valve stations.
- If the DIN rail must be mounted without an SI unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 203 for the DIN rail part number.
- * Refer to page 295 for the fixation of DIN rail mounting type manifold.

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

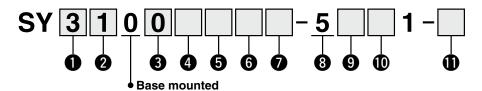

Standard (0.7 MPa)

Quick response type (0.7 MPa)

High pressure type (1.0 MPa)

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>							
1	O manitian	Single					
2	2-position	Double					
3		Closed center					
4	3-position	Exhaust center					
5		Pressure center					
A *1	4 maniting dual	N.C./N.C.					
B *1	4-position dual 3-port valve	N.O./N.O.					
C*1	o-port vaive	N.C./N.O.					

*1 Select the rubber seal type for the 4-position dual 3-port valve.

•

pressure type.

K*1


6 Pilot valve option

Coll type										
Nil	Standard									
Т	With power saving circuit (Continuous duty type)*1*2									

*1 Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.

*1 Select the metal seal type for the high

*2 Be careful of the energizing time when the power saving circuit is selected. For details, refer to page 292. Manual override

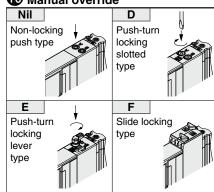

Refer to page 34 for the safety slide locking manual override.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve

Nil	None
H*1	Built-in

- *1 Select the rubber seal type when the back pressure check valve is built-in. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- Select "Nil" for the 3-position type or the SY7000.

8 Rated voltage

<u>U i iu</u>	tou voitage
5	24 VDC

9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification		
R	_		Non nolar		
U	•		Non-polar		
NS	_		Negative		
NZ	•		common		

* Select "NZ" for models with a power saving

Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)*1
н	Hexagon socket head cap screw (Drop prevention type)*1

- *1 For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- * When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 198 for base gasket and
- mounting screw part numbers.

 * Select "Nii" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

Connector Connecting Base

Type 10/Side Ported EX500 (128 Points)

Valve Specifications

Chart

Valve Construction

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Circular Connecto

EX500 EX600

EX250

EX126 EX120


Mixed Mounting Manifold Exploded View Fitting,


Manifold

Plug-in

SS5Y3-10SA3N-Stations B-C2, N1 (D) C6, N7

Dimensions: SY3000 Series

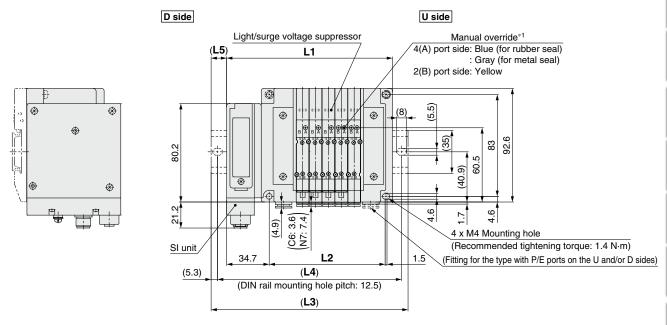

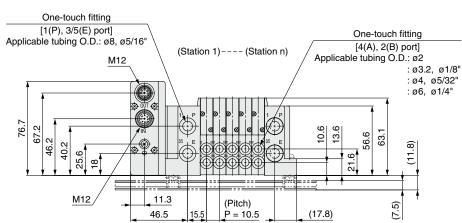

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- These figures show the "SS5Y3-10SA3N-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

L:	Di	m	en	ISİ	10	าร

:: Dimensions n: Stations															
Ln	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7
1.0		70.5	0.4	04.5	105	4455	100	100 F	4.47	4575	100	170 F	100	100 F	010

L _''	2	3	4	5	ь	/	8	9	10	11	12	13	14	15	16
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5

L	17	18	19	20	21	22	23	24
L1	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	220.5	231	241.5	252	262.5	273	283.5	294
L3	285.5	298	310.5	323	335.5	348	348	360.5
L4	275	287.5	300	312.5	325	337.5	337.5	350
L5	12	13	14	15	16	17	12	13





Dimensions: SY5000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported EX500 (128 Points)

 $\textbf{SS5Y5-10SA3N-}\underset{D \leftarrow C6, \ N7}{\overset{U \subset 4, \ N3}{D-C6, \ N7}}(\textbf{D})$

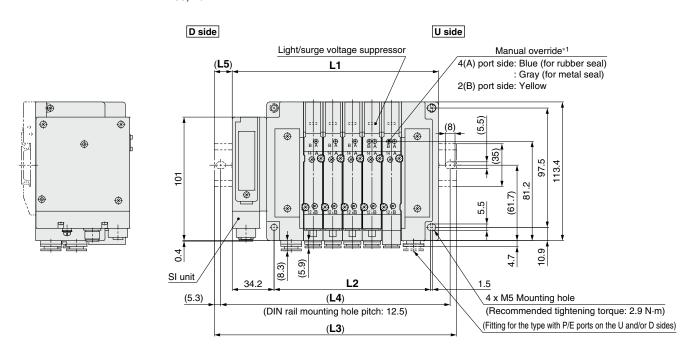

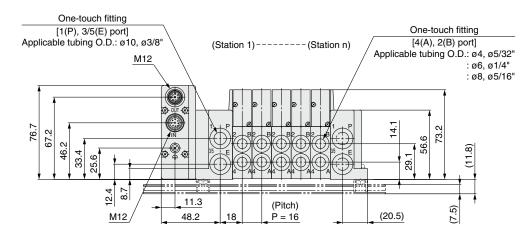

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10SA3N-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

L: Dimensions	n: Stations
---------------	-------------

Ĺ	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7
	L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
	L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
	L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
	L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14

L	17	18	19	20	21	22	23	24
L1	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	320	336	352	368	384	400	416	432
L3	385.5	410.5	423	435.5	448	473	485.5	498
L4	375	400	412.5	425	437.5	462.5	475	487.5
L5	12.5	17	15	13.5	11.5	16	14.5	12.5


Plug-in
Connector Connecting Base


Type 10/Side Ported

EX500 (128 Points)

Dimensions: SY7000 Series

SS5Y7-10SA3N-Stations D C6, N7 C8, N9 C10, N11 (D)

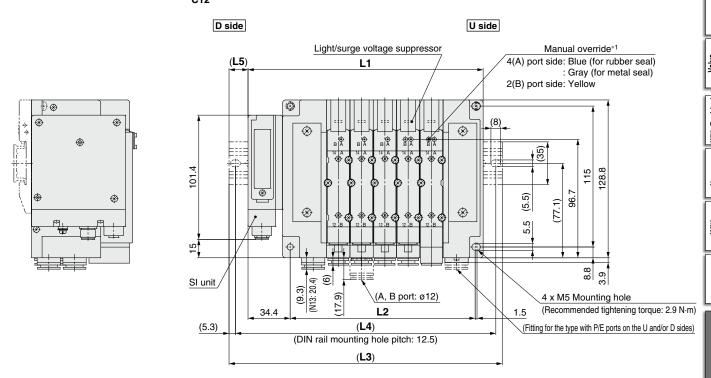

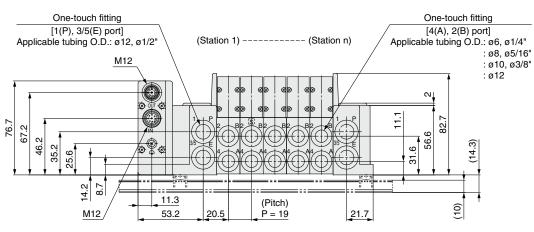

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

 * These figures show the "SS5Y7-10SA3N-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

L: Dimensions n: Station	ons
--------------------------	-----

L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

L	17	18	19	20	21	22	23	24
L1	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	379	398	417	436	455	474	493	512
L3	448	473	485.5	510.5	523	548	560.5	585.5
L4	437.5	462.5	475	500	512.5	537.5	550	575
L5	14	17	14	17	13.5	16.5	13.5	16.5

Valve Specifications Valve Construction

Chart

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Circular Connecto

EX500

EX600 EX250

EX260

EX126

EX120

Manifold Exploded View Fitting,

Manifold

Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

EX500 Gateway Decentralized System (64 Points)


SY3000/5000/7000 Series

CE CR CRUS ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

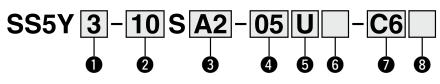

Series

3	SY3000
5	SY5000
7	SY7000

* For mixed mounting, refer to page 165 and

1 Type

<u>• ') </u>	•
10	Side ported
11	Bottom ported*1

- *1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).
- When mixing top-ported configurations, select from those listed on page 112. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

SI unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI unit						
	16 outputs,						
A2	Positive common*1,						
	2 to 8 stations (16 stations)*2						
	16 outputs,						
A2N	Negative common*1,						
	2 to 8 stations (16 stations)*2						


- *1 Ensure a match with the common specification of the valve to be used.
- (): Maximum number of stations for mixed single and double wiring

4 Valve stations

	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Considered lawayet*?
:	1 :	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 10 solerious available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- This also includes the number of the blanking plate assembly.

How to Order Manifold Assembly

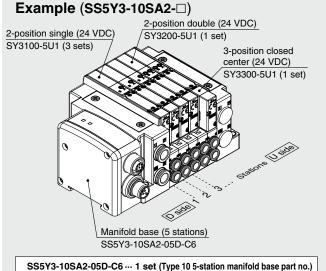

*SY3100-5U1······ 3 sets (2-position single part no.) *SY3200-5U1------ 1 set (2-position double part no.) *SY3300-5U1------ 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

6 P. E port entry

<u> </u>	- portoriu y
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- 3/5(E) port is plugged for the built-in silencer
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

A separate GW unit and communication cable are required.

For details on the EX500 Gateway Type Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 189. Please download the Operation Manual via the SMC website, https://www.smcworld.com



Connecting Base

D-sub, Flat Ribbon Terminal Block

EX500

EX600 EX250

EX260

EX126 EX120

Manifold Exploded View Fitting,

Manifold

V	A, B port size		(Metri	c/One	-touch	fitting	3)						
	A D		Type ⁻	10/Side	ported	Type 11/Bo	ttom ported						
		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000					
C2			ø2	•	_	_	_	_					
СЗ			ø3.2	•	_	_	_	_					
C4			ø4	•	•	_	•	_					
C6	Straight		ø6	•	•	•	•	•					
C8	ĭtra		ø8	_	•	•	•	•					
C10			ø10	_	_	•	_	•	000				
C12	2		ø12	_	_	•	_	•	OI.				
CM*	1	Mi	xed sizes	•	•	•	•	•					
L4			ø4	•	•	_	_	_					
L6		Upward	ø6	•	•	•	_						
L8			ø8	<u> </u>	•	•	_	_					
L10)		ø10	_	_	•	_	_					
L12	2		ø12	_	_	•	_		Jai 1988				
B4		Elbow*2 Downward	ø4	•	•	_	_	_	_ 00				
B6	[음		Downward	ø6	•	•	•	_	_				
B8]"			1	, l	[ø8	_	•	•	_	_	
B10)			ø10	_	_	•	_					
B12	2		ø12	_	_	•	_	_	Telle I				
LM*	I	Mixed sizes		•	•	•	_	_					
(0	P, E port*3 (One-touch fittings)			ø8	ø10	ø12	ø10	ø12					

A, B port size (Inch/One-touch fitting)

		A, B port		Type ⁻	10/Side	ported	Type 11/Bo	ttom ported	
				SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	L		ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11] ,		ø3/8"	_	_	•	_	•	o Bass
CM*		М	xed sizes	•	•	•	•	•	
LN3	3	_	ø5/32"	•	_	_	_	_	
LN7	1	Upward	ø1/4"	•	•	_	_	_	
LNS		횩	ø5/16"	_	•	_	_	_	
LN11		_	ø3/8"	_	_	•	_	_	de Bassas
BN3	3	5	ø5/32"	•	_	_	_	_	
BN7	Elbow*2	Downward	ø1/4"	•	•	_	_	_	
BN9		Š	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_	To be a second
LM*1		Mixed sizes		•	•	•	_	_	
(O	P, E port*3 (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

- *1 Indicate the sizes on the manifold specification sheet.
- *2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).
- *3 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

8 Mounting and Option

	Mounting	Option		
	Mounting	Name plate	Station number	
Nil	Diagram	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D □*1	DIN "	_	_	
A □*1	DIN rail mounting	•	•	
B □*1	mounting	•	_	

- *1 Refer to "DIN Rail Option" below.
- * Select the direct mounting type for Type 11 (Bottom ported).


DIN Rail Option

Nil	With DIN bracket, DIN rail with standard length
0	With DIN bracket, without DIN rail
3 *1	With DIN bracket, DIN rail for 3 stations
i :	i i
16* ¹	With DIN bracket, DIN rail for 16 stations

- *1 Specify a longer rail than the length of valve stations.
- * If the DIN rail must be mounted without an SI unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 203 for the DIN rail part number.
- * Refer to page 295 for the fixation of DIN rail mounting type manifold.

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

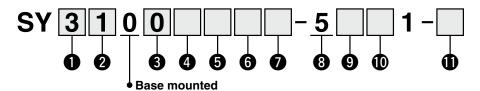

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation				
1	2-position	Single		
2		Double		
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
A *1	4	N.C./N.C.		
B *1	4-position dual 3-port	N.O./N.O.		
C*1		N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

	71
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

Coil type

• Con type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5	24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

* Only "Z" and "NZ" are available with a power saving circuit. Select "R," "U," "S," or "Z" for the valve when the SI unit specification is A2 (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit specification is A2N (negative common).

Manual override

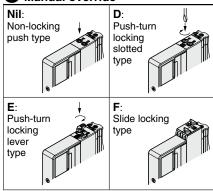

 Refer to page 34 for the safety slide locking manual override.

Type of mounting screw

Nil	il Round head combination screw							
В	Hexagon socket head cap screw							
K	Round head combination screw (Drop prevention type)							
Н	Hexagon socket head cap screw (Drop prevention type)							

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.





Plug-in Type
Connector Connecting Base Ex

Type 10/Side Ported EX500 (64 Points)

Dimensions: SY3000 Series

SS5Y3-10SA2-<u>Stations</u> D C2, N1 (D) B C4, N3 (C4, N3 (C6, N7)

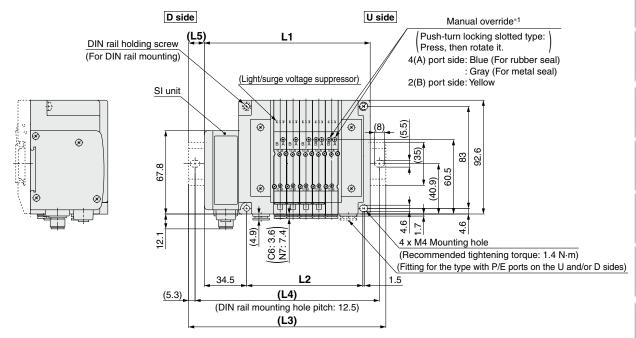

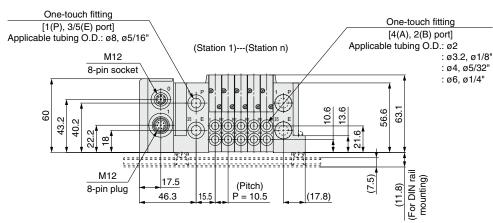

- *1 Refer to page 157 or dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10SA2-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240	250.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5

Valve Valve Construction Specifications

Chart

Valve Replacement Parts

With Residual
Pressure
or Release Valve

Vacuum Release Valve with Restrictor

With Pressure Sensor

> Made to Order

Connector
Connecting Base

D-sub, Flat Ribbon Terminal Block

Wire Circular Connector

EX500

EX250

EX126

EX120

Common Dimensions

Mixed Mounting Manifold Exploded View

Fitting, Plug Part Nos.

Specific Product recautions


Dimensions: SY5000 Series


Plug-in Connector Connecting Base

Type 10/Side Ported

EX500 (64 Points)

SS5Y5-10SA2-Stations D-C6, N7 (D)

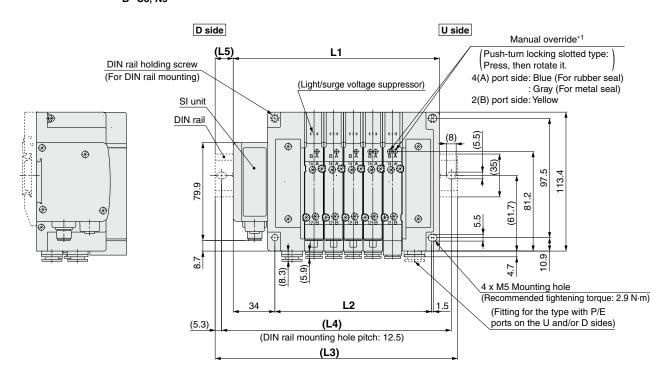

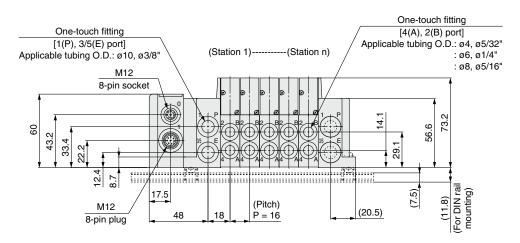

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10SA2-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.5	136.5	152.5	168.5	184.5	200.5	216.5	232.5	248.5	264.5	280.5	296.5	312.5	328.5	344.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	18	16	14.5





Plug-in
Connector Connecting Base Type 10/Side Ported


EX500 (64 Points)

Dimensions: SY7000 Series

SS5Y7-10SA2-Stations D C6, N7 C8, N9 C10, N11 (D)

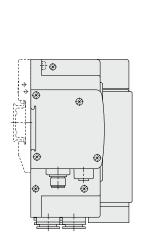

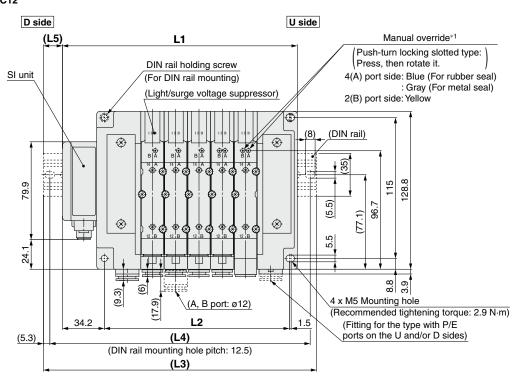

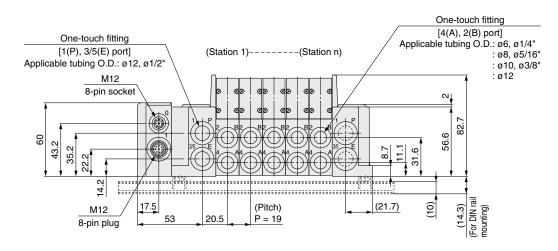

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10SA2-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.7	153.7	172.7	191.7	210.7	229.7	248.7	267.7	286.7	305.7	324.7	343.7	362.7	381.7	400.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

Valve Specifications Valve Construction

Chart

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

EX500 EX600

EX250 EX260

EX126

EX120

Mixed Mounting

Manifold Exploded View

Fitting, Manifold

Plug-in Connector Connecting Base

EX500 Gateway Decentralized System 2 (128 Points)

Type 12 Top Ported

SY3000/5000/7000 Series

CE UK CHS ROHS



How to Order Manifolds



Series

3	SY3000
5	SY5000
7	SY7000

For mixed mounting, refer to page 165 and

SI unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI unit						
	32 outputs*1*4, 2 to 16 stations (24 stations*3), Negative common*2						

- *1 16 outputs can be set by switching the built-in setting switch.
- *2 Ensure a match with the common specification of the valve.
- *3 (): Maximum number of stations for mixed single and double wiring
- *4 When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

3 Valve stations

	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Connection describe?
E	:	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	(Op to 32 solelloids available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- This also includes the number of the blanking plate assembly.

P. E port entry

<u> </u>	= port oriting
U *1	U side (2 to 10 stations)
D *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

*1 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

5 SUP/EXH block assembly

Nil	Internal pilot
S*1	Internal pilot, Built-in silencer*2
R	External pilot

- *1 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- *2 When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

How to Order Manifold Assembly

Example 2-position double Manifold base

SS5Y3-12SA3N-05D1 set (Manifold base part number) * SY3230-5U1-C65 sets (2-position double part number)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

• For the valve arrangement, the valve closest to the D side is considered the 1st station. Under the manifold base part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

6 P, E port size (One-touch fittings)

	SY3000	SY5000	SY7000	D
Nil	ø8	ø10	ø12	
N *1	ø5/16"	ø3/8"	ø1/2"	

*1 For N, sizes are in inches.

Mounting

Nil	Direct mounting					
D With DIN bracket, DIN rail with standard le						
D0	With DIN bracket, without DIN rail					
D3*1	With DIN bracket, DIN rail for 3 stations					
:	:					
D24*1	With DIN bracket, DIN rail for 24 stations					


- *1 Specify a longer rail than the length of valve stations.
- * If the DIN rail must be mounted without an SI unit, select "D0." Then, refer to L3 of the dimensions for the DIN rail length and order separately. Refer to page 203 for the DIN rail part number.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.
- * A separate GW unit and communication cable are required.

For details on the EX500 Gateway Type Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 188. Please download the Operation Manual via the SMC website, https://www.smcworld.com



How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

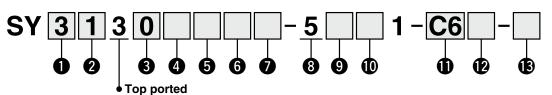

D Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single		
2		Double		
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
A *1	4-position dual 3-port valve	N.C./N.C.		
B*1 C*1		N.O./N.O.		
		N.C./N.O.		

*1 Select the rubber seal type for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal	
1	Metal seal	

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

(Same in railed type)		
Nil	None	
H*1	Built-in	

- *1 Select the rubber seal type when the back pressure check valve is built-in. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- Select "Nil" for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
B Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)

*1 Select the metal seal type for the high pressure type.

Coil type

Och type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)*1*2	

- *1 Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- *2 Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage

_	
5	24 VDC

9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R U	<u> </u>	•	Non-polar
NS	_		Negative
NZ	•		common

* Select "NZ" for models with a power saving circuit.

Manual override

Nil	D
Non-locking	Push-turn
push type	locking
	slotted
	type
_	
E	F
E Push-turn ▼	Slide locking
Push-turn v	Slide locking
Push-turn locking lever	Slide locking
Push-turn locking lever	Slide locking
Push-turn locking lever	Slide locking

* Refer to page 34 for the safety slide locking manual override.

多SMC

A, B port size

Thread piping

	Port size	SY3000	SY5000	SY7000
М5	M5 x 0.8	•	_	_
01	1/8	_	•	_
02	1/4	_	_	•

One-touch fitting (Metric)

	A, B port	SY3000	SY5000	SY7000	
C2	ø2	•	_	_	
C3 C4	ø3.2	•	_	_	
	ø4	•	•	_	
C6	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_	_	•	
C12	ø12	_	_	•	

One-touch fitting (Inch)

	J ,			
	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 A. B port thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

Select "Nil" for M5.

13 Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type*1)	
н	Hexagon socket head cap screw (Drop prevention type*1)	

*1 For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.

Select "Nil" or "K" for the optional individual SUP/EXH spacer assembly or interface regulator.

Protective class

Valve Specifications

Valve Construction

Connecting Base

D-sub, Flat Ribbon Terminal Block

Circular Connecto

EX500 EX600

EX250 EX260

EX126

EX120

Mixed Mounting Manifold Exploded View

Fitting,

Manifold

Plug-in Connector Connecting Base

EX500 Gateway Decentralized System (64 Points)


Type 12 Top Ported

SY3000/5000/7000 Series

CE CH CHSUS ROHS



How to Order Manifolds

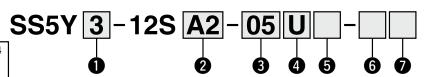

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

Series	
3	SY3000
5	SY5000
7	SY7000

For mixed mounting, refer to page 165 and

4 P, E port entry

	U *1	U side (2 to 10 stations)
	D *1	D side (2 to 10 stations)
B Both sides (2 to 16 station		Both sides (2 to 16 stations)

*1 5 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

Valve stations Symbol Stations

,		
02	2 stations	
	;	Double wiring*1
08	8 stations	
02	2 stations	Considered laws which
- E	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 10 soletious available)

Note

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- This also includes the number of the blanking plate assembly.

SI unit (Number of outputs, Output polarity, Max. number of valve stations)

Without SI unit	
16 outputs,	
Positive common*1,	
2 to 8 stations (16 stations)*2	
16 outputs,	
Negative common*1,	
2 to 8 stations (16 stations)*2	


- *1 Ensure a match with the common specification of the valve to be used.
-): Maximum number of stations for mixed single and double wiring

5 SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

How to Order Manifold Assembly

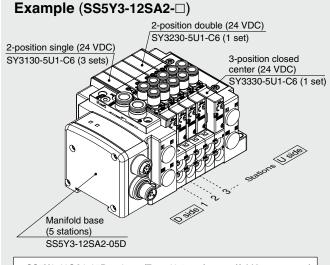

SS5Y3-12SA2-05D ... 1 set (Type 12 5-station manifold base part no.) *SY3130-5U1-C6 3 sets (2-position single part no.) *SY3230-5U1-C6 1 set (2-position double part no.) *SY3330-5U1-C6 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

* For N. sizes are in inches.

Mounting

	· · · ·	
Nil	Direct mounting	
D	With DIN bracket, DIN rail with standard length	
D0	With DIN bracket, without DIN rail With DIN bracket, DIN rail for 3 stations	
D3*1		
÷	:	
D16*1	With DIN bracket, DIN rail for 16 stations	


- *1 Specify a longer rail than the length of valve stations.
- * If the DIN rail must be mounted without an SI unit, select "Do." Then, refer to L3 of the dimensions for the DIN rail length and order separately. Refer to page 203 for the DIN rail part number.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.
- A separate GW unit and communication cable are required.

For details on the EX500 Gateway Type Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 189. Please download the Operation Manual via the SMC website, https://www.smcworld.com



Refer to page 15 for valve specifications.

How to Order Valves (With mounting screw)

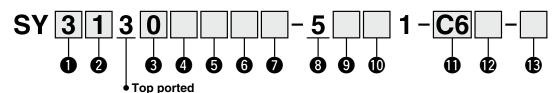

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>			
1	2-position	Single	
2		Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
A *1	4-position dual 3-port	N.C./N.C.	
B *1		N.O./N.O.	
C*1		N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

O courtype		
0	Rubber seal	
1	Metal seal	

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa)	
B Quick response type (0.7 MP	
K*1 High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type

	71
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Rated voltage

O na	ieu voitage	
5	2	24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R	_		Non-polar	
U	•		Ινοιι-ροιαι	
S	_		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

Select "Z" or "NZ" for models with a power saving circuit. Select "R," "U," "S," or "Z" for the valve when the SI unit specification is A2 (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit specification is A2N (negative common).

Manual override

<u> </u>	
Nil: Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type
D () 0(()	

* Refer to page 34 for the safety slide locking manual override.

多SMC

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10		_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

0110	todon nitting (n	1011)		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type

<u> </u>		
Nil	Rc	
F	G	
N	NPT	
Т	NPTF	

* Only Nil is available for M5.

13 Type of mounting screw

Nil	Round head combination screw		
В	Hexagon socket head cap screw		
K	Round head combination screw (Drop prevention type)		
Н	Hexagon socket head cap screw (Drop prevention type)		

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (1))

Type 10 Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base

EX600





SY3000/5000/7000 Series

EtherCAT compatible products (3 Kit type/Symbol: D) are to be discontinued as of October 2022.

As a substitute, please consider the use of an EX260 series product (SI unit specification/Symbol: DA). However, keep in mind that the product specifications, external appearance, etc., differ. For details, please contact your SMC sales representative.

How to Order Manifolds

SS5Y3-10S6Q 2-05U-C6

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

3	SY3000
5	SY5000
7	SY7000

2 Туре

10	Side ported
11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).

3 SI unit

0	Without SI unit				
Q	DeviceNet® (Version A)				
N	PROFIBUS DP (Version A)				
V	CC-Link				
ZE	EtherNet/IP™ (1 port)				
EA	EtherNet/IP™ (2 ports)				
D	EtherCAT				
F	PROFINET				
FA	PROFINET (IO-Link unit)				
WE	EtherNet/IP™ compatible wireless base*1				
WF	PROFINET compatible wireless base*1				
WS	Wireless remote*1				

- *1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.
- * I/O unit cannot be mounted without SI unit.
- Valve plate which connects manifold and SI unit is included, but it is not mounted to a valve without SI unit. For mounting, refer to the EX600 series in the Web Catalog.

5 I/O unit stations

_	
Nil	None
1	1 station
:	:
9	9 stations

- * When not selecting an SI unit, the symbol will be "nil."
- * SI unit is not included in I/O unit stations.
- * When I/O unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual for mounting.

6 Valve stations

Symbol	Stations	Note						
02	2 stations							
:		Double wiring*1						
16	16 stations							
02	2 stations	Considered lawayet*?						
:	:	Specified layout*2 (Up to 32 solenoids available)						
24	24 stations	(Op to 32 solerious available)						

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

Mounting and Option

Symbol	Mounting	Option			
Symbol	Woulding	Name plate	Station number		
Nil	D:	_	_		
AA	Direct mounting	•	•		
BA	mounting	•	_		
D□	DIN	_	_		
A□	DIN rail mounting	•	•		
B□	mounting	•	_		

- * Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

N	il		Standard length						
C)	Without DIN rail (with bracket)							
3	}	For 3 stations	Charles a langer rail than the						
:		÷	Specify a longer rail than the						
2	4	For 24 stations	total length of specified stations.						

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 203 for the DIN rail part number.)

4 SI unit output polarity, end plate type

or anne surpur polarity, sind place type									
	M12 power supply	7/8 inch	M12 power supply connector IN/OUT, A-coded						
SI unit output polarity	connector B-coded (EX600-ED2)	connector (EX600-ED3)	Pin arrangement 1 (EX600-ED4)	Pin arrangement 2 (EX600-ED5)					
Without SI unit		N	ii						
SI unit positive common	2	3	6	8					
SI unit negative common	4	5	7	9					

- Ensure a match with the common specification of the valve to be used.
- * When not selecting an SI unit, the symbol will be "nil."

P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 8.

For details on the EX600 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 191. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via the SMC website, https://www.smcworld.com



Manifold Options

Specific Product Precautions

8 A, B port size (Metric/One-touch fitting)

<u> </u>	<u> </u>	<u>_</u>	JUIT SIZE	(meni	COLLE	-touci	111111111	<u> </u>			
Curahal	A, B port				10/Side						
Symbol	A, B port		SY3000	SY5000	SY7000	SY5000	SY7000				
C2			ø2	•	_	_	_	_	_		
СЗ	ight		ø3.2	•	_	_	_	_			
C4					ø4	•	•	_	•	_	
C6			ø6	•	•	•	•	•			
C8			ø8	_	•	•	•	•	2011		
C10	0)		ø10	_	_	•	_	•	O STREET		
C12			ø12	_	_	•	_	•	90		
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•			
L4			ø4	•	•	_	_	_			
L6		5	ø6	•	•	•	_	_			
L8		Upward	ø8	_	•	•	_	_			
L10		Ŋ	ø10	_	_	•	_	_			
L12	∃lbow*2	0.1	٥.		ø12	_	_	•	_	_	e Salana
B4			ø4	•	•	_	_	_	_		
В6	oql	Elbo Downward	rinward	ard	ø6	•	•	•	_	_	
B8	ш			ø8	_	•	•	_	_		
B10			ø10	_	_	•	_	_			
B12	2	_	ø12	_	_	•	_	_			
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_			
	P, E port size			ø8	ø10	ø12	ø10	ø12			

A, B port size (Inch/One-touch fitting)

							<u> </u>							
Symbol	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported							
Syllibol			SY3000	SY5000	SY7000	SY5000	SY7000							
N1								ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_						
N7	igh		ø1/4"	•	•	•	•	•						
N9	Straight		ø5/16"	_	•	•	•	•						
N11	•		ø3/8"	_	_	•	_	•	ol Sur					
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•						
LN3			ø5/32"	•	_	_	_	_						
LN7			Jpward	ø1/4"	•	•	_	_	_					
LN9		ᅀ	ø5/16"	_	•	_	_	_						
LN11	Elbow*2	Elbow*2	OI.	_	ø3/8"	_	_	•	_	_	el sussessi			
BN3			힏	ø5/32"	•	_	_	_	_					
BN7			Downward	ø1/4"	•	•	_	_	_					
BN9			_	_	_	_		Š	ø5/16"	_	•	_	_	_
BN11		۵	ø3/8"	_	١	•	_	_	Told Service S					
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_						
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"						


*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM."

The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

SMC

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).


How to Order Manifold Assembly

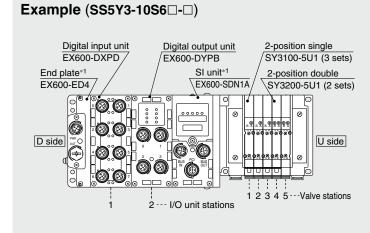

- - → The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted, then the I/O units in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- *1 Do not enter the SI unit part number and the end plate part number together.
- When mixing top-ported configurations, select from those listed on page 124.
 - In such cases, use caution as there is also output on the A and B ports on the base side.
 - Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

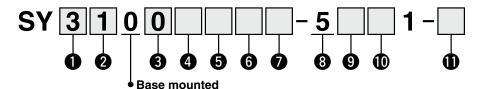

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

ועי	Je oi actuati	OII
1	2-position	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A *1	4	N.C./N.C.
B *1	4-position dual 3-port	N.O./N.O.
C*1	dual 5-port	N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

7 Coil type

_		
Ni	il	Standard
Т		With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5 24 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S			Positive
Z	•	_	common
NS			Negative
NZ	•		common

- * Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

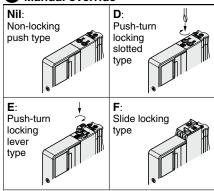

 Refer to page 34 for the safety slide locking manual override.

Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



Chart

Type 10/Side Ported EX600 (M12 Connector)

U side

ports on the U and/or D sides)

Dimensions: SY3000 Series


Plug-in
Connector Connecting Base

SS5Y3-10S6 $\square_{\underline{7}}^{\frac{2}{7}}\square$ -Stations D side (5.3)(L5)

Digital input unit

Input connector

(L3) (L4)(DIN rail mounting hole pitch: 12.5) Manual override*1 L1 Push-turn locking slotted type: L₆ L2 5.5 Press, then rotate it. DIN rail holding screw 4(A) port side (For DIN rail mounting) Communication connector 47 DIN rail holding screw 1.5 . : Blue (For rubber seal) (For DIN rail mounting) Power connector 2 x M4 Mounting hole : Gray (For metal seal) (Recommended tightening torque: 1.4 N·m) (Light/surge 85.1 2(B) port side: Yellow Marker groove voltage suppressor) Ø Ø 35) 92.6 83 106 90 60.5 (40.9)**Ð**Ø (8) (4.9) 3.6 FΕ 86.6 4 x M4 Mounting hole (Recommended tightening torque: 1.4 N·m) End plate (Fitting for the type with P/E

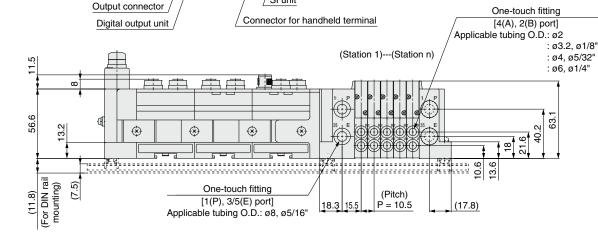

SI unit

Valve plate

 $L1 = 10.5 \times n1 + 135.5 + 47 \times n2$

 $L2 = 10.5 \times n1 + 42$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 47 \times n2 + 82$

n1: Valve stations n2: I/O unit stations

L3: DIN Rail Overall Length

*1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override. * These figures show the "SS5Y3-10S6Q22-05D-C6."

* Refer to page 162 for dimensions of A or B port top-ported type.

LJ. DIN NO	all Ov	Ciaii	Fellé	Jui																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	235.5	248	248	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5
2	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5
3	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5
4	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5
5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648
6	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698
7	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748
8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798
9	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798	810.5	823	835.5	835.5

Valve Specifications

Valve Construction

Connecting Base Connector D-sub, Flat

Ribbor Terminal Block

Circular Connecto

EX500 EX600

EX250

EX126 EX120

Manifold

Fitting Manifold

116




Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX600 (7/8 Inch Connector)

SS5Y3-10S6 \$\Bigs_5^3 \Bigs_-\text{Stations} \Bigs_C^{C2} \Bigs_C^{C3}, \N1 \\ C6, \N7 \\ \N7

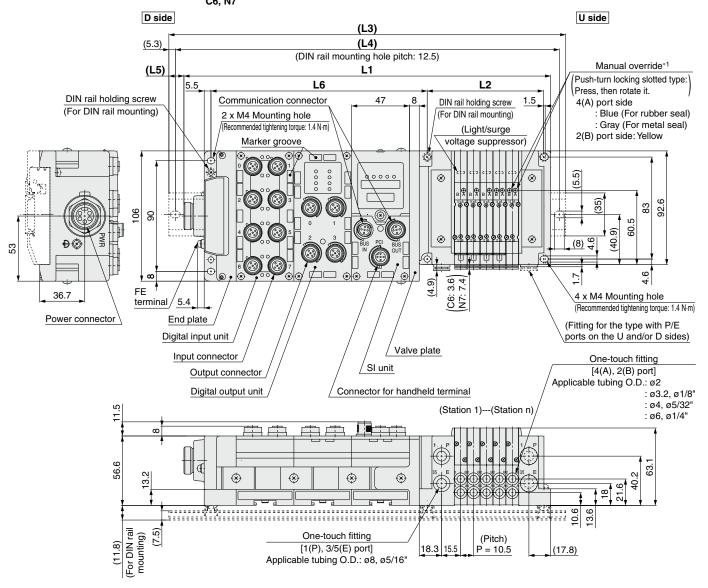

- $L1 = 10.5 \times n1 + 152 + 47 \times n2$
- $L2 = 10.5 \times n1 + 42$
- L4 = L3 10.5
- L5 = (L3 L1)/2
- $L6 = 47 \times n2 + 82$ n1: Valve stations
- n2: I/O unit stations

L3: DIN Rail Overall Length

LJ. DIN NO	all Ov	Ciaii	Fellé	Jui																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5

* These figures show the "SS5Y3-10S6Q32-05D-C6."


* Refer to page 162 for dimensions of A or B port top-ported type.

*1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

Chart

Plug-in
Connector Connecting Base

Type 10/Side Ported EX600 (M12 Connector)

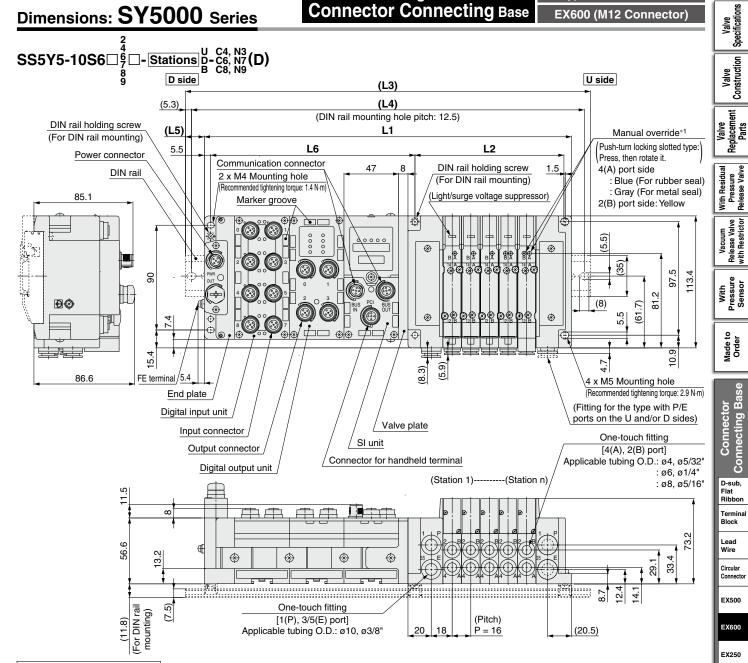

 $L1 = 16 \times n1 + 141.5 + 47 \times n2$

 $L2 = 16 \times n1 + 48$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 47 \times n2 + 81.5$

n1: Valve stations n2: I/O unit stations

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10S6Q22-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

I 2: DIN Pail Overall Length

L3: DIN R	all Ov	eraii	Leng	gtn																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648
3	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5
6	485.5	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5
9	623	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973

EX126

EX120

Connecting Base


Mixed Mounting Manifold Exploded View Fitting.

Manifold

Dimensions: SY5000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base Ex600 (7/8 Inch Connector)

SS5Y5-10S6 $\square_5^3\square$ -Stations DC C4, N3 (D)

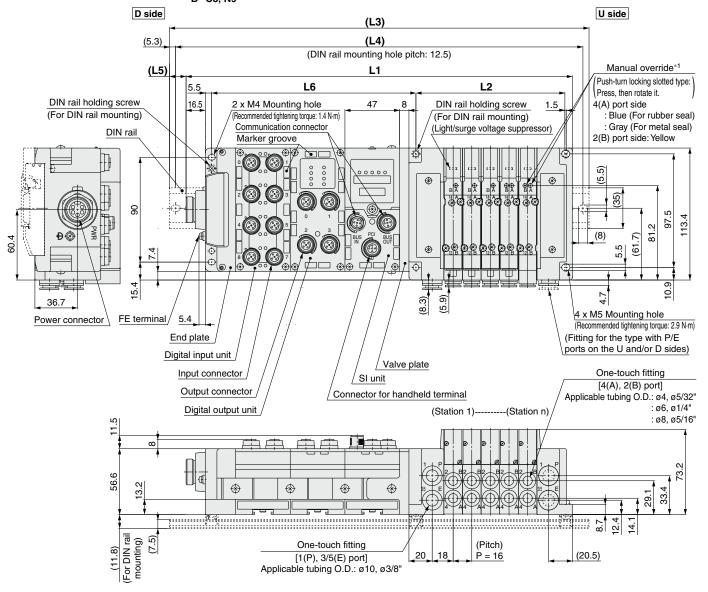

 $L1 = 16 \times n1 + 158 + 47 \times n2$ $L2 = 16 \times n1 + 48$ L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 81.5$

n1: Valve stations n2: I/O unit stations

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10S6Q32-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

L3: DIN Rail Overall Length

L3: DIN R	all Ov	Claii	rení	jui																			
Valve stations (n1) stations (n2)	1	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	—

Valve Specifications

Type 10/Side Ported

EX600 (M12 Connector)

Chart

Valve Construction

Made t Order

Connecting Base Conn D-sub, Flat

Ribbor Terminal Block

Circular Connecto

EX500

EX250

EX600


EX126

EX120

Manifold Fitting Manifold

Plug-in
Connector Connecting Base

Dimensions: SY7000 Series

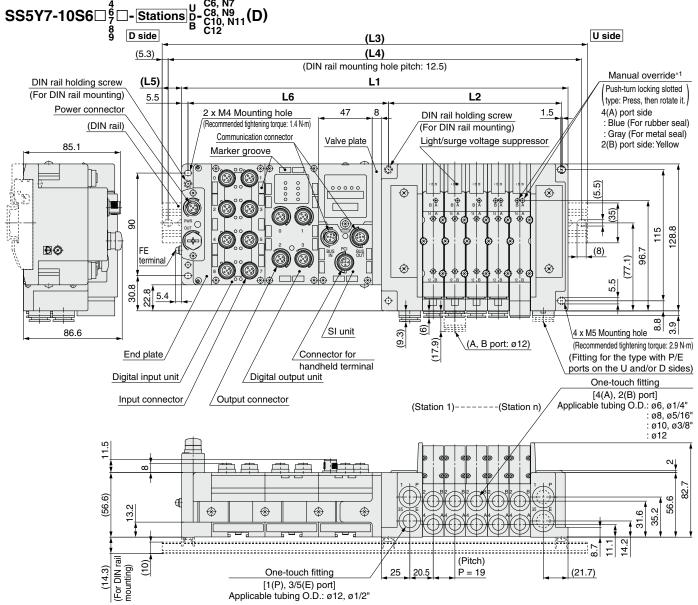

 $L1 = 19 \times n1 + 149.7 + 47 \times n2$

L2 = 19 x n1 + 56

L3 = DIN rail dimension

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 47 \times n2 + 81.7$ n1: Valve stations

n2: I/O unit stations

DIN Bail Overall Length

L3: DIN Ra	all Ov	erali	Leng	gth																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5
2	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723
3	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5	760.5	773
4	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823
5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	648	660.5	685.5	698	723	735.5	760.5	773	798	810.5	835.5	848	873
6	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	923
7	548	560.5	585.5	598	623	635.5	660.5	673	698	723	735.5	760.5	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5
8	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	_	_
9	635.5	660.5	673	698	710.5	735.5	748	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5	985.5	_	_	_	_

* These figures show the "SS5Y7-10S6Q22-05D-C10."

* Refer to page 164 for dimensions of A or B port top-ported type.

*1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.


120

Dimensions: SY7000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX600 (7/8 Inch Connector)

SS5Y7-10S6 $\square_5^3\square$ -Stations $\stackrel{\text{U}}{\text{B}}$ - $\stackrel{\text{C6}}{\underset{\text{C10}}{\text{N}}}$, $\stackrel{\text{C6}}{\underset{\text{N9}}{\text{N9}}}$ (D)

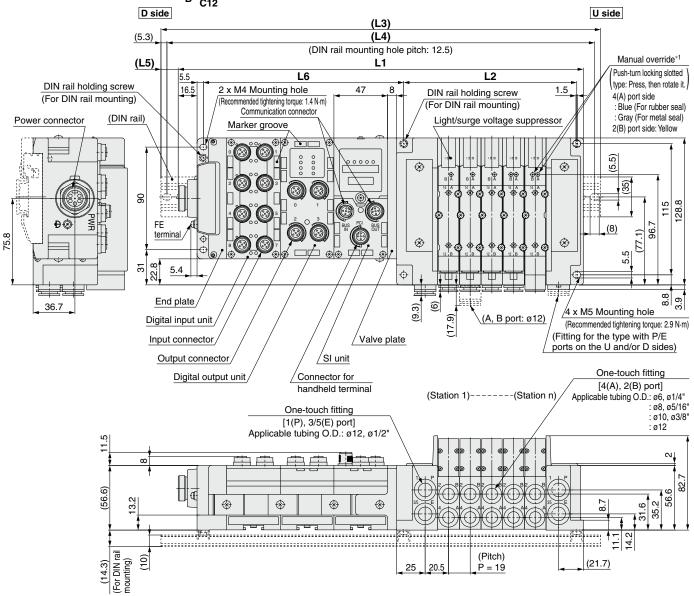

- L1 = 19 x n1 + 166.2 + 47 x n2
- $L2 = 19 \times n1 + 56$
- L4 = L3 10.5
- L5 = (L3 L1)/2 $L6 = 47 \times n2 + 81.7$
- n1: Valve stationsn2: I/O unit stations
- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10S6Q32-05D-C10."

 * Refer to page 164 for dimensions of A or B port top-ported type.
- L3: DIN Rail Overall Length

LJ. DIN N	411 O V	Ciuii	FCII	J																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	235.5	248	273	285.5	310.5	323	348	360.5	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648
1	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	685.5	698
2	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748
3	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	760.5	773	798
4	423	435.5	460.5	473	498	510.5	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5
5	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	835.5	848	873	885.5
6	510.5	535.5	548	573	585.5	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5
7	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	910.5	923	948	960.5	985.5
8	610.5	623	648	660.5	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	985.5	_	_
9	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	898	923	935.5	960.5	985.5	_	_	_		_

With Pressure Sensor

Made to Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Lead Wire

Circular Connector

EX500

EX600

EX250 EX260

EX126 EX120

Common Dimensions

Mixed Mounting

Manifold Exploded View Fitting, Plug Part Nos.

Manifold Options

Specific Product Precautions



Plug-in Connector Connecting Base

EX600



Type 12
Top Ported

SY3000/5000/7000 Series

EtherCAT compatible products (② Kit type/Symbol: D) are to be discontinued as of October 2022.

As a substitute, please consider the use of an EX260 series product (SI unit specification/Symbol: DA). However, keep in mind that the product specifications, external appearance, etc., differ. For details, please contact your SMC sales representative.

How to Order Manifolds

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

SS5Y 3-12S6 Q 2-05 U-

1 Series

3	SY3000
5	SY5000
7	SY7000

SI unit output polarity, end plate type

P - 1 - 1 - 1 - 1 - 1	one pres					
M12 power supply	7/8 inch	M12 power supply connector IN/OUT, A-coded				
connector B-coded (EX600-ED2)	connector (EX600-ED3)	Pin arrangement 1 (EX600-ED4)	Pin arrangement 2 (EX600-ED5)			
	N	il				
2	3	6	8			
4	5	7	9			
	M12 power supply connector B-coded (EX600-ED2)	M12 power supply connector B-coded (EX600-ED2) (EX600-ED3)	power supply connector B-coded (EX600-ED2) (EX600-ED3) (EX600-ED4)			

- * When not selecting an SI unit, the symbol will be "nil."
- * Ensure a match with the common specification of the valve to be used.

2 SI unit

0	Without SI unit						
Q	DeviceNet® (Version A)						
N	PROFIBUS DP (Version A)						
V	CC-Link						
ZE EtherNet/IP™ (1 port)							
EA EtherNet/IP™ (2 ports)							
D	EtherCAT						
F	PROFINET						
FA	PROFINET (IO-Link unit)						
WE	EtherNet/IP™ compatible wireless base*1						
WF PROFINET compatible wireless base*1							
WS	WS Wireless remote*1						
*1 The v	wireless system is suitable for use only in						

4 I/O unit stations

Nil	None
1	1 station
•	:
9	9 stations

- * When not selecting an SI unit, the symbol will be "nil."
- SI unit is not included in I/O unit stations.
 When I/O unit is selected, it is shipped
- * When I/O unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual for mounting.

5 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Creation lavares
:	:	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	(Op to 32 solellolds available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
 Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
 *2 Specified layout: Indicate the wiring
- Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

- I/O unit cannot be mounted without Sl unit.
- Valve plate which connects manifold and SI unit is included, but it is not mounted to a valve without SI unit. For mounting, refer to the EX600 series in the Web Catalog.

How to Order Manifold Assembly

Example (SS5Y3-12S6□-□) Digital input unit Digital output unit 2-position single SY3130-5U1-C6 (3 sets) EX600-DXPD EX600-DYPB SI unit*1 End plate*1 2-position double EX600-SDN1A EX600-ED4 SY3230-5U1-C6 (2 sets) 00000 D side U side 1 2 3 4 5 --- Valve stations 2 --- I/O unit stations

*313130-301-00 ·················· 3 sets (2-position single part no.)
*SY3230-5U1-C62 sets (2-position double part no.)
*EX600-DXPD 1 set I/O unit part number (Station 1)
*EX600-DYPB 1 set I/O unit part number (Station 2)
The asterick denotes the symbol for the assembly

SS5Y3-12S6Q72-05B 1 set (Type 12 5-station manifold base part no.)

Prefix it to the part numbers of the valve, etc.

• For the valve arrangement, the valve closest to the D side is considered the 1st station.

 Under the manifold part number, state the valves to be mounted, then the I/O units in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

*1 Do not enter the SI unit part number and the end plate part number together

6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E *1	Н
Both sides (2 to 24 stations)	В	_	J

- *1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- * The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

P, E port size (One-touch fittings)

<u>• . , .</u>	_ port orzo	(One tout	,,, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
Symbol	SY3000	SY5000	SY7000	D
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

* For N, sizes are in inches.

8 Mounting

Nil	Direct mounting						
D	DIN rail mounting (With DIN rail)						
D0	DIN rail mour	DIN rail mounting (Without DIN rail)					
D3	For 3 stations	Specify a length longer					
:	:	than that of the standard					
D24	For 24 stations	rail.					


- * If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 203 for the DIN rail part number.)
- * Refer to page 295 for the fixation of DIN rail mounting type manifold.

For details on the EX600 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 191. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via the SMC website, https://www.smcworld.com



How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

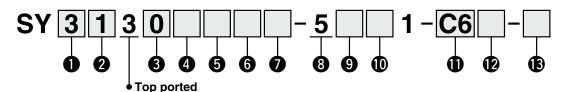

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of detadtion				
1	2-position	Single		
2		Double		
3		Closed center		
4 5	3-position	Exhaust center		
		Pressure center		
A *1	4	N.C./N.C.		
B*1 C*1	4-position dual 3-port	N.O./N.O.		
		N.C./N.O.		
		14.0./14.0.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

O Da	ck pressure check valve
Nil	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type

9 00	ii type
Nil	Standard
T	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.


8 Rated voltage

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- * Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

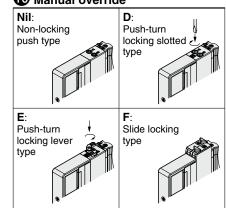

Refer to page 34 for the safety slide locking manual override.

SMC

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

one reach many (mone)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•
_				

One-touch fitting (Inch)

•	<u> </u>				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	

12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

Only Nil is available for M5.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

> Protective class class II (Mark: ⟨ii⟩)

Type 10
Side Ported
Type 11
Bottom Ported

Plug-in Connector Connecting Base

EX245

SY3000/5000/7000 Series



RoHS

How to Order Manifold

Side Ported/Bottom Ported

SS5Y3-10SAAN -05D -C6

Only direct mounting is selectable for the manifold.

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

SeriesSY3000SY5000SY7000

2 Type						
10	Side ported					
11*1	Bottom ported					

* 1: The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).

5 Number of I/O modules

Nil	Without I/O module
INII	(Without SI Unit)
1	1 station
:	:
8	8 stations

6 Valve stations (In the case of the 32-output SI Unit)

Symbol	Symbol Stations Note	
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Specified layout*2
:	:	(Available up to 32
24	24 stations	solenoids)

- *1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- *2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- *3: This also includes the number of blanking plate assembly.

P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

8 SUP/EXH block assembly

<u> </u>						
Nil	Internal pilot					
S	Internal pilot, Built-in silencer					
R	External pilot					

- *: 3/5(E) port is plugged for the built-in silencer type.
- *: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX245 Integrated-type (For Input/Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 192-1 and 192-2. Please download the Operation Manual via SMC website, https://www.smcworld.com

3 SI Unit specifications

Symbol (output polarity)	Protocol	Communication	Power supply
Negative common (PNP)	FIOLOCOI	connector	connector
0	Without SI Unit		
AAN		Push/Pull	Push/Pull
AAN		(SCRJ): 2 pcs.	(24 V): 2 pcs.
ABN	PROFINET	Push/Pull	Push/Pull
ADIN		(RJ45): 2 pcs.	(24 V): 2 pcs.
ACN		M12: 2 pcs.	7/8 inch: 2 pcs.
			•

*: The valve output polarity for the SI unit is negative common (PNP).

With or without I/O modules

Nil	Without I/O module
Υ	With I/O module

9 A, B port size (Metric)

<u> </u>			10.20 (01.10)						
Symbol			A, B port		de ported)			orted) series	
Cymbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
C3	1		ø3.2	•	_	_	_	_	
C4	-		ø4	•	•	_	•	_	201
C6	Straight		ø6	•	•	•	•	•	O I SEE
C8	tra		ø8	_	•	•	•	•	
C10	S		ø10	_	_	•	_	•	
C12	İ		ø12	_	_	•	_	•	
CM*2	ĺ	Stı	raight port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6	İ	2	ø6	•	•	•	_	_	
L8	ĺ	Upward	ø8	_	•	•	_	_	
L10		占	ø10	_	_	•	_	_	G O Jakes
L12	١.		ø12	_	_	•	_	_	
B4	*1	_	ø4	•	•	_	_	_	
B6	Elbow	ar	ø6	•	•	•	_	_	
B8	Ш	2	ø8	_	•	•	_	_	
B10		Downward	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	
LM		EII	bow port, mixed sizes						
LIVI		(Inc	cluding upward and downward piping)	•			_		
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		


A, B port size (Inch)

Cumbal	A B nort			de ported)			orted) series				
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000			
N1			ø1/8"	•	_	_	_	_			
N3	Ħ		ø5/32"	•	•	_	•	_			
N7	igh		ø1/4"	•	•	•	•	•	201		
N9	Straight		ø5/16"	_	•	•	•	•	A STATE OF THE PARTY OF THE PAR		
N11	S		ø3/8"	_	_	•	_	•			
CM*2		Str	aight port, mixed sizes	•	•	•	•	•			
LN3		_	ø5/32"	•	_	_	_	_			
LN7		/ar	ø1/4"	•	•	_	_	_			
LN9	*1	*1 woql		Jpward	ø5/16"	_	•	_	_	_	
LN11			ر ا	ø3/8"	_	_	•	_	_	0~	
BN3			*	*	ırd	ø5/32"	•	_	_	_	_
BN7	bo	ownward	ø1/4"	•	•	_	_	_			
BN9	Ш	Ň	ø5/16"	_	•	_	_	_			
BN11		ă	ø3/8"	_	_	•	_	_			
LM			pow port, mixed sizes uding upward and downward piping)	•	•	•	_	_			
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"				

- *1: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 204 to 207).
- *2: When using mixed sizes for the A and B ports, please indicate so on the separate manifold specification sheet.



How to Order Manifold Assembly

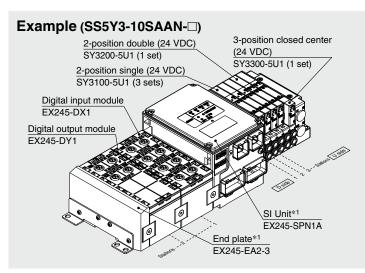

- \$\$\$73-10\$AANY2-05D-C6 ...1 set (Type 10 5-station manifold base part no.)

 \$\$Y3100-5U13 sets (2-position single part no.)


 \$\$Y3200-5U11 set (2-position double part no.)

 \$\$Y3300-5U11 set (3-position closed center part no.)

 \$\$EX245-DX11 set I/O module part no.
- *EX245-DY11set I/O module part no.
 - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- The I/O module station arrangement is numbered starting from the SI unit side.
- Under the manifold part number, state the valves to be mounted, then the I/O module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- *1: Do not enter the SI Unit part number and the end plate part number together.
- *: When mixing top ported configurations, select from page 124-6. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

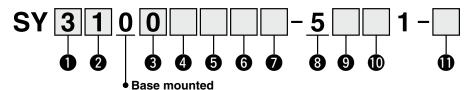

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	Opposition	Single						
2	2-position	Double						
3		Closed center						
4	3-position	Exhaust center						
5		Pressure center						
A *1	4 manikina	N.C./N.C.						
B*1	4-position dual 3-port	N.O./N.O.						
C*1	duai 5-port	N.C./N.O.						

*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal	
1	Metal seal	

Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- *: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 212 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- *: The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

*1: Only metal seal type is available for the high pressure type.

Coil type

	, po
Nil	Standard
Т	With power saving circuit (Continuous duty type)
	with power saving circuit (Continuous duty type)

- *: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- *: Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Rated voltage


•		
5	24 VDC	

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Tton polar
NS	_		Negative
NZ	•		common

- *: "R" and "U" are applicable for every SI Unit.
- *: Only "NZ" types are available for with the power saving circuit.

Manual override

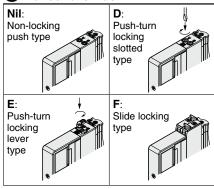

*: Refer to page 34 for with the safety slide locking manual override.

Type of mounting screw

<u> </u>	oo or mounting oor on
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- *: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- *: When ordering a valve individually, the base gasket is not included.

 Since the base gasket is attached to the

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 198 for part numbers of the base gasket and mounting screw.

*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Protective class


class Ⅲ (Mark:﴿>)

Dimensions: SY3000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported
EX245

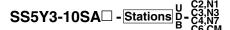

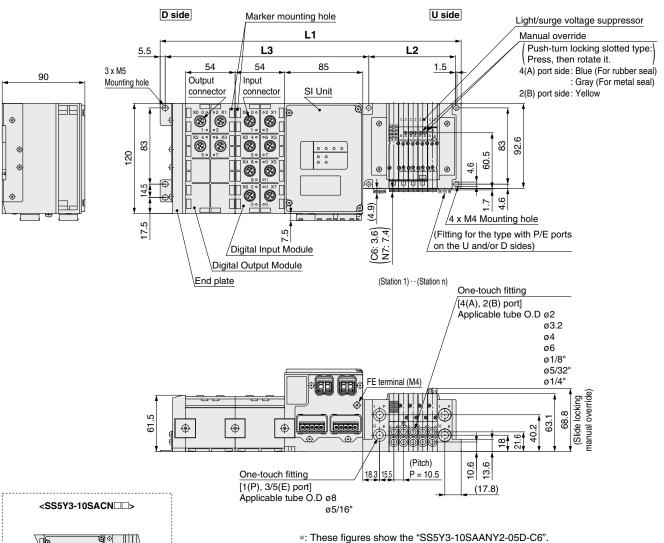

- *: Refer to page 157 for dimensions of external pilot, silencer and elbow fittings.
- *: Refer to page 162 for dimensions of A or B port top-ported type.

L3 = 54 x n2 + 113.6

FE terminal (M4)


* n1 is the valve stations.


Dimensions Formula/L1 = 10.5 x n1 + 167.1 L2 = 10.5 x n1 + 42 * The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module. n2 is the number of I/O module stations. 14 15 7 Stations n1 3 4 8 9 10 11 12 13 16 17 18 19 2 5 6 20 21 23 L1 | 198.6 | 209.1 | 219.6 | 230.1 | 240.6 | 251.1 | 261.6 | 272.1 | 282.6 | 293.1 | 303.6 | 314.1 | 324.6 335.1 345.6 356.1 188.1 366.6 377.1 387.6 398.1 408.6 419.1 220.5 231 L2 73.5 94.5 105 115.5 126 136.5 147 157.5 168 178.5 189 199.5 210 241.5 252 262.5 273

Plug-in Connector Connecting Base SY3000/5000/7000 Series


Dimensions: SY5000 Series

Type 10/Side Ported EX245

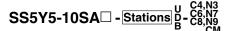

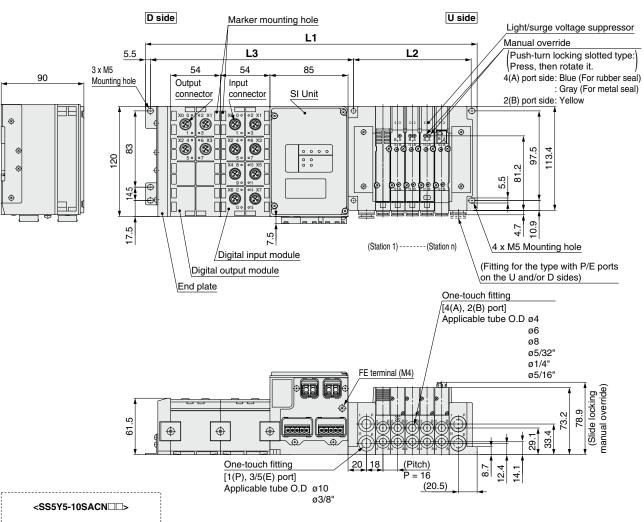

- $\ast\,$ These figures show the "SS5Y5-10SAANY2-05D-C8".
- $\ast\,$ Refer to page 158 for dimensions of external pilot, silencer and elbow fittings.
- * Refer to page 163 for dimensions of A or B port top-ported type.

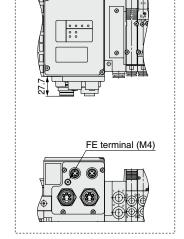

 $L3 = 54 \times n2 + 113.1$


* n1 is the valve stations.


Dimensions Formula/L1 = 16 x n1 + 173.1 L2 = 16 x n1 + 48 * The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module n2 is the number of I/O module stations. 14 15 Stations n1 L1 205.1 221.1 | 237.1 | 253.1 | 269.1 | 285.1 | 301.1 | 317.1 | 333.1 | 349.1 | 365.1 381.1 397.1 413.1 429.1 445.1 461.1 477.1 493.1 509.1 525.1 541.1 557.1 L2





Dimensions: SY7000 Series

Type 10/Side Ported EX245

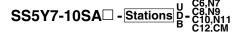

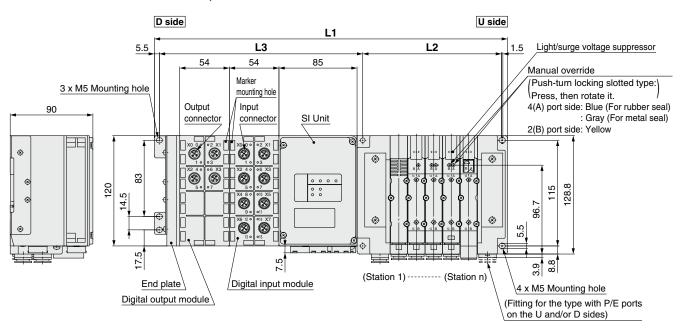

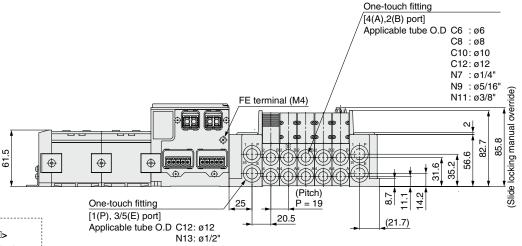

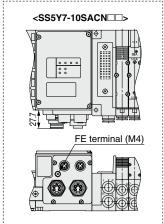

- * These figures show the "SS5Y7-10SAANY2-05D-C10".
- * Refer to page 159 for dimensions of external pilot, silencer and elbow fittings.
- * Refer to page 164 for dimensions of A or B port top-ported type.

 $L3 = 54 \times n2 + 113.3$

* n1 is the valve stations. Formula/I 1 - 19 y n1 ± 181 3 I 2 - 19 y n1 ± 56 * The I 1 dimension is the dimension without an I/O module Add 54 mm to this dimension for each I/O module n2 is the number of I/O module stations

Dimension	ons	Formul	la/L1 = 19	x n1 + 18	31.3 L2 = 1	19 x n1 +	56 * The	L1 dimer	sion is the	e dimensi	on without	an I/O m	odule. Add	d 54 mm t	o this dim	ension for	each I/O	module.			ber of I/C		stations.
Stations n1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	219.3	238.3	257.3	276.3	295.3	314.3	333.3	352.3	371.3	390.3	409.3	428.3	447.3	466.3	485.3	504.3	523.3	542.3	561.3	580.3	599.3	618.3	637.3
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512





Plug-in Connector Connecting Base


Type 12

SY3000/5000/7000 Series

CE CH CHSUS ROHS



How to Order Manifold

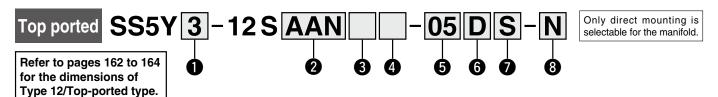

Series

3	SY3000
5	SY5000
7	SY7000

With or without I/O modules

Nil	Without I/O module
Υ	With I/O module

4 Number of I/O modules

Nil	Without I/O module (Without SI Unit)
1	1 station
:	:
8	8 stations

6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

For details about the EX245 Integrated-type (For Input/Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 192-1 and 192-2. Please download the Operation Manual via SMC website, https://www.smcworld.com

2 SI Unit specifications

Symbol (output polarity) Negative common (PNP)	Protocol	Communication connector	Power supply connector
0		Without SI Unit	
AAN		Push/Pull (SCRJ): 2 pcs.	Push/Pull (24 V): 2 pcs.
ABN	PROFINET	Push/Pull (RJ45): 2 pcs.	Push/Pull (24 V): 2 pcs.
ACN		M12: 2 pcs.	7/8 inch: 2 pcs.

*: The valve output polarity for the SI unit is negative common (PNP).

5 Valve stations

(In the case of the 32-output SI Unit)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Specified layout*2
:	:	(Available up to 32
24	24 stations	solenoids)

- *1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- *2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- *: This also includes the number of blanking plate

SUP/EXH block assembly

	Nil	Internal pilot
	S	Internal pilot, Built-in silencer
	R	External pilot


- *: 3/5(E) port is plugged for the built-in silencer type. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- *: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

P, E port size (One-touch fittings)

(One todon intings)		"	
Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"



How to Order Manifold Assembly

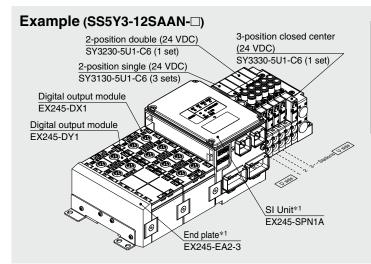

- SS5Y3-12SAANY2-05DS-N 1 set (Type 12 5-station manifold base part no.) *SY3130-5U1-C6-----3 sets (2-position single part no.) *SY3220-5U1-C6-----1 set (2-position double part no.) *SY3330-5U1-C6-----1 set (3-position closed center part no.) *EX245-DX1.....1set I/O module part no. *EX245-DY1.....1set I/O module part no.
 - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- The I/O module station arrangement is numbered starting from the SI unit side. Under the manifold part number, state the valves to be mounted, then the I/O
- module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- *1: Do not enter the SI Unit part number and the end plate part number together.
- *: When mixing top ported configurations, select from page 124-6. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

Elligan Connector Connecting Base SY3000/5000/7000 Series

How to Order Valves (With mounting screw)

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

O Type of dotadtion		
1	Omnoition	Single
2	2-position	Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
A *1	4-position dual 3-port valve	N.C./N.C.
B*1		N.O./N.O.
C*1		N.C./N.O.

*1: Select the rubber seal type for the 4-position dual 3-port valve.

3 Seal type

	71
0	Rubber seal
1	Motal spal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve

Nil	None
H*1	Built-in

- *1: Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to page 212. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- *: The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa) B Quick response type (0.7 MPa	

*1: Select the metal seal type for high pressure type.

Coil type

Och type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)*1*2	

- *1: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- *2: Be careful of the energizing time when the power saving circuit is selected. For details, refer to page 292.

8 Rated voltage


<u> </u>	itou roitugo
5	24 VDC

9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R U	<u> </u>		Non-polar
NS	_	•	Negative
NZ	•		common

*: Select "NZ" for with the power saving circuit.

Manual override

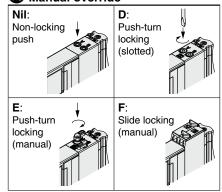

*: Refer to page 34 for with the safety slide locking manual override.

1 A, B port size

Thread piping

	in odd piping				
Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

Refer to page 15 for valve specifications.

One-touch fitting (Metric)

one reason maning (means)				
A, B port	SY3000	SY5000	SY7000	
ø2	•	_	_	
ø3.2	•	_	_	
ø4	•	•	_	
ø6	•	•	•	
ø8	_	•	•	
ø10	_	_	•	
ø12	_	_	•	
	A, B port ø2 ø3.2 ø4 ø6 ø8 ø10	A, B port SY3000 Ø2 Ø3.2 Ø4 Ø6 Ø8 Ø10 —	A, B port SY3000 SY5000	

One-touch fitting (Inch)

Onc	One-toden nitting (mon)				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	

12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

*: Only Nil is available for M5.

Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)*1	
н	Hexagon socket head cap screw (Falling-out-prevention type)*1	

*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 367 for part numbers of the base gasket and mounting screw.

*: Select "Nil" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

Type 10 Side Ported Type 11 Bottom Ported

Plug-in Connector Connecting Base

EX250

SY3000/5000/7000 Series


PROFIBUS DP compatible products (3SI unit/Symbol: N) are to be discontinued as of November 2022. As a substitute, please consider the use of an EX600 series product (SI unit/Symbol: N). However, keep in mind that the product specifications, external appearance, etc., differ. For details, please contact your SMC sales representative.

CE CH CRUS ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

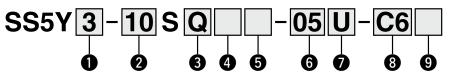

Series

3	SY3000
5	SY5000
7	SY7000

2 Type

<u> </u>				
10	Side ported			
11	Bottom ported*1			

The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).

4 Input block stations

Nil	None	
1	1 station	
:	:	
8	8 stations	

* When not selecting an SI unit, the symbol will be "nil." The maximum number of stations is limited for the AS-Interface applicable SI unit.

3 SI unit

0	Without SI unit		
Q	Device	Net® (N	egative common)
N	PROFIB	US DP (Negative common)
TA		2 power	8 in/8 out, 31 slave modes
TB	AS-Interface (Negative	1 power	4 in/4 out, 31 slave modes
TC	common)		8 in/8 out, 31 slave modes
TD	Commony		4 in/4 out, 31 slave modes
Υ	CANopen (Negative common)		
ZE	EtherNe	et/IP™ (N	Negative common)

- Ensure a match with the common specification of the valve to be used.
- Input block cannot be mounted without SI
- The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

6 Input block type

o input block	type		
	PNP sensor	NPN sensor	
	input	input	
Without input block	Nil		
M12, 2 inputs	Α	D	
M12, 4 inputs	В	E	
M8, 4 inputs	С	F	


* When not selecting an SI unit, the symbol will be "nil."

6 Valve stations

_		, o talii o 1.0				
Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring*1				
16	16 stations					
02	2 stations	Creation lavaute?				
:	:	Specified layout*2 (Up to 32 solenoids available)				
24	24 stations	(Op to 32 solenoids available)				

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.
 - 8 in/8 out specification: Max. 8 solenoids
- 4 in/4 out specification: Max. 4 solenoids
- This also includes the number of the blanking plate assembly.
- For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

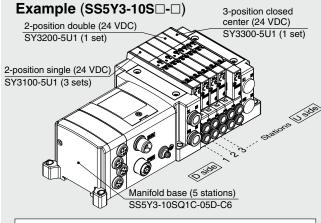

SS5Y3-10SQ1C-05D-C6 ··· 1 set (Type 10 5-station manifold base part no
*SY3100-5U1 3 sets (2-position single part no.)
*SY3200-5U1 1 set (2-position double part no.)
*SY3300-5U1 1 set (3-position closed center part no.
The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 132. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on

P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

- * 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

For details on the EX250 Integrated Type (For Input/Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 193. Please download the Operation Manual via the SMC website, https://www.smcworld.com



<u> </u>	Α, Ι	Βp	ort size	(Metri	c/One	-touch	fitting	g) <u> </u>	-
Symbol		Α	B port		10/Side				
Cymbol		, .,		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4	Ì		ø4	•	•	_	•	_	
C6	g		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	
C10	0)		ø10	_	_	•	_	•	
C12			ø12	_	_	•	_	•	ol P
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_	_	
L12			ø12	_	_	•	_	_	Jel 1988
B4	Elbow*2		ø4	•	•	_	_	_	
B6	읦	Downward	ø6	•	•	•	_	_	
B8	_	Š	ø8	_	•	•	_	_	
B10		Š	ø10	_	_	•	_	_	
B12		_	ø12	_	_	•	_	_	To be the second
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
			rt size h fittings)	ø8	ø10	ø12	ø10	ø12	

A, B port size (Inch/One-touch fitting)

							<u>J/</u>		
Cumbal		A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported	
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	6 2 2 2 2 2 2 2 2 2
CM*1		Straiç	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		arc	ø1/4"	•	•	_	_	_	
LN9		Upward	ø5/16"	_	•	_	_	_	
LN11	01	_	ø3/8"	_	_	•	_	_	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_	
BN7	ä	Downward	ø1/4"	•	•	_	_	_	
BN9	۳	Jwc	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_	To let
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
			rt size h fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).

9 Mounting and Option

Cum	Cumple of	Mounting	Option		
Sylli	IDUI		Name plate	Station number	
Ni	il	Direct mounting	_	_	
A	Ą		•	•	
В	4		•	_	
D		DIN "	_	_	
A		DIN rail mounting	•	•	
B			•	_	


DIN Rail Option

Nil	Standard length			
0	Without DIN rail (with bracket)			
3	For 3 stations	Specify a longer rail than the total		
:	÷	rail than the total length of specified		
24	For 24 stations	stations.		

- Enter the number of stations inside \square when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.
- If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 203 for the DIN rail part number.)

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

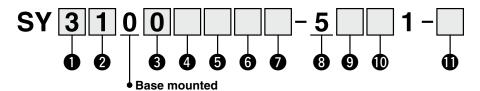

Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

Type of actuation				
1	2-position	Single		
2	2-position	Double		
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
A *1	4	N.C./N.C.		
B *1	4-position dual 3-port	N.O./N.O.		
C *1		N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in
. Only 4	ha wilahawaaal kuma ia ayallahla. A

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

Coil type

9	ii type
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5	24 VDC
---	--------

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- * "R" and "U" are applicable for every SI unit. However, "S" and "Z" can be used only for CC-Link applicable unit and "NS" and "NZ" are for units which are not CC-Link applicable.
- * Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

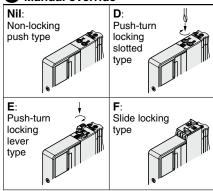

 Refer to page 34 for the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.




Type 10/Side Ported


EX250

Dimensions: SY3000 Series

Plug-in Connecting Base

 $SS5Y3-10S \square \square - \underline{Stations} \overset{U}{\overset{}{\overset{}{D}}}$

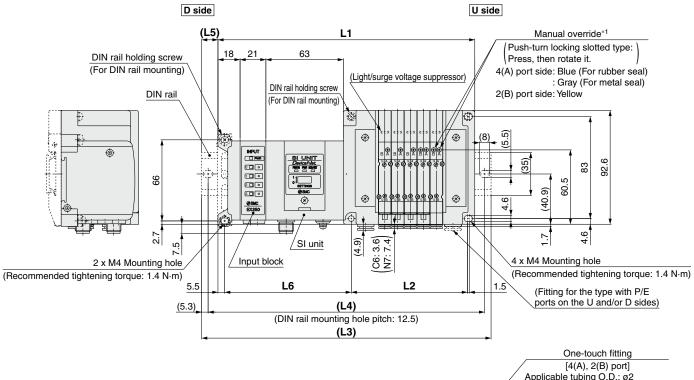

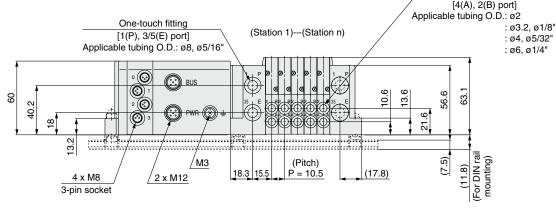

*1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

 $L1 = 10.5 \times n1 + 135.5 + 21 \times n2$

 $L2 = 10.5 \times n1 + 42$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 82$

n1: Valve stations n2: Input block stations

L3: DIN Ra	L3: DIN Rail Overall Length																						
Valve stations (n1) Input block stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5

* These figures show the "SS5Y3-10SQ1A-05D-C6."

* Refer to page 162 for dimensions of A or B port top-ported type.

Valve Specifications

Chart

Valve Construction

Connecting Base Connector

D-sub, Flat Ribbor Terminal Block

Circular Connecto

EX500

EX600

EX250 EX260

EX126

EX120

Mixed Mounting

Manifold Fitting

Manifold

128


Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported

EX250

 $SS5Y5-10S \square \square - \underline{Stations} \overset{U}{\underset{B}{\overset{C4, N3}{D-C6, N7}}} (D)$

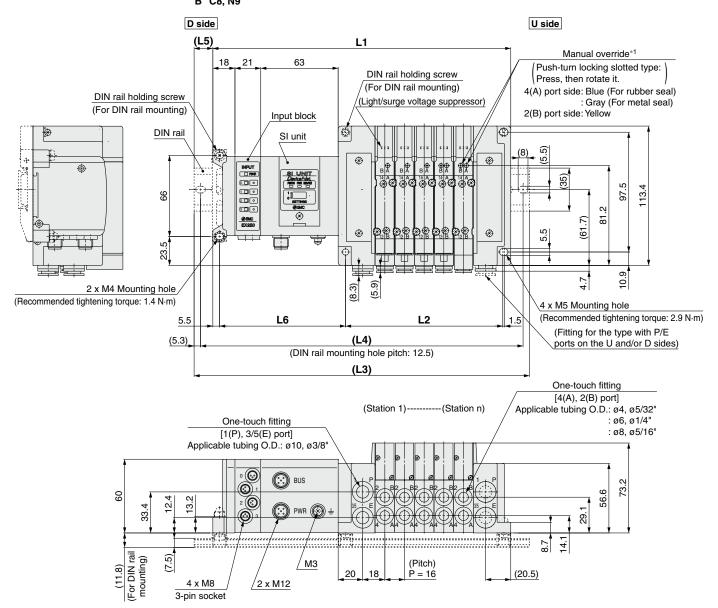

L1 = 16 x n1 + 141.5 + 21 x n2 L2 = 16 x n1 + 48 L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 81.5$

n1: Valve stations

n2: Input block stations

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10SQ1A-05D-C8."

 * Refer to page 163 for dimensions of A or B port top-ported type.

L3: DIN Rail Overall Length

	L3: DIN Ra	III OV	eraii	Lenç	gτn																			
	Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	block stations (n2)																							
	0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
Ī	1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573
	2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598
i	3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623
	4	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5
i	5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5
	6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5
i	7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698
	8	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5	673	685.5	710.5	723


Plug-in Connecting Base


Chart

Type 10/Side Ported EX250

Dimensions: SY7000 Series

SS5Y7-10S - Stations B

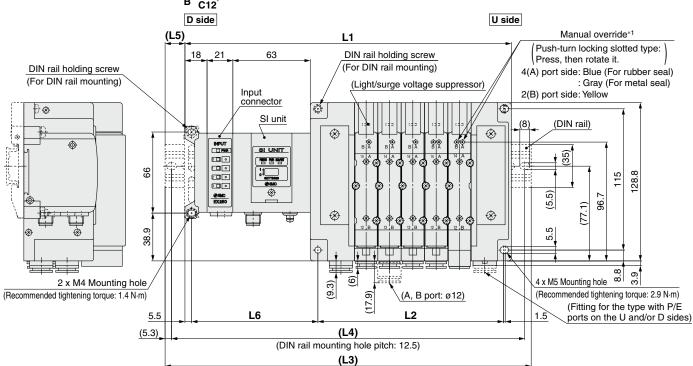

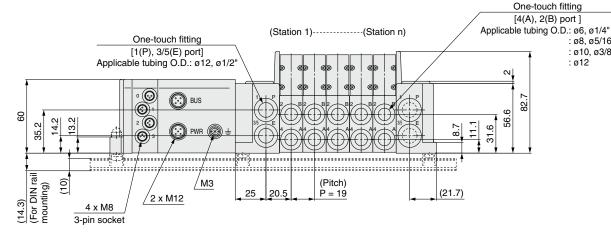

 $L1 = 19 \times n1 + 149.7 + 21 \times n2$ $L2 = 19 \times n1 + 56$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 81.7$

n1: Valve stations

n2: Input block stations

*1	Refer to page 159 for dimension	s of the external pilot	silencer elbow fittings	and slide locking manual override.

* These figures show the "SS5Y7-10SQ1A-05D-C10."

* Refer to page 164 for dimensions of A or B port top-ported type.

I 3: DIN Bail Overall Length

L3: DIN R	3: DIN Rail Overall Length																						
Valve stations																							
(n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
I/O Unit stations (n2)																							
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	548	560.5	585.5	598	623	635.5	660.5
2	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673
3	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698
4	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723
5	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5
6	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	748	760.5
7	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5
8	385.5	398	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798

Valve Construction

Valve Specifications

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

: ø8. ø5/16"

: ø10, ø3/8"

: ø12

Circular Connecto

EX500 EX600

EX250

EX260

EX126 EX120

Mixed Mounting Manifold

Exploded View Fitting. Manifold

Plug-in Connector Connecting Base


EX250

SY3000/5000/7000 Series





How to Order Manifolds

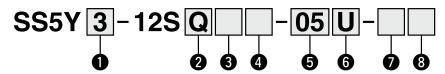

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

Type 12

Top Ported

Series

3	SY3000
5	SY5000
7	SY7000

1 Input block stations

Nil	None
1	1 station
:	:
8	8 stations

When not selecting an SI unit, the symbol will be "nil." The maximum number of stations is limited for the AS-Interface applicable SI unit.

4 Input block type

	PNP sensor	NPN sensor	
	input	input	
Without input block	Nil		
M12, 2 inputs	Α	D	
M12, 4 inputs	В	E	
M8, 4 inputs	С	F	

* When not selecting an SI unit, the symbol will be "nil."

2 SI unit

0	Without SI unit			
Q	DeviceNet® (Negative common)			
N	PROFIBUS DP (Negative common)			
TA		2 power supply systems	8 in/8 out, 31 slave modes	
TB	AS-Interface (Negative		4 in/4 out, 31 slave modes	
TC	common)	1 power	8 in/8 out, 31 slave modes	
TD	Common	supply system	4 in/4 out, 31 slave modes	
Υ	CANopen (Negative common)			
ZE	EtherNet/IP™ (Negative common)			


- * Ensure a match with the common specification of the valve to be used.
- Input block cannot be mounted without SI unit.
- The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is

5 Valve stations

Symbol	Stations	Note		
02	2 stations			
:	1	Double wiring*1		
16	16 stations			
02	2 stations	Connection delayers with 2		
:	:	Specified layout*2 (Up to 32 solenoids available)		
24	24 stations			

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
 - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.
 - 8 in/8 out specification: Max. 8 solenoids
 4 in/4 out specification: Max. 4 solenoids
- This also includes the number of the blanking
- plate assembly.
 For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

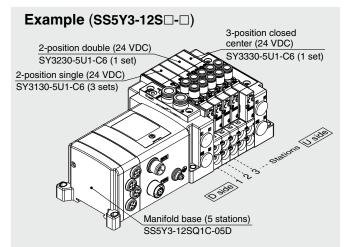

 $\ensuremath{\mathsf{SS5Y3\text{-}12SQ1C\text{-}05D}}$ \cdots 1 set (Type 12 5-station manifold base part no.) *SY3130-5U1-C6------ 3 sets (2-position single part no.) *SY3230-5U1-C6------ 1 set (2-position double part no.) *SY3330-5U1-C6----------1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly.

• For the valve arrangement, the valve closest to the D side is considered the 1st station.

Prefix it to the part numbers of the valve, etc.

• Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E *1	Н
Both sides (2 to 24 stations)	В	_	J

- For SUP/EXH block assembly specifications, built-in silencer types will have port entry stipulated.
- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

P, E port size (One-touch fittings)

<u> </u>				
Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

the standard rail.

For N, sizes are in inches.

For 24 stations

Mounting Nil Direct mounting DIN rail mounting (With DIN rail) D DIN rail mounting (Without DIN rail) D₀ D3 For 3 stations Specify a length longer than that of

- If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 203 for the DIN rail part number.)
- Refer to page 295 for the fixation of DIN rail mounting type manifold.


For details on the EX250 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 193. Please download the Operation Manual via the SMC website, https://www.smcworld.



D24

How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

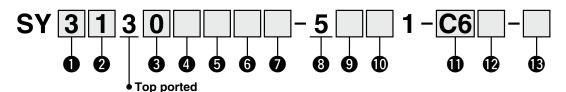

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>				
2-position	Single			
	Double			
3-position	Closed center			
	Exhaust center			
	Pressure center			
4	N.C./N.C.			
B*1 dual 3-port	N.O./N.O.			
	N.C./N.O.			
	2-position 3-position 4-position			

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	71
0	Rubber seal
1	Metal seal

A Pilot type

<u> </u>	o, po
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	Nil	None
İ	Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa)		
B Quick response type (0.7 MF		
K *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type

	71
Nil	Standard
Т	With power saving circuit (Continuous duty type)
	Title power caving enealt (Continuode daty type

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Rated voltage


•	ou vollago
5	24 VDC

Light/surge voltage suppressor and common specification

and common operation					
Symbol	With light	Surge voltage suppressor	Common specification		
R	_		Non-polar		
U	•				
S	_		Positive		
Z	•	•	common		
NS			Negative		
NZ	•		common		

- * "R" and "U" are applicable for every SI unit.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

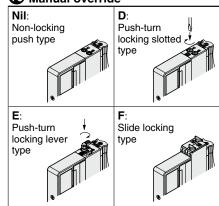

* Refer to page 34 for the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000
		•

One-touch fitting (Metric)

3 \ ,				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
С3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

•	one readin manig (men)				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	-	•	•	
N11	ø3/8"	_	_	•	

1 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

13 Type of mounting screw

<u> </u>	oo or mounting ooron
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 198 for base gasket and mounting server part numbers.
- mounting screw part numbers.

 * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (iii))

Type 10 **Side Ported** Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

EX260

SY3000/5000/7000 Series


Refer to page 135-1 for details on manifolds that support safety communication (PROFIsafe).

CE UK CA ROHS



How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

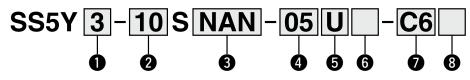

Series

3	SY3000
5	SY5000
7	SY7000

2 Type

<u> </u>	
10	Side ported
11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Type Manifold" (from page 165).

3 SI unit specifications

(Output polarity, Protocol, Number of outputs, Communication connector)

(Output polarity) i rotoool i rumbor or outputo, oominumouton oomiooto						
_ `	tput polarity)		Number	Communication		
Positive common (NPN)	Negative common (PNP)	Protocol	of outputs	connector		
0	*1	Without SI unit				
QA	QAN	DeviceNet®	32	N440		
QB	QBN	Devicemet	16	M12		
NA	NAN		32	M12		
NB	NBN	PROFIBUS	16	IVITZ		
NC	NCN	DP	32	D-sub		
ND	NDN		16	D-Sub		
VA	VAN	CC-Link	32	M12		
VB	VBN	OO-LIIK	16			
DA	DAN	EtherCAT	32	M12		
DB	DBN	LINEICAI	16	IVI I Z		
FA	FAN	PROFINET	32	M12		
FB	FBN	THOTINE	16	IVITZ		
EA	EAN	EtherNet/IP™	32	M12		
EB	EBN	Luicine/iF	16	IVITZ		
*3	GAN	Ethernet	32	M12		
*3	GBN	POWERLINK	16	IVI 12		
*3	KAN	IO-Link	32*5	M12		
4 14/11 4 61 11 11 1 1 1 1 1						

- *1 Without SI unit, the output polarity is decided by the SI unit used. Ensure a match with the common specification of the valves to be used.
- *2 DIN rail cannot be mounted without SI unit.
- *3 Positive common (NPN) type is not applicable.
- *4 IP40 for the D-sub applicable communication connector specification
- *5 Only the 32 outputs type is available.

4 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note				
02	2 stations					
	:	Double wiring*1				
16	16 stations					
02	2 stations	Considered laws with				
:	:	Specified layout*2 (Up to 32 solenoids available)				
24	24 stations	(Op to 32 soleriolds available)				

In the case of the 16-output SI unit

Symbol	Stations	Note		
02	2 stations			
	:	Double wiring*1		
08	8 stations			
02	2 stations	0		
•	:	Specified layout*2 (Up to 16 solenoids available)		
16	16 stations	(Op to 16 soleriolds available)		

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- *2 Specified layout: Indicate the wiring specifications on the manifold specification (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P, E port entry

U	U side (2 to 10 stations)			
D	D side (2 to 10 stations)			
В	Both sides (2 to 24 stations)			

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- 3/5(E) port is plugged for the built-in silencer
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 7.

8 Mounting and Option

Symbol	Mounting	Option			
Symbol	Mounting	Name plate	Station number		
Nil	Divoct	_	_		
AA	Direct mounting	•	•		
BA	mounting	•	_		
D□	DIN!!	_	_		
A□	DIN rail mounting	•	•		
В□	mounting	•	_		

- * Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

ſ	Nil	Standard length Without DIN rail (with bracket)					
ĺ	0						
Ī	3	For 3 stations	Crasify a larger wail then the				
	i	:	Specify a longer rail than the total length of specified stations.				
Ī	24	For 24 stations	total length of specified stations.				

If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 203 for the DIN rail part number.)

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 194. Please download the Operation Manual via the SMC website, https://www.smcworld.com



Connecting Base

D-sub, Flat Ribbon Terminal Block

Circular Connecto EX500

EX600 EX250

EX260

EX126 EX120

Manifold

Exploded Fitting,

Manifold

A. B port size (Metric/One-touch fitting)

<u>'</u>	A, B port size (wetric/One-touch litting)											
Cumbal	A, B port			Type 1	0/Side	ported	Type 11/Bo	ttom ported				
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000				
C2			ø2	•	_	_	_	_	_			
СЗ			ø3.2	•	_	_	_	_				
C4			ø4	•	•	_	•	_				
C6	igh		ø6	•	•	•	•	•				
C8	Straight		ø8	_	•	•	•	•	2 19			
C10	0,		ø10	_	_	•	_	•	15 BALES			
C12			ø12	_	_	•	_	•				
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•				
L4			ø4	•	•	_	_	_				
L6		2	ø6	•	•	•	_	_				
L8		Upward	ø8	_	•	•	_					
L10			2	ø10	_	_	•	_	_			
L12	O.	Elbow*2	ø12	_	_	•	_	_	O Jellie			
B4	,*MC		ø4	•	•	_	_	_				
B6	ali		vnward	wnwarc	vnward	ø6	•	•	•	_	_	
B8	_					ø8	_	•	•	_	_	
B10			ø10	_	_	•	_	_				
B12			ø12	_	_	•	_	_				
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_					
	P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12				

A, B port size (Inch/One-touch fitting)


	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported						
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000						
N1			ø1/8"	•	_	_	_	_					
N3	_		ø5/32"	•	•	_	•	_					
N7	Straight		ø1/4"	•	•	•	•	•					
N9	Stra		ø5/16"	_	•	•	•	•					
N11	•,		ø3/8"	_	_	•	_	•	o Bas				
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•					
LN3		_	ø5/32"	•		_	_	_					
LN7		/arc	ø1/4"	•	•	_	_	_					
LN9	Elbow*2	Elbow*2	Upward	ø5/16"	_	•	_	_	_				
LN11			_	٥ı		ø3/8"	_	_	•	_	_	9 9 9 9 9 9 9	
BN3			5	ø5/32"	•	_	_	_	_				
BN7			Elbe	Elbe	흶	Downward	ø1/4"	•	•	_		_	
BN9					o N	ø5/16"	_	•	_	_	_		
BN11		Δ	ø3/8"	_		•	_	_					
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_						
P, E port size (One-touch fittings)		ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"							

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

SMC

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).

How to Order Manifold Assembly

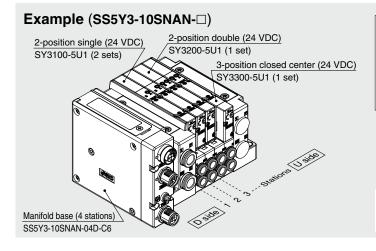

SS5Y3-10SNAN-04D-C6...1 set (Type 10 4-station manifold base part no.) *SY3100-5U1-----2 sets (2-position single part no.) *SY3200-5U1-----1 set (2-position double part no.) *SY3300-5U1-----1 set (3-position closed center part no.)


The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- * When mixing top-ported configurations, select from those listed on page 140. Specify on the manifold specification sheet if plugs are required for the A and B ports on the manifold.



How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

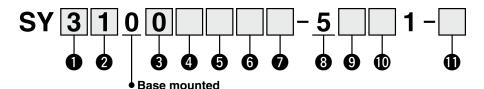

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation				
1	O manitian	Single		
2	2-position	Double		
3		Closed center		
4 5	3-position	Exhaust center		
		Pressure center		
A *1		N.C./N.C.		
B *1	4-position dual 3-port	N.O./N.O.		
C*1	duai 5-port	N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	71
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None	
Н	Built-in	
· Only the rubber seed type is available. A		

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

	<u> </u>
Nil Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

Coil type

		, po
Nil		Standard
	Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


5 24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- * Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is NiI (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

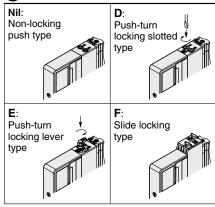

 Refer to page 34 for the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.





Type 10 Side Ported

Type 11 **Bottom Ported**

Plug-in Connector Connecting Base

Safety Communication Protocol (PROFIsafe)

SY3000/5000/7000 Series

Using the safety communication protocol

Refer to the EX260 Web Catalog for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required. For details on valves that have been validated, please contact SMC.


In addition, refer to "Safety Instructions" for precautions on model selection.



Refer to page 133 for details on manifolds that support Fieldbus and Industrial Ethernet.

How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

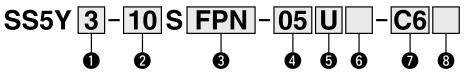

Series

3	SY3000
5	SY5000
7	SY7000

<u> </u>	,
10	Side ported
11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Type Manifold" (from page 165).

3 SI unit specifications

(Output polarity, Protocol, Number of outputs, Communication connector)

Symbol (Ou	tput polarity)		Number	Communication
Positive common (NPN)	Negative common (PNP)	Protocol	of outputs	connector
0	*1	Without	SI unit	İ
_*3	FPN	PROFIsafe	32*4	M12

- *1 Without SI unit, the output polarity is decided by the SI unit used. Ensure a match with the common specification of the valves to be used.
- *2 DIN rail cannot be mounted without SI unit.
- *3 Positive common (NPN) type is not applicable.
- *4 Only the 32 outputs type is available.

4 Valve stations

Symbol	Stations	Note				
02	2 stations					
	:	Double wiring*1				
16	16 stations	_				
02	2 stations	0				
•	:	Specified layout*2				
24	24 stations	(Up to 32 solenoids available)				

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- Specified layout: Indicate the wiring specifications on the manifold specification
 - (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

6 SUP/EXH block assembly

9 00	
Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 7.



Mounting and Option

Symbol	Mounting	Option				
Symbol	wourtung	Name plate	Station number			
Nil	Divost					
AA	Direct mounting	•	•			
BA	mounting	•	_			
D□	DIN!!	_	_			
A□	DIN rail mounting		•			
В□	mounting	•	_			

- Enter the number of stations inside $\hfill\Box$ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- * Refer to page 295 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

Nil	Standard length					
0	Without DIN rail (with bracket)					
3	For 3 stations	Charify a langer roll than the				
·	:	Specify a longer rail than the total length of specified stations				
24	For 24 stations					

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 203 for the DIN rail part number.)

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 194. Please download the Operation Manual via the SMC website, https://www.smcworld.com

Chart

Connecting Base

D-sub, Flat Ribbon Terminal Block

Circular Connecto

EX500 EX600

EX250

EX260 EX126

EX120

Mixed Mounting Manifold Exploded View

Fitting,

Manifold Options

Protective class class II (Mark:﴿

V	Α, Ι	Βp	ort size	(Metri	c/One	-touch	fitting	3)	
Symbol		A, B port			0/Side		Type 11/Bo		
-,		, ,		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
C3			ø3.2	•	_	_	_	_	DE
C4			ø4	•	•	_	•	_	
C6	ight		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	
C10	0)		ø10	_	_	•	_	•	08 8
C12			ø12	<u> </u>	_	•	_	•	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	<u> </u>	•	•	_	_	
L10		3	ø10	<u> </u>	_	•	_	_	
L12			ø12	—	_	•	_	_	Je jesse
B4	Elbow*2		ø4	•	•	_	_	_	
B6	elbc	Downward	ø6	•	•	•	_	_	
B8	ш	2	ø8	<u> </u>	•	•	_	_	
B10		Š	ø10	_	_	•	_	_	
B12		_	ø12	_	_	•	_	_	To be less
LM*1		(Incl	v port, mixed sizes uding upward and wwnward piping)	•	•	•	_	_	
			rt size h fittings)	ø8	ø10	ø12	ø10	ø12	

A. B port size (Inch/One-touch fitting)

А,	Р	JULI SIZE	(Metri	COHE	-touci	HUUH	9)	_	А, D) P	ort	size (inc	:n/One	-louci	ı ınttırı	9)		
	^	P port					ottom ported		Cumbal		^	Poort		10/Side		7.		
ונ	Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000		Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
		ø2	•		_	_	_		N1			ø1/8"	•	_	_	_	_	
		ø3.2	•	_	_	_	_		N3			ø5/32"	•	•	_	•	_	
٠.		ø4	•	•	_	•	_		N7	lġ.		ø1/4"	•	•	•	•	•	
Straight	, ,	ø6	•	•	•	•	•		N9	Straight		ø5/16"	_	•	•	•	•	
Stra		ø8	_	•	•	•	•	100	N11			ø3/8"	_	_	•	_	•	o Sasse
) "		ø10	_	_	•	_	•	000000000000000000000000000000000000000	CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
2		ø12	_	_	•	_	•		LN3		_	ø5/32"	•	_	_	_	_	
1	Straig	ght port, mixed sizes	•	•	•	•	•		LN7		Upward	ø1/4"	•	•	_	_	_	
		ø4	•	•	_	_	_		LN9		Ιď	ø5/16"	_	•	_	_	_	
	5	ø6	•	•	•	_	_		LN11	ů		ø3/8"	_		•	_	_	el Briss
	Upward	ø8	_	•	•	_	_		BN3	<u>*</u>	힏	ø5/32"	•	_	_	_	_	
)	2	ø10	—	-	•	_	_		BN7	Elbow	Downward	ø1/4"	•	•	_	_	_	
2		ø12	_	_	•	_	_	G Jaller	BN9	_	owr	ø5/16"	_	•	_	_	_	
``````````````````````````````````````	: _	ø4	•	•	_	_	_		BN11		Δ	ø3/8"	_	_	•	_	_	The state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the s
Flbow*2	Downward	ø6	•	•	•	_	_		LM*1			w port, mixed sizes uding upward and						
	\ \ \ \	ø8	—	•	•	_	_		LIVI			wnward piping)						
)	D ₀	ø10	_	_	•	_	_					rt size	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	
2		ø12	_	_	•	_	_	To the second	(Or	ne-t	ouc	h fittings)	05/10	03/0	01/2	03/6	01/2	
1	(Incl	w port, mixed sizes luding upward and ownward piping)	•	•	•	_	_											

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).


#### [Validated product examples]

Please contact SMC for further details as supported variations are continually being added.

 2-position double of rubber seal and manual override with locking function (D, E, F type) are excluded, because they don't comply with safety standard.

#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

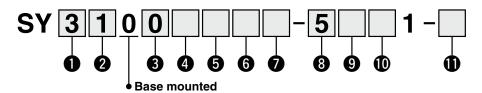

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u>• ,, ,</u>		<del></del>			
1	O position	Single			
2	2-position	Double*2			
3	3-position	Closed center			
4		Exhaust center			
5		Pressure center			
<b>A</b> *1	4-position dual 3-port	N.C./N.C.			
B*1		N.O./N.O.			
C*1	duai 5-port	N.C./N.O.			

- *1 Only the rubber seal type is available for the 4-position dual 3-port valve.
- *2 Except the rubber seal

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	71
Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

<u> </u>	ot varvo option
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage

5	24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
NS	_	_	Negative
NZ	•		common

 Only "NZ" type is available with a power saving circuit.

#### Manual override



Type of mounting screw

- 11.	70 01 1110 unituing 001 011
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
  Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.


Dimensions: SY3000 Series


Plug-in Ty
Connector Connecting Base

Type 10/Side Ported


EX260

SS5Y3-10S - Stations D - C2, C3, N1 (D)

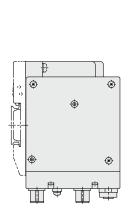

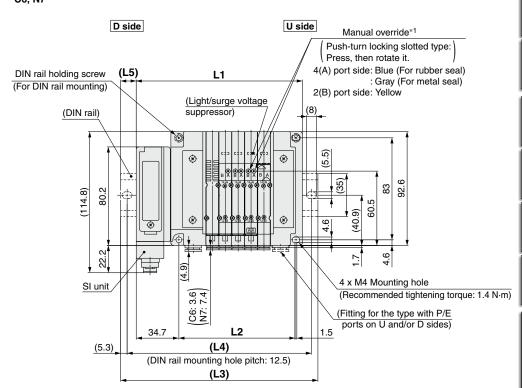

[Communication connector D-sub]

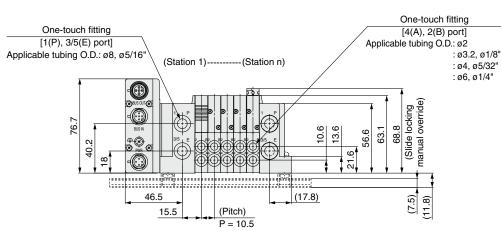

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10SQA-05D-C6."
- Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12

n: Stations	18	19	20	21	22	23	24
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	231	241.5	252	262.5	273	283.5	294
L3	298	310.5	323	335.5	348	348	360.5
L4	287.5	300	312.5	325	337.5	337.5	350
L5	13	14	15	16	17	12	13

**SMC** 

Valve Valve Construction Specifications

Chart

Valve leplacement Parts

With Residual Pressure Release Valve

Vacuum Release Valve with Restrictor

With Pressure Sensor

> lade to Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Lead Wire Circular Connector

EX500

EX250

EX1260

EX120

Common Dimensions

Mixed Mounting Manifold Exploded View

Fitting, Plug Part Nos.

Specific Product Precautions


Dimensions: SY5000 Series


Plug-in
Connector Connecting Base


Type 10/Side Ported

EX260

SS5Y5-10S $\square$ -Stations  $\stackrel{\text{U}}{\stackrel{\text{C4, N3}}{\stackrel{\text{R3}}{\stackrel{\text{O}}{\stackrel{\text{C5, N7}}{\stackrel{\text{O}}{\stackrel{\text{C4}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}{\stackrel{\text{C5}}}}\stackrel{\text{C5}}{\stackrel{\text{C5}}}\stackrel{\text{C5}}{\stackrel{\text{C5}}}}\stackrel{\text{C5}}{\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}\stackrel{\text{C5}}}\stackrel{\text{C}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}}}\stackrel{\text{C5}$ 

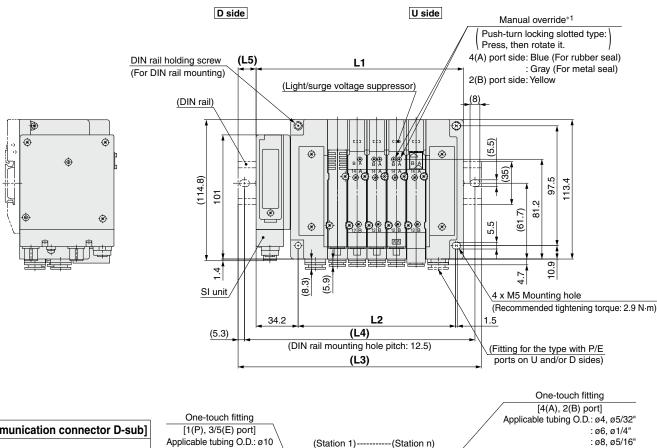

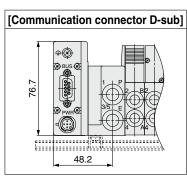

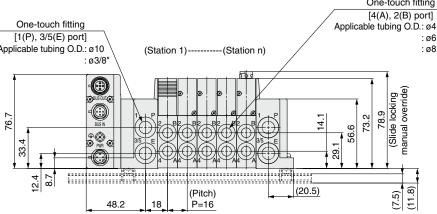

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10SQA-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5

n: Stations	18	19	20	21	22	23	24
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	336	352	368	384	400	416	432
L3	410.5	423	435.5	448	473	485.5	498
L4	400	412.5	425	437.5	462.5	475	487.5
L5	17	15	13.5	11.5	16	14.5	12.5


Plug-in Connector Connecting Base


Type 10/Side Ported

EX260

Dimensions: SY7000 Series

SS5Y7-10S - Stations D - C6, N7 C8, N9 C10, N11 (D)

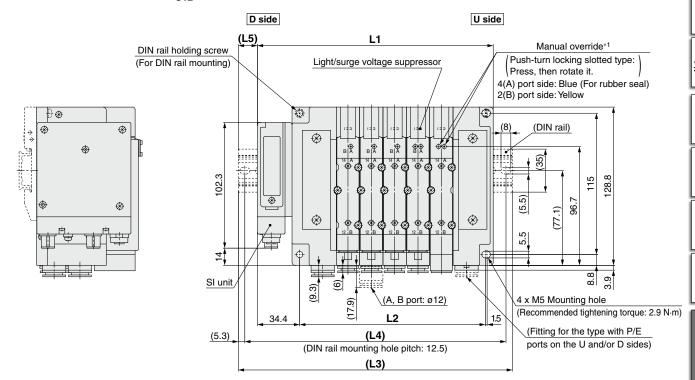

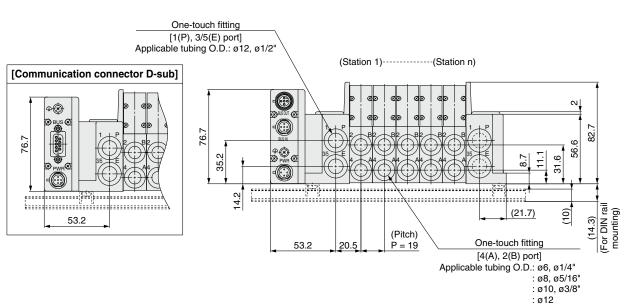

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

  * These figures show the "SS5Y7-10SQA-05D-C10."
- Finese figures snow the "SSSY7-10SQA-05D-C10.
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	550	575
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5

**SMC** 

Valve Valve Construction Specifications

Chart

valve leplacement (C)

With Residual
Pressure
Release Valve

Vacuum Release Valve with Restrictor

With Pressure Sensor

> Made to Order

Connector Connecting Base

Flat Ribbon Terminal Block

Wire Circular

EX500

EX600

EX250 ⊟X260

EX126

EX120

Common Dimensions

Mixed Mounting

Manifold Exploded View Fitting,

Part Nos.

Manifold
Options

Options

Sped S

## Plug-in Connector Connecting Base

**EX260** 

# SY3000/5000/7000 Series 5





#### **How to Order Manifolds**

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

SS5Y 3-12S	NAN -	- 05	U	-	_	
0	2	8	4	6	6	7

#### **Series**

3	SY3000
5	SY5000
7	SY7000

SI unit specifications

(Output polarity, Protocol, Number of outputs, Communication connector)

		,		***************************************
-	Negative common (PNP)	Protocol	Number of outputs	Communication connector
( )	*1	Without	SI unit	
QA	QAN	DeviceNet®	32	M12
QB	QBN	Devicemen	16	IVIIZ
NA	NAN		32	M12
NB	NBN	PROFIBUS	16	IVI I Z
NC	NCN	DP	32	*4 D-sub
ND	NDN		16	D-300
VA	VAN	CC-Link	32	M12
VB	VBN	OO-LIIIK	16	IVIIZ
DA	DAN	EtherCAT	32	M12
DB	DBN	Lilleroat	16	IVIIZ
FA	FAN	PROFINET	32	M12
FB	FBN	THOTHAL	16	IVIIZ
EA	EAN	EtherNet/IP™	32	M12
EB	EBN	Luienvevii	16	IVITZ
*3	GAN	Ethernet	32	M12
*3	GBN	POWERLINK	16	IVIIZ
*3	KAN	IO-Link	32*5	M12

- Without SI unit, the output polarity is decided by the SI unit used.
  - Ensure a match with the common specification of the valves to be used.
- *2 DIN rail cannot be mounted without SI unit.
- *3 Positive common (NPN) type is not applicable. *4 IP40 for the D-sub applicable communication
- connector specification
- *5 Only the 32 outputs type is available.

3 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note
02	2 stations	
	÷	Double wiring*1
16	16 stations	
02	2 stations	Connection delegants
	:	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	

#### In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
	÷	Double wiring*1
08	8 stations	
02	2 stations	Connection delegants
:	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification
  - (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking
- plate assembly.
  For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P. E port entry

<u> </u>	
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

*1 5 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port

#### SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	


* For N. sizes are in inches

#### Mounting

Nil	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations Specify a length longer	
:	than that of the standard	
D24	For 24 stations	rail.

- If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to
- page 203 for the DIN rail part number.) Refer to page 295 for the fixation of DIN rail mounting type manifold.

#### **How to Order Manifold Assembly**

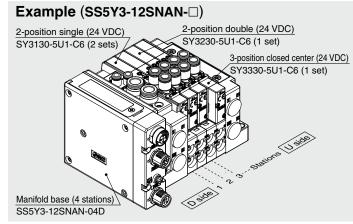

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 194.

Please download the Operation Manual via the SMC website, https://www.smcworld.com

SS5Y3-12SNAN-04D ····· 1 set (Type 12 4-station manifold base part no.) *SY3130-5U1-C6 ...... 2 sets (2-position single part no.) *SY3230-5U1-C6 ...... 1 set (2-position double part no.) *SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)


The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Valve Specifications

#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

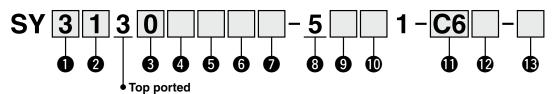

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	O manitian	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5	5	Pressure center
<b>A</b> *1		N.C./N.C.
	4	14.0./14.0.
B*1	4-position	N.O./N.O.
	4-position dual 3-port	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

ı	Nil	None
	Н	Built-in
	* Only t	he rubber seal type is available. A

- * Only the rubber seat type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

Coil type

Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage

|--|

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		Non-polar
S	_	•	Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- * Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is NiI (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

D: Push-turn locking slotted type
F: Slide locking type

 Refer to page 34 for the safety slide locking manual override.

#### A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•
CIZ	012			

One-touch fitting (Inch)

•		,		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	<u> </u>	•	•
N11	ø3/8"	_	_	•

1 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

1 Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
  Refer to page 198 for base gasket and mounting screw part numbers.
- mounting screw part numbers.

  * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (1))

nt Valve Construction

ual Valve
Replacemer

cuum With Res se Valve Pressu estrictor Release \

With ressure Re

> de to rder

Connector Connector

D-sub, Flat Ribbon Terminal Block

Lead Wire

Circular Connector

EX600

EX250

EX126

EX120

Dimensions

Manifold Exploded View

Fitting, Plug Part Nos.

Manifold Options Type 10
Side Ported

Type 11
Bottom Ported

## **Plug-in Connector Connecting Base**

**EX126** 


# SY3000/5000/7000 Series

(€ CA



#### **How to Order Manifolds**

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

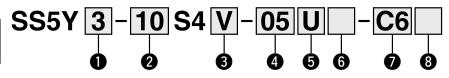

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type

10 Side ported	
11 Bottom ported*1	

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).

#### 3 SI unit

0	Without SI unit
V	CC-Link (Positive common NPN)


 Only a terminal block plate is mounted for the valve without SI unit.

#### 4 Valve stations

<u> </u>						
Symbol	Stations	Note				
02	2 stations					
1	:	Double wiring*1				
08	8 stations	G				
02	2 stations	Considered levels *2				
1	:	Specified layout*2 (Up to 16 solenoids available)				
16	16 stations	(Op to 10 soleriolds available)				

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

## How to Order Manifold Assembly

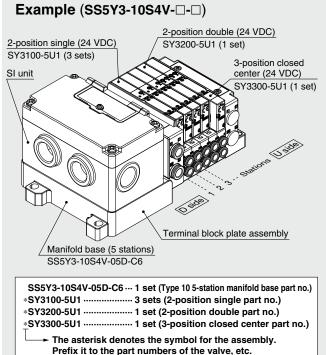

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting
  with the 1st station as shown in the figure above. If the arrangement becomes too
  complicated, specify the details on a manifold specification sheet.
- * When mixing top-ported configurations, select from those listed on page 148. In such cases, use caution as there is also output on the A and B ports on the base side.
  Specify on the manifold expedification shoot if place are required for the A and

Specify on the manifold specification sheet if plugs are required for the A and R norts on the base side

**6** P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

#### 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- 3/5(E) port is plugged for the built-in silencer type
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

For details on the EX126 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 195. Please download the Operation Manual via the SMC website, https://www.smcworld.com



Specific Product Precautions

A, B port size (Metric/One-touch fitting)

<u>v</u>	Α, Ι	<u>в р</u>	ort size	(wetri	c/One	-toucn	ntting	3)	
Cumbal		۸	B port	Type 1	10/Side	ported	Type 11/Bo	ttom ported	
Symbol		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	_
СЗ			ø3.2	•	_	_	_	_	
C4	ĺ		ø4	•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	2011
C10	0,		ø10	_	_	•	_	•	O S SECTION
C12			ø12	_	_	•	_	•	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		2	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		)	ø10	_	_	•	_	_	
L12			ø12	_	_	•	_	_	Jel 1988
B4	Elbow*2		ø4	•	•	_	_	_	
B6	릚	Downward	ø6	•	•	•	_	_	
B8		NU N	ø8	_	•	•	_	_	
B10		Po	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	Tell Tell
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
		P, E port size e-touch fittings)		ø8	ø10	ø12	ø10	ø12	

A, B port size (Inch/One-touch fitting)

	<u> </u>								
Symbol		A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported	
Syllibol	yiiiboi			SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	_	ø5/32"		•	•	_	•	_	
N7	igh		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	•		ø3/8"	_	_	•	_	•	o Serve
CM*1		Straiç	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7	N7	Jpward	ø1/4"	•	•	_	_	_	
LN9		鱼	ø5/16"	_	•	_	_	_	
LN11	01	_	ø3/8"	_	_	•	_	_	el Sassa
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_	
BN7	∃lbc	Downward	ø1/4"	•	•	_	_	_	
BN9	_	NC.	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_	To leave
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_		
			rt size h fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM."

The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).

**8** Mounting and Option

<u> </u>	and g and c	Puon	
Cumbal	Mounting	Opt	ion
Symbol	Mounting	Name plate	Station number
Nil	Direct	_	_
AA	mounting	Direct	•
BA	mounting	•	_
D□	DIN well	_	_
A□	DIN rail mounting	•	•
В□	mounting	•	_


- * Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- * Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

Nil	Standard length					
0	Without DIN rail (with bracket)					
3	For 3 stations	Specify a longer rail				
:	:	than the total length				
16	For 16 stations	of specified stations				

#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

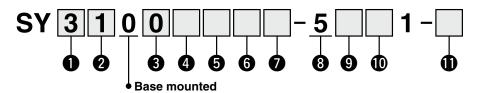

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>		
1	O manition	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4	N.C./N.C.
<b>B</b> *1	4-position dual 3-port	N.O./N.O.
<b>C</b> *1	duai o-port	N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

**3** Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	71
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	ant in valve type,
Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

	•
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)


*1 Only the metal seal type is available for the high pressure type.

Coil type

Ī	Nil	Standard
	Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Manual override

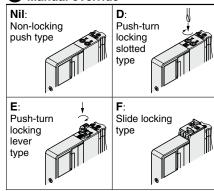

 Refer to page 34 for the safety slide locking manual override.

8 Rated voltage

5 24 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S		•	Positive
Z	•		common

Only "Z" type is available with a power saving circuit.

Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
  - When ordering a valve individually, the base gasket is not included.
    Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release




Plug-in Type 10/Side Ported
Connector Connecting Base EX126

Dimensions: SY3000 Series

 $SS5Y3-10S4V-\underbrace{Stations}_{B} \overset{U}{\underset{C6, N7}{D}} \overset{C2}{\underset{C6, N7}{C4, N3}} (D)$ 

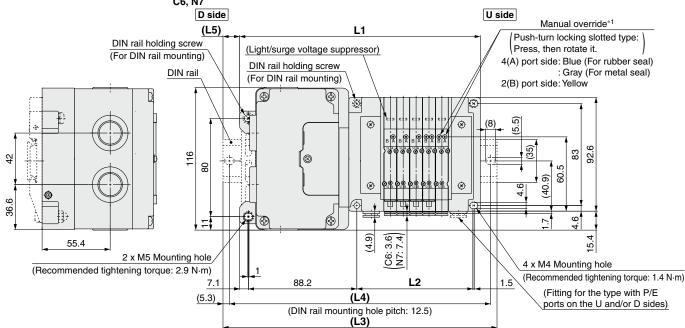

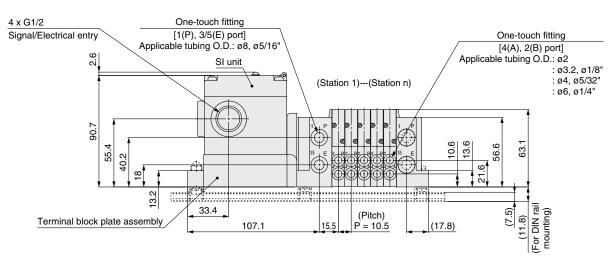

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10S4V-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12

valve Valve placement Construction

Chart

Valve Specifications

ve Pressure

With vessure Rek

Pressi Sens

Made to Order

Connector Connecting Base

Flat Ribbon Terminal Block

Circular Connector

EX500

EX250

EX126

EX120

Common Dimensions

Mixed Mounting Manifold

Exploded View Fitting, Plug Part Nos.

Manifold Options


Plug-in
Connector Connecting Base


Type 10/Side Ported

EX126

Dimensions: SY5000 Series

SS5Y5-10S4V - Stations D - C6, N7 (D)

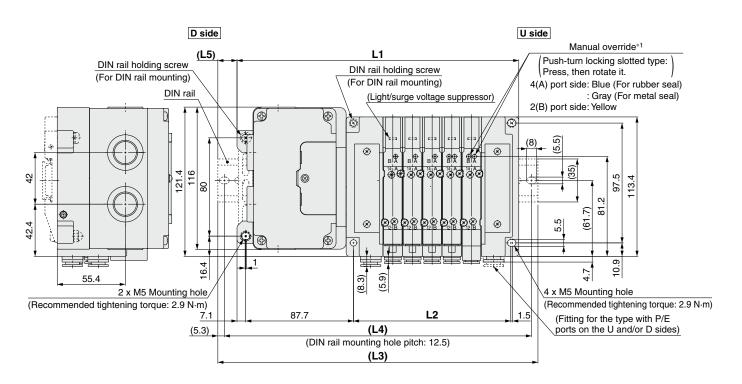

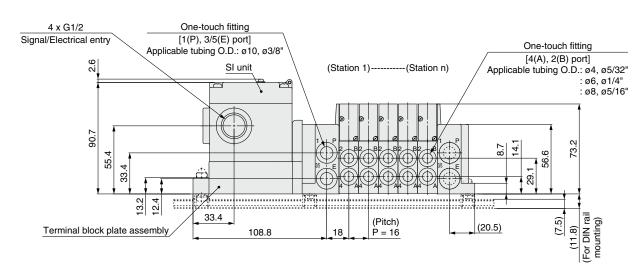

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10S4V-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15



Plug-in Type 10/Side Ported
Connector Connecting Base EX126

Dimensions: SY7000 Series

SS5Y7-10S4 - Stations D C6, N7 C8, N9 C12 C12 D side U side (L5) L1 Manual override*1 Push-turn locking slotted type: DIN rail holding screw DIN rail holding screw Press. then rotate it. (Light/surge voltage suppressor) (For DIN rail mounting) (For DIN rail mounting) 4(A) port side: Blue (For rubber seal) : Gray (For metal seal) 2(B) port side: Yellow  $\otimes$ ⑻ 0 (DIN rail) ◈ ⊗ 35) 8 128.8 115 (5.5)96.7 (77.1) $\otimes$ ℘ 31.8 4 x M5 Mounting hole 55.4 (Recommended tightening torque: 2.9 N·m) (A, B port: ø12) 2 x M5 Mounting hole (Fitting for the type with P/E ports on the U and/or D sides) (Recommended tightening torque: 2.9 N·m) 87.9 (L4) (5.3)(DIN rail mounting hole pitch: 12.5)

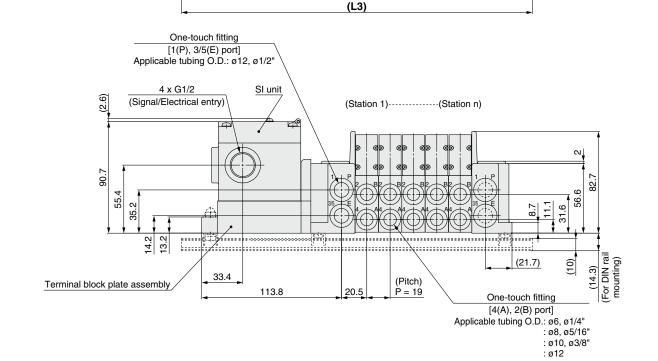

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10S4V-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



Valve Specifications

Chart

Valve Construction Spe

valve Replacement Parts

we Pressure Felease Valve

Vacuum Release Valve with Restrictor

With Pressure Sensor

> Made to Order

Connector
Connecting Base

D-sub, Flat Ribbon Terminal Block

Wire Circular Connector

EX500

EX250

EX126

EX120

Dimensions

Mounting

Manifold

Exploded

View

Fitting, Plug Part Nos.

Options

_ _

## Plug-in Connector Connecting Base

**EX126** 

Type 12 Top Ported


# SY3000/5000/7000 Series

( E UK ROHS



#### How to Order Manifolds

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

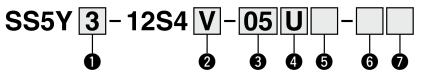

#### Series

3	SY3000
5	SY5000
7	SY7000

#### SI unit

0	Without SI unit
V	CC-Link (Positive common NPN)

* Only a terminal block plate is mounted for the valve without SI unit.

#### 3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Considered laways
:	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 10 soleriolds available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not
- desired, order with a specified layout. *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

#### 4 P, E port entry

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


*1 5 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P,

#### 5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

#### **How to Order Manifold Assembly**

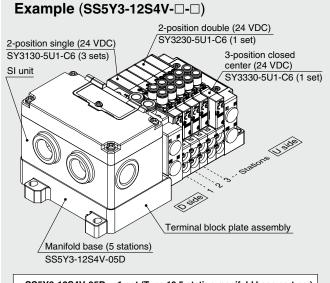

SS5Y3-12S4V-05D ... 1 set (Type 12 5-station manifold base part no.)

*SY3130-5U1-C6...... 3 sets (2-position single part no.)

*SY3230-5U1-C6...... 1 set (2-position double part no.)

*SY3330-5U1-C6...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station. • Under the manifold part number, state the valves to be mounted in order starting
- with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

#### 6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

* For N, sizes are in inches.

#### Mounting

	<u> </u>		
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations   Specify a lengt		
:	:	longer than that of	
D16	For 16 stations	the standard rail.	

Refer to page 295 for the fixation of DIN rail mounting type manifold.


For details on the EX126 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 195. Please download the Operation Manual via the SMC website, https://www.smcworld.com



#### Specific Product recautions

#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

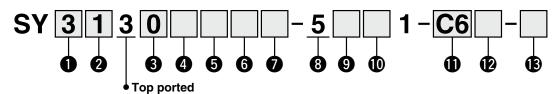

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• Type of dotadilon		
1	2-position	Single
2		Double
3	3 4 3-position 5	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1		N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

		71
	0	Rubber seal
	1	Metal seal

A Dilet type

Filot type		
	Nil	Internal pilot
	D	External pilot

Back pressure check valve (Built-in valve type)

	Nil	None
	Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

#### Coil type

	ii type
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

#### 8 Rated voltage

5	24 VDC

Light/surge voltage suppressor and common specification

and common operation			
Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non polor
U	•		Non-polar
S		•	Positive
Z	•		common

Only "Z" type is available with a power saving circuit.

## Manual override

Nil: Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type

 Refer to page 34 for the safety slide locking manual override.

### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	I —	•	•
C10	ø10	-	_	•
C12	ø12	I —	_	•

#### One-touch fitting (Inch)

	to don maning (m	,		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•
		•		

1 Thread type

_	
Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

#### **B** Type of mounting screw

	•
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
   Since the base gasket is attached to the

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class II (Mark: (iv))

::﴿()) 148 @ Type 10
Side Ported

Type 11
Bottom Ported

## **Plug-in Connector Connecting Base**

EX120


# SY3000/5000/7000 Series

(€ CA



#### **How to Order Manifolds**

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

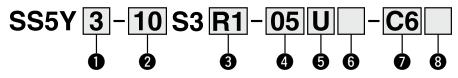

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Туре

<u> </u>	<b>30</b>
10	Side ported
11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 165).

#### **3** SI unit

0	Without SI unit		
Q	DeviceNet® (Positive common NPN)		
R1	OMRON CompoBus/S	16 outputs	
R2	(Positive common NPN)	8 outputs	
V	CC-Link (Positive common NPN)		
ZB*1	CompoNet®	Positive common NPN	
ZBN*1	Componer	Negative common PNP	


- *1 The communication connector (for the opposite side) is not provided. Please order it separately.
- * Ensure a match with the common specification of the valve to be used.

#### 4 Valve stations

_		
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Considered laws which
:	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- * Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

## How to Order Manifold Assembly

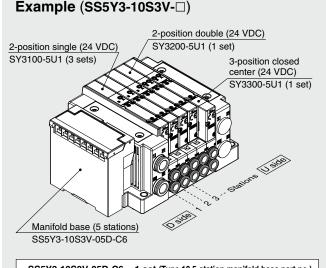

- SS5Y3-10S3V-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.)

  *SY3100-5U1 ················· 3 sets (2-position single part no.)

  *SY3200-5U1 ················ 1 set (2-position double part no.)

  *SY3300-5U1 ················ 1 set (3-position closed center part no.)

  The asterisk denotes the symbol for the assembly.
- Prefix it to the part numbers of the valve, etc.

   For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting
  with the 1st station as shown in the figure above. If the arrangement becomes too
  complicated, specify the details on a manifold specification sheet.
- * When mixing top-ported configurations, select from those listed on page 156. In such cases, use caution as there is also output on the A and B ports on the base side.

Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

**5** P, E port entry

O 1, 2 port ontry		
U	U side (2 to 10 stations)	
D	D side (2 to 10 stations)	
В	Both sides (2 to 16 stations)	

#### 6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

 3/5(E) port is plugged for the built-in silencer type.

For details on the EX120 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 196. Please download the Operation Manual via the SMC website, https://www.smcworld.com



Specific Product recautions

7 A, B port size (Metric/One-touch fitting)

<u> </u>	٠,	<u> </u>	JOIT SIZE	(men	COTTE	-touci	muni	<u> </u>	•
Cumahal		^	Dunant	Type 1	0/Side	ported	Type 11/Bo	ttom ported	
Symbol	A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_	_
СЗ			ø3.2	•	_	_	_	_	
C4	١		ø4	•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	stra		ø8	_	•	•	•	•	201
C10	0,		ø10	_	_	•	_	•	08 3
C12			ø12	_	_	•	_	•	91
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		5	ø6	•	•	•	_	_	
L8		Jpward	ø8	l —	•	•	_	_	
L10		그	ø10	l —	_	•	_	_	
L12			ø12	—	_	•	_	_	U Jejon
В4	Elbow*2		ø4	•	•	_	_	_	
B6	읦	ard	ø6	•	•	•	_	_	
B8		N L	ø8	l —	•	•	_	_	
B10		Downward	ø10	_	_	•	_	_	
B12		_	ø12	_	_	•	_	_	To be the second
LM∗1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size		ø8	ø10	ø12	ø10	ø12			

A, B port size (Inch/One-touch fitting)

Symbol		٨	B port		0/Side			ttom ported	
Syllibol		A, b port		SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	Ţ		ø5/32"	•	•	_	•	_	
N7	igh		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	•		ø3/8"	_	_	•	_	•	o But
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7	Jpward	/arc	ø1/4"	•	•	_	_	_	
LN9		9	Δp	ø5/16"	_	•	_	_	_
LN11	01		ø3/8"	_	_	•	_	_	de British
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_	
BN7	∃lpc	Downward	ø1/4"	•	•	_	_	_	
BN9	_	JWC	ø5/16"	_	•	_	_	_	
BN11		Ŏ	ø3/8"	_	_	•	_	_	Tel Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property of the Property o
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_		
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM."

The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206).

**8** Mounting and Option


Cumbal	Mounting	Option			
Symbol	Mounting	Name plate	Station number		
Nil	Direct	_	_		
AA	Direct mounting	•	•		
BA		•	_		
D□	DIM	_	_		
A□	DIN rail mounting	•	•		
B□	mounting	•	_		

- * Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- * Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**


Nil	Standard length			
0	Without DIN rail (with bracket)			
3	For 3 stations	Specify a longer rail		
:	:	than the total length		
16	For 16 stations	of specified stations		

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 203 for the DIN rail part number.)

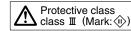

#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

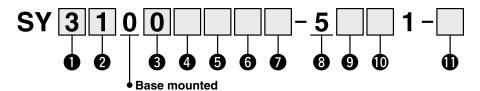

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

<u> </u>			
1	O manitian	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4	N.C./N.C.	
<b>B</b> ∗¹	4-position dual 3-port	N.O./N.O.	
C*1	dual 5-port	N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### **3** Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

_	<b>7</b> 1
Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

#### Coil type

• con type		
Nil	Standard	
T	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

#### 8 Rated voltage


5 24 VDC		
	5	2/1 //11/0

## Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
R	_		Non-polar		
U	•		Non-polai		
S	_		Positive		
Z	•	_	common		
NS	_				
NZ	•		common		

- * Select "R," "U," "S," or "Z" for the valve when the SI unit specification is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit specification is ZBN (negative common).
- * Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

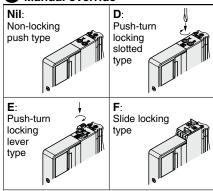

 Refer to page 34 for the safety slide locking manual override.

#### Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



## EUGED Connector Connecting Base SY3000/5000/7000 Series


Plug-in
Connector Connecting Base

Type 10/Side Ported

EX120

SS5Y3-10S3 - Stations D - C2, N1 (D) C6, N7

Dimensions: SY3000 Series

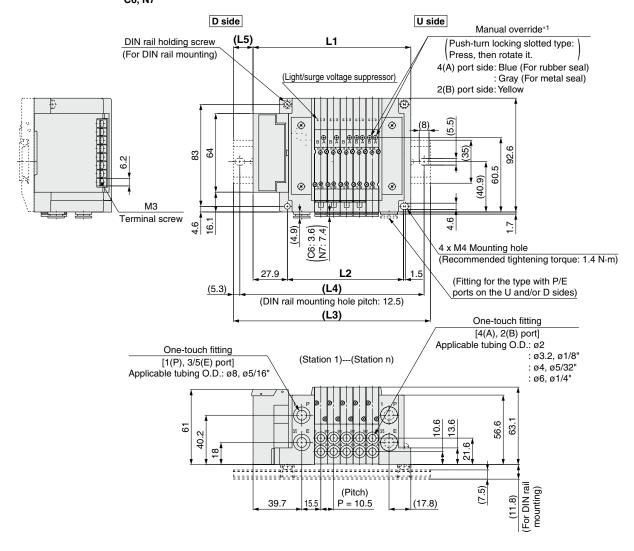

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10S3V-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5

**SMC** 

Valve Valve Construction Specifications

Chart

Valve Replacement Parts

With Residual
alve Pressure
ctor Release Valve

Vacuum
re Release Val
r with Restrict

With Pressure Sensor

Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Wire
Circular
Connector

EX500

EX600

EX250

EX126

EX120

Dimensions

Mixed

Mounting

Manifold Exploded View Fitting, Plug

Part Nos.

Manifold
Options

Specific Product Precautions


Dimensions: SY5000 Series


Plug-in
Connector Connecting Base

Type 10/Side Ported

EX120

SS5Y5-10S3 - Stations D - C6, N7 (D)

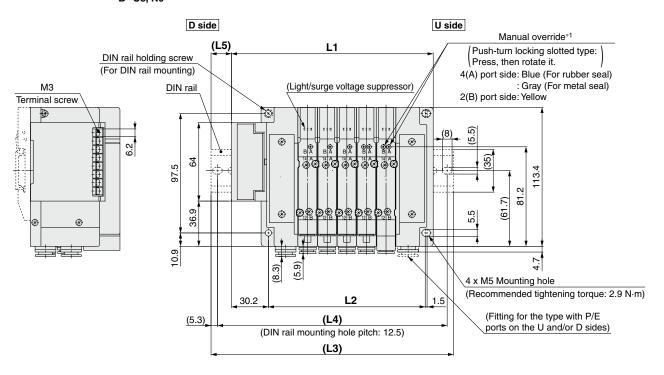

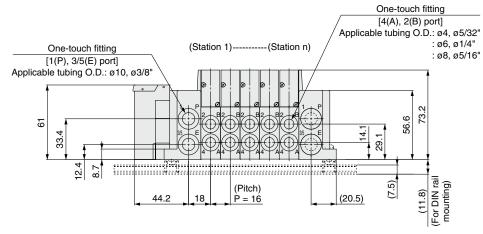

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10S3V-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16




Plug-in
Connector Connecting Base


Type 10/Side Ported

EX120

Dimensions: SY7000 Series

SS5Y7-10S3 - Stations D - C6, N7 C8, N9 C10, N11 (D)

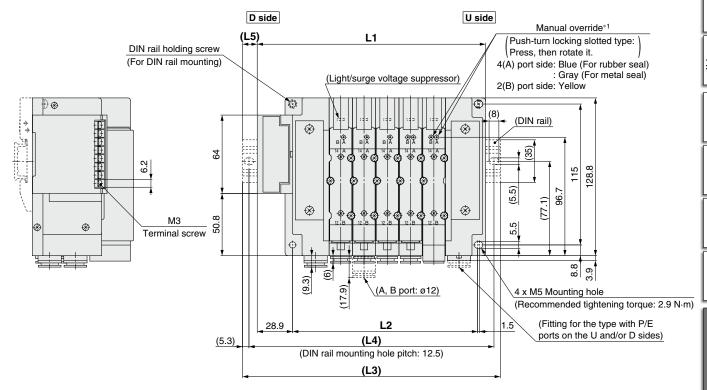

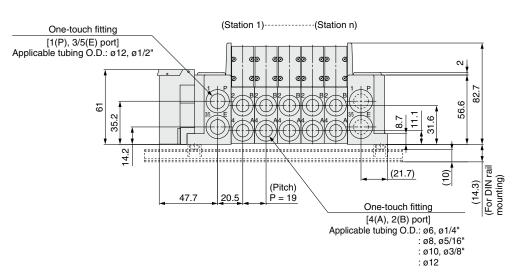

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10S3V-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	129.4	148.4	167.4	186.4	205.4	224.4	243.4	262.4	281.4	300.4	319.4	338.4	357.4	376.4	395.4
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	335.5	348	373	385.5	410.5	423
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	325	337.5	362.5	375	400	412.5
L5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14

**SMC** 

Valve Specifications

Chart

t Valve Construction

Valve Replacemer Parts

With Residual
Pressure
Release Valve

Vacuum Release Valve with Restrictor

With Pressure Sensor

> nade to Order

Connector Connector

D-sub, Flat Ribbon Terminal Block

Lead Wire Circular Connector

EX500

EX250

EX260

EX126

EX120

Common Dimensions

Mixed Mounting Manifold Exploded View

View Fitting, Plug Part Nos.

Manifold Options

Specific Product Precautions

## **Plug-in Connector Connecting Base**

**EX120** 

Type 12 Top Ported

# SY3000/5000/7000 Series

(€ CA



#### **How to Order Manifolds**

Refer to pages 162 to 164 for the dimensions of Type 12/Top-ported type.

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 SI unit

	0	Withou	Without SI unit							
	Q	DeviceNet® (Posit	ive common NPN)							
	R1	OMRON CompoBus/S	16 outputs							
	R2	(Positive common NPN)	8 outputs							
	٧	CC-Link (Positiv	e common NPN)							
	ZB*1	CompoNet®	Positive common NPN							
Z	BN*1	Componer	Negative common PNP							

- *1 The communication connector (for the opposite side) is not provided. Please order it separately.
- * Ensure a match with the common specification of the valve to be used.

#### Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	0
:	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 16 solerious available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not
- desired, order with a specified layout.

  *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

#### 4 P, E port entry

	_ I
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


*1 § For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

#### 5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

* The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)

#### **How to Order Manifold Assembly**

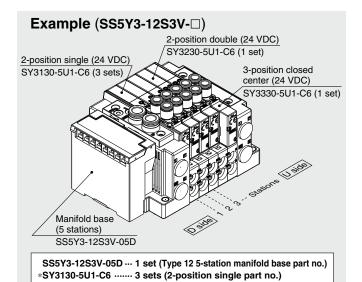

• For the valve arrangement, the valve closest to the D side is considered the 1st station.

*SY3230-5U1-C6 ...... 1 set (2-position double part no.)

*SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the valve, etc.

Under the manifold part number, state the valves to be mounted in order starting
with the 1st station as shown in the figure above. If the arrangement becomes too
complicated, specify the details on a manifold specification sheet.

#### 6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	1100

* For N. sizes are in inches.

#### Mounting

Nil	Direct mounting  DIN rail mounting (With DIN rail)		
D			
D0	DIN rail mounting (Without DIN ra		
D3	For 3 stations	Specify a length	
:	:	longer than that of	
D16	For 16 stations	the standard rail.	


- * If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 203 for the DIN rail part number.)
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

For details on the EX120 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 196. Please download the Operation Manual via the SMC website, https://www.smcworld.com



#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

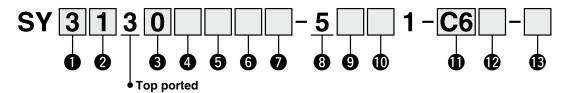

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>			
1	2-position	Single	
2		Double	
3	3-position	Closed center	
4		Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
B*1		N.O./N.O.	
C*1		N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

#### A Call tuna

	птуре		
Nil	Standard		
Т	With power saving circuit (Continuous duty type)		

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

#### 8 Rated voltage


5	24 VDC
	27 100

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R	_		Non-polar	
U	•	•		
S			Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

- Select "R," "U," "S," or "Z" for the valve when the SI unit specification is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit specification is ZBN (negative common).
- Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

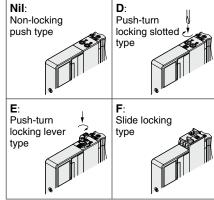

Refer to page 34 for the safety slide locking manual override.

SMC

### (I) A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

one reason maning (means)				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
<b>C3</b>	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
<b>C8</b>	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

one todan mang (mon,					
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	

#### Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class

class II (Mark:♠)

Type 10 Side Ported Type 11 **Bottom Ported** 

## Plug-in Connector Connecting Base

**EX180** 


## SY3000/5000/7000 Series

CE CH CHS ROHS



#### How to Order Manifolds

Refer to pages 160 (SY5000) and 161 (SY7000) for the dimensions of Type 11/Bottom-ported type.

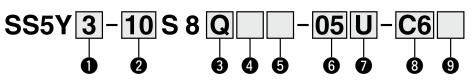

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type

<u>• ,,,</u>	
10	Side ported
11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (Refer to page 165).

#### 3 SI unit

0	Without SI unit	
Q	DeviceNet [®]	
V	CC-Link	

* Only the connector block assembly is mounted for models without an SI unit.

#### 4 SI unit output polarity, Number of outputs

	32 outputs	16 outputs
Without SI unit	Nil	
Positive common (NPN)	2	3
Negative common (PNP)	4	5

- When "V" (CC-Link) is selected for the SI unit, only symbol "2" or "4" (32 outputs) can be selected.
- Ensure a match with the common specification of the valves to be used.

#### **5** Communication connector

Nil	T-branch type	
Α	Straight type	

- * The communication connector and power connector are shipped together with the manifold. The power connector is only available for the straight type.
- When not selecting an SI unit, the symbol will

#### 6 Valve stations


in the case of the sz-output of unit			
Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring*1	
16	16 stations		
02	2 stations	Considered laws wh*2	
:	:	Specified layout*2 (Up to 32 solenoids available)	
24	24 stations	(Op to 32 soleriolds available)	

#### In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
•	:	Double wiring*1
08	8 stations	_
02	2 stations	Consisted lawww.
:	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 16 soleriolds available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### **How to Order Manifold Assembly**

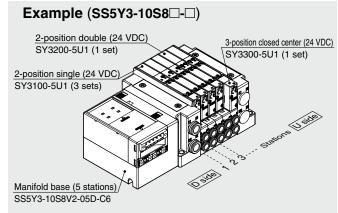

SS5Y3-10S8V2-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.)		
*SY3100-5U1 3 sets (2-position single part no.)		
*SY3200-5U1 1 set (2-position double part no.)		
*SY3300-5U1 1 set (3-position closed center part no.)		
→ The asterisk denotes the symbol for the assembly.		
Prefix it to the part numbers of the valve etc		

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 156-8. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B

#### P, E port entry, SUP/EXH block assembly

<u> </u>				
P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot	
U side (2 to 10 stations)	U	С	G	
D side (2 to 10 stations)	D	E	Н	
Both sides (2 to 24 stations)	В	F	J	

- 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 196-1. Please download the Operation Manual via the SMC website:

https://www.smcworld.com



## Pug-in Connector Connecting Base SY3000/5000/7000 Series

A. B port size (Metric/One-touch fitting)

<u> </u>	н,	<u> </u>	ort Size	(wetri	c/One	-touch	mung	<i>3)</i>	
Cumbal		^	D :====	Type	0/Side	ported	Type 11/Bo	ttom ported	
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4	Ì		ø4	•	•	_	•	_	
C6	g		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	
C10	0,		ø10	_	_	•	_	•	O S S S S
C12			ø12	_	_	•	_	•	el.
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		9	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		J	ø10	_	_	•	_	_	
L12			ø12	_	_	•	_	_	Jeisse I
B4	Elbow*2		ø4	•	•	_	_	_	
В6	<u>a</u>	Downward	ø6	•	•	•	_	_	
B8	Ш	N/	ø8	_	•	•	_	_	
B10		00	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	Tell Bell
LM*1		(Incli	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
			rt size h fittings)	ø8	ø10	ø12	ø10	ø12	

A. B port size	(Inch/One-touch	fittina)
A, D DOLL SIZE		iittiiiy/

<u> </u>	Ρ,		3120 (1110	, • •			<u> </u>			
Cumbal		A. D. mant		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol	A, B port		SY3000	SY5000	SY7000	SY5000	SY7000			
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•	_	•	_		
N7	igh		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"	_	•	•	•	•		
N11	0)		ø3/8"	_	_	•	_	•	0 1500	
CM*1		Straiç	ht port, mixed sizes	•	•	•	•	•		
LN3			ø5/32"	•	_	_	_	_		
LN7		Jpward	ø1/4"	•	•	_	_	_		
LN9			ø5/16"	_	•	_	_	_		
LN11	OI.	_	ø3/8"	_	_	•	_	_	el Session	
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_		
BN7	<u>a</u>	<u>a</u>	wa	ø1/4"	•	•	_	_	_	
BN9	ш	Downward	ø5/16"	_	•	_	_	_		
BN11		ă	ø3/8"	_	_	•	_	_	To be a second	
LM*1		(Incl	w port, mixed sizes uding upward and wwnward piping)	•	•	•	_	_		
			rt size h fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the P, E port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 207).

9 Mounting and Option

Symbol	Mounting	Option			
Symbol	wounting	Name plate	Station number		
Nil	Direct	_	_		
AA	Direct mounting	•	•		
BA	mounting	•	_		
D□	DIN "	_	_		
A□	DIN rail mounting	•	•		
В□	mounting	•	_		

**DIN Rail Option** 


Nil	Standard length			
0	Without DIN rail (with bracket)			
3	For 3 stations	Specify a longer rail than the total		
:	:	rail than the total length of specified		
24	For 24 stations	stations.		

- Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
  * Only direct mounting is available for Type 11 (Bottom ported).
  * Refer to page 295 for the fixation of DIN rail mounting type manifold.



#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

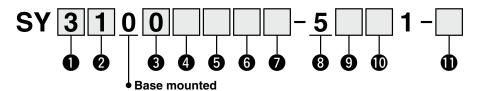

#### 1 Series

• • • • • • • • • • • • • • • • • • • •					
3	SY3000				
5	SY5000				
7	SY7000				

2 Type of actuation

<u> </u>					
1	2-position	Single			
2	2-position	Double			
3		Closed center			
4	3-position	Exhaust center Pressure center			
5					
<b>A</b> *1	4 manikin m	N.C./N.C.			
B*1	4-position dual 3-port	N.O./N.O.			
C*1	duai o-port	N.C./N.O.			

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

Nil	N	one			
Н	Bu	ilt-in	ı		
	 	-		_	

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High-pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high-pressure type.

Coil type

Oon type					
Nil	Standard				
Т	With power-saving circuit (Continuous duty type)				

- Be sure to select the power-saving circuit type when the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power-saving circuit is selected. Refer to page 292 for details.

#### 8 Rated voltage


5	24 VDC
---	--------

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- * Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" are available with a power-saving circuit.

#### Manual override

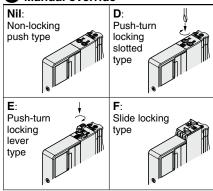

 Refer to page 34 for the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
  Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

## Puge Connector Connecting Base SY3000/5000/7000 Series


Plug-in
Connector Connecting Base


Type 10/Side Ported

EX180

Dimensions: SY3000 Series

SS5Y3-10S8 - Stations D-C2, N1 (D)

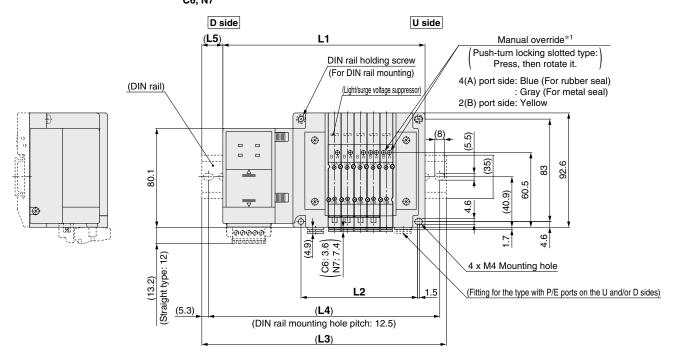

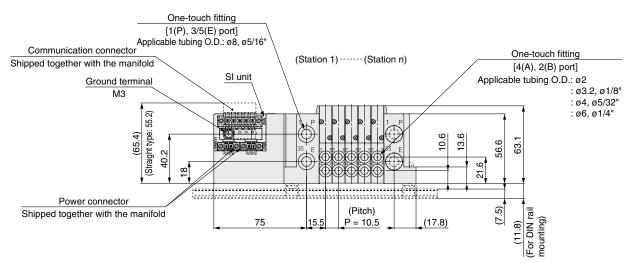

- *1 Refer to page 157 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10S8V2-05D-C6."
- * Refer to page 162 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	132.3	142.8	153.3	163.8	174.3	184.8	195.3	205.8	216.3	226.8	237.3	247.8
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5
L3	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273
L4	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
L5	14	15	16	17	12	13	14	15	16	17	11.5	12.5
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
L1	258.3	268.8	279.3	289.8	300.3	310.8	321.3	331.8	342.3	352.8	363.3	
			_		-	_	_			_		
L1	258.3	268.8	279.3	289.8	300.3	310.8	321.3	331.8	342.3	352.8	363.3	
L1 L2	258.3 189	268.8 199.5	279.3 210	289.8 220.5	300.3 231	310.8 241.5	321.3 252	331.8 262.5	342.3 273	352.8 283.5	363.3 294	




Plug-in
Connector Connecting Base


Type 10/Side Ported

EX180

Dimensions: SY5000 Series

## SS5Y5-10S8 - Stations D - C6, N7 (D)

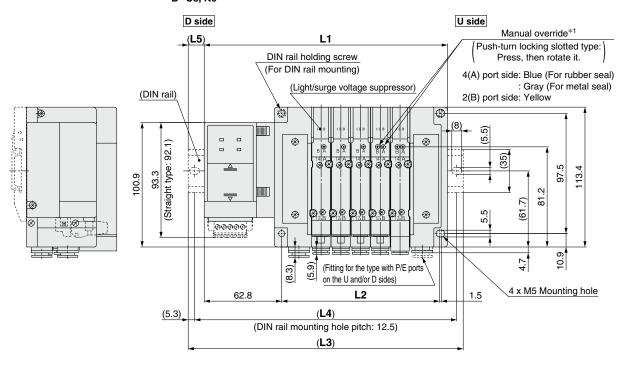

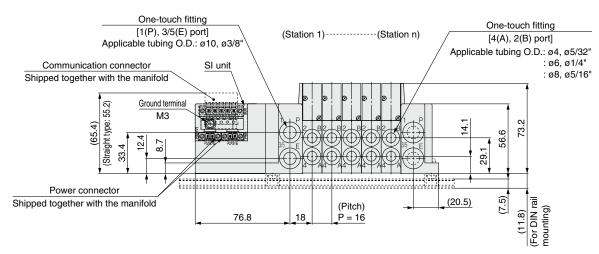

- *1 Refer to page 158 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y5-10S8V2-05D-C8."
- * Refer to page 163 for dimensions of A or B port top-ported type.

n: Station	2	3	4	5	6	7	8	9	10	11	12	13
L1	149.3	165.3	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3
L2	80	96	112	128	144	160	176	192	208	224	240	256
L3	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5
L4	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350
L5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5
n: Station	14	15	16	17	18	19	20	21	22	23	24	
n: Station	341.3	<b>15</b> 357.3	<b>16</b> 373.3	<b>17</b> 389.3	<b>18</b> 405.3	<b>19</b> 421.3	<b>20</b> 437.3	<b>21</b> 453.3	<b>22</b> 469.3	<b>23</b> 485.3	<b>24</b> 501.3	
		_	_		-	-	_			_		
L1	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3	485.3	501.3	
L1 L2	341.3 272	357.3 288	373.3 304	389.3 320	405.3 336	421.3 352	437.3 368	453.3 384	469.3 400	485.3 416	501.3 432	


## Pure Connector Connecting Base SY3000/5000/7000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX180

Dimensions: SY7000 Series

SS5Y7-10S8 ____-Stations D = C10, N1 (D)

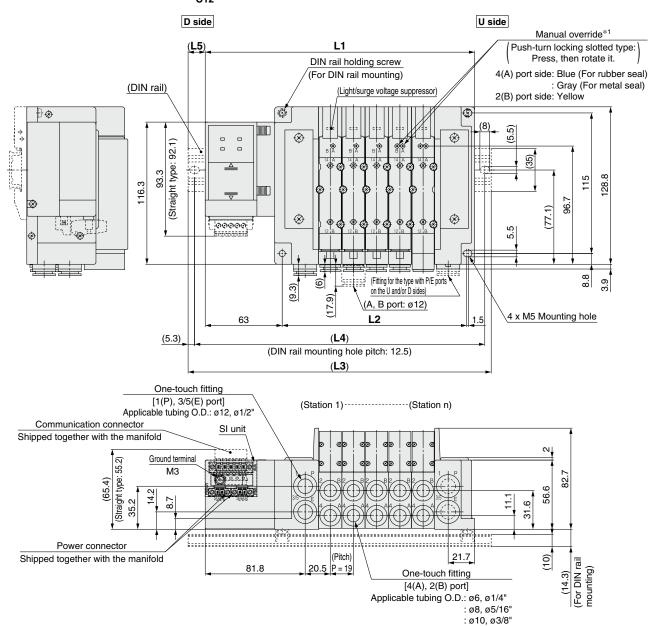

- *1 Refer to page 159 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y7-10S8V2-05D-C10."
- * Refer to page 164 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	163.5	182.5	201.5	220.5	239.5	258.5	277.5	296.5	315.5	334.5	353.5	372.5
L2	94	113	132	151	170	189	208	227	246	265	284	303
L3	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398
L4	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5
L5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13
n: Stations	14	45	4.0	47	40	40		-04	-00	-00		
	14	15	l In	1 1/	18	19	20	71	77	23	24	
L1	391.5	<b>15</b> 410.5	<b>16</b> 429.5	<b>17</b> 448.5	<b>18</b> 467.5	<b>19</b> 486.5	<b>20</b> 505.5	<b>21</b> 524.5	<b>22</b> 543.5	<b>23</b> 562.5	<b>24</b> 581.5	
			_			_	_			_		
L1	391.5	410.5	429.5	448.5	467.5	486.5	505.5	524.5	543.5	562.5	581.5	
L1 L2	391.5 322	410.5 341	429.5 360	448.5 379	467.5 398	486.5 417	505.5 436	524.5 455	543.5 474	562.5 493	581.5 512	



## Plug-in Connector Connecting Base

**EX180** 

Type 12
Top Ported

# SY3000/5000/7000 Series

CE CA CRUS ROHS



#### How to Order Manifolds



#### Series

3	SY3000
5	SY5000
7	SY7000

#### 3 SI unit output polarity, Number of outputs

	32 outputs	16 outputs
Without SI unit	N	iil
Positive common (NPN)	2	3
Negative common (PNP)	4	5

- * When "V" (CC-Link) is selected for the SI unit, only symbol "2" or "4" (32 outputs) can be selected.
- Ensure a match with the common specification of the valves to be used.

#### 2 SI unit

0	Without SI unit
Q	DeviceNet®
V	CC-Link

Only the connector block assembly is mounted for models without an SI unit.

#### 4 Communication connector

Nil	T-branch type	
Α	Straight type	

- * The communication connector and power connector are shipped together with the manifold. The power connector is only available for the straight type.
- When not selecting an SI unit, the symbol will be "nil."

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Considered laws which
1	:	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	(Op to 32 sole lolds available)

#### In the case of the 16-output SI unit

In the case of the 32-output SI unit

Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	0
•	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 10 solerious available)


- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * This also includes the number of the blanking plate assembly.
- * For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E*1	Н
Both sides (2 to 24 stations)	В	_	J

- *1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with

#### **How to Order Manifold Assembly**

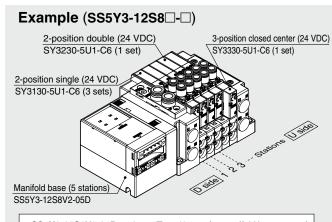

SS5Y3-12S8V2-05D ···· 1 set (Type 10 5-station manifold base part no.) *SY3130-5U1-C6...... 3 sets (2-position single part no.) *SY3230-5U1-C6------ 1 set (2-position double part no.) *SY3330-5U1-C6------ 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

#### ■ P F port size (One-touch fittings)

<u>U F, I</u>	P, E port size (One-touch littings)			
Symbol	SY3000	SY5000	SY7000	D
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

For N, sizes are in inches.

#### Mounting

• mounting				
Nil	Direct mounting  DIN rail mounting (With DIN rail)			
D				
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	Specify a longer		
:	:	rail than the		
D24	For 24 stations	standard length.		


* Refer to page 295 for the fixation of DIN rail mounting type manifold.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 196-1. Please download the Operation Manual via the SMC website: https://www.smcworld.com



## How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

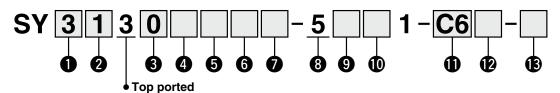

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation			
1	2-position	Single	
2	z-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	B*1 4-position	N.C./N.C.	
B*1 C*1		N.O./N.O.	
	duai 3-poit	N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

<u> </u>	o, po
Nil	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

	<del></del>	
	Nil	None
İ	Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

## 6 Pilot valve option

Nil	il Standard (0.7 MPa)	
B Quick response type (0.7 MPa)		
<b>K</b> *1	High-pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high-pressure type.

#### Coil type

	Con type			
Nil Standard		Standard		
	Т	With power-saving circuit (Continuous duty type)		

- Be sure to select the power-saving circuit type when the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power-saving circuit is selected. Refer to page 292 for details.

#### 8 Rated voltage


5	24 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

- * Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" are available with a power-saving circuit.

### Manual override

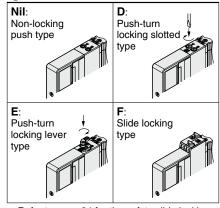

 Refer to page 34 for the safety slide locking manual override.

## A, B port size

#### Thread piping

	Symbol	Port size	Applicable series
	M5	M5 x 0.8	SY3000
	01	1/8	SY5000
Ī	02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

One-touch hitting (mon)					
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	

#### Thread type

	<b>7</b> 1
Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

## **B** Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
   Since the base gasket is attached to the

manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 367 for base gasket and mounting screw part numbers.

 "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.




# SY3000/5000/7000 Series Common Dimensions


SY3000 Series

Plug-in Connecting Base

Type 10/Side Ported

External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

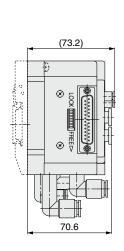

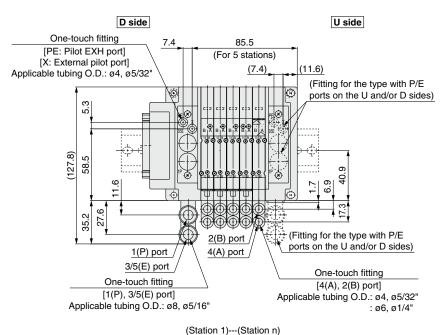

P, E port entry: D

7.4

85.5

(For 5 stations)

78.6


82.3

One-touch fitting


[PE: Pilot EXH port]


[X: External pilot port]

Applicable tubing O.D.: ø4, ø5/32"

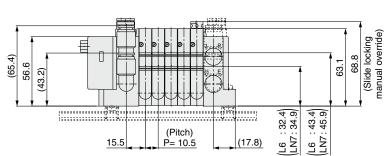



* These figures show the "SS5Y3-10F2-05DR-L6."

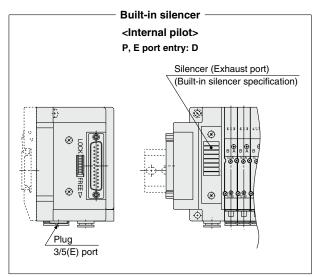

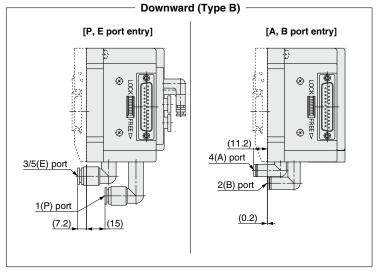




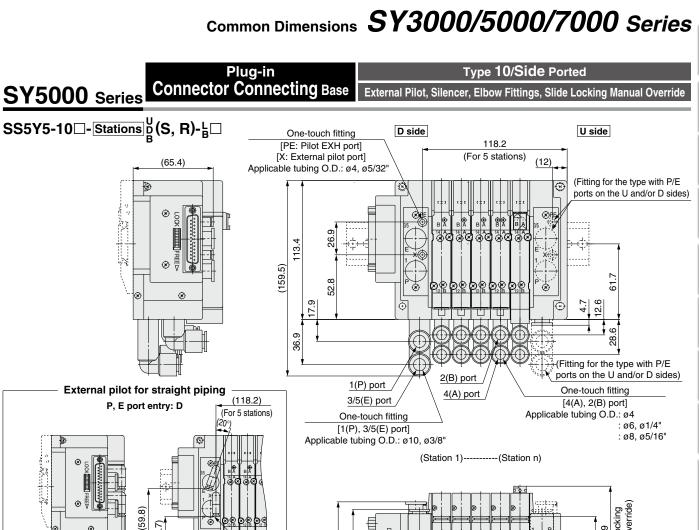

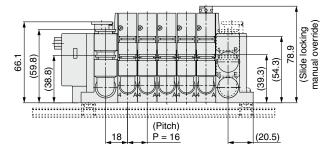

* These figures show the "SS5Y5-10F2-05DR-L8."

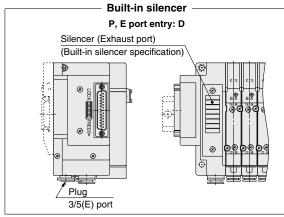



One-touch fitting
[PE: Pilot EXH port]

[X: External pilot port]
Applicable tubing O.D.: ø4, ø5/32"

70.8

74.5

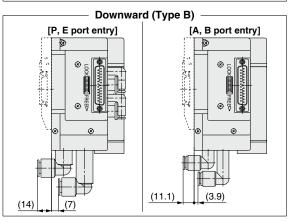

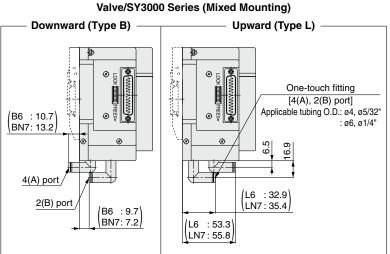

**SMC** 

Options

158

Valve Valve Construction Specifications

Chart

Replacemen Parts

Vacuum
elease Valve
ith Restrictor

With Pressure Sensor

> Made to Order

Connector Gonnecting Base

D-sub, Flat Ribbon Terminal Block

Wire Circular Connector

EX500

EX250

EX260

EX120

Common Dimensions

Mixed Mounting Manifold Exploded

Exploded View Fitting, Plug Part Nos.

Part Nos.

Manifold
Options


SY7000 Series


Plug-in Connector Connecting Base

Type 10/Side Ported

External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

 $SS5Y7\text{-}10\Box\text{-}\underline{Stations}\overset{U}{\underset{R}{\triangleright}}(S,\,R)\text{-}\underline{{}^{L}_{B}}\Box$ 

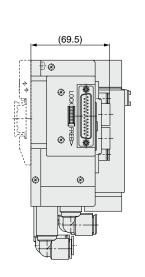

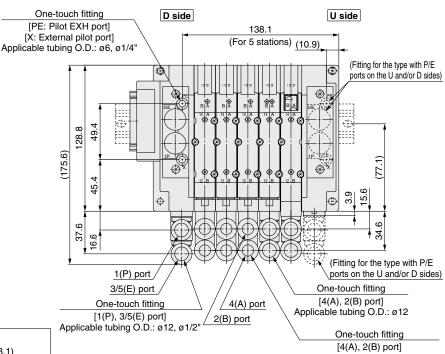


P, E port entry: D

(138.1)
(For 5 stations)

(20°)


One-touch fitting
[PE: Pilot EXH port]
[X: External pilot port]
Applicable tubing O.D.: ø6, ø1/4"

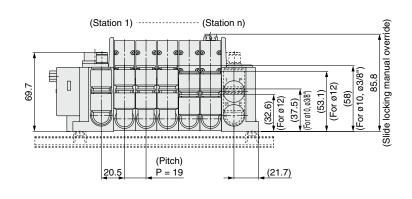


* These figures show the "SS5Y7-10F2-05DR-LM."

Applicable tubing O.D.: ø6, ø1/4"

: ø8, ø5/16" : ø10, ø3/8"

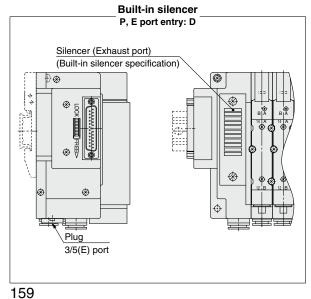

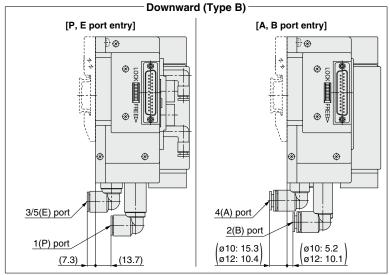

Circular Connecto EX500

EX600

EX250


EX126 EX120

Manifold Exploded View


Fitting, Manifold


Plug-in Connector Connecting Base


Type 11/Bottom Ported **All Wirings** 

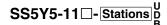



SY5000 Series

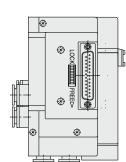


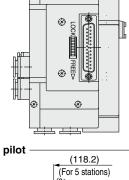


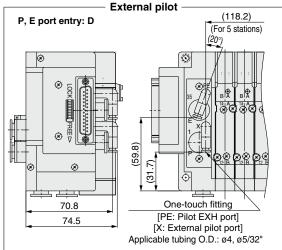

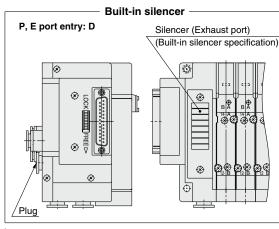


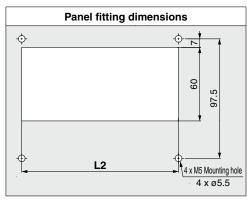

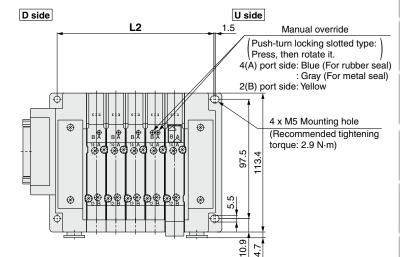

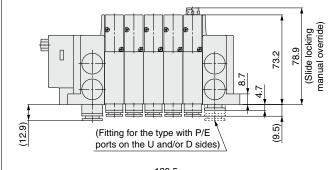

(Station 1) ----- (Station n)

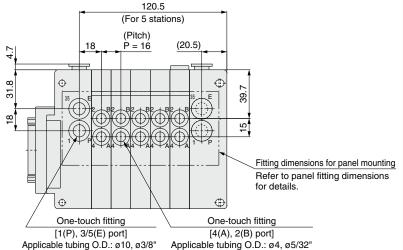


* These figures show the "SS5Y5-11F2-05D-C8."

* Refer to the pages below for L2 dimensions and other dimensions that are not specified in each wiring specification.

ø6, ø1/4"

: ø8, ø5/16"

: p. 45
: p. 48
: p. 51
: p. 62
: p. 71
: p. 81
: p. 91
: p. 101
: p. 107
: pp. 118, 119
: p. 129
: p. 137
: p. 145
: p. 153

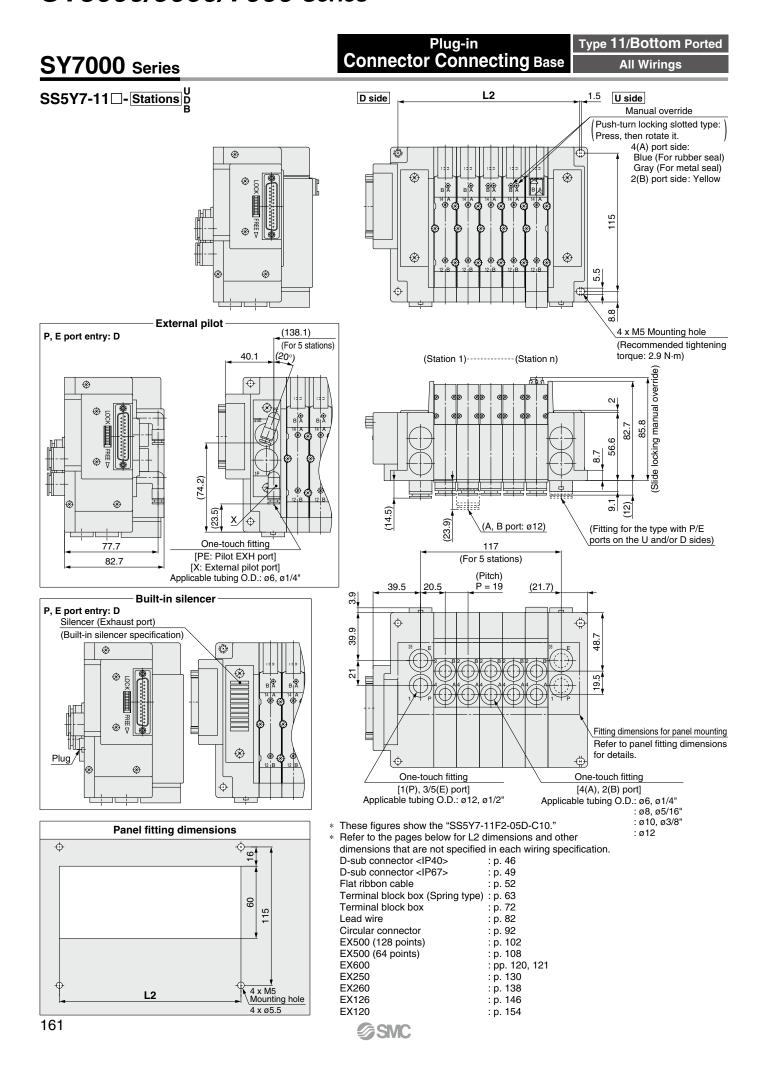

Type 12/Top Ported


All Wirings

Chart


ecific oduct autions

Plug-in
Connector Connecting Base

SY3000 Series
SS5Y3-12 - Stations U(R)

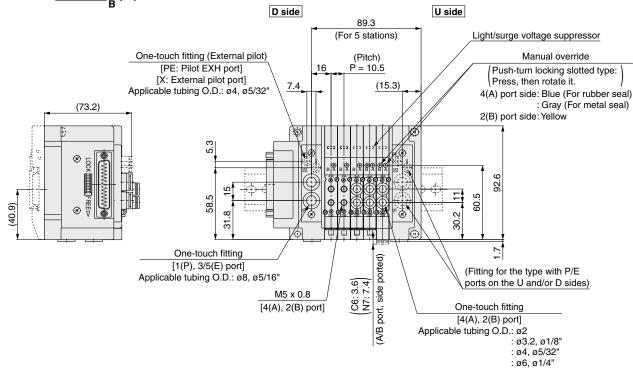

(Station 1)---(Station n)

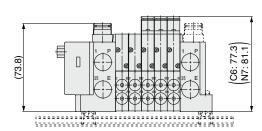

- * These figures show the "SS5Y3-12F2-05D."
- * For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 157 for dimensions of the silencer.
- * Refer to the pages below for dimensions that are not specified in each wiring specification.


D-sub connector <IP40> : p. 44 : p. 47 D-sub connector <IP67> Flat ribbon cable : p. 50 Terminal block box (Spring type): p. 61 Terminal block box : p. 70 Lead wire : p. 80 Circular connector : p. 90 : p. 100 EX500 (128 points) EX500 (64 points) : p. 106 EX600 : pp. 116, 117 EX250 : p. 128 EX260 : p. 136 EX126 : p. 144 EX120 : p. 152

# SY5000 Series


Plug-in
Connector Connecting Base

Type 12/Top Ported
All Wirings

SS5Y5-12 $\square$ -Stations  $\stackrel{\mathsf{U}}{\mathsf{p}}(\mathsf{R})$ 

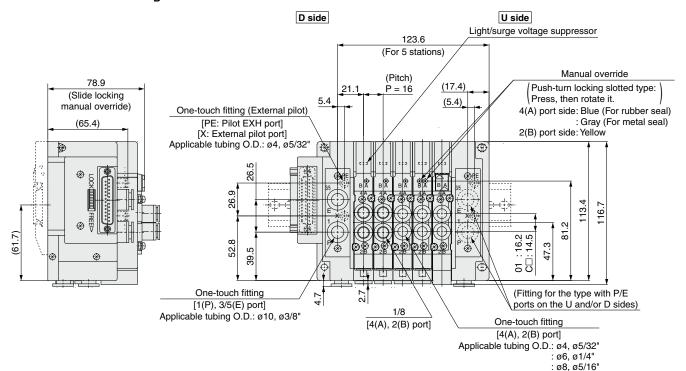

(Station 1)-----(Station n)

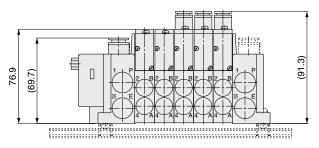

- * These figures show the "SS5Y5-12F2-05D."
- For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 158 for dimensions of the silencer.
- Refer to the pages below for dimensions that are not specified in each wiring specification.

D-sub connector <IP40> : p. 45 D-sub connector <IP67> : p. 48 Flat ribbon cable : p. 51 Terminal block box (Spring type): p. 62 Terminal block box : p. 71 Lead wire : p. 81 Circular connector : p. 91 EX500 (128 points) : p. 101 EX500 (64 points) : p. 107 : pp. 118, 119 EX600 EX250 : p. 129 EX260 : p. 137 : p. 145 EX126 EX120 : p. 153




# SY7000 Series


Plug-in
Connector Connecting Base

Type 12/Top Ported

**All Wirings** 

# SS5Y7-12 $\square$ -Stations $\stackrel{\mathsf{U}}{p}$ (R)

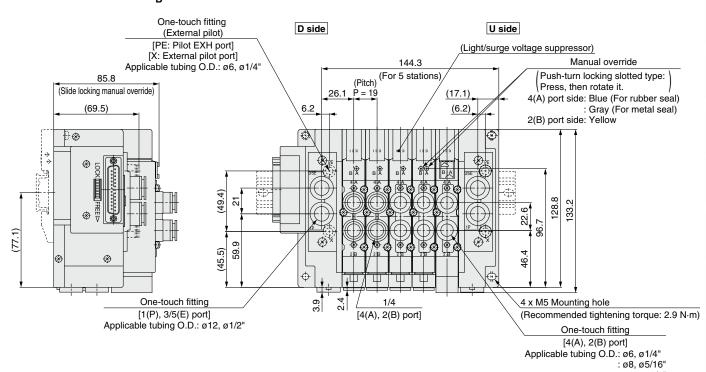

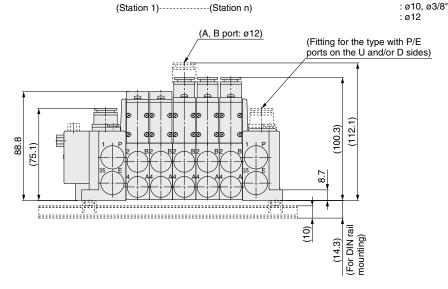

- * These figures show the "SS5Y7-12F2-05D."
- For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 159 for dimensions of the silencer.
- Refer to the pages below for dimensions that are not specified in each wiring specification.

D-sub connector <IP40> : p. 46 : p. 49 D-sub connector <IP67> Flat ribbon cable : p. 52 Terminal block box (Spring type): p. 63 Terminal block box : p. 72 Lead wire : p. 82 : p. 92 Circular connector : p. 102 EX500 (128 points) EX500 (64 points) : p. 108 EX600 : pp. 120, 121 EX250 : p. 130 : p. 138 EX260 : p. 146 EX126 EX120 : p. 154

Valve Specifications

Chart

Valve Construction

Connecting Base Connector

D-sub, Flat Ribbon Terminal Block

Circular Connecto

EX500 EX600

EX250

EX126

EX120

Manifold Exploded View

Fitting, Manifold

Type 10 Side Ported

Type 11
Bottom Ported

# Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable Terminal Block Box/Spring Type (IP67)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) EX245 (IP65) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120 EX180

# SY3000/5000 Series

(€ CA

c**FL**®us

The SY3000 can be mounted onto the SY5000 size manifold.

**How to Order Manifolds** 

Refer to page 174 for the dimensions of Type 11/ Bottom-ported type.

It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 12.5 mm.

**1** Туре

10	Side ported	
11	Bottom ported	

2 Connector type

Connector type				
Symbol	Туре		Page	
F	D-sub connector	IP40		
FW	(25 pins)	IP67		
Р		26 pins	41	
PG	Flat ribbon cable	20 pins		
PH		10 pins		
TC	Terminal block box	(Spring type)	59	
Т	Terminal blo	ck box	67	
L1		34 cores		
L2	Lead wire	17 cores	77	
L3		9 cores		
M	Circular cor	nector	87	
S□	Serial	EX500 Gateway Decentralized System 2 (128 points)	97	
S□		EX500 Gateway Decentralized System (64 points)	103	
S6□	transmission	EX600	113	
SA□		EX245	124-1	
S□		EX250	125	
S□		EX260	133	
S4□*1		EX126	141	
S3□*1		EX120	149	
S8□		EX180	156-1	

- *1 EX126, EX120 are not yet UL-compliant.
- * Refer to the pages shown in the table above for details.

## 3

#### With Lead wire

Lead	wire	length

Loud Willo longth			
1	0.6 m		
2	1.5 m		
3	3 m		

 With D-sub connector (IP40/67) and Flat ribbon cable

#### Connector entry direction

1		Upward	
2		Lateral	

* It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

## 4 Valve stations

Symbol	Stations	Note	
02	2 stations	Some connectors have a limitation	
:		on the number of stations. Refer to the pages shown in the table	
24	24 stations	"Connector type" for details.	

#### **5** P, E port entry

<u> </u>		
U	U side (2 to 10 stations)	
D	D side (2 to 10 stations)	
В	Both sides (2 to 24 stations)	

 Refer to on page 113 for the EX600, page 125 for the EX250, and page 156-1 for the EX180.

## 6 SUP/EXH block assembly

<u> </u>		
Nil Internal pilot		
S	Internal pilot, Built-in silencer External pilot	
R		

- 3/5(E) port is plugged for the built-in silencer type.
- Refer to on page 113 for the EX600, page 125 for the EX250, and page 156-1 for the EX180.

7 Fitting type: One-touch fitting

Symbol	A, B port		
С		Stra	ight
L	Metric size	Elbow	Upward*2
В		EIDOW	Downward*2
N		Stra	ight
LN		Elbow	Upward*2
BN		⊏ibow	Downward*2
CM*1	Mixed sizes	Stra	ight
LM*1		Elbow (Including upward	and downward piping)*2

- *1 Select CM or LM if mixed port sizes are to be used for each series. (For example, if mixed sizes, such as C6 and C8, are to be used for the SY5000 series) In such cases, indicate the sizes on the manifold specification sheet.
  - The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.
- *2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206). Elbow fittings are not available for Type 11 (Bottom ported).
- * Elbow fittings: ø2, ø3.2, and ø1.8" are not available for the SY3000 series. ø2, ø3.2, ø1.8", and ø5/32" are not available for the SY5000 series.

Mounting

For 3 stations

For 24 stations

the DIN rail length.

Direct mounting

DIN rail mounting (With DIN rail)

DIN rail mounting (Without DIN rail)

(manifold block length of 16 mm).]

Only direct mounting is available for the type 11 bottom-ported type.

Refer to page 295 for the fixation of DIN rail mounting type manifold.

Refer to page 172 to determine the L3 using "Calculation formula" for

Specify a length longer than that of the standard rail. [The SY5000 valve is now at a mountable length

Nil

D

D₀

D3

D24

Options

8 SY5000: A, B port size (Metric/One-touch fitting)

(motino, one touch intaing)	
Symbol	Port size
4	ø4
6	ø6
8	ø8
Nil	For all stations of SY3000

(Inch/One-touch fitting)

_		<u> </u>	
	Symbol	Port size	
	3	ø5/32"	
	7	ø1/4"	
	9	ø5/16"	
)	Nil	For all stations of SY3000	

 No symbol needs to be specified when fitting type "CM" or "LM" is selected.

## **9** SY3000: A, B port size

#### (Metric/One-touch fitting)


Symbol	Port size
2	ø2
3	ø3.2
4	ø4
6	ø6
8	ø8* ¹
*1 The valve pitch is the same as the	

(Inch/One-touch fitting)

Ī	Symbol	Port size
	1	ø1/8"
	3	ø5/32"
	7	ø1/4"
	9	ø5/16"* ¹

- *1 The valve pitch is the same as that of the SY5000.
- * No symbol needs to be specified when fitting type "CM" or "LM" is selected.

## **How to Order Manifold Assembly**

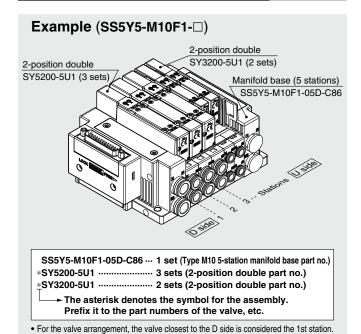

with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

• Under the manifold part number, state the valves to be mounted in order starting

When mixing top-ported configurations, select from those listed on page 178. In such cases, use caution as there is also output on the A and B ports on

the base side.


Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.



Protective class class II (Mark: (iv))

#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

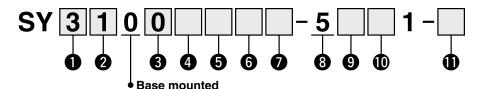

#### Series

3	SY3000
5	SY5000

Type of actuation

• Type of dotadion		
1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1		N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

AII	None
INII	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	•
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)


*1 Only the metal seal type is available for the high pressure type.

Coil type

• con type	
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Manual override

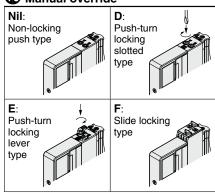

 Refer to page 34 for the safety slide locking manual override.

#### 8 Rated voltage

5	24 VDC
6	12 VDC

* Only 24 VDC is available for the serial transmission type.

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- * "Nil" is not available for the SI unit manifold.* For the non-polar type, be careful of surge
- voltage intrusion.

  Refer to page 293 for details. (Excludes when

Refer to page 293 for details. (Excludes when an SI unit manifold is used)

* Only "Z" and "NZ" types are available with a power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details.

EX500: pp. 99, 105 EX245: p. 124-1 EX260: p. 135 EX120: p. 151 EX120: p. 151 EX120: p. 156-1 Type of mounting screw

.,,	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



With Pressure Sensor

Made to Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Lead Wire

Circular Connector

EX500

EX600 EX250

EX260

EX126 EX120

Common Dimensions

Mixed Mounting

Manifold Exploded View Fitting, Plug Part Nos.

Manifold Options

Specific Product Precautions

Type 10 Side Ported

Type 11
Bottom Ported

# Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable Terminal Block Box/Spring Type (IP67)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) EX245 (IP65) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120 EX180

# **SY5000/7000** Series

( € CA

c **FLI**® US

The SY5000 can be mounted onto the SY7000 size manifold.

**How to Order Manifolds** 

Refer to page 175 for the dimensions of Type 11/ Bottom-ported type.

It is possible to mount the SY5000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 19 mm.

#### 1 Type

10	Side ported
11	Bottom ported

2 Connector type

Connector type			
Symbol	Type		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	41
PG	Flat ribbon cable	20 pins	
PH		10 pins	
TC	Terminal block box	(Spring type)	59
Т	Terminal blo	ck box	67
L1		34 cores	
L2	Lead wire	17 cores	77
L3		9 cores	
M	Circular cor	nector	87
S□		EX500 Gateway Decentralized System 2 (128 points)	97
S□	Serial transmission	EX500 Gateway Decentralized System (64 points)	103
S6□	1141151111551011	EX600	113
SA□		EX245	124-1
S□		EX250	125
S□		EX260	133
<b>S4</b> □*1		EX126	141
S3□*1		EX120	149
S8□		EX180	156-1

- *1 EX126, EX120 are not yet UL-compliant.
- * Refer to the pages shown in the table above for details.

## 3

#### With Lead wire

|--|

_oaa mio iongii	
1	0.6 m
2	1.5 m
3	3 m

 With D-sub connector (IP40/67) and Flat ribbon cable

#### Connector entry direction

1	Upward
2	Lateral

It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

## 4 Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
:	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

#### **5** P, E port entry

••	
U side (2 to 10 stations)	
D side (2 to 10 stations)	
B Both sides (2 to 24 stations)	

 Refer to on page 113 for the EX600, page 125 for the EX250, and page 156-1 for the EX180.

## 6 SUP/EXH block assembly

<u> </u>	
Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- 3/5(E) port is plugged for the built-in silencer type.
- Refer to on page 113 for the EX600, page 125 for the EX250, and page 156-1 for the EX180.

Fitting type: One-touch fitting

Symbol	A, B port		
С		Stra	ight
L	Metric size	Elbow	Upward*2
В			Downward*2
N	Inch size	Stra	ight
LN		Elbow	Upward*2
BN			Downward*2
CM*1	Mixed sizes	Stra	ight
LM*1		Elbow (Including upward	and downward piping)*2

- *1 Select CM or LM if mixed port sizes are to be used for each series. (For example, if mixed sizes, such as C6 and C8, are to be used for the SY5000 series) In such cases, indicate the sizes on the manifold specification sheet.
  - The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.
- *2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 204 to 206). Elbow fittings are not available for Type 11 (Bottom ported).
- * Elbow fittings: ø1/4" and ø5/16" are not available.



Fitting Manifold

Protective class class II (Mark: ⟨ii⟩)

## 8 SY7000: A, B port size

#### (Metric/One-touch fitting)

1111011101	one todon mang,
Symbol	Port size
6	ø6
8	ø8
10	ø10
12	ø12
Nil	For all stations of SY5000

(Inch/One-touch fitting)

	Symbol	Port size
	7	ø1/4"
	9	ø5/16"
	11	ø3/8"
	Nil	For all stations of SY5000
)		

No symbol needs to be specified when fitting type "CM" or "LM" is

#### 9 SY5000: A, B port size

#### (Metric/One-touch fitting)

Symbol	Port size
6	ø6
8	ø8
10	ø10
12	ø12

#### (Inch/One-touch fitting)

	Symbol	Port size
	7	ø1/4"
	9	ø5/16"
	11	ø3/8"
П		

- The valve pitch is 19 mm, the same as that of the SY7000.
- No symbol needs to be specified when fitting type "CM" or "LM" is selected.

#### Mounting and Option

<u> </u>				
Cumbal	Mounting	Option		
Symbol		Name plate	Station number	
Nil	Direct mounting	_	_	
AA		•	•	
BA		•	_	
D□	DIN rail mounting	_	_	
A□		•	•	
B□		•	_	

Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

**DIN Rail Option** 

Standard length

Without DIN rail (with bracket)

For 3 stations | Specify a longer rail than the total length For 24 stations of specified stations.

Nil


0

3

24

- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 172 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)
- The manifold block width is 19 mm for both the SY5000 and SY7000
- * Refer to page 295 for the fixation of DIN rail mounting type manifold.

#### How to Order Manifold Assembly

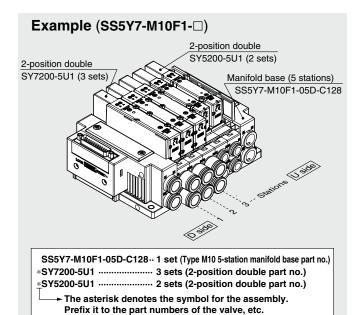


- For the valve arrangement, the valve closest to the D side is considered the 1st station. • Under the manifold part number, state the valves to be mounted in order starting
- with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 178. In such cases, use caution as there is also output on the A and B ports on the base side.
  - Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.



#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

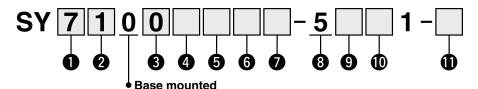

#### Series

5	SY5000
7	SY7000

2 Type of actuation

O Type of actuation			
1	2-position	Single	
2		Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
<b>B</b> ∗¹		N.O./N.O.	
C*1		N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

## 6 Pilot valve option

Nil Standard (0.7 MPa)	
B Quick response type (0.7 MP	
<b>K</b> *1	High pressure type (1.0 MPa)


*1 Only the metal seal type is available for the high pressure type.

Coil type

• con type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

## Manual override

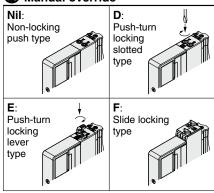

 Refer to page 34 for the safety slide locking manual override.

#### 8 Rated voltage

5	24 VDC
6	12 VDC

* Only 24 VDC is available for the serial transmission type.

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- "Nii" is not available for the SI unit manifold.
  For the non-polar type, be careful of surge voltage intrusion. Refer to page 293 for details. (Excludes when an SI unit manifold is used)
- * Only "Z" and "NZ" types are available with a power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details.
  EY500: pp. 99, 105, EY500: p. 115

EX500: pp. 99, 105 EX600: p. 115 EX250: p. 127 EX126: p. 143 EX120: p. 151

Type of mounting screw

<u>ועי שטי</u>	oc or infounting screw
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
   Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
   Refer to page 198 for base gasket and mounting screw part numbers.
   * "B" and "H" cannot be selected for the
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



**Mixed Mounting Type** 

(SY5000 and SY3000: ø8,

Refer to pages 157 and 158 for

dimensions of the external pilot, built-in silencer, and elbow fittings.

SY3000: ø8,


(SY5000 and

Fitting Manifold

Type 10/Side Ported Plug-in

**Connector Connecting Base** 

Dimensions: SY3000/5000 Series

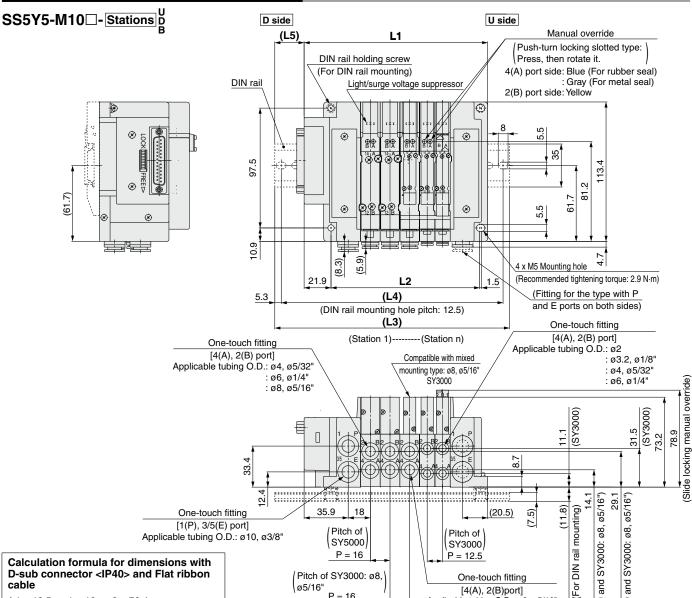

Pitch of

SY5000

P = 16

Pitch of SY3000: ø8,

ø5/16"

Calculation formula for dimensions with D-sub connector <IP40> and Flat ribbon

[1(P), 3/5(E) port]

Applicable tubing O.D.: ø10, ø3/8'

L1 = 12.5 x n1 + 16 x n2 + 76.4 L2 = 12.5 x n1 + 16 x n2 + 48

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.

L3 = 12.5 x M + 23

L4 = L3 - 10.5

L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000

(Including the stations of the SY3000: Ø8, Ø5/16")

Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box (Spring type), Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$  $L2 = 12.5 \times n1 + 16 \times n2 \times 48$ M = L1/12.5 + 1 Decimal fractions are truncated. L3 = 12.5 x M + 23 L4 = L3 - 10.5 L5 = (L3 - L1)/2

 $L6 = \dot{b} \times n3 + c$ 

calculation formula.

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø8, Ø5/16")

n3: Number of I/O units or input block stations Refer to pages 118 and 119 for dimensions of the EX600 serial transmission with I/O unit and page 129 for the EX250 serial transmission with input block when L6, b, and c are used for the

Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box (Spring type)	128	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralized System 2 (128 points)	88.7	_	_
EX500 Gateway Decentralized System (64 points)	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_

Pitch of

SY3000

P = 12.5

One-touch fitting

[4(A), 2(B)port]


Applicable tubing O.D.: ø8, ø5/16"

D-Sub connector <1F07>	90.5	_	
Terminal block box (Spring type)	128	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralized System 2 (128 points)	88.7	_	_
EX500 Gateway Decentralized System (64 points)	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_

Dimensions: SY5000/7000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base Mixed Mounting Type

# SS5Y7-M10 $\square$ -Stations $\stackrel{\text{U}}{\text{D}}$

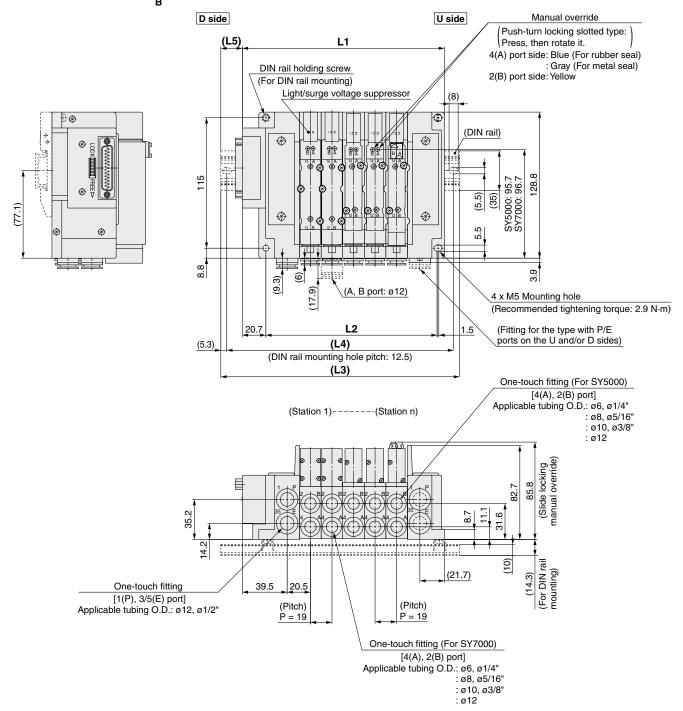

* Refer to page 159 for dimensions of the external pilot and built-in silencer.

* Refer to the pages below for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40> : p. 46 D-sub connector <IP67> : p. 49 Flat ribbon cable : p. 52 Terminal block box (Spring type) : pp. 62, 63 Terminal block box : p. 72 : p. 82 Lead wire : p. 92 Circular connector : p. 102 EX500 (128 points) : p. 108 EX500 (64 points) : pp. 120, 121 EX600 EX250 : p. 130 EX260 : p. 138 EX126 : p. 146 EX120 : p. 154

173



Chart

Type 11/Bottom Ported **Mixed Mounting Type** 

(Slide locking manual override)

78.9

(SX3000)

P=12.5

(H)

(20.5)

39

5

SY5000 a

(SY3000)

One-touch fitting

[4(A), 2(B) port]

· ø3 2 ø1/8"

: ø4. ø5/32'

: ø6, ø1/4"

Applicable tubing O.D.: ø2

73.2

Valve Specifications Valve Construction

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Circular Connecto

EX500 EX600

EX250

EX260 EX126

EX120


Manifold Fitting

Manifold

Plug-in **Connector Connecting Base** 


SS5Y5-M11 $\square$ -Stations  $\stackrel{\mathsf{U}}{\square}$ 

Dimensions: SY3000/5000 Series

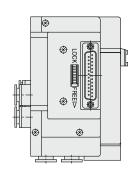

D side U side Manual override Push-turn locking slotted type: Press, then rotate it. 4(A) port side: Blue (For rubber seal) 4 x M5 Mounting hole : Gray (For metal seal) (Recommended tightening 2(B) port side: Yellow torque: 2.9 N·m) ⊗ Ø `&\@ 113.4 97. 21.9 1.5

(Station 1)----(Station n)

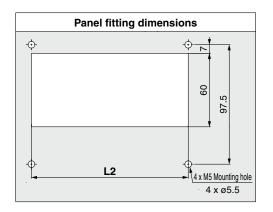

Compatible with mixed mounting type: ø8, ø5/16 SY3000 (Fitting for the type with P (SY5000 (9.5)and E ports on both sides) (Pitch of SY3000: ø8, ø5/16") P=16 (Pitch of SY5000) (Pitch of SY3000)

35.9  $\oplus$ 8 Fitting dimensions for panel mounting Refer to panel fitting dimensions for details. One-touch fitting

One-touch fitting

[4(A), 2(B) port]

Applicable tubing O.D.: ø4, ø5/32"

: ø6, ø1/4"

: ø8, ø5/16"

[1(P), 3/5(E) port] Applicable tubing O.D.: ø10, ø3/8"

P=16

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000:

Calculation formula for dimensions

 $1.1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$  $L2 = 12.5 \times n1 + 16 \times n2 + 48$ 

ø8, ø5/16")

Serial transmission: EX120

 $L6 = b \times n3 + c$ 

n3: Number of I/O units or input block stations

* Refer to pages 118 and 119 for dimensions of the EX600 serial transmission with I/O unit and page 129 for the EX250 serial transmission with input block when L6, b, and c are used for the calculation formula.

Coefficient b а С D-sub connector <IP40> or Flat ribbon cable 76.4 D-sub connector <IP67> 90.5 Terminal block box (Spring type) 128 Terminal block box or Serial transmission: EX126 149.3 Lead wire or Circular connector 97 EX500 Gateway Decentralized System 2 (128 points) 88.7 EX500 Gateway Decentralized System (64 points) 88.5 Serial transmission: EX600 (M12 connector) 141.5 47 81.5 Serial transmission: EX600 (7/8 inch connector) 158 47 81.5 Serial transmission: EX250 141.5 21 81.5 Serial transmission: EX260 88.7

Refer to page 160 for dimensions of the external pilot and built-in silencer.

One-touch fitting

[4(A), 2(B) port] Applicable tubing O.D.: ø8, ø5/16"

84.7

174


# Dimensions: SY5000/7000 Series


Plug-in Connecting Base


Type 11/Bottom Ported

Mixed Mounting Type

SS5Y7-M11 $\square$ -Stations  $\stackrel{\mathsf{U}}{\mathsf{D}}$ 

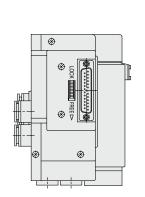

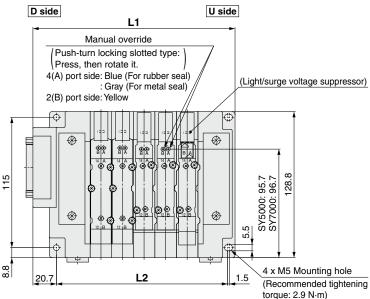

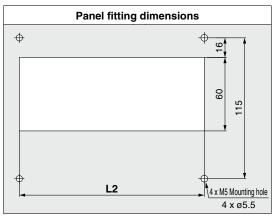


(Station 1) ----- (Station n)

(Station 1) ----- (Station n)

(Station 1) ----- (Station n)

(Station 1) ----- (Station n)

(Pitting for the type with P/E ports on the U and/or D sides)

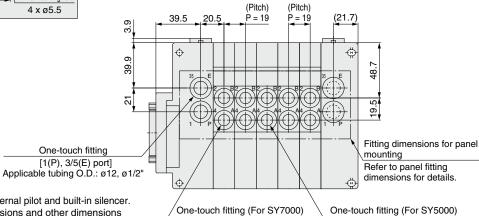

* Refer to page 161 for dimensions of the external pilot and built-in silencer.

* Refer to the pages below for L1, L2 dimensions and other dimensions that are not specified in each wiring specification.

Dimensions of Type 11/Bottom ported: p. 161 D-sub connector <IP40>
D-sub connector <IP67> : p. 46 : p. 49 Flat ribbon cable : p. 52 Terminal block box (Spring type) : pp. 62, 63 Terminal block box : p. 72 : p. 82 Lead wire Circular connector : p. 92 EX500 (128 points) : p. 102 EX500 (64 points) : p. 108 EX600 : pp. 120, 121 FX250 : p. 130 EX260 : p. 138 EX126 : p. 146 : p. 154

EX120

One-touch fitting (For SY7000)

[4(A), 2(B) port]

Applicable tubing O.D.: ø6, ø1/4"

: ø8, ø5/16"

: ø10, ø3/8"

: ø12

[4(A), 2(B) port]
Applicable tubing O.D.: ø6, ø1/4"
: ø8, ø5/16"
: ø10, ø3/8"
: ø12

With Pressure Sensor

Made to Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Lead Wire

Circular Connector EX500

EX600

EX250 EX260

EX126

EX120 Common Dimensions

Mixed Mounting

Manifold Exploded View

Fitting, Plug Part Nos.

Manifold Options

Specific Product Precautions



## Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable Terminal Block Box/Spring Type (IP67)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) EX245 (IP65) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120 EX180

#### Type 12 Top Ported

# 00/5000/7000 Series C € 25



For the SY5000 series, the SY5000 and the SY3000 can be mounted on the same manifold.
For the SY7000 series, the SY7000 and the SY5000 can be mounted on the same manifold.

#### **How to Order Manifolds**

Refer to pages 163 and 164 for the dimensions of Type 12/Top-ported type.

SS5Y|5|-M12 Mixed Mounting Type

Page

For the SY5000 series, it is possible to mount the SY3000 size valves on all stations. However, the SY3000 manifold block width should be 12.5 mm. (16 mm for Ø8 or Ø5/16" One-touch fitting)

Also, for the SY7000 series, it is possible to mount the SY5000 size valves on all stations. However, the SY3000 cannot be mounted onto the SY7000 series.

#### Series

<u> </u>	100
5	SY5000
7	SY7000

#### With Lead wire

Lead wire length		
1	0.6 m	
2	1.5 m	
3	3 m	

• With D-sub connector (IP40/67) and Flat ribbon cable

#### Connector entry direction

• • • • • • • • • • • • • • • • • • • •	
1	Upward
2	Lateral

It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

#### 4 Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
i	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

#### P, E port size (One-touch fittings)

Symbol	SY5000	SY7000	Note
Nil	ø10	ø12	Metric size
N	ø3/8"	ø1/2"	Inch size

## Connector type

F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	53
PG	Flat ribbon cable	20 pins	
PH		10 pins	
TC	Terminal block box	(Spring type)	64
Т	Terminal blo	ock box	73
L1		34 cores	
L2	Lead wire	17 cores	83
L3		9 cores	
M	Circular cor	nector	93
S□	Serial	EX500 Gateway Decentralized System 2 (128 points)	109
S□		EX500 Gateway Decentralized System (64 points)	111
S6□	transmission	EX600	123
SA□		EX245	124-1
S□		EX250	131
S□		EX260	139
<b>S4</b> □*1		EX126	147
<b>S3</b> □*1		EX120	155
<b>S8</b> □		EX180	156-1
*1 EX126, EX120 are not yet UL-compliant.			

- Refer to the pages shown in the table above

#### **5** P. E port entry

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

- *1 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.
- Refer to page 123 for the EX600 and 6 on page 131 for the EX250.

#### 6 SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	


- * The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- Refer to page 123 for the EX600 and 6 on page 131 for the EX250.

#### Mounting

	Nil	Direct mounting		
	D	DIN rail mounting (With DIN rail) DIN rail mounting (Without DIN rail)		
	D0			
	D3	stations	Specify a length longer than that of the standard rail.	
	:	÷	[For the SS5Y5-M12, the SY5000 valve is now at a mountable	
	D24	For 24 stations	length (manifold block length of 16 mm).]	

- * Refer to page 179 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)
- * Refer to page 295 for the fixation of DIN rail mounting type manifold.

## How to Order Manifold Assembly

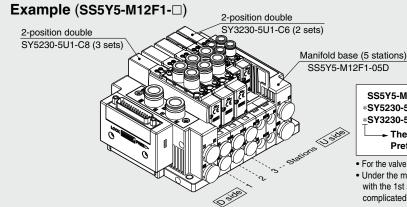

SS5Y5-M12F1-05D ··· 1 set (Type M12 5-station manifold base part no.) *SY5230-5U1-C8 ...... 3 sets (2-position double part no.)


*SY3230-5U1-C6 ...... 2 sets (2-position double part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

## How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

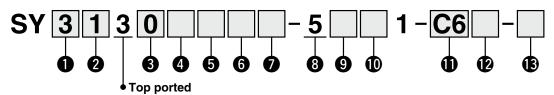

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• ',				
1	2-position	Single		
2		Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
<b>A</b> *1	4	N.C./N.C.		
<b>B</b> *1	4-position dual 3-port	N.O./N.O.		
C*1		N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

<u> </u>	ot typo
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

Г	Nil	None	
Н		Built-in	
*		he rubber seal type is available. A	
	manifold installed type is available if a back		

- pressure check valve with a metal seal is required. Refer to page 212 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

#### 8 Rated voltage

5	24 VDC
6	12 VDC

Only 24 VDC is available for the serial transmission type.

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	_	common	
NS	_		Negative	
NZ	•		common	


- "Nil" is not available for the SI unit manifold.
- For the non-polar type, be careful of surge voltage intrusion.

Refer to page 293 for details. (Excludes

when an SI unit manifold is used)
Only "Z" and "NZ" types are available with a power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details.

EX500: pp. 110, 112 EX600: p. 124 EX245: p. 124-1 EX250: p. 132 EX260: p. 140 EX126: p. 148 EX120: p. 156 EX180: p. 156-1

#### Manual override

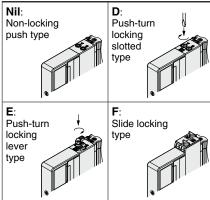

Refer to page 34 for the safety slide locking manual override.

## A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

<u> </u>						
Symbol	A, B port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
СЗ	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	-	_	•		
C12	ø12	_	_	•		

#### One-touch fitting (Inch)

one todon name (mon)						
Symbol	A, B port	SY3000	SY5000	SY7000		
N1	ø1/8"	•	_	_		
N3	ø5/32"	•	•	_		
N7	ø1/4"	•	•	•		
N9	ø5/16"	_	•	•		
N11	ø3/8"	_	_	•		

#### 1 Thread type

<b>•</b> • • • • • • • • • • • • • • • • • •					
Nil	Rc				
F	G				
N	NPT				
Т	NPTF				

* Only Nil is available for M5.

## Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the

manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 198 for base gasket and mounting screw part numbers.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

> Protective class class II (Mark:⟨ii⟩)



Valve Construction

Connecting Base

D-sub, Flat Ribbor Terminal Block

Circular Connecto

EX500 EX600

EX250 EX260

EX126

EX120

Manifold Fitting

Manifold

178®

Dimensions: SY5000 Series

Plug-in Type 12/Top Ported
Connector Connecting Base Mixed Mounting Type

SY3000)

8

: ø3.2, ø1/8"

: ø4, ø5/32"

: ø6, ø1/4"

01 : 16.2 C□: 14.5

SY5000) 47.3 (SY5000)

One-touch fitting

[4(A), 2(B) port]


SS5Y5-M12 $\square$ -Stations  $\stackrel{\mathsf{U}}{\underline{\mathsf{D}}}$ U side D side (L5) L1 Pitch of SY5000 Manual override 32.8 21.1 P = 16Push-turn locking slotted type: Light/surge voltage suppressor Press, then rotate it. Pitch of 78.9 4(A) port side: Blue (For rubber seal) SY3000 (Slide locking manual override) : Gray (For metal seal) P = 12.5 2(B) port side: Yellow (3) **®** 35) 26. (SY3000)

2 39

One-touch fitting

[1(P), 3/5(E) port]

One-touch fitting Applicable tubing O.D.: ø10, ø3/8" [4(A), 2(B) port] Applicable tubing O.D.: ø2 Applicable tubing O.D.: ø4, ø5/32" : ø6, ø1/4" : ø8, ø5/16" 5.3 L4 (DIN rail mounting hole pitch: 12.5) L3

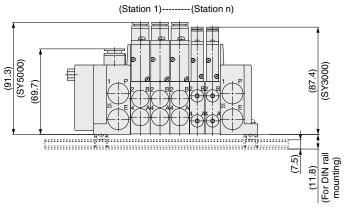

* Refer to page 158 for dimensions of the external pilot and elbow fittings.

#### Calculation formula for dimensions with D-sub connector <IP40> and Flat ribbon cable

 $L1 = 12.5 \times n1 + 16 \times n2 + 76.4$  $L2 = 12.5 \times n1 + 16 \times n2 + 48$ 

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

(61.7)

L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000

Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box (Spring type), Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ 

 $L2 = 12.5 \times n1 + 16 \times n2 \times 48$ 

M = L1/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = b \times n3 + c$ 

- n1: Number of valve stations of the SY3000
- n2: Number of valve stations of the SY5000
- n3: Number of I/O units or input block stations
- Refer to pages 118 and 119 for dimensions of the EX600 serial transmission with I/O unit and page 129 for the EX250 serial transmission with input block when L6, b, and c are used for the calculation formula.

Coefficient			
Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box (Spring type)	128	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralized System 2 (128 points)	88.7	_	_
EX500 Gateway Decentralized System (64 points)	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_



Chart

Type 12/Top Ported

Mixed Mounting Type

Valve Specifications

1t Valve Construction

Residual Varies Repla

Vacuum N Release Valve with Restrictor R

With Pressure Sensor

Made to Order

Connector Connecting Base

D-sub, Flat Ribbon Terminal Block

Wire Circular Connector

EX500

EX250

EX126

EX120

Dimensions

Mixed Mounting Manifold Exploded View


Fitting, Plug Part Nos.

pecific Product cautions

Plug-in Connector Connecting Base

SS5Y7-M12□-Stations D


Dimensions: SY7000 Series

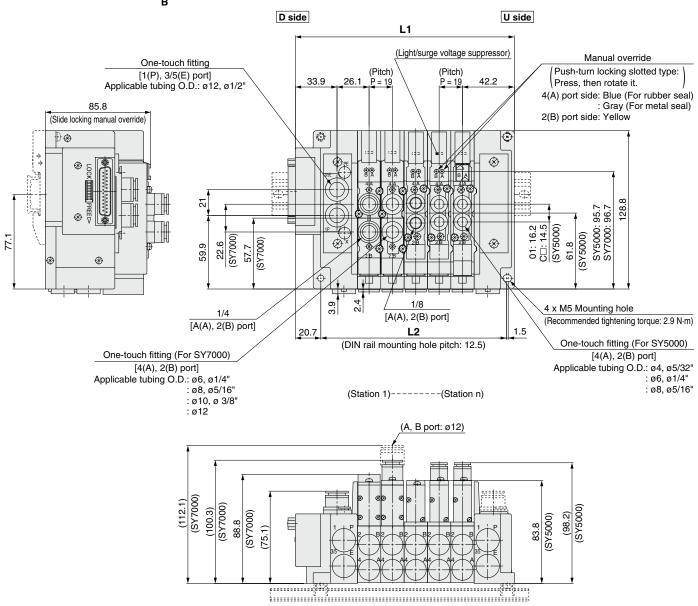


- st Refer to page 159 for dimensions of the external pilot and elbow fittings.
- Refer to the pages below for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.


Dimensions of Type 12/Top ported: p. 164 : p. 46 D-sub connector <IP40> D-sub connector <IP67> : p. 49 Flat ribbon cable : p. 52 Terminal block box (Spring type) : p. 63 Terminal block box : p. 72 : p. 82 Lead wire : p. 92 Circular connector EX500 (128 points) : p. 102 : p. 108 EX500 (64 points) EX600 : pp. 120, 121 EX250 : p. 130 EX260 : p. 138 : p. 146 EX126 EX120 : p. 154


# SY3000/5000/7000 Series Type 10, 11, 12 Connector Connecting Base Manifold Exploded View

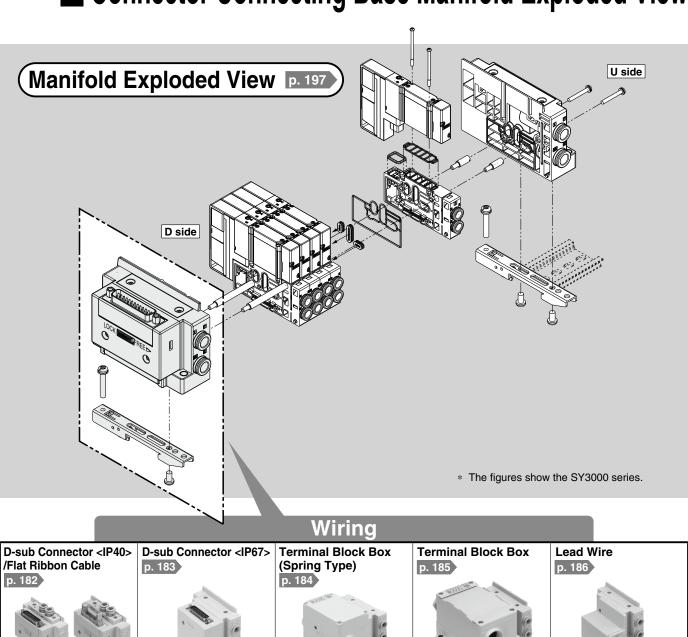

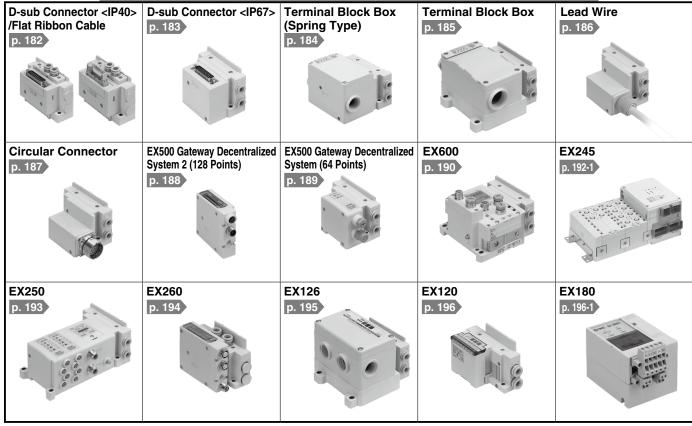



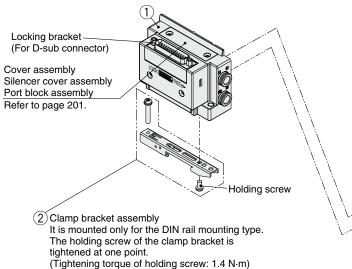

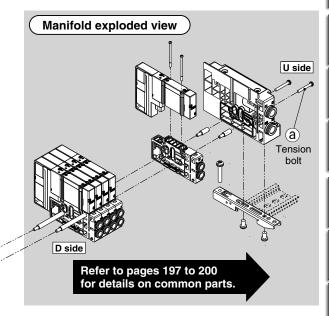

### Manifold Parts Nos.

1) SUP/EXH block assembly Mounting SY|3|0M-1-Nil Series For the bottom-ported type, the symbol is nil. **3** SY3000 SY5000 SY7000 Connector entry direction Upward SUP/EXH block assembly Lateral 11 D-sub connector <IP40> 12 Flat ribbon cable (26 pins) Pilot, Silencer/Piping type 13 Flat ribbon cable (20 pins) Flat ribbon cable (10 pins)

Symbol	Pilot	type	Built-in	Piping
0,	Internal	External	silencer	direction
Nil	•	_	_	
S	•	_	•	Side
R				
V	•	_	_	
RV	_		_	Тор
VP	•	_	●*1	
В	•	_	_	
BS	•	_	•	Bottom
BR	_	•		

- *1 For silencer (supply side) E port is plugged.
- "B" for the bottom-ported type can be selected for the SY5000/7000 series.

#### SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	SY3000	SY5000 SY7000
Tension bolt	None*1	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

#### ② Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


Part number is for one assembly.

Symbol	Р	, E port	SY3000	SY5000	SY7000	Note
C8	ø8		•	_	_	Side/Bottom/
C10		ø10	_	•	_	Top ported
C12		ø12	_	_	•	Metric size
N9	Ç	ø5/16"	•	_	_	Side/Bottom/
N11		ø3/8"	_	•	_	Top ported
N13		ø1/2"	_	_	•	Inch size
L8	>	ø8	•	_	_	Cido nombod
L10	elbow	ø10	_	•	_	Side ported Metric size
L12		ø12	_	_	•	METHO SIZE
LN9	Upward	ø5/16"	•	_	_	0:-1
LN11	ìà	ø3/8"	_	•	_	Side ported Inch size
LN13	$\supset$	ø1/2"	_	_	•	IIICH SIZE
B8	>	ø8	•	_	_	Cido nombod
B10	elbow	ø10	_	•	_	Side ported Metric size
B12		ø12			•	INICUIC SIZE
BN9	Downward	ø5/16"	•	_	_	Cido nombod
BN11	Š	ø3/8"	_	•	_	Side ported Inch size
BN13	Ճ	ø1/2"	_	_	•	IIICH SIZE
00*1	Plug		•	•	•	P/E port entry on one
00U*2		Plua				side or Top ported


Direct mounting DIN rail mounting (Without DIN rail)

P, E port size (One-touch fittings)

- *1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.
- *2 "00U" is available only for the D-sub connector type and it has an inch size locking bracket.

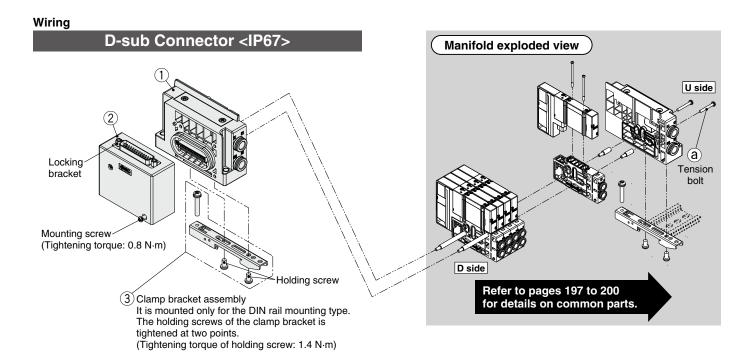

#### **Manifold Parts Nos.**

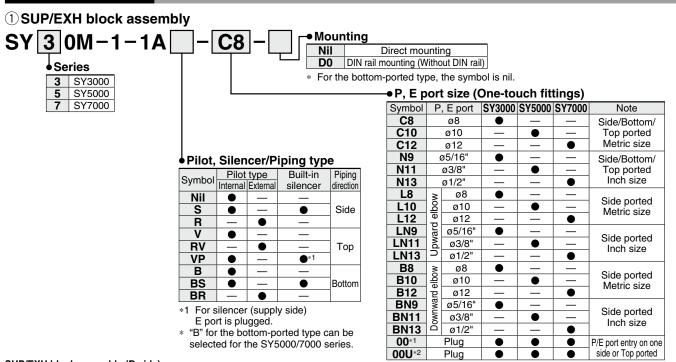

## SUP/EXH block assembly (D side) accessories and the number of accessories

acception and the name of acception				
Accessories	SY3000	SY5000 SY7000		
a Tension bolt	None*1	3 pcs.		

^{*1} Since the nuts are embedded in the SUP/EXH block

#### 2 D-sub connector block assembly <IP67>

Part no.	Connector direction	Locking bracket
SY30M-14-9A1	Тор	Metric size
SY30M-14-9A2	Side	Welfic Size
SY30M-14-9A1U	Тор	Inch size
SY30M-14-9A2U	Side	inich size

#### (3) Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

selected for the pilot and the piping.
*2 "00U" has an inch size locking bracket.

*1 It can be selected only if no symbol or "S" or "V" or "B" is


^{*} Part number is for one assembly.

# Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

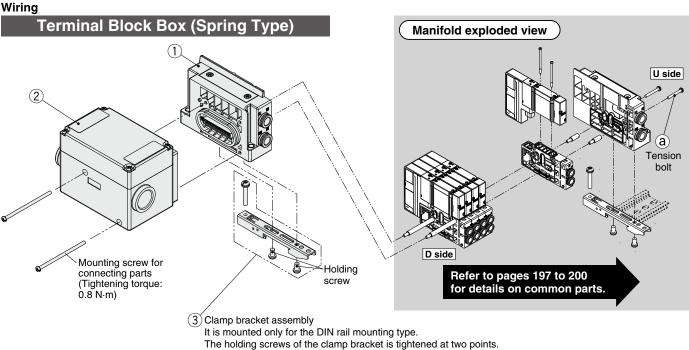

(Tightening torque of holding screw: 1.4 N·m)

## Manifold Parts Nos.

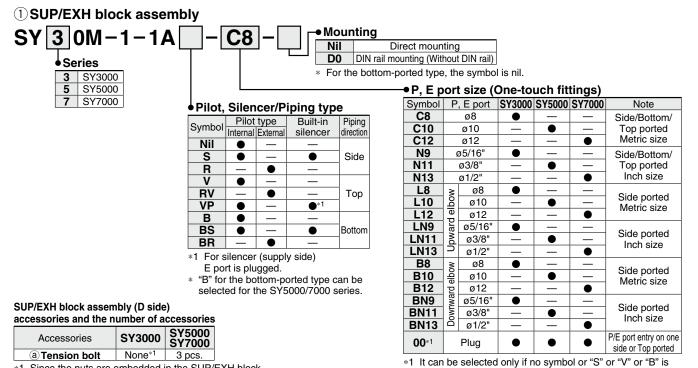

^{*1} Since the nuts are embedded in the SUP/EXH block

#### 2 Terminal block assembly

#### SY30M-130-1A

#### ③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.

Valve Specifications Valve Construction

Chart

Connecting Base Connector

D-sub, Flat Ribbor Terminal Block

Circular Connecto EX500

EX600

EX250


EX126

EX120


Manifold



selected for the pilot and the piping.

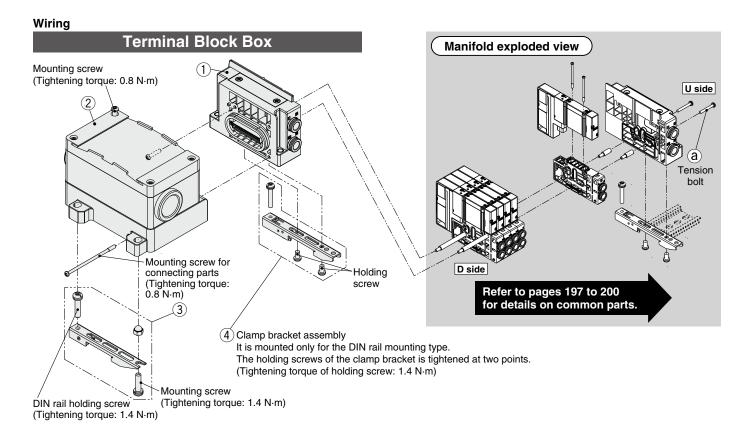

#### **Manifold Parts Nos.**

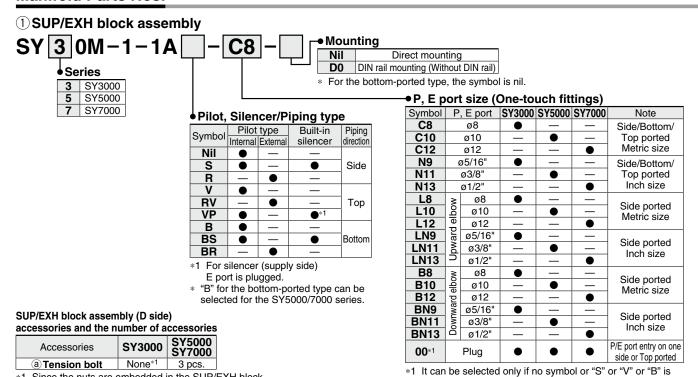

^{*1} Since the nuts are embedded in the SUP/EXH block

#### 2 Terminal block box housing assembly

#### VVQC1000-T0-1

3 Clamp bracket assembly for terminal block box

#### SY30M-15-4A

* Part number is for one assembly.


#### 4 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

selected for the pilot and the piping.


^{*} Part number is for one assembly.



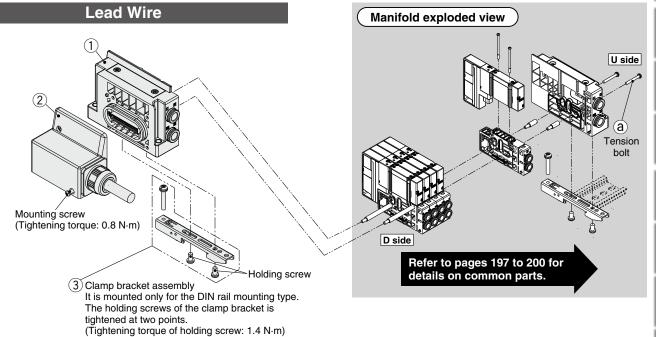

## Manifold Parts Nos.

1) SUP/EXH block assembly

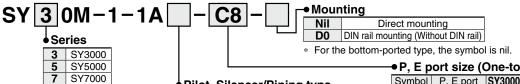

♦ Pilot, Silencer/Piping type							
Symbol	Pilot	type	Built-in	Piping			
Symbol	Internal	External	silencer	direction			
Nil	•	_	_				
S	•	_	•	Side			
R	_	•	_				
V	•	_	_				
RV	_	•	_	Top			
VP	•	_	●*1				
В	•	_	_				
BS	•	_	•	Bottom			
BR	_	•	_				

- *1 For silencer (supply side) E port is plugged.
- "B" for the bottom-ported type can be selected for the SY5000/7000 series.

#### SUP/EXH block assembly (D side) accessories and the number of accessories

accessories and the number of accessories						
Accessories	SY3000	SY5000 SY7000				
a Tension bolt	None*1	3 pcs.				

^{*1} Since the nuts are embedded in the SUP/EXH block


#### (2) Lead wire connector block assembly

SY30M-14-		_	7 <b>–</b> [		,. <b>,</b>	
Numb	er o	f cores		Le	ad wire l	ength [m]
	1	34		1	0.6	
	2	17		2	1.5	
	3	9		3	3	

#### ③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.

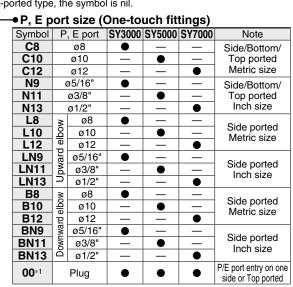

^{*1} It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

Valve Construction

Connecting Base Connector

D-sub, Flat Ribbon Terminal Block

Circular Connecto

EX500


EX600 EX250

EX126


EX120

Manifold



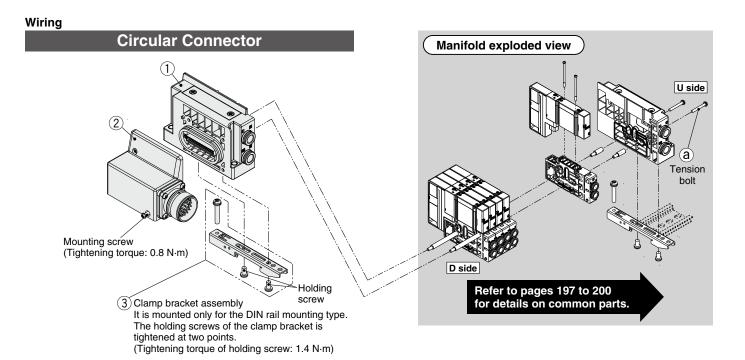

#### Manifold Parts Nos.

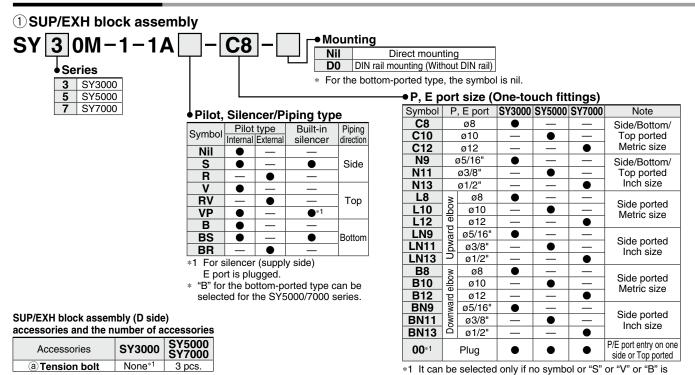

^{*1} Since the nuts are embedded in the SUP/EXH block

② Circular connector block assembly

#### SY30M-14-5A

* 26 pins

#### ③ Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.

selected for the pilot and the piping.


# Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series



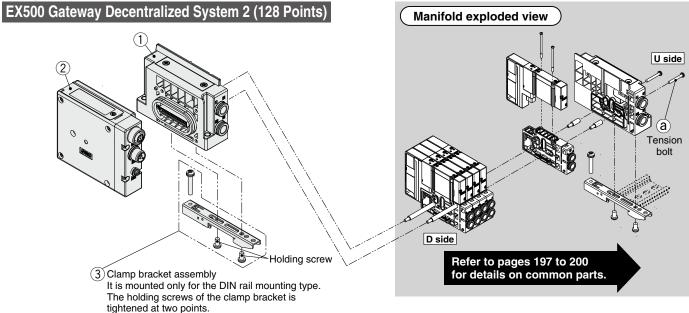

## Manifold Parts Nos.

1) SUP/EXH block assembly

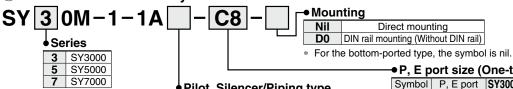

(Tightening torque of holding screw: 1.4 N·m)

● Pilot, Silencer/Piping type							
Symbol	Pilot		Built-in	Piping			
Symbol	Internal	External	silencer	direction			
Nil		_	_				
S	•	_	•	Side			
R	_	•	_				
V	•	_	_				
RV	_	•	_	Тор			
VP	•	_	●*1				
В	•	_	_				
BS	•	_	•	Bottom			
BR	_	•	_				

- *1 For silencer (supply side) E port is plugged.
- "B" for the bottom-ported type can be selected for the SY5000/7000 series.

#### SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

^{*1} Since the nuts are embedded in the SUP/EXH block

#### 2 EX500 SI unit

## EX500-S103

#### (3) Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.

			-						
• D		ort	0170	10	no to	uah 1		inaa)	
<b>▼</b> Γ, ∣	⊏ŀ	Οιι	SIZE	Ų	ne-to	ucii i	ILLI	iiigs <i>)</i>	
Cum	hal	В	Enor	+ (	CV2000	CVEN	20 0	CVZOOO	Ī

Symbol	P, E port		5 Y 3 U U U	SY5000	517000	Note	
C8	ø8			_	_	Side/Bottom/	
C10		ø10	_	•	_	Top ported	
C12		ø12	_	_	•	Metric size	
N9	Q	ø5/16"	•	_	_	Side/Bottom/	
N11		ø3/8"	_	•	_	Top ported	
N13		ø1/2"	_	_	•	Inch size	
L8	>	ø8	•	_	_	Cide newted	
L10	elbow	ø10	_	•	_	Side ported Metric size	
L12		ø12	_	_	•	IVICTIC SIZE	
LN9	Upward	ø5/16"	•	_	_	0:-1	
LN11	δ	ø3/8"	_	•	_	Side ported Inch size	
LN13		ø1/2"	_	_	•	IIICII SIZE	
B8	×	ø8	•	_	_	0:-1	
B10	elbow	ø10	_	•	_	Side ported Metric size	
B12		ø12	_	_	•	IVICTIC SIZE	
BN9	ownward	ø5/16"	•	_	_	Cide newted	
BN11	wn	ø3/8"	_	•	_	Side ported Inch size	
BN13	۵	ø1/2"		_	•	IIIOII SIZE	
00*1	Plug		•	•	•	P/E port entry on one side or Top ported	

^{*1} It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

Chart

Valve Construction

Connecting Base

D-sub, Flat Ribbor Terminal Block

Circular Connecto

EX500 EX600


EX250

EX126


EX120

Manifold



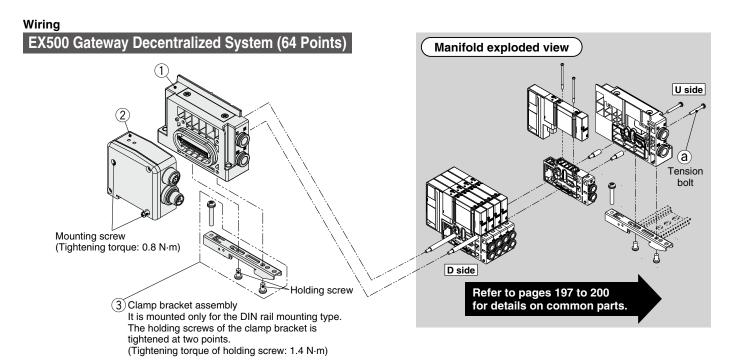

#### Manifold Parts Nos.

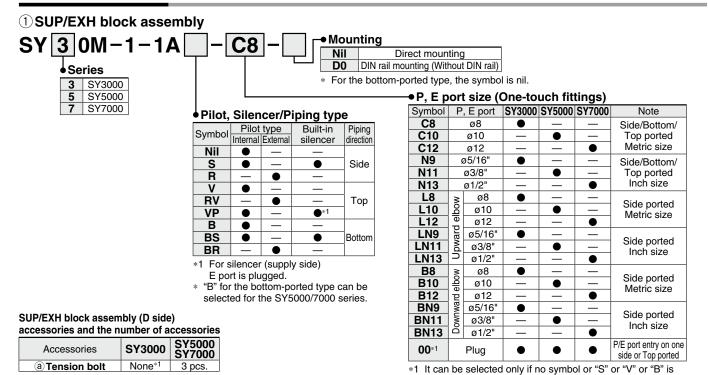

^{*1} Since the nuts are embedded in the SUP/EXH block

② EX500 SI unit EX500 - Q 0 01

## Output specifications


NPN (Positive common)PNP (Negative common)

#### (3) Clamp bracket assembly

<u> </u>	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.


selected for the pilot and the piping.

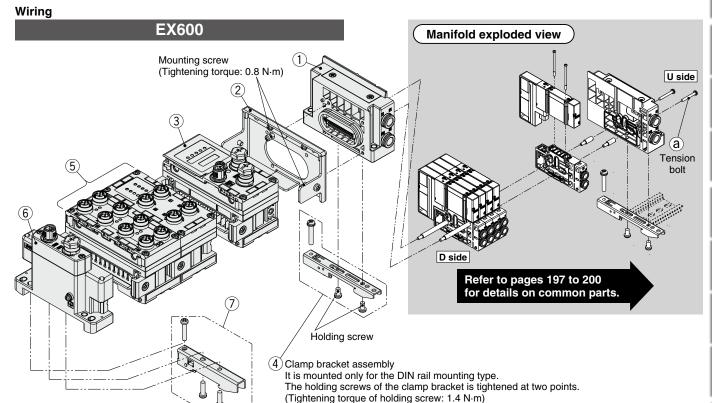

Direct mounting

#### Manifold Parts Nos.

1) SUP/EXH block assembly

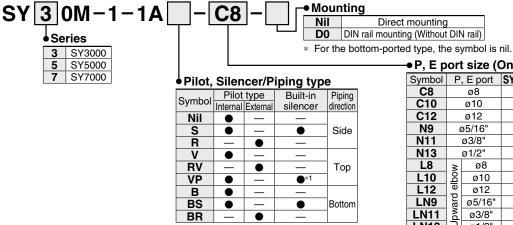

*1 For silencer (supply side) E port is plugged.

#### SUP/EXH block assembly (D side) accessories and the number of accessories

decession and the number of decession		
Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

*1 Since the nuts are embedded in the SUP/EXH block

→ P, E port size (One-touch fittings)						
Symbol	_				<u> </u>	Note
C8	ø8		•	_	_	Side/Bottom/
C10		ø10	_	•	_	Top ported
C12		ø12	_	_	•	Metric size
N9	Ç	ø5/16"	•	_	_	Side/Bottom/
N11		ø3/8"	_	•	_	Top ported
N13		ø1/2"	_	_	•	Inch size
L8	3	ø8	•	_	_	O'da a adad
L10	elbow	ø10	_	•	_	Side ported Metric size
L12	- 1	ø12	_	_	•	ivietric size
LN9	arc	ø5/16"	•	_	_	0:1
LN11	Upward	ø3/8"	_	•	_	Side ported Inch size
LN13		ø1/2"	_	_	•	IIICII SIZE
B8	<b>%</b>	ø8	•	_	_	0:-1
B10	elbow	ø10	_	•	_	Side ported Metric size
B12	Downward e	ø12	_	_	•	IVIELLIC SIZE
BN9		ø5/16"	•	_	_	Cide newted
BN11		ø3/8"	_	•	_	Side ported Inch size
BN13		ø1/2"	_	_	•	IIIOII SIZE
00*1	Plug		•	•	•	P/E port entry on one side or Top ported

side or Top ported *1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

[&]quot;B" for the bottom-ported type can be selected for the SY5000/7000 series.

Note that EX600-SEC1 and EX600-SEC2 EtherCAT compatible SI units are to be discontinued as of October 2022

#### **Manifold Parts Nos.**

2 Valve plate

#### EX600-ZMV2

* With mounting screws (2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)

#### ③ EX600 SI unit

# EX600-S PR 1

#### Protocol •

Symbol	Description	
PR	PROFIBUS DP	
DN	DeviceNet®	
MJ	CC-Link	
EN	EtherNet/IP™	
EC	EtherCAT	
PN	PROFINET	

#### Version

	Symbol	Description	
	Nil	When MJ, EN, EC, or	
INII	PN is selected		
	Α	When PR or DN is selected	

Output type

Symbol	Description	Condition
1	PNP (Negative common)	Can be selected by all protocols
2	NPN (Positive common)	Can be selected by all protocols
3	PNP (Negative common)	Can be selected in the case of EN/PN*1
4	NPN (Positive common)	Can be selected in the case of EN/PN*1

^{*1} For EN: Dual port EtherNet/IP™ product For PN: IO-Link unit compatible product

## ③ EX600 SI unit (Wireless compatible)



### Output type

Symbol	Description	
1	PNP (Negative common)	
2	NPN (Positive common)	

#### Protocol

Symbol	SI unit type	Description
EN	Wireless base module	EtherNet/IP™*1
PN	Wireless base module	PROFINET*1
SV	Wireless remote module	*1

^{*1} The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

#### 4 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.


#### Manifold Parts Nos.

#### 5 EX600 digital input unit

# EX600-DX P B

Number of inputs, open circuit detection, and connector

Symbol Number of inputs		Open circuit detection	Connector			
В	8	No	M12 connector (5 pins) 4 pcs.			
С	8	No	M8 connector (3 pins) 8 pcs.			
C1	8	Yes	M8 connector (3 pins) 8 pcs.			
D	16	No	M12 connector (5 pins) 8 pcs.			
E	16	No	D-sub connector (25 pins)			
F	16	No	Spring type terminal block (32 pins)			

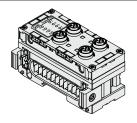

#### 5 EX600 digital output unit


EX600-DY P B

Output type

Number of outputs and connector

	Symbol	Description
	Р	PNP
	N	NPN

Symbol Number of outputs		Number of outputs	Connector			
	<b>B</b> 8		M12 connector (5 pins) 4 pcs.			
	E	16	D-sub connector (25 pins)			
	F	16	Spring type terminal block (32 pins)			

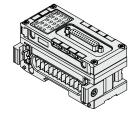

#### 5 EX600 digital input/output unit

EX600-DM|P||E

Number of inputs/outputs and connector

Symbol	Description	Symbol
Р	PNP	E
N	NPN	F

Symbol	Number of inputs	Number of outputs	Connector
E	8	8	D-sub connector (25 pins)
F	8	8	Spring type terminal block (32 pins)


#### **5** EX600 analog input/output unit

EX600-AX

Analog input/output

Number of input channels and connector

9			The state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the s			
Symbol	Description	Symbol	Number of input channels	Connector		
AX	Analog input	Α	2 channels	M12 connector (5 pins) 2 pcs.		
ΑY	Analog output					

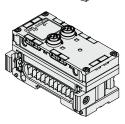

#### 5 EX600 analog input/output unit


#### EX600-AMB

Analog input/output

Number of input/output channels and connector

Description

Symbol	Number of input channels	Number of output channels	Connector
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs.

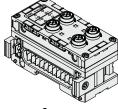

#### 6 EX600 IO-Link unit

EX600-L A

#### Port specification

Symbol	Description
Α	Port class A
R	Port class B


#### Number of ports and connector

	Trainibor or porto ana comicotor							
Symbol	Number of ports	Connector						
В	4 ports	M12 connector						
Ь	4 ports	(5 pins) 4 pcs.						

Symbol

#### **⚠** Caution

The applicable SI unit models are the PROFINET compatible EX600-SPN3 and EX600-SPN4. While there is also an EtherNet/ IP™ compatible made-to-order specification. the EX600-SEN3-X80, the manifold will also need to be made to order in this case

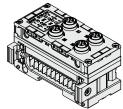

#### 7 EX600 end plate

**EX600-ED** Mounting

#### Power connector

	1 OWC1 COMMICCION
Symbol	Connector
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT,
-	A-coded, Pin arrangement 1
5	M12 power supply connector IN/OUT,
3	A-coded, Pin arrangement 2


* The pin layout for the "4" and "5" pin connectors is different.

#### ® Clamp bracket for EX600

#### EX600-ZMA3

#### **Enclosed parts**

Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.

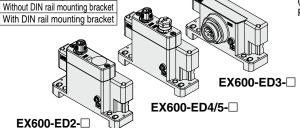



D-sub, Flat

Ribbor Terminal Block

Circular Connecto

EX500

EX600 EX250


EX260

EX126 EX120

Manifold


Wiring

#### **EX245**

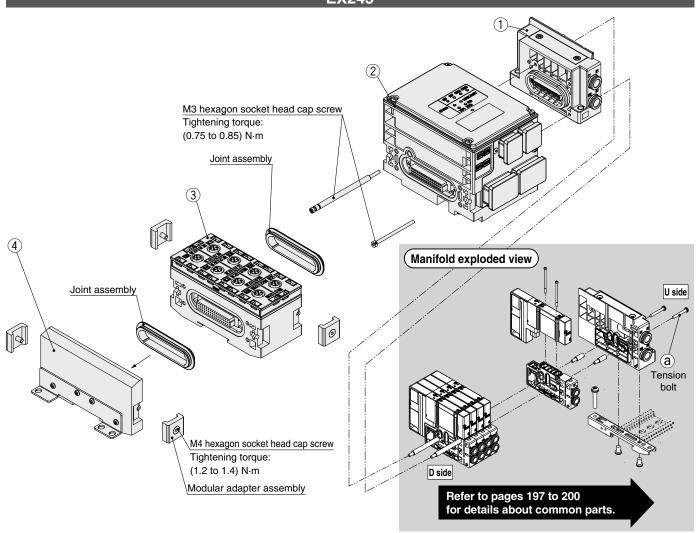

#### Manifold Parts No.



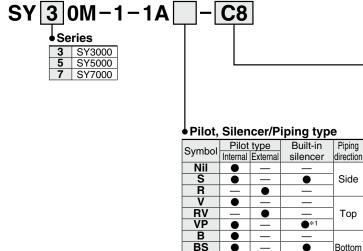

BR

#### →P, E port size (One-touch fittings)

	<u> </u>	<u> </u>	3120 (	Jiic-touc			
	Symbol	Р	, E port	SY3000	SY5000	SY7000	Note
	C8		ø8	•	_	_	Side/Bottom/
	C10		ø10	_	•	_	Top ported
	C12		ø12	_	_	•	Metric size
	N9	Ç	ø5/16"	•	_	_	Side/Bottom/
_	N11		ø3/8"	_	•	_	Top ported
	N13		ø1/2"	_	_	•	Inch size
1	L8	Ņ	ø8	•	_	_	Cido portod
	L10	Mod	ø10	_	•		Side ported Metric size
	L12	е	ø12	_	_	•	Metric Size
	LN9	arc	ø5/16"	•	_	_	Cido portod
	LN11	Upward	ø3/8"	_	•	_	Side ported Inch size
	LN13	_	ø1/2"	_	_	•	IIICII SIZE
	B8	elbow	ø8	•	_		Side ported
	B10	qle	ø10	_	•	_	Metric size
	B12		ø12			•	IVICTIC SIZE
	BN9	wa	ø5/16"	•	_		Side ported
3	BN11	Downward	ø3/8"	_	•	_	Side ported Inch size
	BN13	മ	ø1/2"	_	_	•	IIICII SIZE
ł	00*1		Plug	•	•	•	P/E port entry on one side or Top ported

^{*1:} It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### SUP/EXH block assembly (D side)

accessories and the number of accessories

Accessories	SY3000	SY5000/7000
a Tension bolt	None*1	3 pcs.

^{*1:} Since the nuts are embedded in the SUP/EXH block.

^{*1:} For silencer (supply side). E port is plugged.

^{*: &}quot;B" for bottom ported can be selected for the SY5000/7000 series.

#### Manifold Parts No.

2 EX245 SI Unit

# EX245 - S PN 1A

SI unit

#### Connector type


Symbol	Communication connector	Power supply connector
1A	Push Pull connector (SCRJ): 2 pcs.	Push Pull connector (24 V): 2 pcs.
2A	Push Pull connector (RJ45): 2 pcs.	Push Pull connector (24 V): 2 pcs.
3 <b>A</b>	M12 connector (4-pin, Socket, D-coded): 2 pcs.	7/8 inch connector (5-pin, Plug): 1 pc. 7/8 inch connector (5-pin, Socket): 1 pc.

③ EX245 Digital Input Module

#### EX245 - DX1

Digital input module specification

**DX1** Digital input (16 inputs)

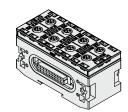

**③ EX245 Digital Output Module** 

#### EX245 - DY1

Digital output module specification

DY1 Digital output (8 outputs)



③ EX245 IO-Link module

### **EX245-LA1**

Port specification

Symbol	Description
Α	Port class A
В	Port class B





#### **⚠** Caution

The only available SI unit part number is "EX245-SPN\(\sigma\). (PROFINET compatible).

4 EX245 End Plate


EX245-EA2-3

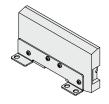

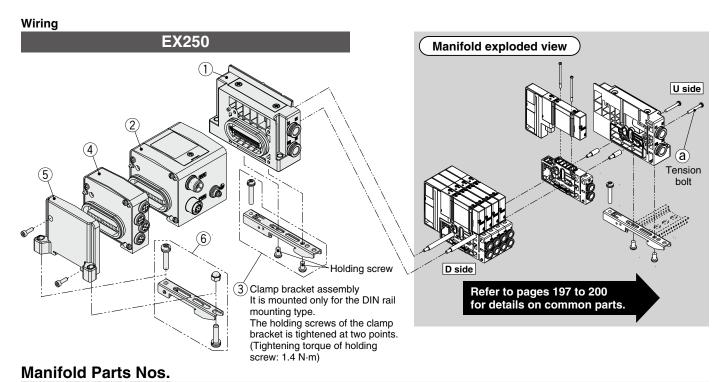

# 1 SUP/EXH block assembly

**7** SY7000

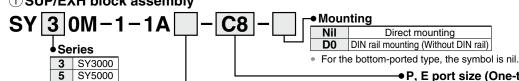

Pliot, Silencer/Piping type								
Symbol	Pilot	type	Built-in	Piping				
Syllibol	Internal	External	silencer	direction				
Nil	•	_	_					
S	•	_	•	Side				
R	_	•	_					
V	/ • — — —		_					
RV	_	•	_	Тор				
VP	•	_	<b>●</b> *1					
В	•	_	_					
BS	•	_	•	Bottom				
BR	_	•	_					

For silencer (supply side). E port is plugged.

"B" for the bottom-ported type can be selected for the SY5000/7000 series.

#### SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	SY3000	SY5000 SY7000	
Tension bolt	None*1	3 pcs.	

^{*1} Since the nuts are embedded in the SUP/EXH block

#### 2 EX250 SI unit

EX250-S DN1

Note that the EX250-SPR1 PROFIBUS DP compatible SI unit is to be discontinued as of November 2022.

#### Communication protocol

• • • • • • • • • • • • • • • • • • • •	
DN1	DeviceNet® (Negative common)
PR1	PROFIBUS DP (Negative common)
AS3	AS-Interface (8 in/8 out, 31 slave modes, 2 isolated common type) (Negative common)
AS5	AS-Interface (4 in/4 out, 31 slave modes, 2 isolated common type) (Negative common)
AS7	AS-Interface (8 in/8 out, 31 slave modes, 1 common type) (Negative common)
AS9	AS-Interface (4 in/4 out, 31 slave modes, 1 common type) (Negative common)
CA1A	CANopen (Negative common)
EN1	EtherNet/IP™ (Negative common)

#### ③ Clamp bracket assembly

Series	Part no.		
SY3000	SY30M-15-1A		
SY5000/7000	SY50M-15-1A		

^{*} Part number is for one assembly.

#### P, E port size (One-touch fittings)

S	Symbol	Р	, E port	SY3000	SY5000	SY7000	Note
	C8		ø8	•	_	_	Side/Bottom/
	C10		ø10	_		_	Top ported
	C12		ø12	_	_	•	Metric size
	М9	Q	5/16"	•	_	_	Side/Bottom/
	N11		ø3/8"	_	•	_	Top ported
	N13		ø1/2"	_	_	•	Inch size
	L8	>	ø8	•	_	_	Cido portod
	L10	elbow	ø10	_	•	_	Side ported Metric size
	L12		ø12	_	_	•	IVIELLIC SIZE
	LN9	arc	ø5/16"	•	_	_	Cida mantad
ı	LN11	ø5/16" ø3/8"		_		_	Side ported Inch size
ı	LN13	$\supset$	ø1/2"	_	_	•	111011 5126
	B8	×	ø8	•	_	_	Cida namad
	B10	elbow	ø10	_	•	_	Side ported Metric size
	B12		ø12	_	_	•	WIEUTO SIZE
	BN9	Ma	ø5/16"		_	_	Cida mantad
E	3N11	Downward	ø3/8"	_		_	Side ported Inch size
E	3N13	۵	ø1/2"	_	_		111011 5126
	00*1	Plug		•	•	•	P/E port entry on one side or Top ported

*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### 4 Input block

EX250-IE 1

#### Block type

1	M12 connector, 2 inputs
2	M12 connector, 4 inputs
3	M8 connector, 4 inputs

#### 5 EX250 end plate assembly

#### EX250-EA1


- * With mounting screws (2 pcs. of M3 x 10)
- 6 Clamp bracket assembly for EX250 SI unit

#### SY30M-15-3A

* Part number is for one assembly.




P/E port entry on one

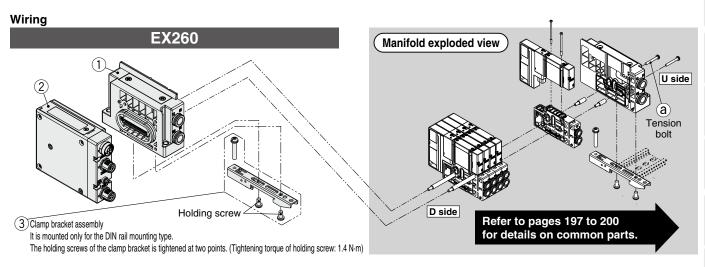

#### Manifold Parts Nos.

1) SUP/EXH block assembly

SY7000

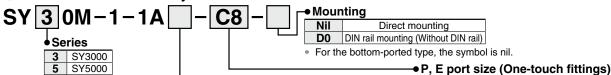

Nil

R V

RV

B

BS

accessories and the number of accessories					
Accessories	SY3000	SY5000 SY7000			
a Tension bolt	None*1	3 pcs.			

^{*1} Since the nuts are embedded in the SUP/EXH block

SUP/EXH block assembly (D side)

BR For silencer (supply side) E port is plugged.

Pilot, Silencer/Piping type Pilot type

•

•

Internal External

Built-in

silencer

Side

Top

**Bottom** 

"B" for the bottom-ported type can be selected for the SY5000/7000 series.

U	,o	ø10			_	_	Side/Bottom/
C	10			_	•	_	Top ported
C	12		ø12	_	_	•	Metric size
N	19	Ç	ø5/16"	•	_	_	Side/Bottom/
N.	11		ø3/8"	_	•	_	Top ported
N.	13		ø1/2"	_	_	•	Inch size
L	.8	>	ø8		_	_	Cide newted
L.	10	elbow	ø10	_	•	_	Side ported Metric size
L.	12	ı	ø12	_	_		IVIETITO SIZE
LI	N9	ag	ø5/16"	•	_	_	Cide newhood
LN	l11	Upward	ø3/8"	_	•	_	Side ported Inch size
LN	l13	$\supset$	ø1/2"	_	_	•	IIICII SIZE
В	8	3	ø8	•	_	_	Cide newted
B	10	elbow	ø10	_	•	_	Side ported Metric size
B	12	힏	ø12	_	_	•	Wiethic Size
BI	N9	Downward	ø5/16"	•	_	_	Cide newted
BN	111	Š	ø3/8"	_	•	_	Side ported Inch size
BN	113	△	ø1/2"	_	_	•	IIICII SIZE

Symbol P, E port | SY3000 SY5000 SY7000

### ② EX260 SI unit (Fieldbus and Industrial Ethernet)

EX260-S PR1

Com	♦ Communication protocol										
Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
DN1		32	Source/PNP (Negative common)		QAN	EC1		32	Source/PNP (Negative common)		DAN
DN2	DeviceNet®	32	Sink/NPN (Positive common)	M12	QA	EC2	EtherCAT	32	Sink/NPN (Positive common)	M12	DA
DN3	Devicemen	16	Source/PNP (Negative common)	IVIIZ	QBN	EC3	EllierCAT	16	Source/PNP (Negative common)	IVITZ	DBN
DN4		10	Sink/NPN (Positive common)		QB	EC4		10	Sink/NPN (Positive common)		DB
PR1	00		32 Source/PNP (Negative common)		NAN	PN1		32	Source/PNP (Negative common)		FAN
PR2		32	Sink/NPN (Positive common)	M12	NA	PN2	PROFINET	32	Sink/NPN (Positive common)	M12	FA
PR3	PROFIBUS DP	16	Source/PNP (Negative common)	IVI I Z	NBN	PN3 PN4	FHOFINE	16	Source/PNP (Negative common)	IVITZ	FBN
PR4		10	Sink/NPN (Positive common)		NB				Sink/NPN (Positive common)		FB
PR5	PROFIBUS DP	32	Source/PNP (Negative common)	D-sub*1	NCN	EN1	EtherNet/IP™	32	Source/PNP (Negative common)	M12	EAN
PR6		32	Sink/NPN (Positive common)		NC	EN2			Sink/NPN (Positive common)		EA
PR7		16	Source/PNP (Negative common)	D-Sub ·	NDN	EN3	Elliethel/IP····	16	Source/PNP (Negative common)	IVITZ	EBN
PR8		10	Sink/NPN (Positive common)		ND	EN4		10	Sink/NPN (Positive common)		EB
MJ1	CC Link	32	Source/PNP (Negative common)		VAN	PL1	Ethernet	32	Source/PNP (Negative common)	M12	GAN
MJ2		32	Sink/NPN (Positive common)	M12	VA	PL3	3 POWERLINK	16	Source/FINF (Negative continion)	IVITZ	GBN
MJ3	OO-LIIK	16	Source/PNP (Negative common)	IVIIZ	VBN	IL1	IO-Link	32	Source/PNP (Negative common)	M12	KAN
MJ4		10	Sink/NPN (Positive common)		VB						

**SMC** 

#### **EX260 SI Unit (Safety Communication)**

EX260-F|PS1

Ť	Co	mmı	ınica	tion	prof	locol

Symbol Protoco	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
PS1 PROFIsa	fe 32	Source/PNP (Negative common)	M12	FPN

#### 3 Clamp bracket assembly

Plug


00*1

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


 Part number is for one assembly.

side or Top ported *1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

^{*1} Enclosure is IP40 when the communication connector is D-sub.

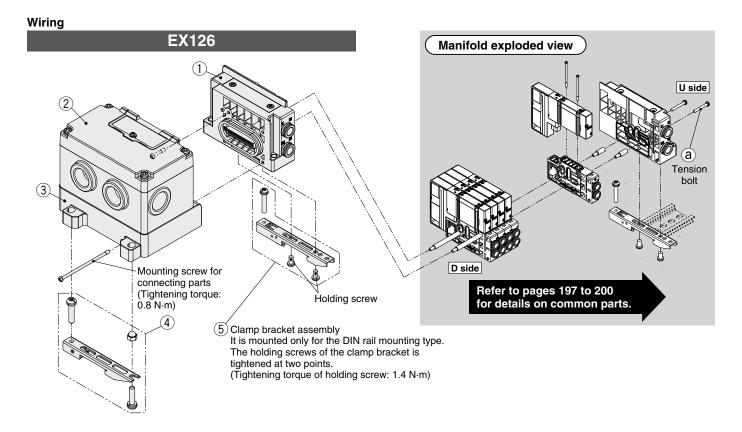

#### Manifold Parts Nos.

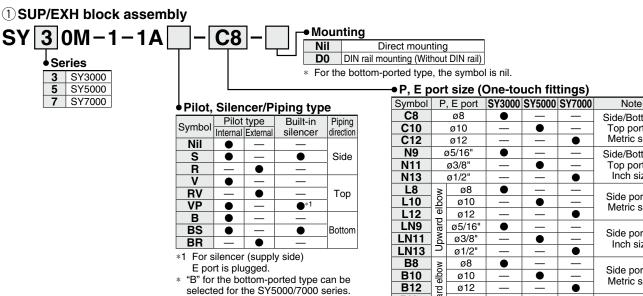

SY3000

SY5000 SY7000

3 pcs.

2 EX126 SI unit

Accessories

#### EX126D-SMJ1

SUP/EXH block assembly (D side) accessories and the number of accessories

Tension bolt None*1

* CC-Link (Positive common)

③ Terminal block plate assembly

VVQC1000-74A-2

C10		~10				
		ø10	_		<b>—</b>	Top ported
C12		ø12	_	_	•	Metric size
N9	Ç	ø5/16"	•	_	_	Side/Bottom/
N11		ø3/8"	_	•	_	Top ported
N13		ø1/2"	_	_	•	Inch size
L8	>	ø8	•	_	_	Cido nomed
L10	elbow	ø10	_	•	_	Side ported Metric size
L12		ø12	_	_	•	IVICUIC SIZE
LN9	Upward	ø5/16"	•	_	_	Cida named
LN11	à	ø3/8"	_	•	_	Side ported Inch size
LN13	$\supset$	ø1/2"	_	_	•	- ITICIT SIZE
B8	>	ø8	•	_	_	Cido nomed
B10	elbow	ø10	_	•	_	Side ported Metric size
B12		ø12	_	_	•	ivietric size
BN9	Wa	ø5/16"	•	_	_	Olala is autori
BN11	Downward	ø3/8"	_	•	_	Side ported Inch size
BN13	ă	ø1/2"	_	_	•	inch size
00*1	Plug		•	•	•	P/E port entry on one side or Top ported

^{*1} It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### 4 Clamp bracket assembly for EX126 SI unit

#### SY30M-15-4A

* Part number is for one assembly.

#### (5) Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

Part number is for one assembly.



^{*1} Since the nuts are embedded in the SUP/EXH block

Note

Side/Bottom/

Top ported

Metric size

Side/Bottom/ Top ported

Inch size

Side ported Metric size

Side ported

Inch size

Side ported

Metric size

Side ported

Inch size

P/E port entry on one

•


•

•

•

•

lacksquare

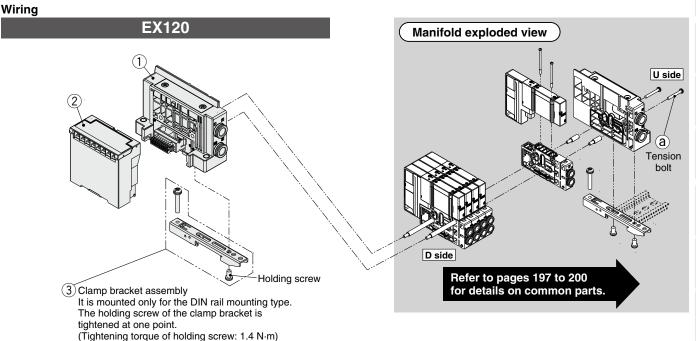

C10

C12

N9

N11

N13

L8

L12

LN9

LN11

LN13

B8

B10

BN9

BN11

BN13

00*1

**B12** 

L10

ø10

ø12

ø5/16

ø3/8'

ø1/2'

ø8

ø10

ø12

ø5/16'

ø3/8"

ø1/2'

ø8

ø10

ø12

ø5/16"

ø3/8"

ø 1/2"

Plug

Downward

#### Manifold Parts Nos.

1) SUP/EXH block assembly

Mounting SY|3|0M-1-16A Nil Direct mounting DIN rail mounting (Without DIN rail) Series For the bottom-ported type, the symbol is nil. **3** SY3000 SY5000 P, E port size (One-touch fittings) SY7000 Symbol P, E port | SY3000 | SY5000 | SY7000 |

◆ Pilot, Silencer/Piping type									
Symbol	Pilot type Internal External		Built-in	Piping					
Symbol	Internal	External	silencer	direction					
Nil		_	_						
S	•	_	•	Side					
R	_	•	_						
V	•	_	_						
RV	_	•	_	Тор					
VP	•	_	<b>●</b> *1						
В	•	_	_						
BS	•	_	•	Bottom					
BR	_		_						

- *1 For silencer (supply side) E port is plugged.
- "B" for the bottom-ported type can be selected for the SY5000/7000 series.

#### SUP/EXH block assembly (D side) accessories and the number of accessories

accessories und the number of accessories						
Accessories	SY3000	SY5000 SY7000				
a Tension bolt	None*1	3 pcs.				

*1 Since the nuts are embedded in the SUP/EXH block

#### side or Top ported *1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### 2 EX120 SI unit

# EX120-S DN1

#### Communication protocol


DN1	DeviceNet® (Positive common)
CS1	OMRON Corp.: CompoBus/S (16 outputs) (Positive common)
CS2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common)
MJ1	CC-Link (Positive common)
CM1	CompoNet® NPN (Positive common)
СМЗ	CompoNet® PNP (Negative common)

#### (3) Clamp bracket assembly

<u> </u>	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


^{*} Part number is for one assembly.



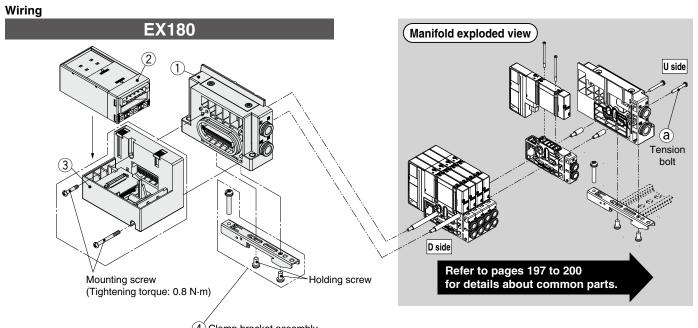


(4) Clamp bracket assembly
It is mounted only for the DIN rail mounting type.
The holding screws of the clamping bracket is tightened at two points.
(Tightening torque of holding screw: 1.4 N·m)

#### Manifold Parts No.

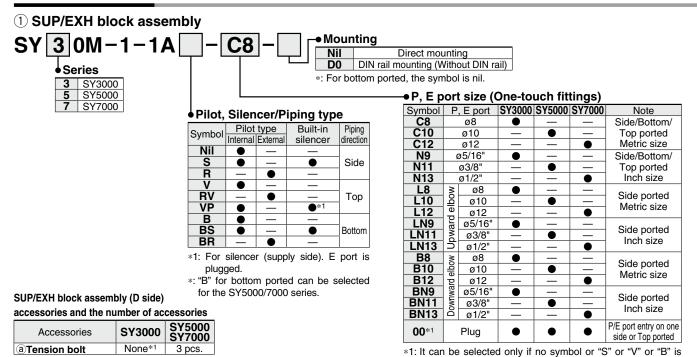

^{*1} Since the nuts are embedded in the SUP/EXH block.

# selected for the pilot and the piping. 3 Connector block assembly

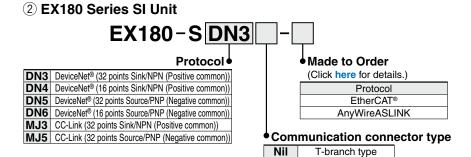

### 4 Clamp bracket assembly

SY30M-14-17A

<u> </u>	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*:} Part number is for one assembly.


^{*:} Communication and power supply connectors are included.



Straight type




# Manifold Exploded View (Common Parts)

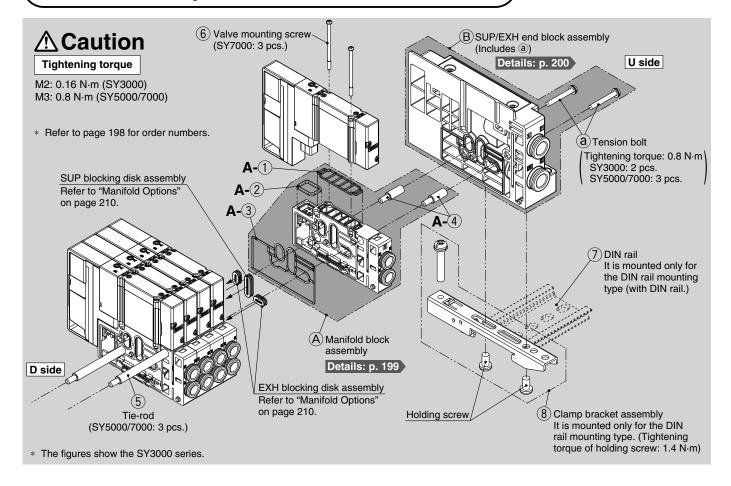

#### Type 10, 11, 12: How to Increase Connector Type Manifolds

1 Loosen the U-side tension bolt ⓐ, and remove the ® SUP/EXH end block assembly.

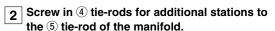


Screw them in until there is no gap between the tie-rods.

Connect the (A) manifold block assembly and (B) SUP/EXH end block assembly to be added, and tighten the tension bolt (a).

Tightening torque for tension bolt @ (M3): 0.8 N·m

#### **⚠** Caution

- Be sure to shut off the power and air supplies before disassembly.
  - Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the tension bolt is inadequate.

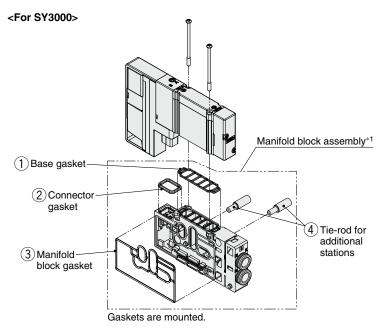

*1 Manifold block assembly

-	No.	Description	Quantity	Note						
1)(	123 Gasket		3	For base, connector, and manifold block						
(	Tie-rod for additional stations		SY3000: 2 pcs. SY5000: 3 pcs. SY7000: 3 pcs.							

Refer to page 198 for ordering single unit.



#### For SS5Y3-10/11/12, SS5Y5-(M)10/11/12, SS5Y7-(M)10/11/12

No.		Description		SY3000	SY5000 SY7000		Note					
<b>A-</b> ①	mbly	Base gasket (for connector connecting base)		SY30M-9-1A	SY50M-9-1A	SY70M-9-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)					
<b>A-</b> ②	em	Conne	ctor gasket			SX3000-146-2		Supplied individually				
<b>A-</b> 3	ass	Manifo	ld block gasket		SY30M-9-2	SY50M-9-2	SY70M-9-2	Supplied individually				
	block	<u>*</u> a c	SY3000/5000/70	00	<b>SY30M-49-2-A</b> (10.5 mm pitch)	<b>SV2000-55-2A-A</b> (16 mm pitch)	<b>SY70M-49-2-A</b> *2 (19 mm pitch)	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)				
<b>A-</b> ④	Manifold		dition	dition ations	For mixed mounting of SY3000/5000: SY3000 A, B port size Ø8, Ø5/16"		For mixed mounting of SY3000/5000: SY3000 A, B port size Ø8, Ø5/16"		<b>SV2000-55-2A-A</b> (16 mm pitch)		_	3 pcs. supplied
	Ma	ı± a ±	For mixed mounting of SY3000/5000: SY3000 except A, B port size Ø8, Ø5/16"*4			<b>M-49-2</b> m pitch)	_	3 pcs. supplied				
			SY3000/5000/7000		SY3000/5000/7000		VVQC1000-TR-□ (10.5 mm pitch)	<b>SV2000-55-1-</b> □ <b>-A</b> (16 mm pitch)	<b>SY70M-49-1-</b> □ <b>-A</b> (19 mm pitch)	☐: Manifold stations (2 to 24 stations) 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)		
5	Tie	e-rod	SS5Y5-M**		<b>)-1-⊡-A</b> * ^{3∗4} m pitch)							
		Mixed mounting type manifold		555 Y 5-IVI	<b>SV2000-55-1-</b> □ <b>-A</b> * ⁵ (16 mm pitch)		_	☐: Manifold stations (2 to 24 stations) 3 pcs. supplied				
				SS5Y7-M**	_	<b>SY70M-</b> 4 (19 mn	—					
(6)	1	Valve	Round head combination screw		<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are as follows. SY3000/5000: for 10 valves (20 pcs. included)				
		ounting Crew Hexagon socket head cap screw		<b>SY3000-222-1A</b> (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	SY7000: for 10 valves (30 pcs. included)					
7	DIN rail		VZ1000	-11-1-□	VZ1000-11-4-□	Refer to page 203.						
8	8 Clamp bracket assembly (for connector connecting base)		SY30M-15-1A	SY50M	-15-1A	Supplied individually						
(a)	Tension bolt (for connector connecting base)*6		AC00530	SX3000	-145-21	Supplied individually						

^{*1} The manifold of the SY3000 (SS5Y3-10/11/12) can be assembled by connecting the tie-rods for additional stations for the number of manifold stations. However, the manifold of the SY5000 or SY7000 (SS5Y5/7-10/11/12 including mixed mounting) cannot be assembled by connecting the tie-rods for additional stations for the number of manifold stations.

^{*2} Includes the case when mounting with the SY5000 *3 When mounting only the SY3000 (12.5 mm pitch except A, B port size Ø8, Ø5/16")


^{*4} The port sizes except A, B port size Ø8, Ø5/16" are the following: Ø2, Ø3.2, Ø4, Ø6, Ø1/8", Ø5/32", Ø1/4".

^{*5} When mounting only the SY3000 (16 mm pitch A, B port size ø8, ø5/16")

^{*6} For the SY3000 SUP/EXH end block (there are no tension bolts for the SY3000 SUP/EXH block) or the SY5000 and SY7000 SUP/EXH (end) block

#### Manifold Parts Nos.




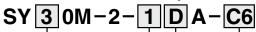



#### Piping direction 1 Side/Top ported 2 Bottom ported

"2" (bottom ported) can be selected for the SY5000/7000 series.

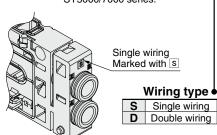

A, B port size (One-touch fittings)

Symbol	A, B port	SY3000	SY5000	SY7000	Note
C2	ø2	•	_	_	
C3	ø3.2	•	_	_	Side/
C4	ø4	•	•	_	Bottom
C6	ø6	•	•	•	ported
C8	ø8	*1	•	•	Metric
C10	ø10	_	_	•	size
C12	ø12	_	_	•	
N1	ø1/8"	•	_	_	Side/
N3	ø5/32"	•	•	_	Bottom
N7	ø1/4"	•	•	•	ported
N9	ø5/16"	*1	•	•	Inch
N11	ø3/8"	_	_	•	size
*1 Re	efer to mixed	d mounti	na type	for ø8. ø	5/16".

	Symbol	A	A, B port	SY3000	SY5000	SY7000	Note
	L4		ø4	•	•	_	
	L6		ø6	•	•	•	Side
ı۱	L8	Š	ø8	*1	•	•	ported Metric
П	L10	elp	ø10	_	_	•	size
	L12		ø12	_	_	•	3120
	LN3	Jpward	ø5/32"	•	_	_	Side
	LN7	ď	ø1/4"	•	•	_	ported
٦	LN9		ø5/16"	*1	•	_	Inch
ı۱	LN11		ø3/8"	_	_	•	size
ı	B4		ø4	•	•	_	
	B6	>	ø6	•	•	•	Side
	B8	wod	ø8	*1	•	•	ported Metric
_	B10	е	ø10	_	_	•	size
	B12	ard	ø12	_	_	•	3120
	BN3	≥	ø5/32"	•	_	_	Side
	BN7	W	ø1/4"	•	•	_	ported
	BN9	Ŏ	ø5/16"	*1	•	_	Inch
	BN11		ø3/8"	_	_	•	size
	00		Plug	•	•	•	Top ported

(A) Manifold (All parts inside — - - are included.)

1 Base gasket

(4) Tie-rod for

additional stations

block assembly

(3) Manifold block gasket

(2) Connector

gasket

(A) Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000

SY50M-2-|3||D|A-|C6|

# Piping direction

·	
3	Side/Top ported
4	Bottom ported

#### Wiring type ♦ Single wiring Double wiring

d	Α.	В	port	size	(One-touch	fittings)
7	,	_	2011	OILU	(0110 104011	

						,		
Symbol	A, B port	Note	Symbol	F	A, B port	Note		
C2	ø2	0:1 /D !!	L4	NO.	ø4	Side ported		
C3	ø3.2	Side/Bottom		L6	음		Metric size	
C4	ø4	ported Metric size	LN3	pward	ø5/32"	Side ported		
C6	ø6	IVICUIO 3126	LN7	3	ø1/4"	Inch size		
N1	ø1/8"	Side/Bottom	B4	bow	ø4	Side ported		
N3	ø5/32"	ported	<b>B6</b>	டு	ø6	Metric size		
N7	ø1/4"	Inch size	BN ₃	vnward	ø5/32"	Side ported		
			BN7	Š	ø1/4"	Inch size		

00 Plug Top ported (A) Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000 for Ø8, Ø5/16" (A manifold block assembly for mounting the SY3000 valves on the

# SY50M-2-|5||D|A-

SY5000 manifolds at A, B port size: Ø8, Ø5/16")

#### Piping direction Side ported 6 Bottom ported

Wiring type Single wiring **D** Double wiring

#### ♠A, B port size (One-touch fittings)

l	Symbol	A,	B port	Note
	C8		ø8	Side/Bottom ported Metric size
	N9	Ø	5/16"	Side/Bottom ported Inch size
	L8	Upward	ø8	Side ported Metric size
	LN9	elbow	ø5/16"	Side ported Inch size
	B8	Downward	ø8	Side ported Metric size
	BN9	elbow	ø5/16"	Side ported Inch size

#### Manifold block assembly accessories and the number of accessories

Gaskets are mounted.

Accessories	SY3000	SY5000 SY7000*1	
Base gasket	1 pc.		
② Connector gasket	1	oc.	
3 Manifold block gasket	1	oc.	
4 Tie-rod assembly for additional stations	2 pcs.	3 pcs.	
	•		

*1 Including mixed mounting type

#### **A** Mixed mounting of the SY5000/7000 Manifold block assembly for mounting the SY5000

SY70M-2-3 DA-C10

# Piping direction

Side/Top ported Bottom ported


#### Wiring type Single wiring


Double wiring

<b>♦ A</b> ,	B port s	-tou	ch	fitting	s)	
Symbol	A, B port	Note	Symbol	F	A, B port	

,	- · · · -   · · · · · · · · · · · · · ·									
Symbol	A, B port	Note	Symbol A	, B port	Note	Symbol	P	A, B port	Note	
C6	ø6	L6 ≥		ø6		<b>B6</b>	W	ø6		
C8	ø8	Side/Bottom	L8 음	ø8	Side ported	B8	elbow	ø8	Side ported	
C10	ø10	ported Metric size	L10 ©	ø10	Metric size	B10		ø10	Metric size	
C12	ø12	WIGHTO SIZE	L12 ह	ø12		<b>B12</b>	wa	ø12		
N7	ø1/4"	Side/Bottom	LN11 S	ø3/8"	Side ported	BN11	owr	ø3/8"	Side ported	
N9	ø5/16"	ported		Ø 3/ O	Inch size		۵	Ø 3/0	Inch size	
N11	ø3/8"	Inch size				00		Plug	Top ported	

#### Manifold Parts Nos.

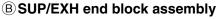

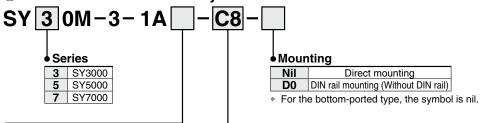

♦ Pilot, Silencer/Piping type

Symbol	Pilot Internal	type External	Built-in silencer	Piping direction
Nil	•	_	_	
S	•	_	•	Side
R	_	•	_	
V	•		_	
RV	_	•	-	Тор
VP		_	●*1	
В		_	_	
BS	•	_	•	Bottom
BR	_	•	_	


*1 For silencer (supply side) E port is plugged.

"B" for the bottom-ported type can be selected for the SY5000/7000 series.

P, E port size (One-touch fittings)

Symbol	Р	, E port	SY3000	SY5000	SY7000	Note	
C8		ø8	•	_	_		
C10		ø10	_	•	_	Side/Bottom/Top ported  Metric size	
C12		ø12	_	_		Wethe Size	
N9	Q	ø5/16"	•		_	Cida/Dattam/Tan nartad	
N11		ø3/8"	_	•	_	Side/Bottom/Top ported Inch size	
N13		ø1/2"	_	_	•	men size	
L8	>	ø8	•		_	Side ported	
L10	elbow	ø10	_	•	_	Metric size	
L12		ø12	_		•	Wethe Size	
LN9	ard	ø5/16"		_	_	Cide ported	
LN11	bw	ø3/8"		•	_	Side ported Inch size	
LN13	n	ø1/2"	_	_	•	men size	
B8	ě	ø8	•		_	Side ported	
B10	elbow	ø10	_	•	_	Metric size	
B12		ø12	_		•	1110110 0120	
BN9	Downward	ø5/16"	•		_	Side ported	
BN11	owr	ø3/8"	_	•	_	Side ported Inch size	
BN13	ŏ	ø1/2"	_	_	•	mon size	
00*1		Plug	•	•	•	P/E port entry on one side or Top ported	

*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

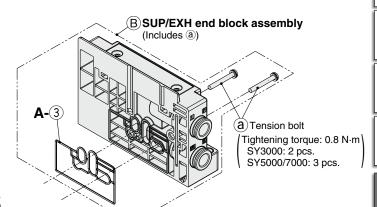


SUP/EXH end block assembly accessories and the number of accessories

Accessories	SY3000	SY5000/7000
(a) Tension bolt	2 pcs.	3 pcs.
A-③ Manifold block gasket	1	pc.

Gasket is mounted.

#### Manifold Parts Nos.

■ Cover assembly/Silencer cover assembly/Port block assembly for SUP/EXH (end) block assembly

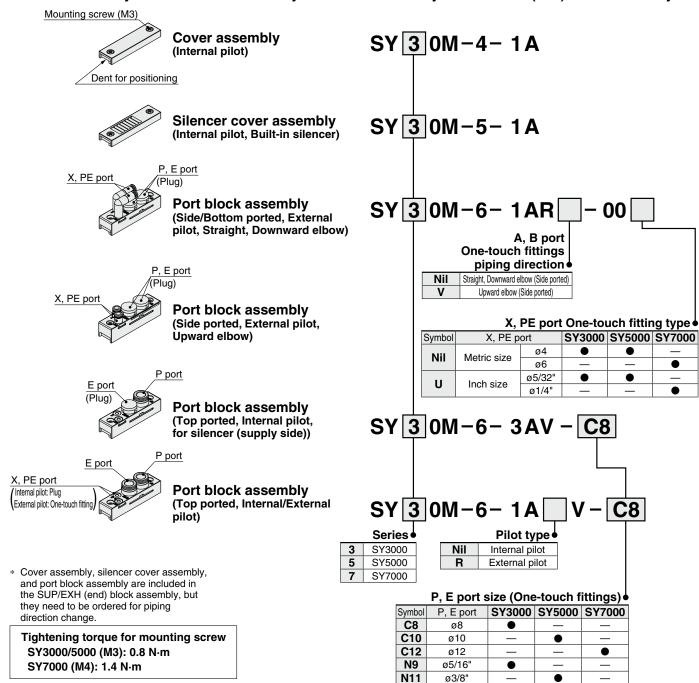

#### **⚠** Caution

- Be sure to shut off the power and air supplies before disassembly.
  - Furthermore, since air may remain inside the actuator, piping, and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate.



N13

ø1/2'

# SY3000/5000/7000 Series One-touch Fitting, Plug Assembly Part Nos.

Refer to "How to Replace One-touch Fittings" on page 296 for the replacement method.

#### ■ One-touch fittings

		Port siz	е	SY3000	SY5000	SY7000
		ø2		VVQ1000-50A-C2	_	_
		ø3.2	1	VVQ1000-50A-C3	_	_
		ø4	1	VVQ1000-50A-C4	VVQ1000-51A-C4	_
		ø6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
		ø8	1	_	VVQ1000-51A-C8	VVQ2000-51A-C8
		ø10	1	_	_	VVQ2000-51A-C10
		ø12	1	_	_	KQ2H12-17-X224
	size	ø4		SZ3000-73-1A-L4	SZ3000-74-1A-L4	_
	Metric size	ø6	1	SZ3000-73-1A-L6	SZ3000-74-1A-L6	SZ3000-83-1A-L6
	letr	ø8	Elbow type	_	SZ3000-74-1A-L8	SZ3000-83-1A-L8
	2	ø10	1	_	_	SZ3000-83-1A-L10
		ø12	1	_	_	KQ2L12-17N-X224
		ø4		SZ3000-73-2A-L4	SZ3000-74-2A-L4	_
*		ø6		SZ3000-73-2A-L6	SZ3000-74-2A-L6	SZ3000-83-2A-L6
port		ø8	Long elbow type	_	SZ3000-74-2A-L8	SZ3000-83-2A-L8
n		ø10	"	_	_	SZ3000-83-2A-L10
ď.	-	ø12	† †	_	_	KQ2W12-17N-X224
	Inch size	ø1/8"		VVQ1000-50A-N1	_	_
		ø5/32"	† †	VVQ1000-50A-N3	VVQ1000-51A-N3	_
		ø1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
		ø5/16"		_	VVQ1000-51A-N9	VVQ2000-51A-N9
		ø3/8"	1	_	_	VVQ2000-51A-N11
		ø5/32"		KJL03-95-X224		_
		ø1/4"	1	KJL07-95-X224	KQ2L07-14-X224	_
		ø5/16"	Elbow type	—	KQ2L09-14-X224	_
		ø3/8"			——————————————————————————————————————	KQ2L11-14-X224
	-	ø5/32"		KJL03-95-X225	_	
		ø1/4"	Long elbow type	KJL07-95-X225	KQ2L07-14-X225	_
		ø5/16"		——————————————————————————————————————	KQ2L09-14-X225	_
		ø3/8"	1		— —	KQ2L11-14-X225
		ø8		VVQ1000-51A-C8	_	
	-	ø10	Straight type		VVQ2000-51A-C10	
	-	ø10 ø12	Juliangini type		- VVQ2000-31A-010	VVQ4000-50B-C12
	ize	Ø8		SZ3000-74-1A-L8	_	
	Metric size	ø10	Elbow type	——————————————————————————————————————	SZ3000-83-1A-L10	_
	etri	ø10 ø12	_ Libow type		020000 00-1A-L10	KQ2L12-19N-X224
	Σ	ø8		SZ3000-74-2A-L8	_	
	-	ø10	Long elbow type	——————————————————————————————————————	SZ3000-83-2A-L10	_
pod		ø10 ø12	Long Cibow type		—	KQ2W12-19N-X224
п —		ø5/16"		 VVQ1000-51A-N9		1/0/24412-1914-7/224
r_		ø3/16 ø3/8"	Straight type	V V Q 1000-31A-118	VVQ2000-51A-N11	_
	-	ø3/8 ø1/2"	Straight type	<u>-</u>	I I III-A I C-UUU-SUV V	VVQ4000-50B-N13
	ø	ø5/16"		KQ2L09-14-X224	_	V V Q4000-30D-1V 13
	Siz		Elbow type	NQZLU3-14-AZZ4	KO0111 14 V004	_
	Inch size	ø3/8"	Elbow type	<del>_</del>	KQ2L11-14-X224	
	=	ø1/2"			_	KQ2L13-19N-X224
	-	ø5/16"		KQ2L09-14-X225		_
		ø3/8"	Long elbow type		KQ2L11-14-X225	
		ø1/2"		<del>_</del>	_	KQ2W13-19N-X224

^{*1} A and B ports (ø8 and ø5/16") of the SY3000 and 5000 mixed mounting type are the same as those of the SY5000.

#### ■ Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A
P, E port	VVQ1000-58A	VVQ2000-58A	SY9000-62-1A

^{*} Purchasing order is available in units of 10 pieces.



Chart

Valve Specifications

Valve Construction

Residual Vissure Repla

Vacuum
Release Valve
With Restrictor

Pressure Sensor

> nade to Order

Connector Gonnecting Base

D-sub, Flat Ribbon Terminal Block

Circular Connector

EX600

EX250

EX126

Common Dimensions Mixed Mounting

> Manifold Exploded View

Plug Part Nos. Manifold Ontions

luct

^{*} Purchasing order is available in units of 10 pieces. Additionally, when performing the piping in the same orientation using the elbow type, please order "elbow type" or "long elbow type" appropriately.


^{*} Select the same port size for both the A and B ports.

# SY3000/5000/7000 Series Manifold Options

#### ■ DIN rail dimensions/weight for the SY3000/5000 Plug-in connector connecting base

#### **VZ1000-11-1-**□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box  $\Box$ .

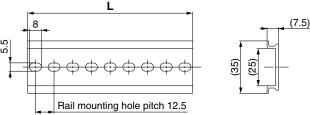


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5	•			
Weight [g]	145.9	148.1	150.4	152.6	154.9	157.1	159.4	161.6	163.9	166.1	168.4	170.6	172.9	175.1	177.4				

#### ■ DIN rail dimensions/weight for the SY7000 Plug-in connector connecting base

#### VZ1000-11-4-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

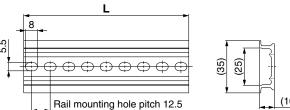

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	145	148.1	151.3	154.5	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9
- 3 - 131			101.0	104.0	107.0	100.0	103.9	107.1	170.5	173.4	170.0	179.0	102.3	100.1	100.2	102.7	100.0		201.0
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	102.4	100.0		201.0
	57															102.4	100.0		201.0

# Manifold Options **SY3000/5000/7000 Series**

#### **.** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000)

M3: 0.8 N·m (SY5000/7000)


#### **Manifold Options**

#### ■ Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

- When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 10 manifolds.
- When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

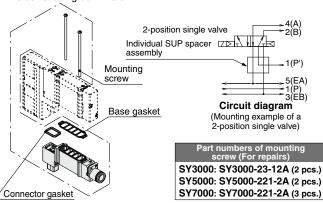


#### ■ Individual EXH spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]


When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust.

- When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 10 manifolds.
- When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

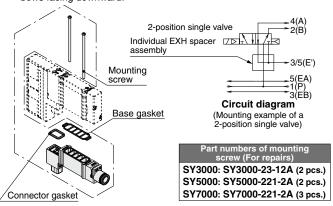

#### How to Order Individual SUP/EXH Spacer Assembly

* Refer to pages 215 to 217 for dimensions.

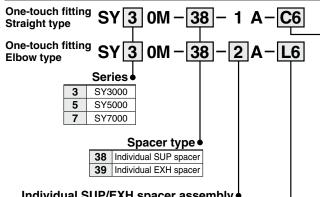

#### Individual SUP/EXH spacer assembly

2	Short elbow type	
3	Long elbow type	

* Select the long elbow type for a 3-position valve when using Type 11 and Type 12 downward. However, Type 11 of the SY3000 series for the mixed mounting of connector connecting bases cannot be used

#### 

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	_
L6	ø6	•	•	•
L8	ø8	_	•	•
L10	ø10	_	_	•
L12	ø12	_	_	•

#### Port size (Inch/One-touch fittings)

		(		
Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•

#### Port size (Metric/One-touch fittings)

	(c			······································
Symbol	P, E port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3 C4	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•
			01/50	00 0

* When using in combination with the SY  $^5_730\,^0_1\Box$  -  $\Box$  1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

	Port	Port size		Flow rate characteristics					
Model	1, 3/5	4, 2	1 → 4/2 (P →	→ A/B)	$4/2 \rightarrow 3/5 \text{ (A/B} \rightarrow \text{E)}$				
	(P, E)	(A, B)	C [dm³/(s·bar)]	b	C [dm3/(s.bar)]	b			
SY30M-38-1A-C6	C8	C6	1.2	0.32	1.4	0.24			
SY30M-39-1A-C6		C6	1.2	0.27	1.1	0.27			
SY50M-38-1A-C8	C10	C8	2.7	0.36	3.3	0.22			
SY50M-39-1A-C8	C10	Co	2.2	0.37	2.2	0.36			
SY70M-38-1A-C12	C12	C12	4.8 0.26 4.7		4.7	0.25			
SY70M-39-1A-C12		CIZ	4.9	0.28	4.7	0.23			

- Calculation of effective area S and sonic conductance C: S = 5.0 x C
- The value is for manifold base with 5 stations, rubber seal, and individually operated 2-position type.
- For connector connecting base (type 10) manifolds



Specifications Valve Construction

Connecting Base Connect D-sub, Flat

Ribbor Terminal Block

Circular Connecto

EX500 EX600

FX250 EX260

EX126

EX120

Manifold Exploded

Fitting

#### **⚠** Caution

Tightening torque for mounting screw
M2: 0.16 N·m (SY3000)
M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**


* Refer to pages 215 to 217 for dimensions.


#### ■ SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

 Cannot be selected when the elbows are facing upward in A and B ports in Type 10 manifolds, since they will interfere with the piping for the spacer assembly

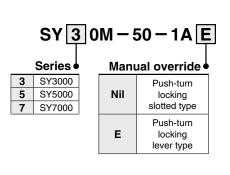

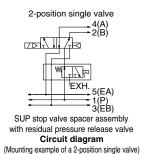

* For lever type:

When locking the lever type manual override, push the lever down in the PUSH position with your fingers until it stops, then turn the lever  $90^{\circ}$  clockwise. (PUSH  $\rightarrow$  LOCK)

Turning the lever without pushing it down until it stops can cause damage to the manual override and other problems such as air leakages.

To unlock the manual override, turn the lever counterclockwise. (LOCK → PUSH)

# Connector gasket Part numbers of mounting screw (For repairs) SY3000: SY30M-56-1A (2 pcs.) SY5000: SY50M-56-1A (2 pcs.) SY7000: SY70M-56-1A (3 pcs.)

# [How to mount SUP stop valve spacer assembly with residual pressure release valve] Insert the SUP stop valve mounting screw from the side of the spacer assembly, and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque. Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure release valve.

- * Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- * When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.
- * This product is only for internal pilot specifications, as the external pilot air cannot be shut off.
- If the product is equipped with a 3-position closed center, residual pressure cannot be released, so use in combination with a 3-port valve, which can be connected to the A, B piping port.

Valve mounting screw (Refer to page 198.)	
Tightening torque:	
SY3000 series: 0.16 N·m	
SY5000/7000 series: 0.8 N·m	
For hexagon socket head cap screws	
Nominal wrench size:	
SY3000 series: 1.5 SY5000/7000 series: 2.5	
315000/7000 series. 2.5	
SUP stop valve spacer assembly with	311
residual pressure release valve	
Tooldadi procedure relicado varive	<b>V</b>
Plate type nut	\Hexagon wrench
SY3000 series:	Nominal wrench size:
SY30M-57-1A (10 pcs. included)	SY3000 series: 1.3
SY5000/7000 series:	SY5000/7000 series: 2
SY50M-57-1A (10 pcs. included)	313000/7000 selles. 2
SUP stop valve mounting screw	
Tightening torque:	
SY3000 series: 0.16 N·m	
SY5000/7000 series: 0.8 N·m	

	Port size		Flow rate characteristics					
Model	1, 3/5	4, 2	$1 \rightarrow 4/2 \ (P \rightarrow A/B)$		$4/2 \rightarrow 3/5 \text{ (A/B} \rightarrow \text{E)}$			
	(P, E)	(A, B)	C [dm³/(s·bar)]	b	C [dm³/(s·bar)]	b		
SY30M-50-1A(E)	C8	C6	0.6	0.18	1.4	0.29		
SY50M-50-1A(E)	C10	C8	1.6	0.20	3.1	0.23		
SY70M-50-1A(E)	C12	C12	3.1	0.18	4.3	0.32		

- * Calculation of effective area S and sonic conductance C: S = 5.0 x C
- * The value is for manifold base with 5 stations, rubber seal, and individually operated 2-position type.
- * For connector connecting base (type 10) manifolds



<Example>

3-position exhaust center valve

2-position single valve

Double check spacer assembly with residual pressure release valve

Circuit diagram (Intermediate stop: When 3-position exhaust center valve is mounted) Double check spacer assembly with residual pressure release valve

FXH

Circuit diagram

(Drop prevention: When 2-position single valve is mounted)

Fitting

#### Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**


* Refer to pages 215 to 217 for dimensions.

■ Double check spacer assembly with residual pressure release valve (Side/Bottom ported) [With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust center valve when the double check spacer assembly with residual exhaust valve is used. It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve.

When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

Series	Part no.
SY3000	SY30M-60-1A
SY5000	SY50M-60-1A
SY7000	SY70M-60-1A

	Intermediate stop	Drop prevention
Applicable valve	SY ³ ₇ 40 ⁰ ₁	$SY_{\frac{5}{7}^{2}}^{\frac{3}{5}\frac{1}{2}}0_{1}^{0}$

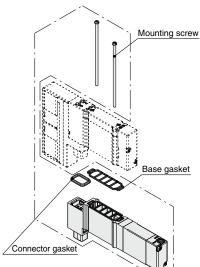

SY3000: SY3000-23-27A (2 pcs.) SY5000: SY5000-221-4A (2 pcs.)

SY7000: SY7000-221-4A (3 pcs.)

#### **⚠** Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston seal, and rod seal for air leakage.
- Combining with 3-position closed center or pressure center valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- If using a double check spacer that is built in to the sub-plate, refer to page 283.

- and may not stop intermediately.


#### Specifications

Max. operating pressure		1.0 MPa
Min. operating pressure		0.1 MPa
Ambient and fluid temperatures		−10 to 50°C
Fl	Flow rate SY3000 SY5000	
characteristics: C		
Cital acteristics. C	SY7000	1.1 dm³/(s·bar)
Max operating frequency		3 Hz


#### ■ Blanking plate assembly

[With two mounting screws (3 pcs. for the SY7000)]

Used when valve additions are expected or for maintenance. A structure is in place on the blanking plate to prevent the mounting screws from sliding.

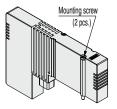

Mounting screw

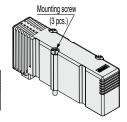

SY70M-26-1A(-B)

**How to Order Blanking Plate Assembly** SY|3|0M-26-1A-

> Series 3 SY3000 5 SY5000 SY7000 (B)

> > Т (EA) (P) (EB) Circuit diagram

# Caution

Option for mounting

Nil With mounting screw (Round head combination screw)

Part numbers of mounting screw [Hexagon bolt] (For repairs) SY3000: SY3000-23-24A [SY3000-222-1A]

SY5000: SY5000-221-1A [SY5000-222-1A] SY7000: SY7000-221-2A [SY7000-222-1A]

With mounting screw (Hexagon socket head cap screw)

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

SY50M-26-1A(-B) SY30M-26-1A(-B)

Refer to pages 215 to 217 for dimensions.



#### **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000)
M3: 0.8 N·m (SY5000/7000)


#### **Manifold Options**

* Refer to pages 215 to 218 for dimensions.

#### ■ Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).

#### **How to Order**

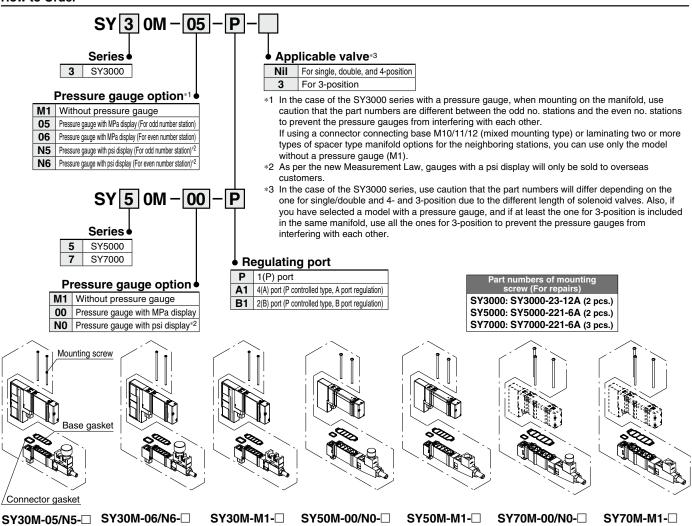

(Without pressure gauge) (With pressure gauge) (Without pressure gauge)

#### **Specifications**

(With pressure gauge/

For odd number station) For even number station)


Interface regu	ılator model	SY30M-□-□-□	SY50M-□-□	SY70M-□-□				
Applicable va	lve model*1	SY3□ ₃ □(R) SY5□ ₃ □(R)		SY7□3□(R)				
Regulating po	ort	1(P), 4(A), 2(B)						
Set pressure	range	0.1 to 0.7 MPa				0.1 to 0.7 MP		
Maximum ope	rating pressure	1.0 MPa			e 1.0 MPa			
Fluid		Air				Air		
Ambient and flu	uid temperatures	−10 to 50°C (No freezing)						
Maiabt [a1*2	With pressure gauge	33 (35)* ³ 75 93						
Weight [g]*2	Without pressure gauge	27 (29)* ³ 69 87						

(With pressure gauge/

*1 3-position closed center and pressure center, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.

(With pressure gauge) (Without pressure gauge)

- *2 Gasket and mounting screws are included in the weight. *3 (): Denotes the values of SY30M-□-□-3
- * Always apply pressure from 1(P) port in the base for interface regulator.
- * When using in combination with the SY⁵₇30⁰₁□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

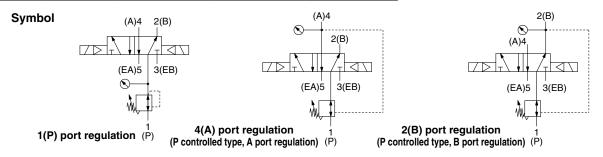

# Manifold Options **SY3000/5000/7000** Series

#### **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

Connector Connecting Base D-sub, Flat Ribbon

Terminal Block

Circular Connecto EX500 EX600

EX250

EX260 EX126

EX120

Manifold Fitting, Plug Part No:

# **Manifold Options: Spacer Combinations and Screw List** ①

0	to the matter of		① SY30	00 (M2)	② SY50	000 (M3)	③ SY70	000 (M3)
Com	bination		Round head combination screw	Hexagon socket head cap screw		Hexagon socket head cap screw		
	Round head combination screw> D: SY3000-23-24A 2: SY5000-221-1A 3: SY7000-221-1A	Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1 A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
B	Hexagon socket head cap screws D: SY3000-222-1A D: SY5000-222-1A D: SY5000-221-1A D: SY30M-56-2A D: SY70M-56-2A C	SUP stop valve spacer assembly with residual pressure release valve  Individual SUP (EXH) spacer assembly	<b>SY30M</b> (2 p			I-56-2A cs.)		<b>I-56-2A</b> ccs.)
	Round head combination screw> D: SY3000-23-33A D: SY5000-221-5A D: SY7000-221-5A B	Double check spacer assembly	<b>SY3000- 23-33A</b> (2 pcs.)	l	<b>SY5000- 221-5A</b> (2 pcs.)	_	<b>SY7000- 221-5A</b> (3 pcs.)	_
	ARound head combination screws D: SY3000-23-32A D: SY5000-221-3A D: SY7000-221-3A B	Individual SUP (EXH) spacer assembly Individual EXH (SUP) spacer assembly	<b>SY3000- 23-32A</b> (2 pcs.)	_	<b>SY5000- 221-3A</b> (2 pcs.)	_	SY7000- 221-3A (3 pcs.)	
	Round head combination screws  1: SY3000-23-24A 2: SY5000-221-1A 3: SY7000-221-1A	Valve SUP stop valve spacer assembly	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
A B C D	Hexagon socket head cap screws  D: SY3000-222-1A  S: SY7000-222-1A  C: SY30M-56-4A  C: SY50M-56-4A  S: SY70M-56-4A	with residual pressure release valve Individual SUP (EXH) spacer assembly	<b>SY30M</b> (2 p	I <b>-56-4A</b> cs.)	1	I-56-4A cs.)		<b>I-56-4A</b> lcs.)
	D. 3170W-30-4A	Individual EXH (SUP) spacer assembly						

Mounting onto a manifold follows the order explained above.

The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

#### **.** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options: Spacer Combinations and Screw List 2**

Combination		① SY30	000 (M2)	② SY50	000 (M3)	③ SY7000 (M3)	
Combination		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
Round head combination screws ①: SY3000-23-24A ②: SY5000-221-1A ③: SY7000-221-1A	A Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A 1: SY30M-56-3A 2: SY50M-56-3A 3: SY70M-56-3A	SUP stop valve spacer assembly with residual pressure release valve  Double check spacer assembly with residual pressure release valve	∃	I-56-3A ocs.)		I-56-3A ocs.)		I-56-3A ocs.)
(Round head combination screw)  (T): SY3000-23-24A  (2): SY5000-221-1A	A Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
3: SY7000-221-1A	SUP stop valve spacer assembly with residual pressure release valve  Double check spacer assembly with residual pressure release valve		<b>I-56-5A</b> ocs.)		I- <b>56-5A</b> ocs.)		I-56-5A ocs.)
	Individual EXH (SUP) spacer assembly						
Round head combination screw> ①: SY3000-23-32A	A Valve						
②: SY5000-221-7A ③: SY7000-221-7A	Interface regulator	<b>SY3000- 23-32A</b> (2 pcs.)	_	SY5000- 221-7A (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
C ·	Individual SUP (EXH) spacer assembly						



^{*} Mounting onto a manifold follows the order explained above.

* The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

^{*} When laminating an interface regulator with other options, only the combinations in the table above are possible.

#### **.** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000)

M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**

#### ■ Individual SUP block assembly

On the circuit of the plug-in connector connection base, an individual SUP block assembly can be used to supply air to a series of valves if a separate air supply is required, or if addition air is required for additional air flow.

Individual SUP block assembly occupies 1 station.

Blocking disks also supplied (2 pieces). Can be used to block both sides of the number of stations being isolated for individual air supply (as shown in example).

- * Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)
- * Electrical wiring is connected to a number of stations in the individual SUP block manifold.
- * When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- * A structure to prevent screws falling out is in place on the individual SUP block, making it much harder for the mounting screws to fall out.


#### ■ Individual EXH block assembly

On the circuit of the plug-in connector connection base, individual EXH block assembly can be used to individually exhaust series of valves when the exhaust from the valves would affect a number of other stations.

Individual EXH block assembly occupies 1 station.

Blocking disks also supplied (4 pieces). Can be used to block both sides of the number of stations being isolated for individual exhaust. (as shown in example).

- * Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual EXH block.)
- Electrical wiring is connected to a number of stations in the individual EXH block manifold.
- * When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- * A structure to prevent screws falling out is in place on the individual EXH block, making it much harder for the mounting screws to fall out.

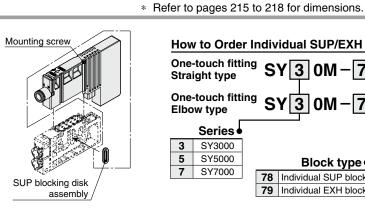

ΓX

(A)4 2(B)

(A)4 2(B)

(A)4 2(B)

(A)4 2(B)

<Example>

(A)4 2(B)

D side

3(EB)

How to Order Individual SUP/EXH Block Assembly One-touch fitting Straight type One-touch fitting **78** 2 Elbow type Series • SY3000 3

5 SY5000 SY7000

U side

5(EA)

3(EB)

79 Individual EXH block Individual SUP/EXH block assembly Short elbow type (Type 12)

78 Individual SUP block

Long elbow type is for the SY5000/7000 only.

#### 

Long elbow type (Type 11)

Sym	bol	P, E port	SY3000	SY5000	SY7000
L	4	ø4	•	•	_
L	6	ø6	•	•	•
L	8	ø8	_	•	•
L1	0	ø10	_	_	•
L1	2	ø12	_	_	•

#### Port size (Inch/One-touch fittings)


		(		90
Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•


#### Port size (Metric/One-touch fittings)

	· or ole (morror one todon numgo)						
Symbol	P, E port	SY3000	SY5000	SY7000			
C2	ø2	•	_	_			
C3	ø3.2	•	_	_			
C4	ø4	•	•	_			
C6	ø6	•	•	•			
C8	ø8	_	•	•			
C10	ø10	_	_	•			
C12	ø12	_	_	•			

#### Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

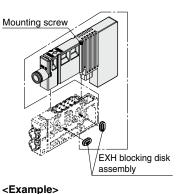

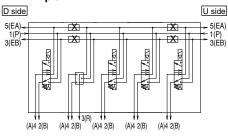



210 ®

Valve Specifications Construction

Connecting Base Connector

D-sub, Flat Ribbon Terminal Block

Circular Connecto EX500

Lead Wire

EX600 FX250

EX260 EX126

EX120

Mixed Mounting Manifold

Fitting

#### **Manifold Options**

# ■ Blanking Plate with Output [With two mounting screws]

The blanking plate extracts the individual signal of the manifold valve.

#### **Specifications**

Number of outputs	2 outputs
Load voltage	12 VDC, 24 VDC (Dependent on the rated voltage of the built-in manifold)
Load current	42 mA/point (Max.)
Enclosure	Dust proof (M12 connector: IP67)

- $\ast\,$  For serial transmission-capable manifolds, only the 24 VDC is applicable.
- When non-polar type valves are mounted on the same manifold (excludes SI unit manifolds), be careful of surge voltage intrusion. Refer to page 293 for details.


#### **⚠** Caution

Tightening torque for mounting screw
M2: 0.16 N·m


#### **Output Polarity**

Manifold common specifications	Α	В	COM.
Positive common	_	_	+
Negative common	+	+	_


* Specifications are the same as the manifold common specifications.

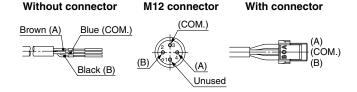

#### How to Order Blanking Plate with Output

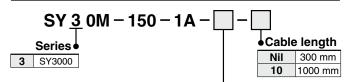

Connector type

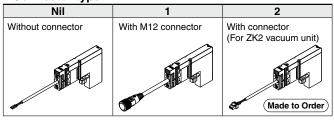

* Refer to the specifications for output polarity.

### ■ SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12)

#### [SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

#### [EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block FA/EB both sides of the EXH.)



3/5 3/5

B 2

Series	SUP blocking disk assembly	EXH blocking disk assembly
SY3000	SY30M-40-1A	SY30M-40-2A
SY5000	SY50M-40-1A	SY50M-40-1A
SY7000	SY70M-40-1A	SY70M-40-1A

#### ■ Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)

SUP/EXH blocking disk label



SUP blocking disk label




EXH blocking disk label

aisk	labei
3/5	1 3/5

Series	Part no.
SY3000	
SY5000	SJ3000-155-1A
SY7000	]

If the blocking disk assembly is ordered using the manifold specification sheet and ordered at the same time as the manifold, the position where the blocking disk assembly is inserted will be labeled and shipped out.

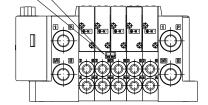

#### **Manifold Options**

#### ■ Back pressure check valve assembly (Retrofit or pre-installed type)


It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into EA/EB port (valve mounting side) on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used.

- When ordering assemblies incorporated with a manifold, refer to the Ordering Example below (when installed in all stations.)
- When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position on the manifold specification sheet.

- 1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exh large, select a built-in valve ty
- 2. When the back pressure chec SMC for valve flow rate charac

The asterisk denotes the symbol for the assembly.

2.	careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.  When the back pressure check valve assembly is mounted, please contact SMC for valve flow rate characteristics.
	Ordering Example SS5Y3-10F1-05B-C61 set (Type 10 5-station manifold base part no.) SY3201-5U15 sets (2-position double part no.)

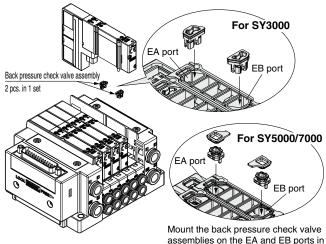

Series	Part no.	
SY3000	SY30M-24-1A	
SY5000	SY50M-24-1A	
SY7000	SY70M-24-1A	
517000	SY/0M-24-1A	

the order shown in the figure above.

Clip

Dual flow fitting


#### ■ Dual flow fitting (for connector connecting base, Type 10, side ported)


*SY30M-24-1A-----5 sets (Back pressure check valve assembly part no.)

This is a fitting for cylinder ports which enables simultaneous actuation and increase in flow rate of valves for 2 stations.

* When ordering assemblies incorporated into a manifold, refer to the Ordering Example below and specify on the manifold specification sheet.

#### **How to Order Dual Flow Fitting**

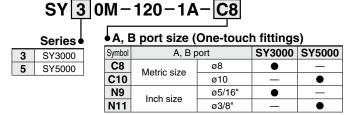

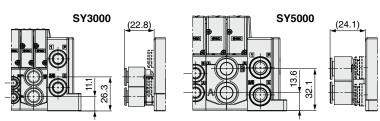

Ordering Example SS5Y3-10F1-08B-CM *SY3100-5U1 *SY30M-120-1A-C8 The asterisk denotes the symbol for the assembly.

> Specifically for side porting for a connector connecting base Cannot be attached to bottom or top ported, or mixed mounting

> types that are metal or connector connecting bases When adding or changing clips, push them into the very end of the manifold for each station. Also, make sure to use the clip that was packed together, as the clip and the fitting for one station differ among products that can be used with the SY5000. Not available for the SY7000 series


Refer to the table below to see which spacers are applicable.

Each type of anger	Series		
Each type of spacer	SY3000	SY5000	
Individual SUP (EXH) spacer assembly	×	0	
SUP stop valve spacer assembly with residual pressure release valve	×	0	
Double check spacer assembly with residual pressure release valve	×	0	
Interface regulator	×	×	

O: Can be built in X: Cannot be built in

#### ■ Silencer (One-touch fitting connection type)

This silencer can be mounted to the 3/5 (E: EXH) port of the manifold in one step.

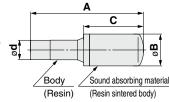


Series	Model	Effective area	Α	В	С
For SY3000 (ø8)	AN15-C08	20 mm ²	45	13	20
For SY5000 (ø10)	AN20-C10	30 mm ²	57.5	16.5	30.5
For SY7000 (ø12)	AN30-C12	41 mm ²	71.5	20	43.5

#### * Shipped together with the product

#### ■ Plug

These are inserted in unused cylinder ports and P, E ports.

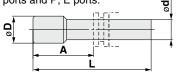

* Shipped together with the product

#### **Dimensions**

Applicable fitting size ød (Metric size)	Model	Α	L	ø <b>D</b>
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

Applicable fitting size ød (Inch size)	Model	Α	L	ø <b>D</b>
1/8"	KQ2P-01	16	31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09	20.5	39	10
3/8"	KQ2P-11	22	43	11.5
1/2"	KQ2P-13	24	46	15

#### **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve

#### ■ Name plate (For connector connecting base)

SY3000: For SS5Y3-10 (Side ported)

SY5000: For SS5Y5-10/11 (Side/Bottom ported) SY7000: For SS5Y7-(M)10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions Insert it into the groove on the name plate bracket onto which a SUP/EXH (end) block is mounted, as shown in Figure 2.

When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.


SS5Y3-10	
SS5Y5-10	
SS5Y7-(M) ¹⁰	
Mounting and Ontion	


	Modifying and Option •					
	Mounting option					
Symbol	Prin	iting		DIN rail		
	Yes	No	With	h Without Specified length		mounting
AA	•	_	_	_	_	•
Α	•	_	•	_	_	_
Α0	•	_	_	•	_	_
A3	•	_	_	_	For 3 stations	_
:	:	:	:	:	:	_
A24	•	_	_	_	For 24 stations	_
BA	_	•	_	_	_	•
В	_	•	•	_	_	_
В0	_	•	_	•	_	_
B3	_	•		_	For 3 stations	_
:	:			:	:	
B24	_	•	_	_	For 24 stations	_

┌ Ordering E	xample ————	
SS5Y3-10F	-1-05UR-C6AA	1 set
*SY3200R-5	5U1	5 sets
The act	erisk denotes the symbol for	the assembly

- * Name plates cannot be mounted onto Type 12 (Top ported) and Type 10 (Side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers.
- No name plate settings are available for the SY3000/SY5000 mixed mounting types. However, they are available for the SY5000/SY7000 mixed mounting types.


<SY5000/7000>

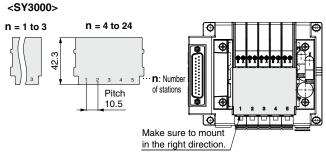

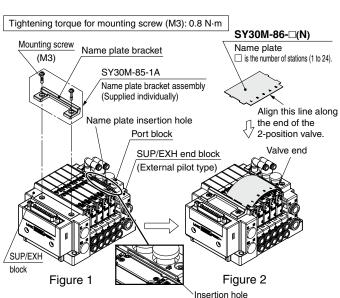

#### n = 1 to 3n = 4 to 2462.5 n: Number

Pitch P = 16 (SY5000)P = 19 (SY7000)Make sure to mount in the right direction. SY5000: SY50M-86-□(N)

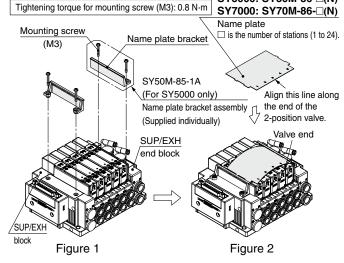

Specific Product Precaution

#### Manifold Options

* A transparent plastic plate to put a label with the name of the function of the solenoid valve

#### ■ If adding a name plate

If adding a name plate to a manifold in use, order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number and the amount.

#### Name plate part number

Мо	del	SS5Y3-10	SS5Y5-10/11	SS5Y7-(M)10/11	Note
Name	Printed	SY30M-86-□N	SY50M-86-□N	SY70M-86-□N	☐:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	SY70M-86-□	(1 to 24)

#### Name plate bracket assembly part number and number of items ordered

Mode	I	SS5Y3-10	SS5Y5-10/11
Name plate assemb	ly part number	SY30M-85-1A	SY50M-85-1A
Manifold SUP/EXH	Internal pilot U/D piping	2 pcs.	
block assembly	Internal pilot double sided piping	2 pcs.	0 000
Pilot type and	External pilot U/D piping	1 pc.*1	2 pcs.
P, E port entry	External pilot double sided piping	Not required*1	


- *1 If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.
- * Name plate bracket assembly is not required for the SY7000.

#### **⚠** Caution

- Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping, and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.

#### **Dimensions: Manifold Options/SY3000 Series**


#### ■ Blanking plate assembly

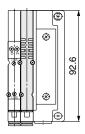





<Type 10, 12>


#### ■ Individual SUP/EXH spacer assembly (Top ported)

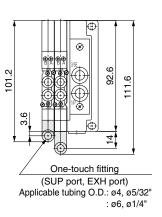

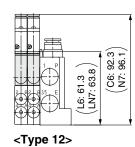


■ Double check spacer assembly with residual pressure release valve

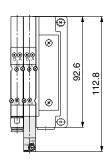


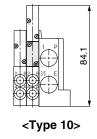

#### ■ Individual SUP/EXH block assembly (Top ported)

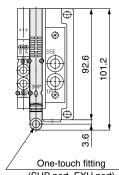



(SUP port, EXH port)
Applicable tubing O.D.: ø4, ø5/32"
: ø6, ø1/4"

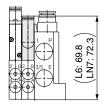


<Type 12>


#### ■ Individual SUP/EXH spacer assembly (Side ported)

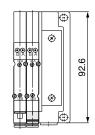

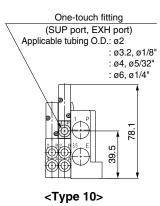


# SUP stop valve spacer assembly with residual pressure release valve

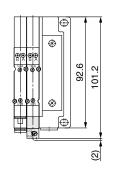


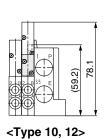

* The dimensions within ( ) apply to the SY30M-50-1AE.

#### ■ Interface regulator

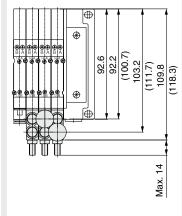


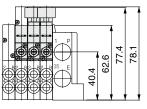


<Type 10, 12>

* The dimensions within ( ) apply to the SY30M- $\square$ - $\square$ -3.

#### ■ Individual SUP/EXH block assembly (Side ported)

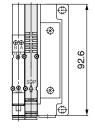

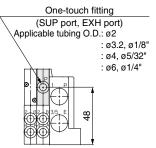

<Type 10>





Fitting, Plug Part Nos.

Specific Product ecautions

#### **Dimensions: Manifold Options/SY5000 Series**


# ■ Blanking plate assembly

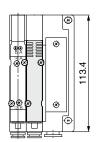


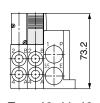


<Type 10, 11, 12>


■ Individual SUP/EXH spacer assembly (Top/Bottom ported)

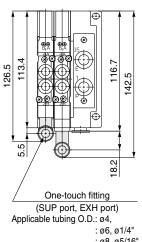

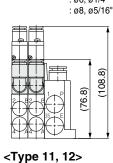


Double check spacer assembly with residual pressure release valve

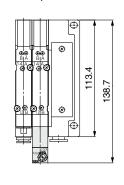


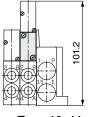


<Type 10, 11>


■ Individual SUP/EXH block assembly (Top ported)

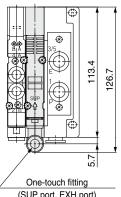


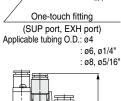

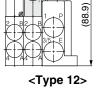



■ Individual SUP/EXH block assembly (Side ported)

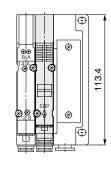

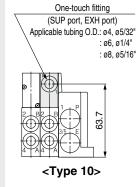



■ Individual SUP/EXH spacer assembly (Side ported)

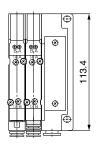

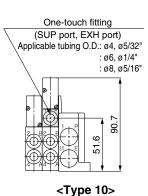

■ SUP stop valve spacer assembly with residual pressure release valve

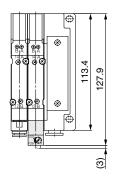


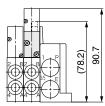


<Type 10, 11, 12>

* The dimensions within () apply to the SY50M-50-1AE.


#### **■**Interface regulator

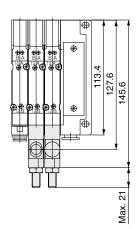


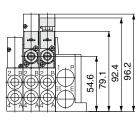

<Type 10, 11, 12>

#### ■ Individual SUP/EXH block assembly (Side ported)

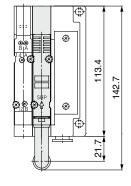


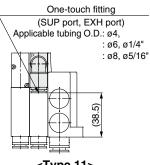


<Type 11>

# **Dimensions: Manifold Options/SY7000 Series**


#### ■ Blanking plate assembly

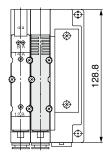

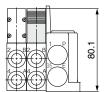



<Type 10, 11, 12>

#### ■ Individual SUP/EXH spacer assembly (Top/Bottom ported)

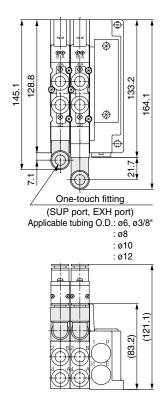


■ Double check spacer assembly with residual pressure release valve

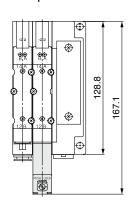

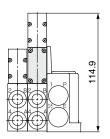


<Type 10, 11>

#### ■ Individual SUP/EXH block assembly (Top ported)

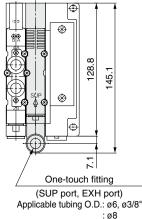


: ø8


: ø10 :ø12

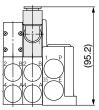

<Type 12>


#### ■ Individual SUP/EXH spacer assembly (Side ported)

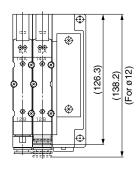


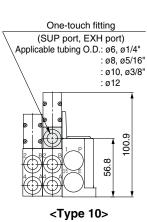

■ SUP stop valve spacer assembly with residual pressure release valve

<Type 11, 12>

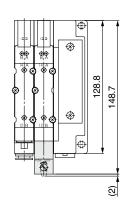


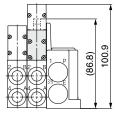


<Type 10, 11, 12>

The dimensions within () apply to the SY70M-50-1AE.

#### ■ Individual SUP/EXH block assembly (Side ported)

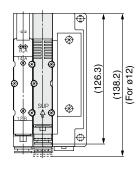

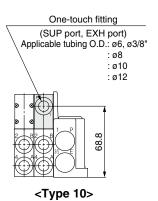





Specific Product Precautions


#### **Dimensions: Manifold Options/SY7000 Series**


#### ■Interface regulator

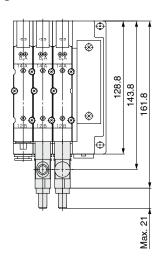

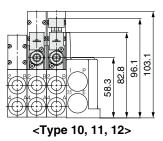

#### ■ Individual SUP/EXH block assembly (Bottom ported)

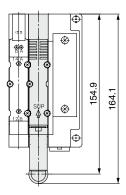

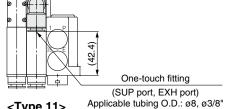


<Type 11> Applicable tubing O.


: ø10 : ø12





Side ported

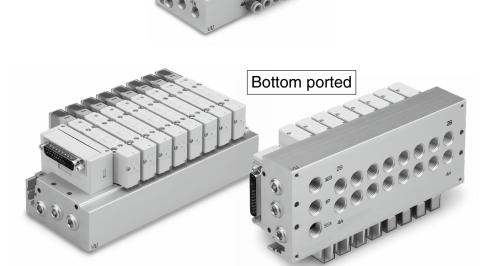

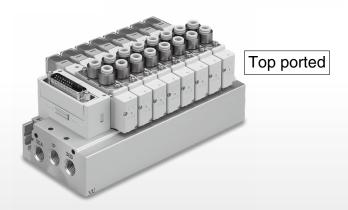

# SY3000/5000/7000 Series Type 50, 51, 52 Plug-in Metal Base

# **Manifold Specifications**

			D-sub connector		Flat ribbon cable		Serial wiring		
	Model		F type	P type	PG type	PH type	S5 type (EX510)		
Manifold typ	ре			Plug-in metal base					
SUP/EXH po	ort type				Common SUP/EXH				
Valve stations All double wiring			0.45.40.54545555		2 to 9 stations	2 to 4 stations	2 to 8 stations		
vaive statio	All single wiring	All single wiring		2 to 12 stations		2 to 8 stations	2 to 12 stations		
Applicable connector			D-sub connector Conforming to Confo		with strain relief	t ribbon cable connector with strain relief  forming to MIL-C-83503			
		MIL-C-24308 JIS-X-5101	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type				
Internal wiri	ng		Positive common, Negative common						
		SY3000	1/8						
	1(P), 3/5(E) port	SY5000	1/4						
		SY7000	3/8						
Port size		SY3000	M5 x 0.8, 1/8 ø2 One-touch fitting, ø3.2 One-touch fitting, ø4 One-touch fitting, ø6 One-touch fitting ø1/8" One-touch fitting, ø5/32" One-touch fitting, ø1/4" One-touch fitting						
Port size	4(A), 2(B) port	SY5000	1/8, 1/4 ø4 One-touch fitting, ø6 One-touch fitting, ø8 One-touch fitting ø5/32" One-touch fitting, ø1/4" One-touch fitting, ø5/16" One-touch fitting						
		SY7000	1/4  ø6 One-touch fitting, ø8 One-touch fitting, ø10 One-touch fitting, ø12 One-touch fitting ø1/4" One-touch fitting, ø5/16" One-touch fitting, ø3/8" One-touch fitting						
Enclosure (	Based on IEC60529)		IP40 IP20				IP20		

Connector Connecting Base

# Type 50, 51, 52 Plug-in Metal Base SY3000/5000/7000 Series

#### Manifold Flow Rate Characteristics *1/Manifold Weight

Valve Seal Type: Rubber Seal

71	Port	size	Valve flow rate characteristics				Weight: W [g]*2	
Model	1, 5, 3	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/E	3→E)	(n: sta	ations)
	(P, EA, EB)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	Fixed: C□	Replaceable: KC□
SS5Y3-50 (Side ported)	1/8	C6	1.1	0.19	1.1	0.15	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.2	0.31	1.2	0.14	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.29	1.2	0.20	44n	+ 247
SS5Y5-50 (Side ported)	1/4	C8	2.6	0.28	2.6	0.14	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.7	0.35	2.8	0.20	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.6	0.26	3.1	0.13	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.8	0.27	4.0	0.20	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	4.1	0.34	4.8	0.20	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	4.5	0.27	4.9	0.24	164n	+ 510

Valve Seal Type: Metal Seal

valve Seal Type: Metal S	eai							
	Port size		Valve flow rate characteristics				Weight: W [g]*2	
Model	1, 5, 3	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/E	3→E)	(n: sta	ations)
	(P, EA, EB)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	Fixed: C□	Replaceable: KC□
SS5Y3-50 (Side ported)	1/8	C6	0.9	0.14	1.0	0.12	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.0	0.21	1.1	0.10	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.15	1.1	0.14	44n	+ 247
SS5Y5-50 (Side ported)	1/4	C8	2.2	0.20	2.3	0.13	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.4	0.26	2.5	0.16	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.4	0.18	2.6	0.12	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.2	0.23	3.5	0.18	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	3.5	0.25	4.0	0.16	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	3.5	0.21	3.8	0.18	164n	+ 510

^{*1} The value is for manifold base with 5 stations and individually operated 2-position type.



^{*2} Weight: W is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 17 for the appropriate number of stations.

 $[\]ast$  Calculation of effective area S and sonic conductance C: S = 5.0 x C

Type 50 Side Ported **Type 51 Bottom Ported** 

# Plug-in Metal Base


D-sub Connector | Flat Ribbon Cable |

# SY3000/5000/7000 Series

CE CH CHSUS ROHS



#### How to Order Manifolds

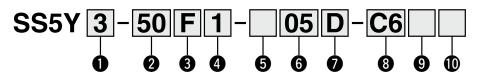

1 Sei	ries
3	SY3000
5	SY5000
7	SY7000


<b>2</b> Туре						
50	Side ported					
51	Bottom ported					
50R	Side ported, External pilot					

* External pilot is not available for the bottom-ported type.


4 Connector entry direction						
1: Upward	2: Lateral					

# PG: Flat ribbon cable

(25 pins)

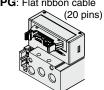

Connector type F: D-sub connector

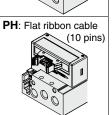


P: Flat ribbon cable

#### Wiring type

	<u> </u>
Nil	All double wiring*1
S	All single wiring*2

- *1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- *2 All single wiring: Available only for the manifold which has 2-position single for all stations
- Note that 2-position double, 3-, or 4-position valves cannot be used.
- * If a mix of single and double wiring is required, it is supplied as a special order.

### How to Order Manifold Assembly

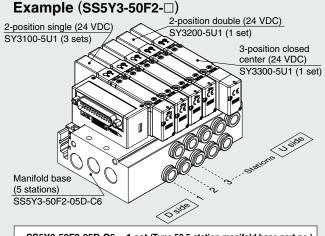

SS5Y3-50F2-05D-C6 Ostre
SS5Y3-50F2-05D-C6 1 set (Type 50 5-station manifold base part no.)   *SY3100-5U1
──►The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 244. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

#### 6 Valve stations

	_	nector (25 pins)			cable (26 pins
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
:	:	double		÷	double
12	12 stations	wiring	12	12 stations	wiring
02	2 stations	All	02	2 stations	All
÷	:	single		:	single
12	12 stations	wiring	12	12 stations	wiring
PG:	Flat ribbo	on cable (20 pins)	PH:	Flat ribbo	n cable (10 pins
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
-:		double		:	double
		wiring	04	4 stations	wiring
09	9 stations	wiring	0-1	T SIGNOTIS	wiilig
09 02	9 stations 2 stations	All	02	2 stations	All

This also includes the number of the blanking plate assembly.

12 12 stations wiring 08 8 stations

Manifold Options

8 A, B port size

P, E port entry		
U	U side*1	
D	D side*1*2	
В	Both sides	

- *1 Plugs are mounted on the opposite side of the selected ports.
- *2 Only D side is available for the type 51 bottom-ported type.

9 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

**1** Mounting

Nil	Direct mounting			
D	DIN rail mounting (With DIN rail)			
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations Specify a length longe			
i	:	than that of the standard		
D12	For 12 stations	rail.		

- * Only direct mounting is available for the type 51 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

Thread piping

Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

One-touch fitting (Metric)

	One-toden name (wethe)						
Sy	/mbol	A, B port	SY3000	SY5000	SY7000		
	C2	ø2	•	_	_		
	<b>C</b> 3	ø3.2	•	_	_		
Fixed	C4	ø4	•	•	_		50
íÊ	C6	ø6	•	•	_		
	C8	ø8	_	•	•		
	C10	ø10	_	_	•		
	KC2	ø2	•	_	_	Type 50	Type 51
	KC3	ø3.2	•	_	_	(Side ported)	(Bottom ported)
e le	KC4	ø4	•	•	_	11	
Replaceable	KC6	ø6	•	•	•		
plac	KC8	ø8	_	•	•		
8	KC10	ø10	_	_	•		
	KC12	ø12	_	_	•		
	<b>M</b> *1	Mixed sizes	•	•	•		
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8		


**SMC** 

One-touch fitting (Inch)							
Symbol A, B port		SY3000	SY5000	SY7000			
	N1	ø1/8"	•	_	_		
_	N3	ø5/32"	•	•	_		
Fixed	N7	ø1/4"	•	•	_		
ш.	N9	ø5/16"	_	•	•		
	N11	ø3/8"	_	_	•		
	KN1	ø1/8"	•	_	_	Type 50	Type 51
le le	KN3	ø5/32"	•	•	_	(Side ported)	(Bottom ported)
Seal	KN3 KN7 KN9 KN11	ø1/4"	•	•	•		
place	KN9	ø5/16"	_	•	•	<del>*</del>	
æ	KN11	ø3/8"	_	_	•		
	M*1	Mixed sizes	•	•	•		
P,	P, E port size (Thread piping)		1/8	1/4	3/8		

*1 When ports are of mixed sizes, indicate the piping specifications on the manifold specification sheet.

#### How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

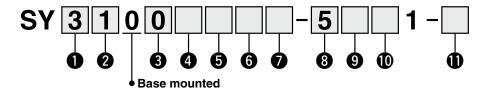

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

2-position	Single
	Double
3 4 3-position 5	Closed center
	Exhaust center
	Pressure center
4 manitian	N.C./N.C.
dual 3-port	N.O./N.O.
	N.C./N.O.
	2-position 3-position 4-position

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

	71
0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available.
- The back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

• I not raine opnon		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

#### Coil type

	ii typo
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

#### 8 Rated voltage


_		
	5	24 VDC
	6	12 VDC

# Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
Nil	_	_			
R	_		Non-polar		
U	•				
S	_		Positive		
Z	•	_	common		
NS	_		Negative		
NZ	•		common		

- * For the non-polar type, be careful of surge voltage intrusion. Refer to page 293 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

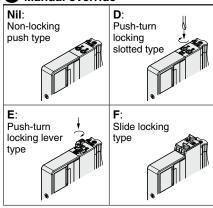

 Refer to page 34 for the safety slide locking manual override

#### Type of mounting screw

.,,	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- * When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 266 for base gasket and mounting account not numbers.
- mounting screw part numbers.

  "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.




Manifold

Options


Type 50/Side Ported D-sub Connector

Plug-in Metal Base

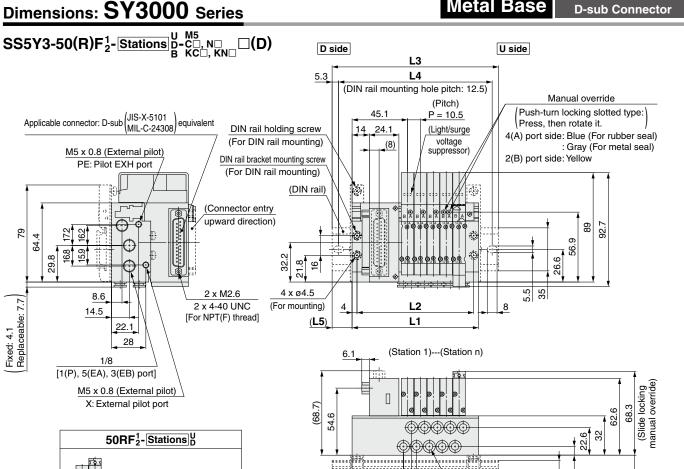

C2, C3: 5.4 C4, C6: 6.6


C2, C3: 42.4

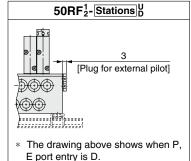

(For DIN rail mounting) [4(A), 2(B) port] Applicable tubing O.D.: ø2 C4, C6: 41.8 (Pitch) : ø3.2, ø1/8" P = 10.5: ø4, ø5/32' : ø6, ø1/4"

One-touch fitting

* These figures show the "SS5Y3-50F2-05B-C6."

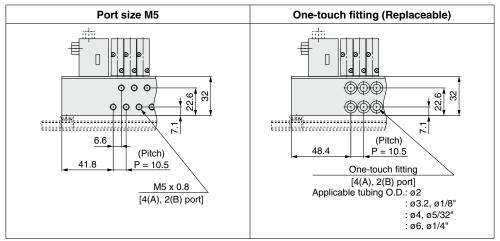

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

The drawing above shows when P,


E port entry is D.

Plug-in Metal Base Type 50/Side Ported

**D-sub Connector** 

# Dimensions: SY3000 Series


# SS5Y3-50(R) $F_2^1$ -Stations $\stackrel{\text{U}}{p}$ -01 $\square$ (D)

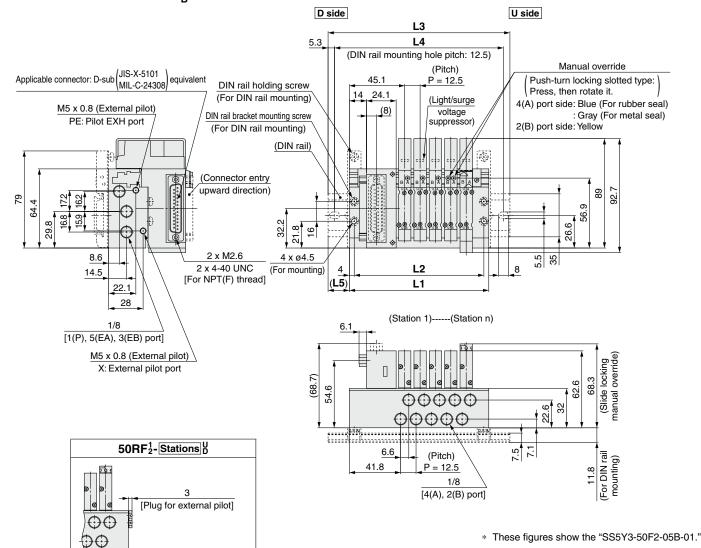

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5


Plug-in Metal Base

Type 50/Side Ported D-sub Connector

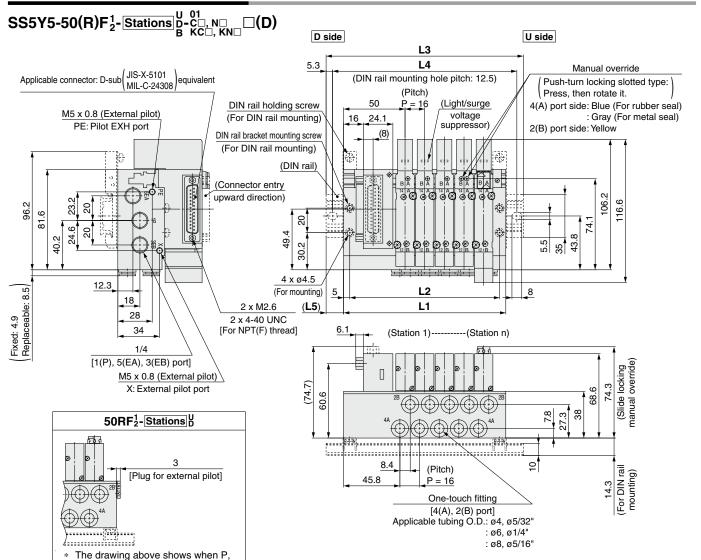

Dimensions: SY5000 Series

E port entry is D.

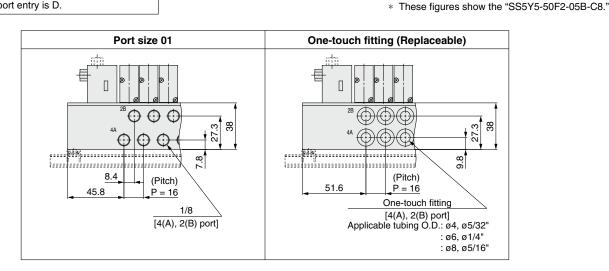


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Plug-in Type 50/Side Ported

Metal Base D-sub Connector

# Dimensions: SY5000 Series


# SS5Y5-50(R) $F_2^1$ -Stations $\stackrel{\text{U}}{p}$ -02 $\square$ (D)

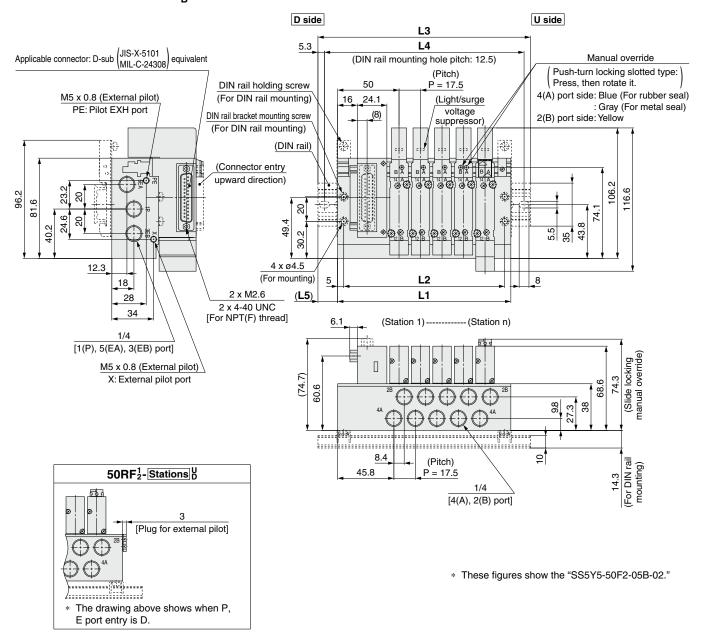

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

Plug-in Metal Base

Type 50/Side Ported **D-sub Connector** 

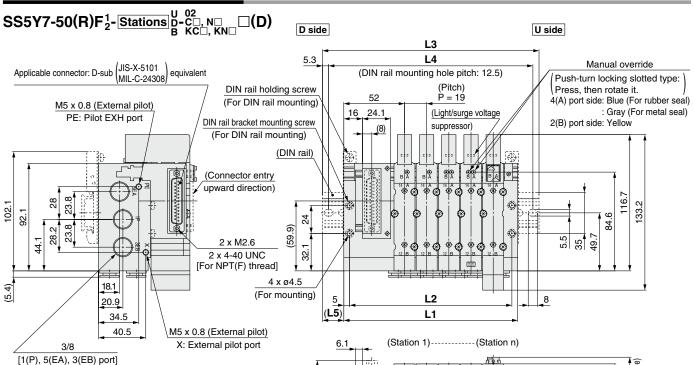


50RF₂¹□-Stations D 3 [Plug for external pilot] ------(849)-----The drawing above shows when P, E port entry is D.

Dimensions: SY7000 Series

Slide locking manual override (81.2)78.3 8 67. 44.5 9.4 32.4 ...... kaan fariaan aan 10.8 (For DIN rail mounting) (Pitch) 46.6 One-touch fitting [4(A), 2(B) port] Applicable tubing O.D.: ø8, ø5/16" : ø10, ø3/8"

* These figures show the "SS5Y7-50F2-05B-C10."

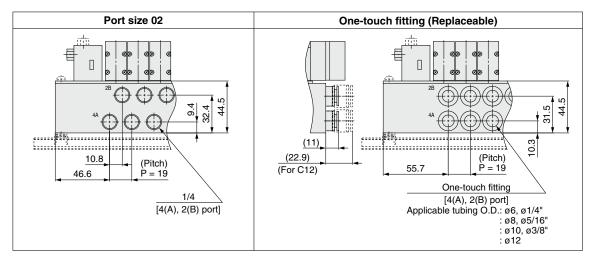


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5





Plug-in Metal Base Type 50/Side Ported

Flat Ribbon Cable

Dimensions: SY3000 Series

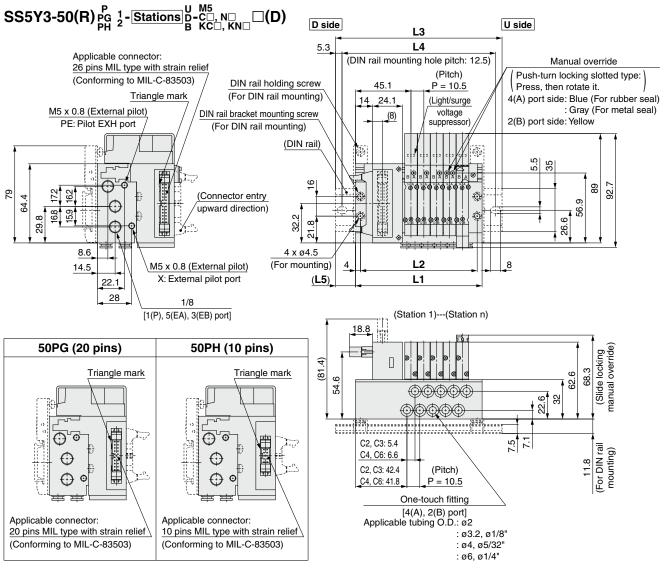

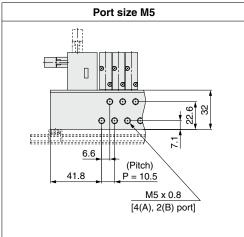

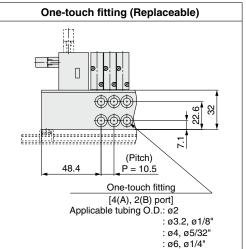

- * These figures show the "SS5Y3-50P2-05B-C6."
- Only connectors are different for 50PG and 50PH.
  - L1 to L5 dimensions are the same as 50P type.


50RP□ 1/2 - Stations D
[Plug for external pilot]
* The drawing above shows when P,


<ul> <li>The drawing above shows</li> </ul>	when P
E port entry is D.	

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


Plug-in Metal Base

Dimensions: **SY3000** Series SS5Y3-50(R) PG 1-Stations U-01 (D)

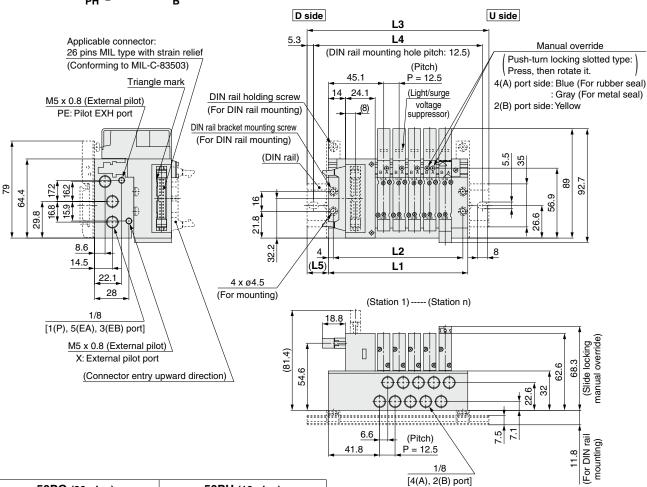

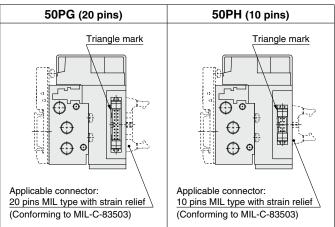

- * These figures show the "SS5Y3-50P2-05B-01."
- Only connectors are different for 50PG and 50PH.
   L1 to L5 dimensions are the same as 50P type.

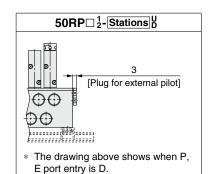

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5





Plug-in Metal Base


Type 50/Side Ported

Flat Ribbon Cable

# Dimensions: SY5000 Series

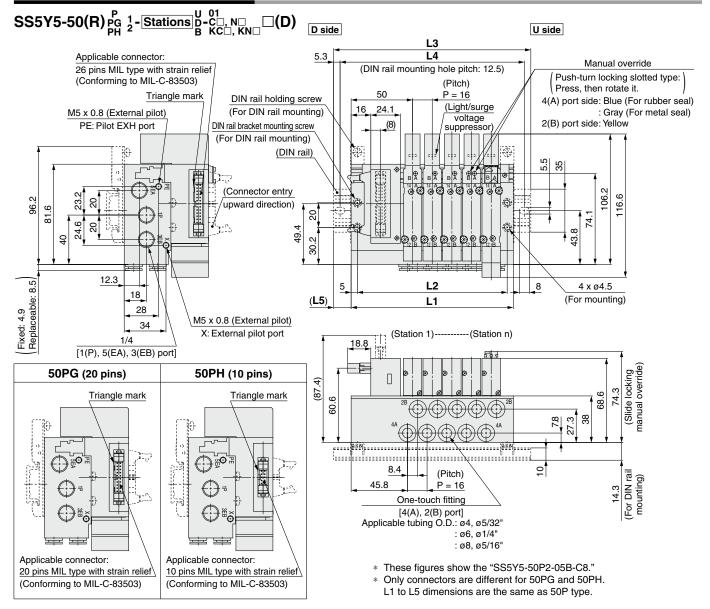

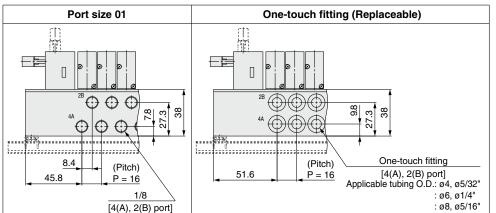

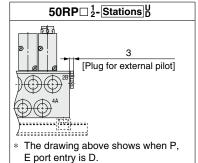

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Type 50/Side Ported Flat Ribbon Cable

88 27.3

(For DIN rail mounting)

연 8.8


### Plug-in Metal Base

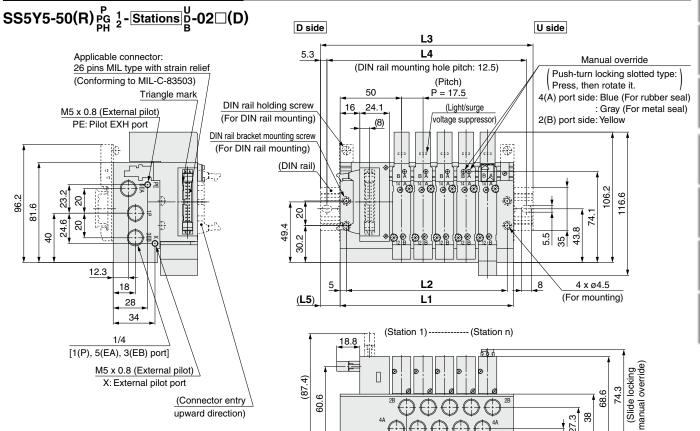

L.....

8.4

45.8

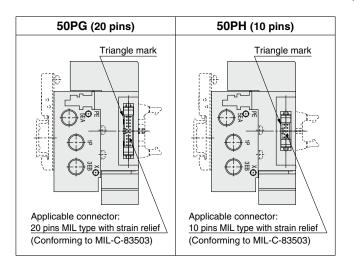

(Connector entry upward direction)

Dimensions: SY5000 Series

* These figures show the "SS5Y5-50P2-05B-02."


1/4

[4(A), 2(B) port]

(Pitch)

P = 17.5

Only connectors are different for 50PG and 50PH. L1 to L5 dimensions are the same as 50P type.

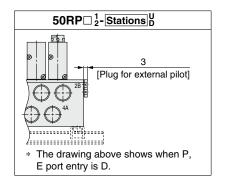


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5





Plug-in Metal Base Type 50/Side Ported

Flat Ribbon Cable

## Dimensions: SY7000 Series

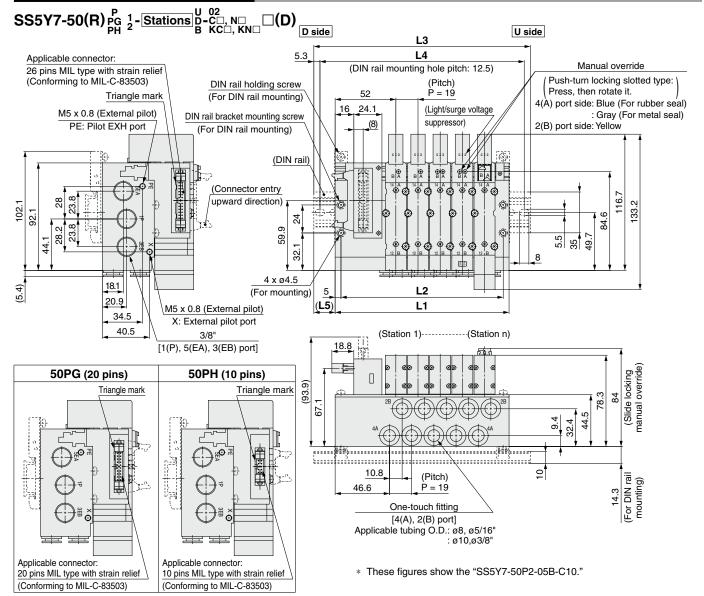

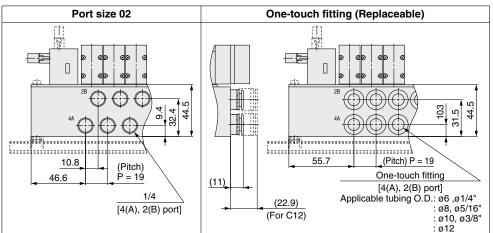

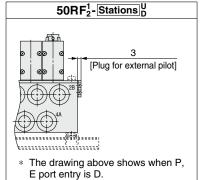

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

Valve Specifications

Valve Construction

U side


92.7 89

> 68.3 62.6

**D-sub Connector** 

Dimensions: SY3000 Series

SS5Y3-51F₂-Stations D-

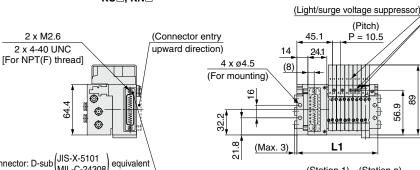


D side


Manual override Push-turn locking slotted type: Press, then rotate it.

4(A) port side: Blue (For rubber seal) : Gray (For metal seal)

2(B) port side: Yellow


Applicable connector: D-sub (JIS-X-5101 MIL-C-24308) (Station 1)---(Station n) (68.7)54.6 32

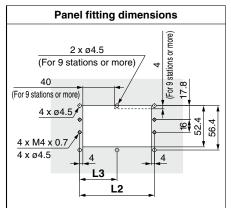

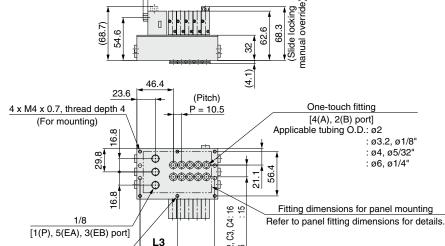

L2

8,6

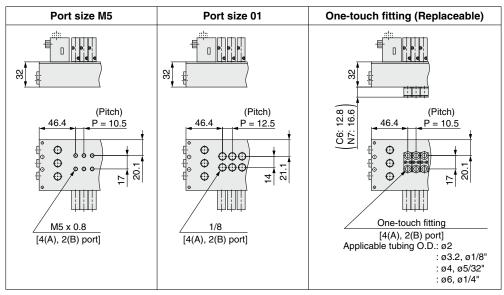

2 x M4 x 0.7

(For 9 stations or more)

These figures show the "SS5Y3-51F2-05D-C6."

Port Sizes M5, C□, N□, KC□, KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3

Port	Size	01
------	------	----

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

236

Metal Base

EX510

Manifold Exploded View

Fitting,


Plug Part Nos


Manifold Options

Plug-in Type 51/Bottom Ported

Metal Base D-sub Connector

# Dimensions: SY5000 Series

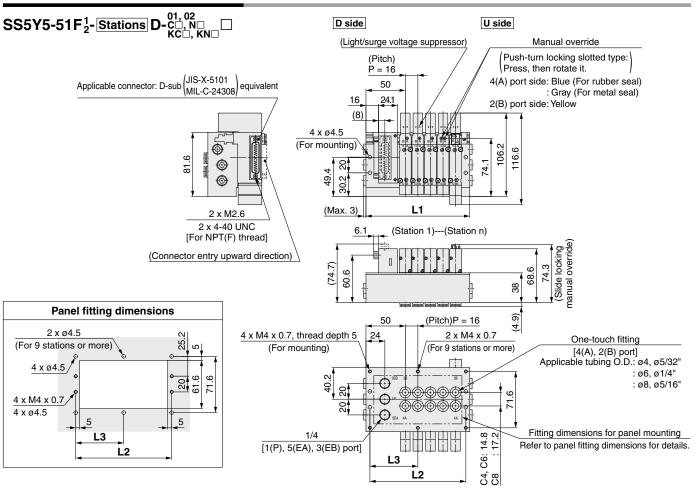

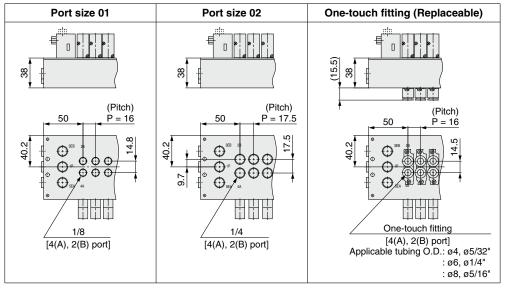

These figures show the "SS5Y5-51F2-05D-C8."

#### Port Sizes 01, C□, N□, KC□, KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

#### Port Size 02

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

Type 51/Bottom Ported

**D-sub Connector** 

Valve Construction

Metal Base

EX510

Manifold Exploded View

Fitting,


Plug Part Nos


Manifold Options







Dimensions: SY7000 Series

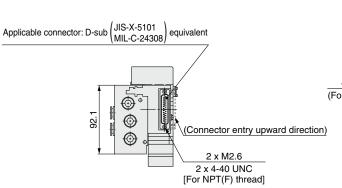

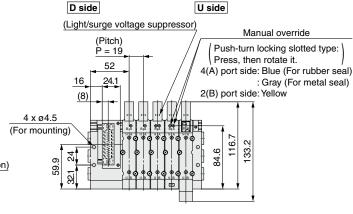


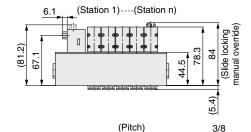

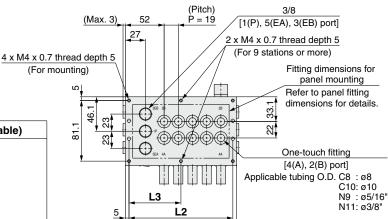

* These figures show the "SS5Y7-51F2-05D-C10."

L1

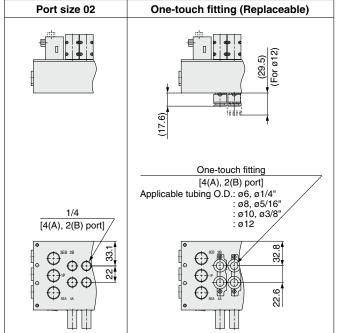


Panel f	fitting dimensions
4 x ø4.5	2 x ø4.5 (For 9 stations or more) 4 x M4 x 0.7 4 x Ø4.5

		,							,		
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136

Plug-in Type 51/Bottom Ported

Metal Base Flat Ribbon Cable

# Dimensions: SY3000 Series

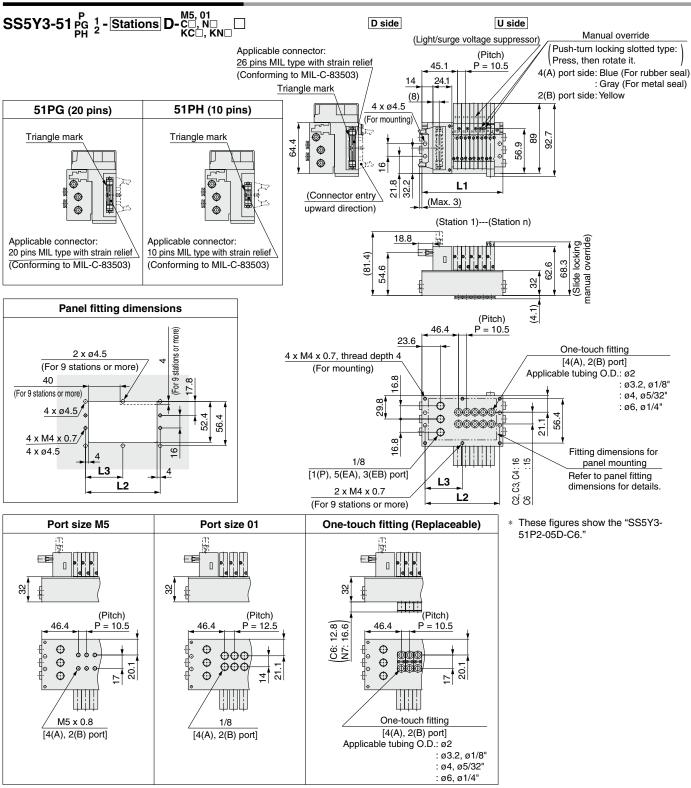

#### Port Sizes M5, C□, N□, KC□, KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3

#### Port Size 01

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

Valve Specifications

Construction

Plug-in Metal Base

(Light/surge voltage suppressor)

(Pitch)

P = 16

50

U side

Type 51/Bottom Ported

Flat Ribbon Cable

Manual override Push-turn locking slotted type:

4(A) port side: Blue (For rubber seal)

116.6 106

: Gray (For metal seal)


Press, then rotate it.


68 38







Applicable connector: 26 pins MIL type with strain relief (Conforming to MIL-C-83503) Triangle mark

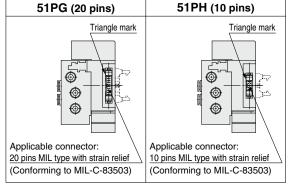


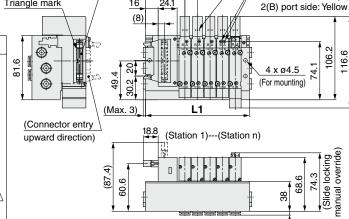

D side

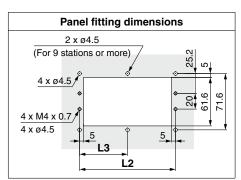

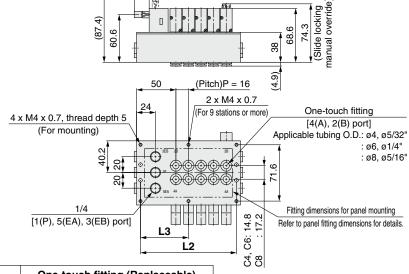

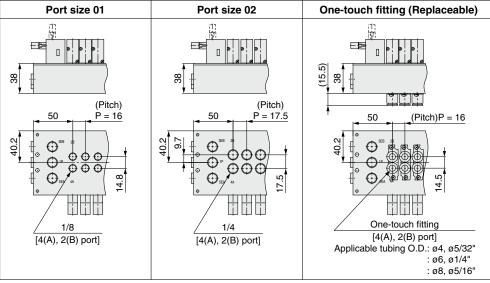

These figures show the "SS5Y5-51P2-05D-C8."

Port Sizes 01. C□. N□. KC□. KN□

- 1	· • · · · • · · · · · · · · · · · · · ·	,	-,									
	n: Stations	2	3	4	5	6	7	8	9	10	11	12
	L1	84	100	116	132	148	164	180	196	212	228	244
	L2	74	90	106	122	138	154	170	186	202	218	234
	13								03	101	100	117

Port	Size	02
------	------	----

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8
GCVC									240		



EX510 Manifold Exploded View Fitting, Plug Part Nos Manifold

Options


Metal Base


Dimensions: SY7000 Series


Plug-in Metal Base


Type 51/Bottom Ported


Flat Ribbon Cable

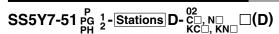


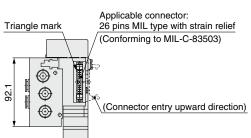

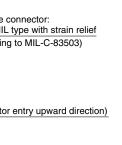


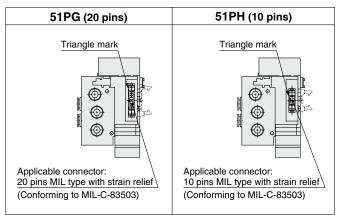

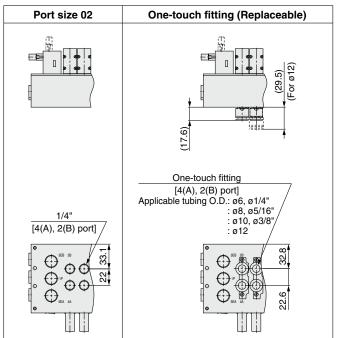


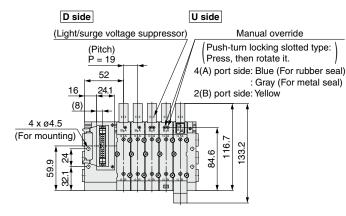

(Station 1)----(Station n)

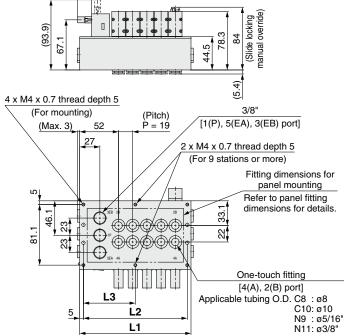

* These figures show the "SS5Y7-51P2-05D-C10."

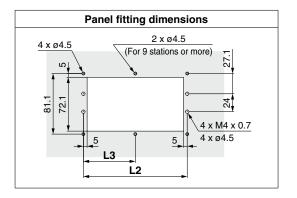

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136

Specific Product Precautions



# Plug-in Metal Base

D-sub Connector | Flat Ribbon Cable


Type 52
Top Ported

# SY3000/5000/7000 Series

CE CH CHSUS ROHS




#### How to Order Manifolds

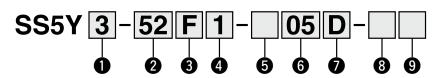

#### Series 3 SY3000 SY5000 SY7000

2 Type 52 Top ported **52R** Top ported, External pilot

4 Connector entry direction

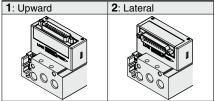


6 Wiring type

<u> </u>									
Nil	All double wiring*1								
S	All single wiring*2								

- *1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations
- *2 All single wiring: Available only for the manifold which has 2-position single for all stations Note that 2-position double, 3-, or 4-position valves cannot be used.
- * If a mix of single and double wiring is required, it is supplied as a


### **How to Order Manifold Assembly**

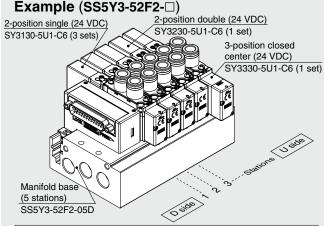

SS5Y3-52F2-05D ....... 1 set (Type 52 5-station manifold base part no.) *SY3130-5U1-C6...... 3 sets (2-position single part no.) *SY3230-5U1-C6...... 1 set (2-position double part no.) *SY3330-5U1-C6·········· 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly.

- Prefix it to the part numbers of the valve, etc. • For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Connector type

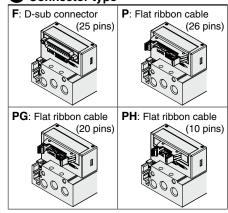

#### 6 Valve stations

Symbol Stations	F: D-:	sub con	nector (25 pins)	<b>P</b> : Fla	ıt ribbon	cable (26 pins
12   12 stations   Wiring     12   12 stations   Wiring     12   12 stations   Wiring     12   12 stations   Wiring     12   12 stations   Wiring     12   12 stations   Wiring     12   12 stations   Wiring     12   12 stations   Wiring     13   14   15   15   15   16   16   16   16   16						
12         12 stations         wiring           02         2 stations         All           :         :         single           12         12 stations         All           :         :         single           12         12 stations         wiring           PG: Flat ribbon cable (20 pins)         PH: Flat ribbon cable (10 pins)	02	2 stations	All	02	2 stations	All
02   2 stations   A     02   2 stations   A	:	:	double	:	:	double
:         :         single           12   12 stations         wiring           PG: Flat ribbon cable (20 pins)         PH: Flat ribbon cable (10 pins)	12	12 stations	wiring	12	12 stations	wiring
12     12 stations     wiring       12     12 stations     wiring       PG: Flat ribbon cable (20 pins)     PH: Flat ribbon cable (10 pins)	02	2 stations	All	02	2 stations	All
PG: Flat ribbon cable (20 pins)	:	:	single	E	:	single
	12	12 stations	wiring	12	12 stations	wiring
Symbol Stations Note Symbol Stations Note	PG:	Flat ribbo	on cable (20 pins)	PH:	- -lat ribbo	n cable (10 pins
	Symbol	Stations	Note	Symbol	Stations	Note

	iat HbbC	ni oabic (20 pino)		iat iibbo	11 dable (10 pills)
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
:	:	double	:	:	double
09	9 stations	wiring	04	4 stations	wiring
02	2 stations	All	02	2 stations	All
:	:	single		::	single
12	12 stations	wiring	08	8 stations	wiring

* This also includes the number of the blanking plate assembly.

#### P, E port entry U side*1 U D D side*1

В Both sides Plugs are mounted on the opposite side of the selected ports.

8 Thread type							
Nil	Rc						
00F	G						
00N	NPT						
00T	NPTF						

#### Mounting

Nil	Direct mounting								
D	DIN rail mounting (With DIN rail)								
D0	DIN rail r	DIN rail mounting (Without DIN rail)							
D3	For 3 stations	Specify a length longer							
	÷	: than that of the standard							
D12	For 12 stations								

Refer to page 295 for the fixation of DIN rail mounting type manifold.

# Valve Specifications

EX510

Manifold Exploded View

Fitting,

Plug Part Nos

Manifold

Options

## How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

SY	3	1	30					-5			1 -	<b>C6</b>		-
	0	2	8	4	6	6	7	8	9	10		•	1	<b>(B</b> )
			◆ Top po	orted										

#### **A** Series

• • • •	100
3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>		
1	0 '4'	Single
2	2-position	Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual	N.C./N.C.
B*1		N.O./N.O.
<b>C</b> *1 3-port	N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	71
0	Rubber seal
1	Metal seal

4 Pilot type

<u> </u>	
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only the rubber seal type is available. The back pressure check valve is not
- available for the 3-position type or the

6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type

• con type		
Nil	Standard	
т	With power saving circuit	
	(Continuous duty type)	

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

Rated voltage


Trated voltage		
5	24 VDC	
6	12 VDC	

9 Light/surge voltage suppressor and common specification

and common operation				
Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	_	common	
NS	_		Negative	
NZ	•		common	

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 293 for details.
  Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

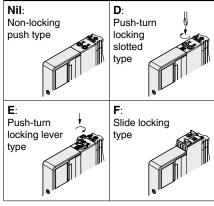

Refer to page 34 for the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

One.	One-touch fitting (inch)			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

Thread type

_	Tilleau type	
	Nil	Rc
	F	G
	N	NPT
	Т	NPTF

Only Nil is available for M5.

(13) Type of mounting screw

<u> </u>	oo or mounting oor on
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 266 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.




244


Dimensions: SY3000 Series

Plug-in Type 52/Top Ported

Metal Base D-sub Connector, Flat Ribbon Cable



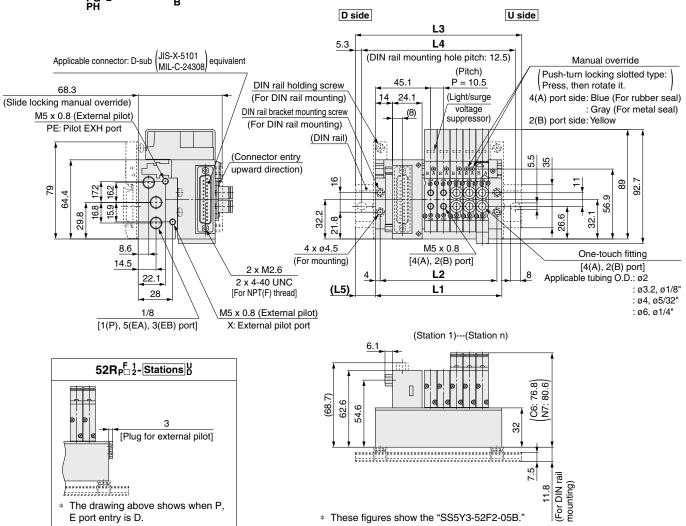

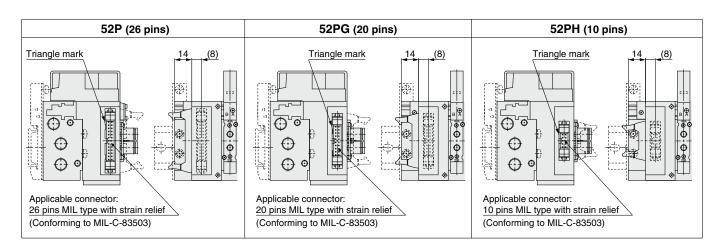

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Type 52/Top Ported

**D-sub Connector, Flat Ribbon Cable** 





[Plug for external pilot]

52R_{P□} ^F ¹₂-Stations ^U_D



Dimensions: SY5000 Series

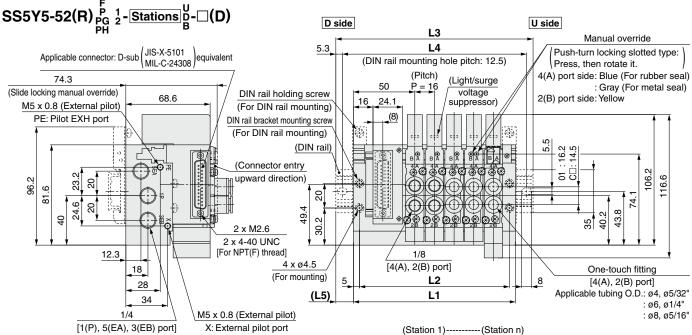


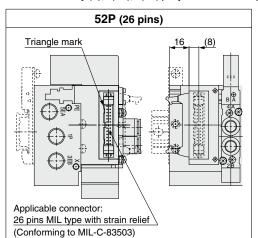

Applicable connector:


20 pins MIL type with strain relief

(Conforming to MIL-C-83503)

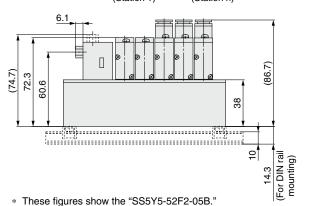

16

(8)

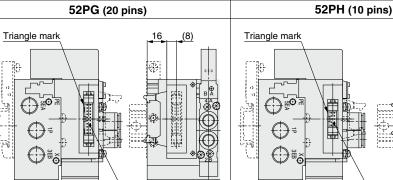


Applicable connector: 10 pins MIL type with strain relief (Conforming to MIL-C-83503)

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Dimensions: SY7000 Series

Plug-in Type 52/Top Ported

Metal Base D-sub Connector, Flat Ribbon Cable

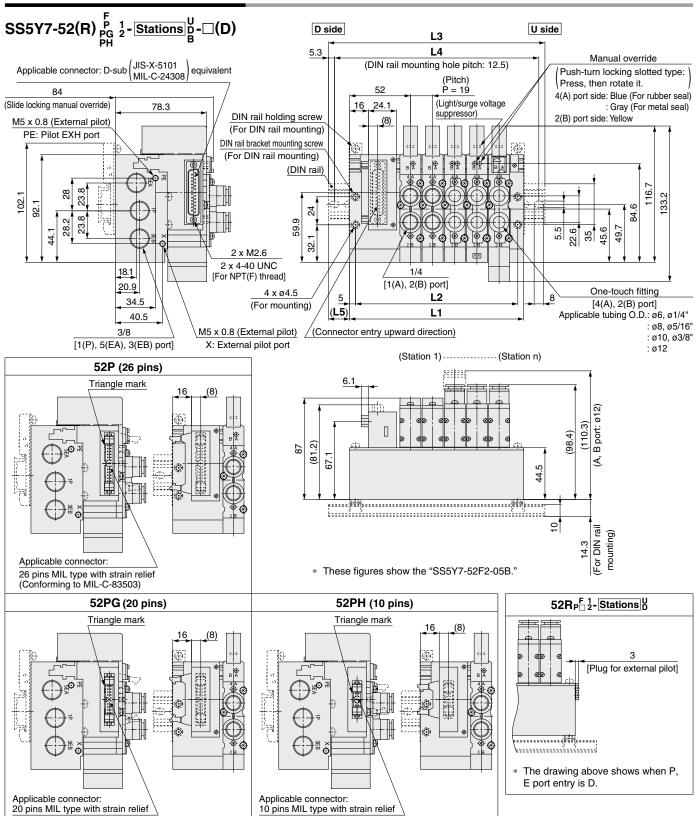


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

(Conforming to MIL-C-83503)

(Conforming to MIL-C-83503)

### **Electrical Wiring Specifications**

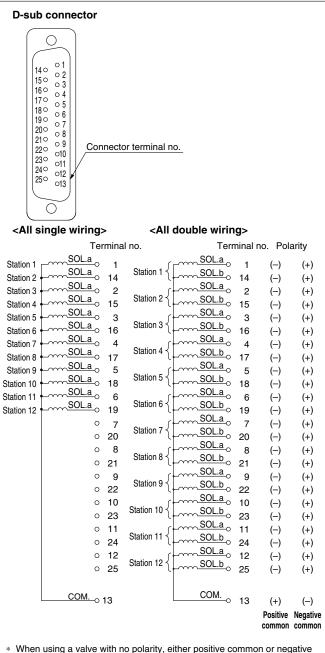


common can be used.

#### **Cable Assembly**

# AXT100-DS25-030 (N) [IP40 compliant]

Nil: Metric size N: Inch size

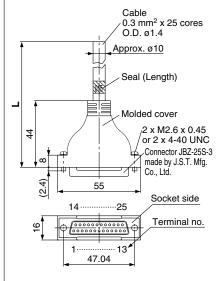

#### Lead wire color for **D-sub** connector cable assembly by terminal number

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

#### D-sub connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	0.11
3 m	AXT100-DS25-030	Cable 0.3 mm ² x 25 cores
5 m	AXT100-DS25-050	0.0111111 X 20 00165

- * When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.
- Cannot be used for movable wiring
- * Lengths other than the above are also available. Please contact SMC for details.

#### **Electrical characteristics**

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

The minimum bending radius of the D-sub connector cable is 20 mm.


#### **Connector Manufacturer's Example**

• HIROSE ELECTRIC CO., LTD.

- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.



#### **Electrical Wiring Specifications**

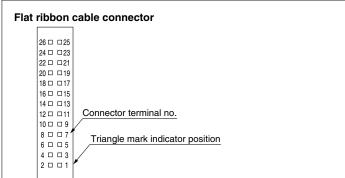


	P: Fla	t ribbon d	cable (26 pins)		
<all single<="" th=""><th>wiring&gt;</th><th><aii< th=""><th>double wiring&gt;</th><th></th><th></th></aii<></th></all>	wiring>	<aii< th=""><th>double wiring&gt;</th><th></th><th></th></aii<>	double wiring>		
	Terminal	no.	Terminal	no. Pol	arity
Station 1 Station 2 Station 3 Station 4 Station 5 Station 6 Station 7 Station 8 Station 9 Station 11	Terminal SOLa		Terminal  SOLa  SOLb  SOLb  SOLb  SOLb  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SOLB  SO	no. Pol. (-) (-) (-) (-) (-) (-) (-) (-) (-) (-)	(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
	∘ 21 ∘ 22	Station 11	SOL.a 21 SOL.b 22	( <del>-</del> )	(+)
	∘ 22 ∘ 23	Station 12	SUL.a	(–) (–)	(+) (+)
	o <b>24</b>	Station 12	[Lm SUL.0 24	(-)	(+)
	COM. ○ 25 COM. ○ 26		COM. 25 COM. 26	(+) (+)	(-) (-)
				Positive common	Negative common

PG: Fla	t ribbon cable (20 pins	)
<all single="" wiring=""></all>	` ` .	
<all single="" wiring="">           Termina           Station 1         \$00.a         1           Station 2         \$00.a         2           Station 3         \$00.a         4           Station 4         \$00.a         5           Station 6         \$00.a         6           Station 7         \$00.a         8           Station 8         \$00.a         8           Station 9         \$00.a         10           Station 10         \$00.a         10           Station 11         \$00.a         12           Station 12         13         14           15         16         16</all>	I no.   Termina	
o 17	Station 9 { SOL.a o 17 SOL.b o 18	(-) (+) (-) (+)
COM. o 19 COM. o 20	COM. COM. ○ 20	(+) (-) (+) (-)
		Positive Negative common

#### When using a valve with no polarity, either positive common or negative common can be used.

#### **Cable Assembly**

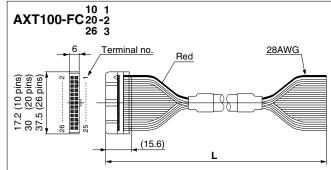

#### Flat ribbon cable connector assembly

Cable		Assembly part no.	
length (L)	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3

- * When using a standard commercial connector, use a 26-pin, 20-pin, or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- * Cannot be used for movable wiring
- * Lengths other than the above are also available. Please contact SMC for details.

#### Connector Manufacturer's Example

- HIROSE ELECTRIC CO., LTD. Japan Aviation Electronics Industry, Limited
- 3M Japan Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited
   Oki Electric Cable Co., Ltd.

#### PH: Flat ribbon cable (10 pins) <All single wiring> <All double wiring> Terminal no. Terminal no. Polarity SOL.a SOL.a Station 1 SOL.a SOL.b Station 1 Station 2 SOLa ∘ 3 SOL.a Station 3 SOL.a Station 2 SOL.b Station 4 SOL.a SOL.a 5 Station 5 (+) SOL.a SOL.b o Station 3 Station 6 (+) SOL.a o SOL.a Station 7 (+) SOL.a 8 Station 4 SOL.b o Station 8 (+) <u>COM.</u> ∘ 9 COM. (+) (-)COM. ○ 10 <u>COM.</u> ∘ 10 (+) Positive Negative common common



# Plug-in Metal Base EX510

# SY3000/5000/7000 Series

CA CAN US


Plugs are mounted on the opposite

Only D side is available for the type

side of the selected ports.

51 bottom-ported type.

#### **How to Order Manifolds**

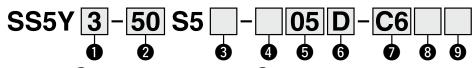

# 1 Series

3	SY3000
5	SY5000
7	SY7000

## 3 SI unit output polarity

Nil	Positive common
N	Negative common

# 2 Type

50	Side ported
51	Bottom ported
50R	Side ported, External pilot

* External pilot is not available for the bottom-ported type.

#### **5** Valve stations

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All double	02	2 stations	All single
•	:	All double		:	wiring
80	8 stations	wiring	12	12 stations	wiring


* This also includes the number of the blanking plate assembly.

## 4 Wiring type

Nil	All double wiring*1
S	All single wiring*2

- *1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- *2 All single wiring: Available only for the manifold which has 2-position single for all stations
- Note that 2-position double, 3-, or 4-position valves cannot be used.
- If a mix of single and double wiring is required, it is supplied as a special order.

# How to Order Manifold Assembly

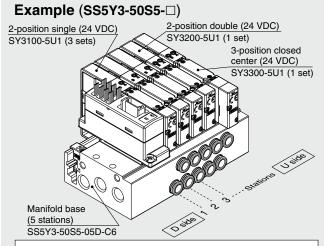

SS5Y3-50S5-05D-C6 ··· 1 set (Type 50 5-station manifold base part no.)

*SY3100-5U1 ····················· 3 sets (2-position single part no.)

*SY3200-5U1 ····················· 1 set (2-position double part no.)

*SY3300-5U1 ··················· 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- * When mixing top-ported configurations, select from those listed on page 261. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

# B Both sides A, B port size

6 P, E port entry

#### Thread piping

	P-P9			
Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

U side*

D side*1*2

#### One-touch fitting (Metric)

One-touch fitting (Metric)							
Sy	mbol	A, B port	SY3000	SY5000	SY7000		
	C2	ø2	•	-	_		
	СЗ	ø3.2	•	_	_		
9	C4	ø4	•	•	_		5Q
Fixed	C6	ø6	•	•	_		
	C8	ø8	_	•	•		
	C10	ø10	_	_	•		
	KC2	ø2	•	_	_	Type 50	Type 51
	КСЗ	ø3.2	•	_	_	(Side ported)	(Bottom ported)
əe	KC4	ø4	•	•	_		
Replaceable	KC6	ø6	•	•	•		
place	KC8	ø8	_	•	•		
Pg.	KC10	ø10	_	_	•		
	KC12	ø12	_	_	•		
	M*1	Mixed sizes	•	•	•		
P,	P, E port size (Thread piping)		1/8	1/4	3/8		

#### One-touch fitting (Inch)

Sy	mbol	A, B port		SY5000	SY7000		
	N1	ø1/8"	•	_	_		
5	N3	ø5/32"	•	•	_		
Fixed	N7	ø1/4"	•	•	_		
"	N9	ø5/16"	_	•	•		30°
	N11	ø3/8"	_	_	•		
	KN1	ø1/8"	•	_	_	Type 50	Type 51
e e	KN3	ø5/32"	•	•	_	(Side ported)	(Bottom ported)
Seal	KN7	ø1/4"	•	•	•		
Replaceable	KN9	ø5/16"	_	•	•		
Be	KN11	ø3/8"	_	_	•		
	M*1	Mixed sizes	•	•	•		
P,	E port s	size (Thread piping)	1/8	1/4	3/8		

*1 When ports are of mixed sizes, indicate the piping specifications on the manifold specification sheet.

Metal Base

D-sub, Ribbor EX510

Manifold

Explode

Fitting,

Plug Part Nos

Manifold Options

8 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

9 Mounting


	Nil	Direct mounting			
	D		DIN rail mounting		
L		(With DIN rail)			
	DO	DIN rail mounting			
	D0		(Without DIN rail)		
	D3	For 3 stations	Specify a length longer		
	•	:	than that of the standard		
	D12	For 12 stations	rail.		

- * Only direct mounting is available for the type 51 bottom-ported type.
- Refer to page 295 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway Type Serial Transmission System, refer to the Web Catalog and the Operation Manual. Please download the Operation Manual via the SMC website, https://www.smcworld.com

## How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

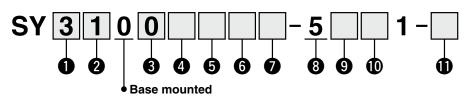

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4	N.C./N.C.
B*1	4-position dual 3-port	N.O./N.O.
C*1		N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

<del>•</del> •••	ai typo
0	Rubber seal
1	Motal soal

Pilot type

<u> </u>	ot typo
Nil	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only the rubber seal type is available.
- The back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

## Coil type

	Nil	Standard
Ī	Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously
- energized for long periods of time. Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

8 Rated voltage


24 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive common
Z	•	_	FOSILIVE COMMINON
NS	_		Magativa common
NZ	•		Negative common

Only "Z" and "NZ" types are available with a power saving circuit. Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is Nil (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).

#### Manual override

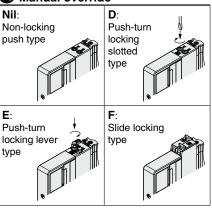

Refer to page 34 for the safety slide locking manual override.

## Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 266 for base gasket and


mounting screw part numbers.
"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.


> Protective class class II (Mark: ⟨ii⟩)

Dimensions: SY3000 Series

Plug-in Type 50/Side Ported
Metal Base EX510

# SS5Y3-50(R)S5 - Stations D - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C - N - C

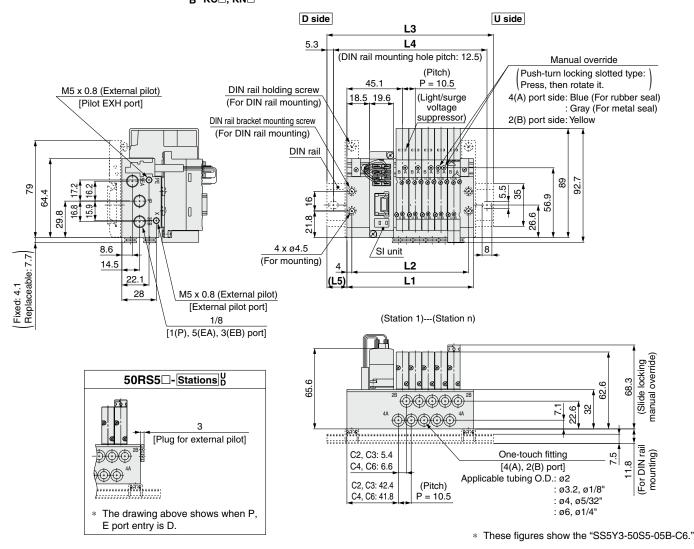

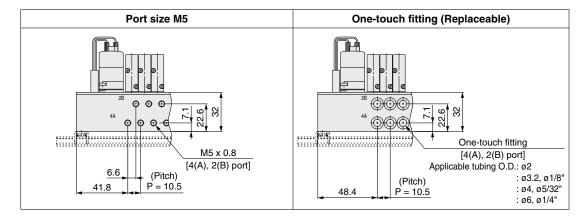


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17




Valve Specifications

# Dimensions: SY3000 Series

SS5Y3-50(R)S5 $\square$ -Stations  $\stackrel{\mathsf{U}}{\mathbb{P}}$ -01 $\square$ (D)

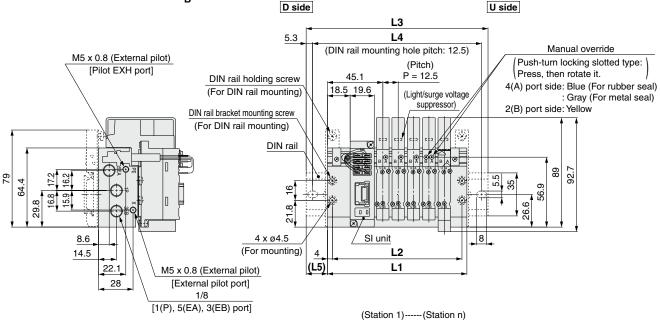

50RS5□-Stations D [Plug for external pilot] The drawing above shows when P, E port entry is D.

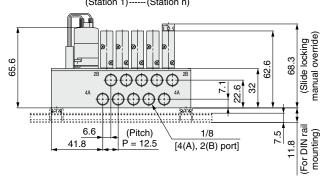

* These figures show the "SS5Y3-50S5-05B-01."

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5



Valve Construction

Metal Base


D-sub, Flat Ribbon EX510

Manifold Exploded View Fitting, Plug Part Nos


Manifold Options

Dimensions: SY5000 Series

Type 50/Side Ported Plug-in Metal Base **EX510** 

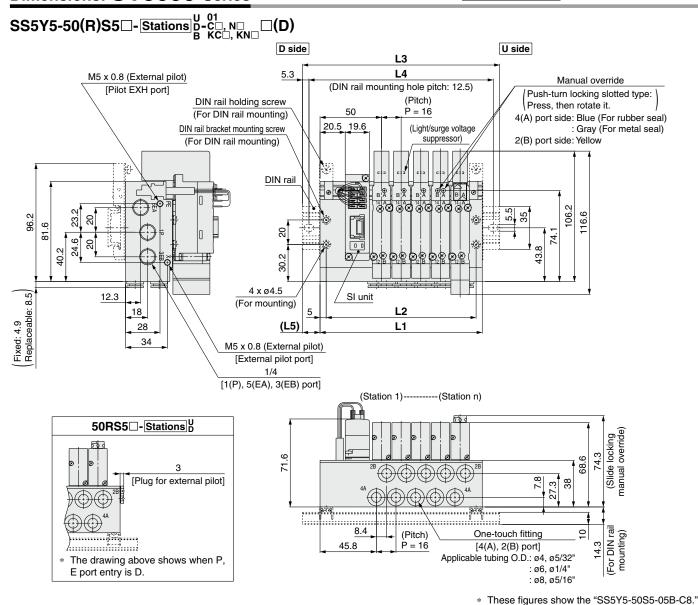

Port size 01 One-touch fitting (Replaceable)

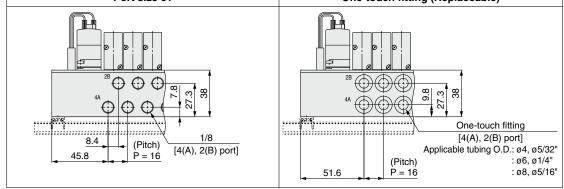

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

# Plug-in Metal Base **SY3000/5000/7000** Series

Type 50/Side Ported EX510

Valve Specifications

Chart

Valve Construction

Metal Base

D-sub, Flat Ribbon EX510

Manifold Exploded View Fitting, Plug Part Nos


* These figures show the "SS5Y5-50S5-05B-02."

Manifold Options

Plug-in **Metal** Base

Dimensions: SY5000 Series SS5Y5-50(R)S5 $\square$ -Stations  $\stackrel{\text{U}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}}{\stackrel{\text{D}}}}}{\stackrel{\text{D}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}}{\stackrel{\text{D}}}}}{\stackrel{\text{D}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}}{\stackrel{\text{D}}}}}{\stackrel{\text{D}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}}\stackrel{\text{D}}}}{\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}$ 

E port entry is D.

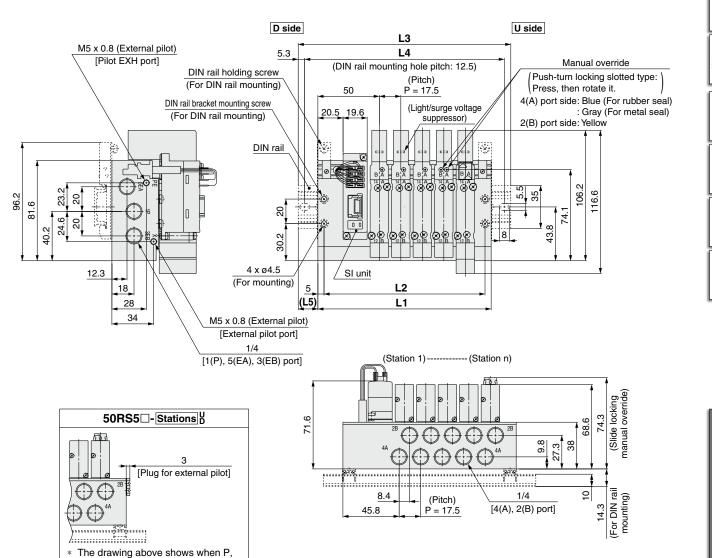



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5



Dimensions: SY7000 Series

Plug-in Type 50/Side Ported
Metal Base Ex510

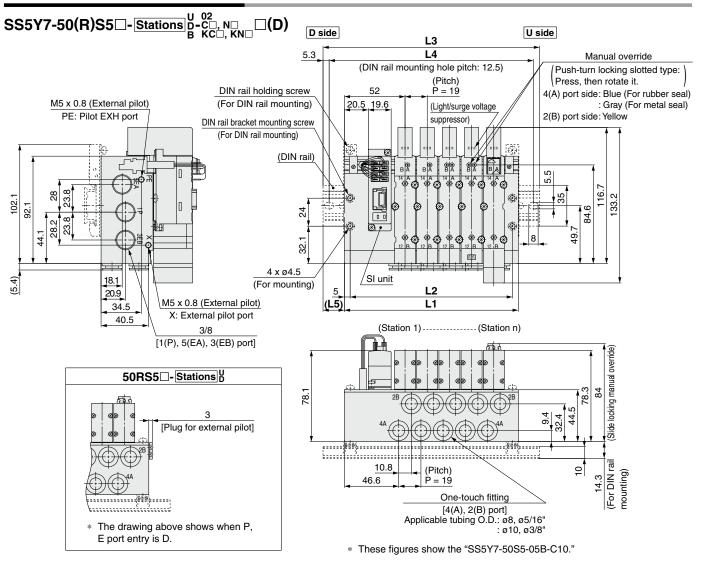

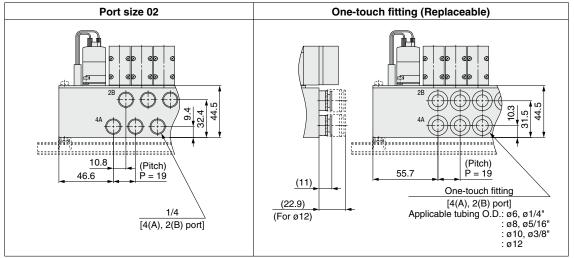

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

Plug-in

Metal Base

Metal Base

D-sub, Flat Ribbon EX510

Manifold Exploded View

Fitting, Plug Part Nos

Manifold

Options


Type 51/Bottom Ported

Manual override

: Gray (For metal seal)

EX510

Dimensions: SY3000 Series

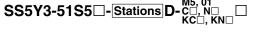

Panel fitting dimensions


2 x ø4.5 (For 9 stations or more)


40

(For 9 stations or more)


4 x M4 x 0.7 4 x ø4.5

4 x Ø4.5

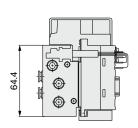


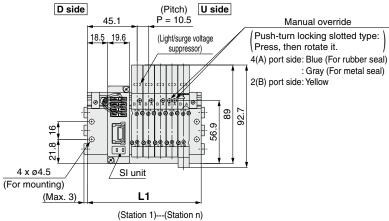



(Slide locking manual override) 68.3 62.6 65.6 32 (Pitch) P = 10.546.4

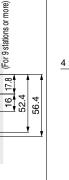


4

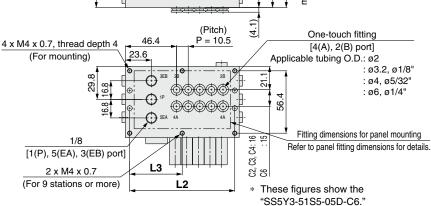

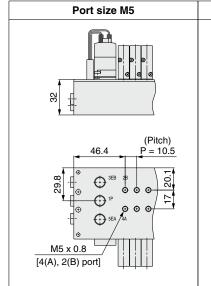

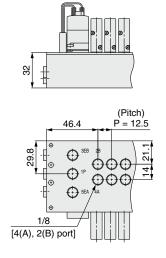

Port size 01

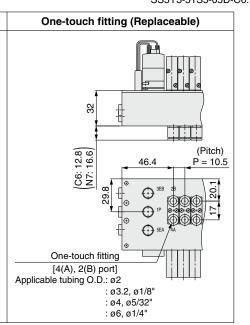

Port	Sizes	M5,	C□,	N□,	KC□,	$KN\square$

. 0110	1203	1110,	<b>-</b>	•, ••	·						
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3

Dort	Size	Λ1
T UI L	SIZE	U I


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_			_	_		_	77.8	84	90.3	96.5


Plug-in Type
Metal Base

Type 51/Bottom Ported

EX510



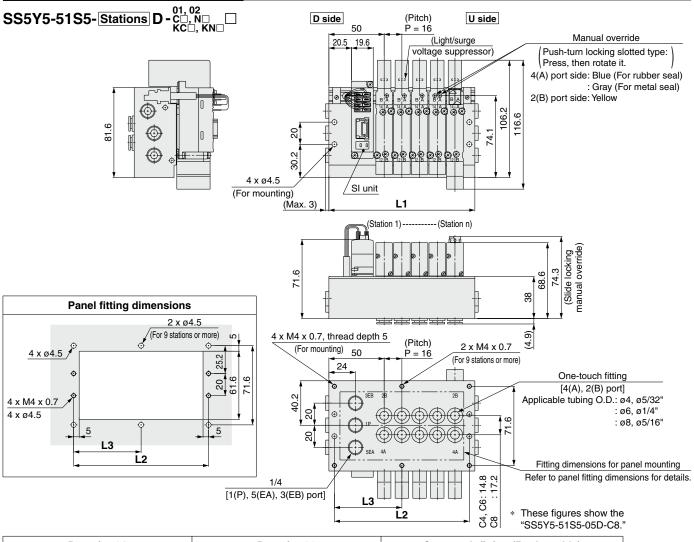

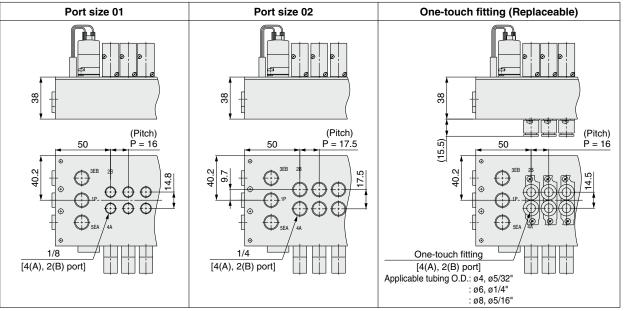

Port Sizes (	01. C□.	. N□.	KC□.	$KN \square$

	n: Stations	2	3	4	5	6	7	8	9	10	11	12
	L1	84	100	116	132	148	164	180	196	212	228	244
	L2	74	90	106	122	138	154	170	186	202	218	234
	13	_		_		_			93	101	109	117

Port	Size	02

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

Chart

Type 51/Bottom Ported EX510

Valve Specifications

Valve Construction


Metal Base D-sub, Flat Ribbon

EX510


Fitting,


Manifold Options


Plug-in Metal Base

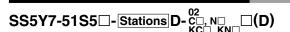



Dimensions: SY7000 Series

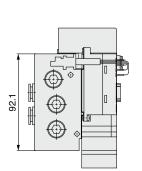


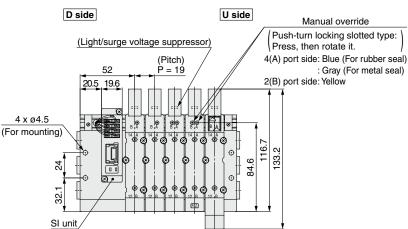

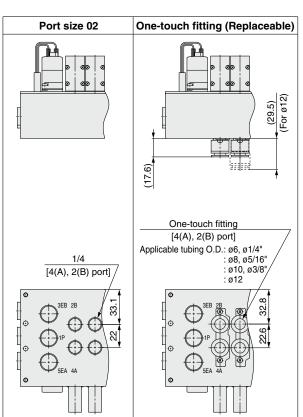

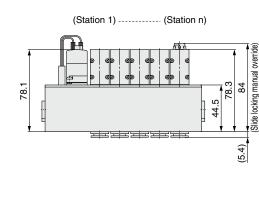

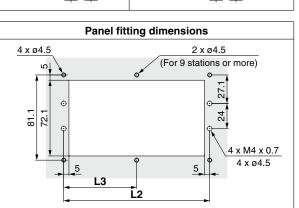

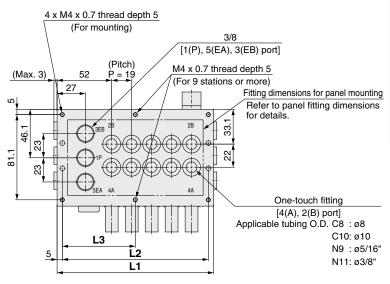

* These figures show the "SS5Y7-51S5-05D-C10."

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136


Type 52 Top Ported

# Plug-in Metal Base EX510

# SY3000/5000/7000 Series

CH CH CHUS

## **How to Order Manifolds**

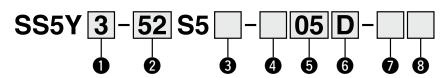

#### Series

3	SY3000
5	SY5000
7	SY7000

# **2** Type

F0.	Ton monted
52	Top ported
52R	Top ported, External pilot

# 4 Wiring type

	3 71 -
Nil	All double wiring*1
S	All single wiring*2

- *1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- *2 All single wiring: Available only for the manifold which has 2-position single for all stations Note that 2-position double, 3-, or 4-position valves cannot be used.
- * If a mix of single and double wiring is required, it is supplied as a special order.

# **5** Valve stations

Symbol	Stations	Note
02	2 stations	All double
i i		wiring
08 8 stations		wiring
02	2 stations	All single
: :		All single
12 12 stations		wiring

 This also includes the number of the blanking plate assembly.

# 3 SI unit output polarity

Nil	Positive common
N	Negative common

6 P, E port entry

U	U side*1
D	D side*1
В	Both sides

*1 Plugs are mounted on the opposite side of the selected ports.

# **How to Order Manifold Assembly**

Example (SS5Y3-52S	5-□)
2-position single (24 VDC) SY3130-5U1-C6 (3 sets)	2-position double (24 VDC) SY3230-5U1-C6 (1 set)
	3-position closed center (24 VDC) SY3330-5U1-C6 (1 set)
	Seture Uske
Marifoldhara	28
Manifold base (5 stations) SS5Y3-52S5-05D	\(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}{3}\) \(\frac{1}\) \(\frac{1}{3}\) \(\frac{1}\) \(\frac{1}\) \(\frac{1}\) \(\frac{1}\) \(\frac{1}\)

SS5Y3-52S5-05D ······ 1 set (Type 52 5-station manifold base part no.)

*SY3130-5U1-C6 ...... 3 sets (2-position single part no.)
*SY3230-5U1-C6 ..... 1 set (2-position double part no.)

*SY3330-5U1-C6 ······· 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered
  the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Thread type

Nil	Rc
00F	G
00N	NPT
00T	NPTF

8 Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a length longer	
	:	than that of the standard	
D12	For 12 stations	rail.	

 Refer to page 295 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway Type Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. Please download the Operation Manual via the SMC website, https://www.smcworld.com




Valve Specifications

Valve Construction

# How to Order Valves (With mounting screw)

Refer to page 15 for valve specifications.

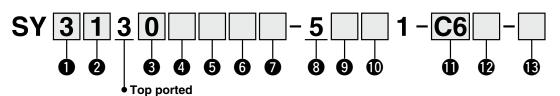

# Series

OCTION TO THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE			
	3	SY3000	
	5	SY5000	
	7	SY7000	

# 2 Type of actuation

	<u> </u>				
1	0	Single			
2	2-position	Double			
3	3-position	Closed center			
4		Exhaust center			
5		Pressure center			
<b>A</b> *1	4-position dual 3-port	N.C./N.C.			
<b>B</b> *1		N.O./N.O.			
C*1		N.C./N.O.			

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

# 3 Seal type

O Sear type			
	0	Rubber seal	
	1	Metal seal	

# 4 Pilot type

Nil	Internal pilot
R	External pilot

# 5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available.
- The back pressure check valve is not available for the 3-position type or the SY7000.

# 6 Pilot valve option

Nil Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

# Coil type

Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

# 8 Rated voltage

# Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R			Nam malas	
U	•	•	Non-polar	
S			Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

* Only "Z" and "NZ" types are available with a power saving circuit. Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is Nil (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).

# Manual override

Nil:	<b>D</b> :
Non-locking	Push-turn ∮
push type	locking
	slotted
	type
E: ,	F:
Push-turn	Slide locking
locking lever	type
type	

 Refer to page 34 for the safety slide locking manual override.

# 1 A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

## One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_		•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

One-touch fitting (inch)			
A, B port	SY3000	SY5000	SY7000
ø1/8"	•	_	_
ø5/32"	•	•	_
ø1/4"	•	•	•
ø5/16"	_	•	•
ø3/8"	_	_	•
	A, B port Ø1/8" Ø5/32" Ø1/4" Ø5/16"	A, B port SY3000  Ø1/8"  Ø5/32"  Ø1/4"  Ø5/16"  —	A, B port

# Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

# Type of mounting screw

- 71	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 266 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Protective class class III (Mark: (1))

Specific Product Precautions



Metal Base

D-sub, Flat Ribbon

Manifold Exploded View

Manifold Options


Plug Part Nos

Plug-in **Metal** Base Type 52/Top Ported

EX510

Dimensions: SY3000 Series

# SS5Y3-52(R)S5 - Stations D- (D)

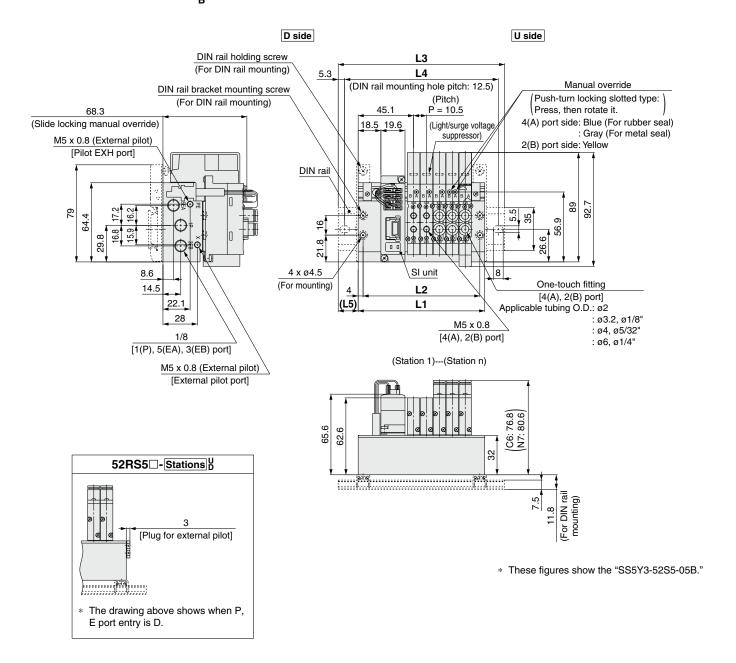

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

# Plug-in Metal Base SY3000/5000/7000 Series


Plug-in **Metal** Base


Type 52/Top Ported


EX510

Dimensions: SY5000 Series

SS5Y5-52(R)S5 $\square$ -Stations  $\stackrel{\mathsf{U}}{\mathbb{D}}$ - $\square$ (D)

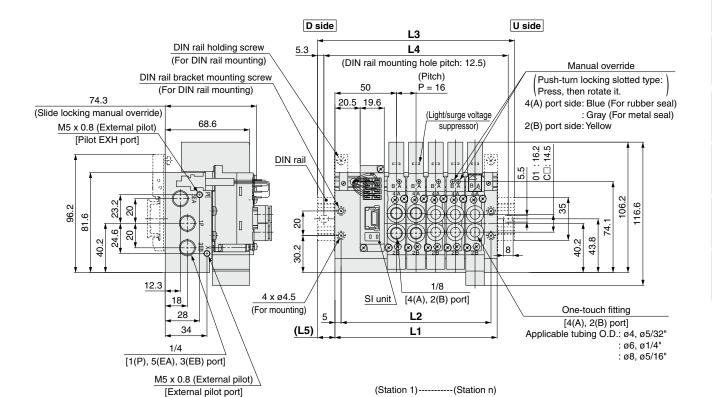

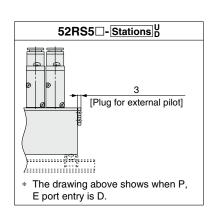

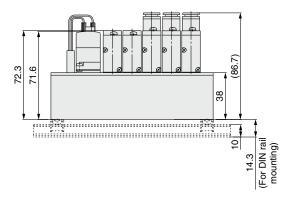

* These figures show the "SS5Y5-52S5-05B."

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Specific Product Precautions



Chart

Valve n Specifications

lent Valve Construction

Residual Va ssure Replace

Vacuum With I With I lelease Valve | Pre Ith Restrictor | Relea

With Pressure Sensor

Made to Order

Metal Base

Ribbon EX510

Manifold Exploded View Fitting, Plug Part Nos.


Manifold Options


Plug-in **Metal** Base Type 52/Top Ported


EX510

Dimensions: SY7000 Series

# $SS5Y7-52(R)S5 \square - \underline{Stations} \overset{U}{p} - \square(D)$

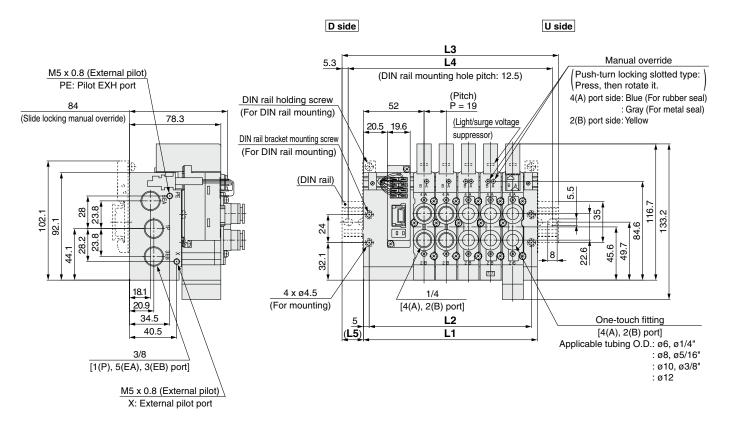

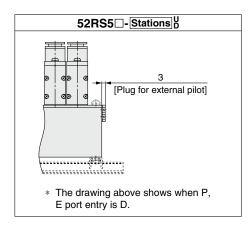

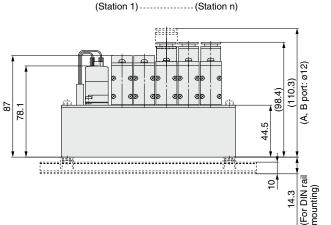


* These figures show the "SS5Y7-52S5-05B."

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5



# SY3000/5000/7000 Series Type 50, 51, 52

# Plug-in Metal Base Manifold Exploded View

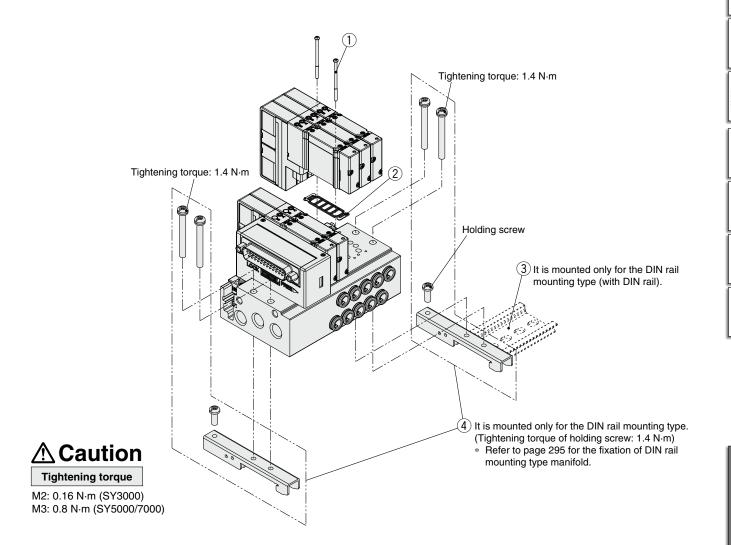

# **Manifold Parts Nos.**

No.	Dog	scription		Part no.		Note
INO.	Des	scription	SY3000	SY5000	SY7000	rvote
1	Valve mounting	Round head combination screw	<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are for 10 valves (20 pcs.).
	screw	Hexagon socket head cap screw	<b>SY3000-222-1A</b> (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	(30 pcs. for the SY7000)
2	Base gasket (for plug-in metal	base and sub-plate)	SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
3	DIN rail		VZ1000-11-1-□	VZ1000-11-4-□	VZ1000-11-4-□	Refer to page 268.
4	Clamp bracket a	•	SY30M-15-2A	SY50M-15-2A	SY70M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).

Specific Product Precautions



Shart

Valve Specifications

ement Cons

th Residual
Pressure
ease Valve

Vacuum
Release Valve
rith Restrictor

With Pressure Sensor

Made to Order

# SY3000/5000/7000 Series One-touch Fitting Plug A

# **One-touch Fitting, Plug Assembly Part Nos.**

Refer to "How to Replace One-touch Fittings" on page 296 for the replacement method.

# ■ One-touch fittings

		Port size	e	SY3000	SY5000	SY7000
		ø2		VVQ1000-50A-C2	_	_
	stric size	ø3.2		VVQ1000-50A-C3	_	_
		ø4		VVQ1000-50A-C4	VVQ1000-51A-C4	_
			Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
t		ø8		_	VVQ1000-51A-C8	VVQ2000-51A-C8
port	=	ø10		_	_	VVQ2000-51A-C10
, m		ø12		_	_	KQ2H12-17-X224
, ₹		ø1/8"		VVQ1000-50A-N1		_
	size	ø5/32"		VVQ1000-50A-N3	VVQ1000-51A-N3	_
		ø1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
	Inch	ø5/16"		<del>_</del>	VVQ1000-51A-N9	VVQ2000-51A-N9
	_	ø3/8"				VVQ2000-51A-N11

^{*} Purchasing order is available in units of 10 pieces.

# **■** Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A

^{*} Purchasing order is available in units of 10 pieces.

# Chart

# Valve Specifications

# Valve Construction

#### Valve Replacement Parts

# With Residual Pressure Release Valve

# Vacuum Release Valve with Restricto

# Pressure Sensor

Made to Order


D-sub, Flat Ribbor

# SY3000/5000/7000 Series Manifold Options

# ■ For the SY3000 Plug-in metal base

## VZ1000-11-1-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

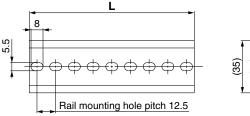

(7.5)


(10)

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				
Weight [g]	145.9	148.1	150.4	152.6	154.9	157.1	159.4	161.6	163.9	166.1	168.4	170.6	172.9	175.1	177.4				

# ■ For the SY5000/7000 Plug-in metal base

# VZ1000-11-4-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box  $\Box$ .

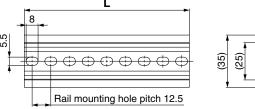

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
3 131																			
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
	38	39 585.5																	56 798
No.	38 573		40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	
No.	38 573	585.5	40 598	41 610.5	42 623	43 635.5	44 648	45 660.5	46 673	47 685.5	48 698	49 710.5	50 723	51 735.5	52 748	53 760.5	54 773	55 785.5	798
No. L dimension Weight [g]	38 573 145 57	585.5 148.1	40 598 151.3	41 610.5 154.5	42 623 157.6	43 635.5 160.8	44 648 163.9	45 660.5 167.1	46 673 170.3	47 685.5 173.4	48 698 176.6	49 710.5 179.8	50 723 182.9	51 735.5 186.1	52 748 189.2	53 760.5	54 773	55 785.5	798


Specific Product Precautions





# **Manifold Options**

## ■ Blanking plate assembly (With mounting screw)

Used when valve additions are expected or for maintenance A structure is in place on the blanking plate to prevent the mounting screws from sliding.

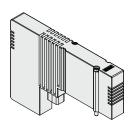

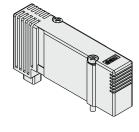

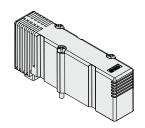

SY30M-26-2A (-B)

SY50M-26-2A (-B)

SY70M-26-2A (-B)


Refer to pages 276 to 278 for dimensions.

Refer to pages 270 to 275 for individual SUP/EXH and other options.

Part numbers of mounting screw [Hexagon bolt]
(For repairs)

SY3000: SY3000-23-24A [SY3000-222-1A] SY5000: SY5000-221-1A [SY5000-222-1A] SY7000: SY7000-221-2A [SY7000-222-1A]


## **How to Order Blanking Plate Assembly**

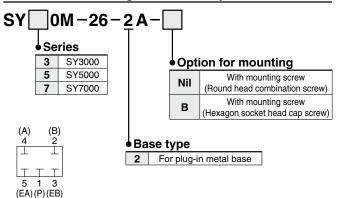

# ■ Plug

Circuit diagram

These are inserted in unused cylinder ports and P, E ports.

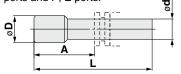

* Shipped together with the product

## Dimensions

Applicable fitting size $\emptyset$ <b>d</b> (Metric size)	Model	Α	L	ø <b>D</b>
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

Applicable fitting size ød (Inch size)	Model	Α	L	ø <b>D</b>
1/8"	KQ2P-01	16	31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09	20.5	39	10
3/8"	KQ2P-11	22	43	11.5

M2: 0.16 N·m (SY3000)

M3: 0.8 N·m (SY5000/7000)

EX510

## **.** Caution Tightening torque for mounting screw

# **Manifold Options**


* Refer to pages 276 to 278 for dimensions.

## ■ Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 50 manifolds.

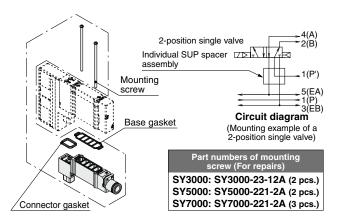


## ■ Individual EXH spacer assembly


[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust.

When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 50 manifolds.

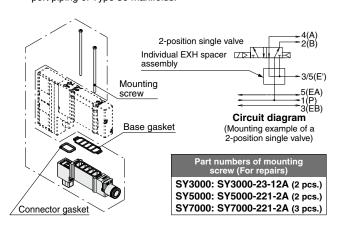

# How to Order Individual SUP/EXH Spacer Assembly

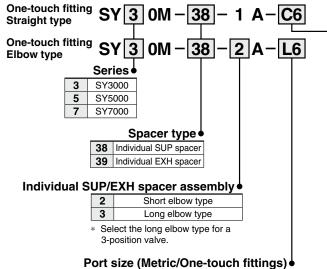

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	_
L6	ø6	•	•	•
L8	ø8	_	•	•
L10	ø10	_	_	•
L12	ø12	_	_	•

	Port Size	(inch/On	e-touch	nungs)
Symbol	P, E port	SY3000	SY5000	SY7000
LN3		•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_

LN11

ø3/8'

ut aima (Inab/Ona tauah fittinga)

#### Port size (Metric/One-touch fittings)

	Fort size (wether one-touch intilligs)						
Symbol	P, E port	SY3000	SY5000	SY7000			
C2	ø2	•	_				
C3	ø3.2	•	_	_			
C4	ø4	•	•	_			
C6	ø6	•	•	•			
C8	ø8	_	•	•			
C10	ø10	_	_	•			
C12	ø12	_	_	•			

#### Port size (Inch/One-touch fittings)

	. O. C O.EO	(111011)	io todoii	90
Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

When using in combination with the  $SY_7^530_1^0\Box$ - $\Box$ 1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.



# **.**⚠Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)


# **Manifold Options**


* Refer to pages 276 to 278 for dimensions.

# ■ SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

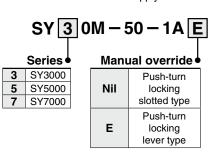

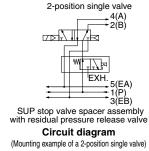

* For lever type

When locking the lever type manual override, push the lever down in the PUSH position with your fingers until it stops, then turn the lever  $90^{\circ}$  clockwise. (PUSH  $\rightarrow$  LOCK)

Turning the lever without pushing it down until it stops can cause damage to the manual override and other problems such as air leakages.

To unlock the manual override, turn the lever counterclockwise. (LOCK -> PUSH)


# Part numbers of mounting screw (For repairs) SY3000: SY30M-56-1A (2 pcs.) SY5000: SY50M-56-1A (2 pcs.) SY7000: SY70M-56-1A (3 pcs.)

# [How to mount SUP stop valve spacer assembly with residual pressure release valve]

Insert the SUP stop valve mounting screw from the side of the spacer assembly, and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque. Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure exhaust valve.

- * Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- * This product is only for internal pilot specifications, as the external pilot air cannot be shut off.
- * If the product is equipped with a 3-position closed center, residual pressure cannot be released, so use in combination with a 3-port valve, which can be connected to the A, B piping port.

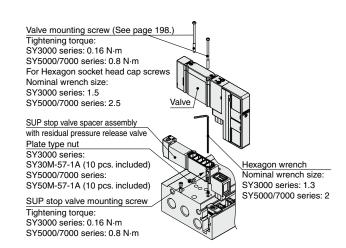

Tightening torque for mounting screw

Base

Metal

D-sub, Ribbor EX510 Manifold Explode Fitting,

# **.**↑Caution

<Example>

Double check spacer assembly

with residual pressure release valve

3-position exhaust center valve

4(A) 2(B)

Circuit diagram (Intermediate stop: When 3-position exhaust center valve is mounted)

Double check spacer assembly

with residual pressure release valve 2-position single valve

EXH

EXH.

Circuit diagram (Drop prevention: When 2-position single valve is mounted)

3(EB)

#### M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000) * Refer to pages 276 to 278 for dimensions.

# ■ Double check spacer assembly with residual pressure release valve (Side/Bottom ported)


[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust center valve when the double check spacer assembly with residual exhaust valve is used.

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve.

Series	Part no.
SY3000	SY30M-60-1A
SY5000	SY50M-60-1A
SY7000	SY70M-60-1A

**Manifold Options** 

	Intermediate stop	Drop prevention
Applicable valve	SY ³ ₅ 40 ⁰ ₁	SY ³ ₇ 100

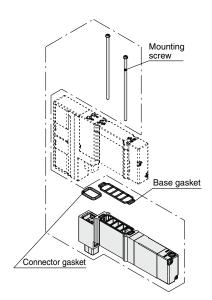

Part numbers of mounting screw (For repairs) SY3000: SY3000-23-27A (2 pcs.) SY5000: SY5000-221-4A (2 pcs.) SY7000: SY7000-221-4A (3 pcs.)

# **⚠** Caution

- · Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston seal, and rod seal for air leakage.
- Combining with 3-position closed center or pressure center valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- If using a double check spacer that is built in to the sub-plate, refer to page 283.

# **Specifications**

Max. operating p	1.0 MPa	
Min. operating p	0.1 MPa	
Ambient and fluid ter	mperatures	−10 to 50°C
Flow rate	SY3000	0.3 dm3/(s·bar)
characteristics: C	SY5000	0.7 dm3/(s·bar)
Citatacteristics. C	SY7000	1.1 dm3/(s·bar)
Max. operating fr	3 Hz	



272

# **<b> ∴** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000)

# **Manifold Options**


* Refer to pages 276 to 278 for dimensions.

M3: 0.8 N·m (SY5000/7000)

## ■ Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]
Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure)

#### **How to Order**

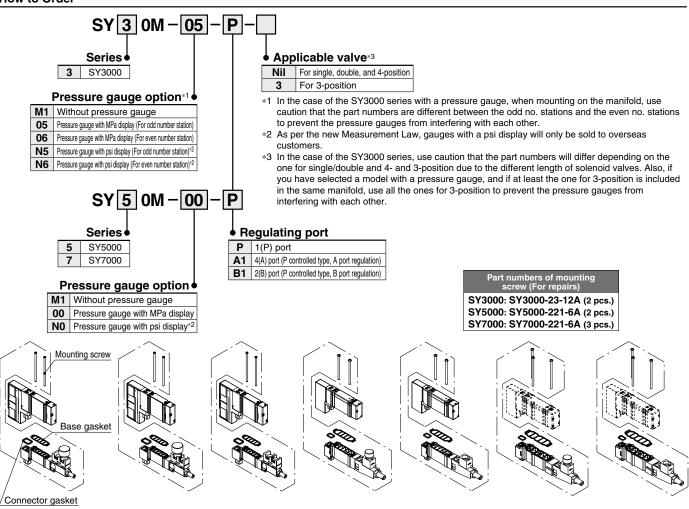

SY50M-00/N0-□

## **Specifications**

SY30M-05/N5-

(With pressure gauge/

Interface regulator model		SY30M-□-□-□	SY50M-□-□	SY70M-□-□		
Applicable valv	e model*1	SY3□ ₃ □(R)	SY5□ ₃ □(R)	SY7□30(R)		
Regulating port	t	1(P), 4(A), 2(B)				
Set pressure ra	nge		0.1 to 0.7 MPa			
Maximum opera	ating pressure	1.0 MPa				
Fluid		Air				
Ambient and flui	mbient and fluid temperatures		10 to 50°C (No freezing	g)		
Weight [g]*2	With pressure gauge	33 (35)* ³	75	93		
weight [g] -	Without pressure gauge	27 (29)*3	69	87		

SY30M-M1-□

(Without pressure gauge)

SY30M-06/N6-□

(With pressure gauge/

For odd number station) For even number station)

- *1 3-position closed center and pressure center, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.
- *2 Gasket and mounting screws are included in the weight.

SY70M-00/N0-□

SY70M-M1-□


(With pressure gauge) (Without pressure gauge)

*3 (): Denotes the values of SY30M-\(\sigma\)-\(\sigma\)-3

SY50M-M1-□

(With pressure gauge) (Without pressure gauge)

- Always apply pressure from 1(P) port in the base for interface regulator.
- * When using in combination with the SY⁵30⁰₁□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

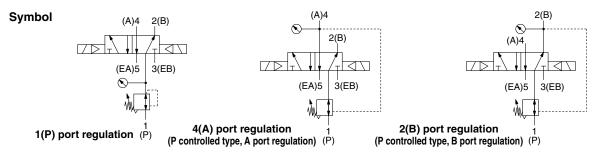

# Manifold Options **SY3000/5000/7000** Series

# **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

D-sub, Flat

Manifold Exploded View

Ribbon EX510

# **Manifold Options: Spacer Combinations and Screw List** ①

Combination		① SY30	000 (M2)		000 (M3)	③ SY70	000 (M3)
Combination		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
-Round head combination screws 1: SY3000-23-24A 2: SY5000-221-1A 3: SY7000-221-1A	Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
Hexagon socket head cap screws  1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-221-1A 1: SY30M-56-2A 2: SY50M-56-2A 3: SY70M-56-2A C	SUP stop valve spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly	<b>SY30M-56-2A</b> (2 pcs.)		SY50M-56-2A (2 pcs.)		<b>SY70M-56-2A</b> (3 pcs.)	
Round head combination screws  1: SY3000-23-33A 2: SY5000-221-5A 3: SY7000-221-5A B	Valve  Double check spacer assembly with residual pressure release valve	SY3000- 23-33A (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	_	SY7000- 221-5A (3 pcs.)	_
C c	Individual SUP (EXH) spacer assembly						
Round head combination screw> ①: SY3000-23-32A	Valve						
②: SY5000-221-3A ③: SY7000-221-3A B	Individual SUP (EXH) spacer assembly	<b>SY3000- 23-32A</b> (2 pcs.)	_	<b>SY5000- 221-3A</b> (2 pcs.)	_	<b>SY7000- 221-3A</b> (3 pcs.)	_
c	Individual EXH (SUP) spacer assembly						
Round head combination screws	Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
2: SY5000-221-1A 3: SY7000-221-1A Hexagon socket head cap screws 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve						
①: SY30M-56-4A ②: SY50M-56-4A	Individual SUP (EXH) spacer assembly	SY30M-56-4 (2 pcs.)		<b>SY50M-56-4A</b> (2 pcs.)			I-56-4A
图 图 ③: SY70M-56-4A D	Individual EXH (SUP) spacer assembly						

* Mounting onto a manifold follows the order explained above.

^{*} The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

# **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

# **Manifold Options: Spacer Combinations and Screw List 2**

	Osmbinstiss		① SY30	000 (M2)	② SY5000 (M3)		3 SY7000 (M3)	
Combination			Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
	Round head combination screw> 1: SY3000-23-24A 2: SY5000-221-1A 3: SY7000-221-1A	A Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
	Hexagon socket head cap screws  1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve		<b>SY30M-56-3A</b> (2 pcs.)		<b>SY50M-56-3A</b> (2 pcs.)		I-56-3A
	①: SY30M-56-3A ②: SY50M-56-3A ③: SY70M-56-3A	Double check spacer assembly with residual pressure release valve						ocs.)
	(Round head combination screw)  1: SY3000-23-24A 2: SY5000-221-1A	A Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1 A</b> [for 10 valves (30 pcs.)]
	3: SY7000-221-1A  Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	B SUP stop valve spacer assembly with residual pressure release valve						
	①: SY30M-56-5A ②: SY50M-56-5A ③: SY70M-56-5A	Double check spacer assembly with residual pressure release valve		<b>SY30M-56-5A</b> (2 pcs.)		<b>SY50M-56-5A</b> (2 pcs.)		<b>I-56-5A</b> ocs.)
		Individual EXH (SUP) spacer assembly						
	Round head combination screws  T: SY3000-23-32A	A Valve						
	②: SY5000-221-7A ③: SY7000-221-7A	B Interface regulator	<b>SY3000- 23-32A</b> (2 pcs.)	_	<b>SY5000- 221-7A</b> (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
	C ·	C Individual SUP (EXH) spacer assembly						



Mounting onto a manifold follows the order explained above.
 The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

^{*} When laminating an interface regulator with other options, only the combinations in the table above are possible.


Metal Base

D-sub, Flat Ribbon EX510

Manifold Exploded View Fitting,

# **Dimensions: Manifold Options/SY3000 Series**


# ■ Blanking plate assembly

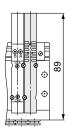




<Type 50, 51, 52>

# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

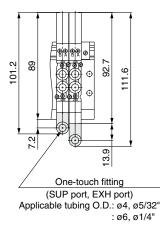


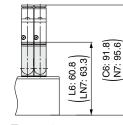


<Type 51, 52>


# assembly with residual pressure release valve


■ Double check spacer

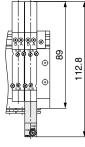

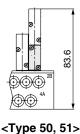


# ■Individual SUP/EXH spacer assembly (Side ported)

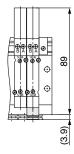


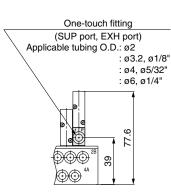

<Type 50>

# ■SUP stop valve spacer assembly with residual pressure release valve

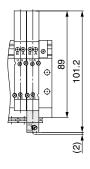


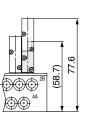


<Type 50, 51, 52>

* The dimensions within ( ) apply to the SY30M-50-1AE.

# ■Interface regulator

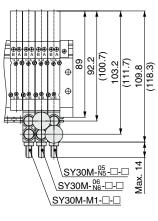

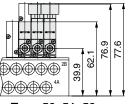

<Type 50, 51, 52>


* The dimensions within ( ) apply to the SY30M-□-□-3.

Specific Product Precautions



# **Dimensions: Manifold Options/SY5000 Series**


# ■ Blanking plate assembly

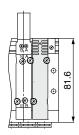




<Type 50, 51, 52>


# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

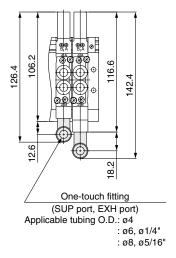


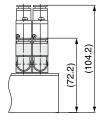

<Type 51, 52>


# ■ Double check spacer assembly with residual pressure release valve

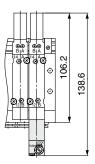


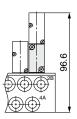

<Type 50, 51>


# ■Individual SUP/EXH spacer assembly (Side ported)

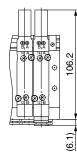


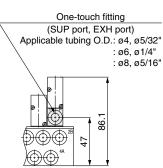

<Type 50>

# ■SUP stop valve spacer assembly with residual pressure release valve

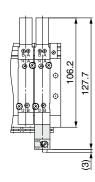


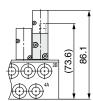


<Type 50, 51, 52>

* The dimensions within ( ) apply to the SY50M-50-1AE.

# ■Interface regulator

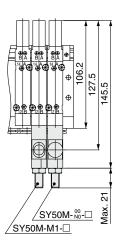

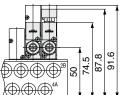

<Type 50, 51, 52>

Metal Base


D-sub, Flat Ribbon

EX510

Manifold Exploded View Fitting,

# **Dimensions: Manifold Options/SY7000 Series**


## ■ Blanking plate assembly

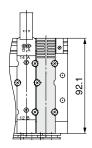



<Type 50, 51, 52>


# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

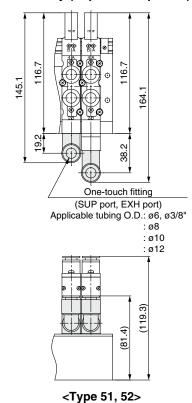


(3) (3)


with residual pressure release valve


■ Double check spacer assembly

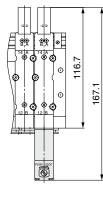

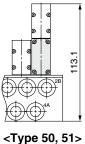



■Individual SUP/EXH spacer

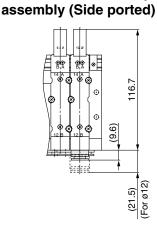

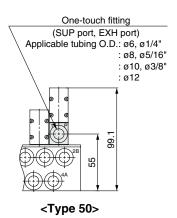

■ SUP stop valve spacer assembly with residual pressure release valve

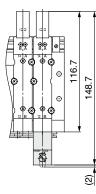


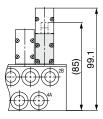


<Type 50, 51, 52>

* The dimensions within ( ) apply to the SY70M-50-1AE.

# ■ Interface regulator

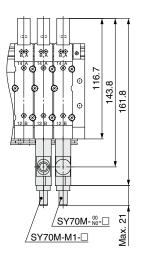

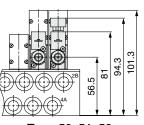

<Type 50, 51, 52>

Specific Product recautions

# Specific Product Precautions





# Plug-in Single Unit/Sub-plate Type [IP67 Compliant]

(Side ported, Bottom ported, Top ported)

# RoHS

# Plug-in Sub-plate Specifications

Manifold type	Plug-in sub-plate						
Piping direction	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Side po	orted			
	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Bottom	oorted			
Piping direction	Top ported	1(P), 5(EA)/3(EB) port	Side po	orted			
	Top ported	4(A)/2(B) port	Top po	orted			
SUP/EXH port type	SUP/EXH individual port [5(EA), 3(EB) individual]						
Applicable connector		M12 waterproof connector					
Internal wiring		Positive common, Negative common	1				
			SY3000	1/8			
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4			
			SY7000	3/8			
	Bottom ported		SY3000	1/8			
Dout size		1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4			
Port size			SY7000	3/8			
	Top ported		SY3000	1/8			
		1(P), 5(EA)/3(EB) port	SY5000	1/4			
			SY7000	3/8			
		4(A)/2(B) port	4(A)/2(B) port Compliant with t				
Enclosure (Based on IEC60529)		IP67					
		Side ported	99				
	SY3000	Bottom ported	109				
		Top ported	104				
		Side ported	145	5			
Weight: W [g]*2	SY5000	Bottom ported	172	2			
		Top ported	159	9			
		Side ported	209	5			
	SY7000	Bottom ported	232				
		Top ported	227				

^{*1} Refer to page 15 for valve specifications.

# Plug-in Sub-plate Flow Rate Characteristics

Rubber S	Seal							
Series	Sub-plate	Fitting port size		1 →	4/2	4/2 → 5/3		
Series	piping location	(P, E)	(A, B)	С	b	С	b	
	Side ported	1/8	1/8	1.8	0.27	1.7	0.26	
SY3000	Bottom ported	1/8	1/8	1.7	0.23	1.4	0.27	
	Top ported	1/8	C6	1.3	0.34	1.5	0.27	
	Side ported	1/4	1/4	4.2	0.21	4.0	0.26	
SY5000	Bottom ported	1/4	1/4	4.0	0.19	4.0	0.23	
	Top ported	1/4	C8	2.9	0.29	4.1	0.33	
SY7000	Side ported	3/8	3/8	6.5	0.24	6.3	0.23	
	Bottom ported	3/8	3/8	6.4	0.22	6.3	0.22	
	Top ported	3/8	C12	5.4	0.30	6.0	0.27	

^{*} Calculation of effective area S and sonic conductance C: S = 5.0 x C


Metal Seal								
Carias	Sub-plate	Fitting p	ort size	1 →	4/2	4/2 → 5/3		
Series	piping location	(P, E)	(A, B)	С	b	С	b	
	Side ported	1/8	1/8	1.4	0.14	1.3	0.26	
SY3000	Bottom ported	1/8	1/8	1.3	0.13	1.3	0.22	
	Top ported	1/8	C6	1.2	0.22	1.4	0.29	
	Side ported	1/4	1/4	3.2	0.13	3.5	0.16	
SY5000	Bottom ported	1/4	1/4	3.0	0.12	3.2	0.17	
	Top ported	1/4	C8	2.6	0.23	3.2	0.19	
	Side ported	3/8	3/8	4.6	0.10	4.9	0.16	
SY7000	Bottom ported	3/8	3/8	4.6	0.10	4.9	0.17	
	Top ported	3/8	C12	4.0	0.18	4.7	0.16	

^{*2} The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 17, and to include the cable weight, add the connector cable weight on page 283.

st The value is for individually operated 2-position type.

## How to Order

In the case of (Valve) + (Sub-plate) (Built-in valve type part no.)

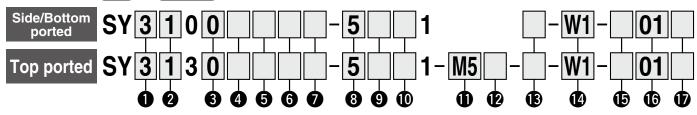

## Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

2-position	Single			
	Double			
3-position	Closed center			
	Exhaust center			
	Pressure center			
4-position dual 3-port	N.C./N.C.			
	N.O./N.O.			
	N.C./N.O.			
	3-position 4-position			

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

# Seal type

$\underline{}$		u. 19 p o	
(	)	Rubber seal	_
1	1	Metal seal	

## A Pilot type

<u> </u>		
Nil	Internal pilot	
R	External pilot	

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only the rubber seal type is available.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

#### Coil type

• con type			
Nil	Standard		
Т	With power saving circuit (Continuous duty type)		

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 292 for details.

#### 8 Rated voltage


5	24 VDC
6	12 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_	Non-polar	
R	_			
U	•			
S	_		Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

- * For the non-polar type, be careful of surge voltage intrusion. Refer to page 293 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

# Manual override

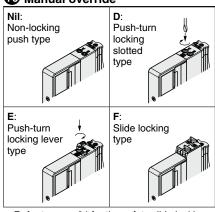

Refer to page 34 for the safety slide locking manual override.

# A, B port size (* Top-ported valve only)

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### Metric size (One-touch fitting)

<u> </u>			
A, B port	SY3000	SY5000	SY7000
ø2	•	_	_
ø3.2	•	_	_
ø4	•	•	_
ø6	•	•	•
ø8	_	•	•
ø10	_	_	•
ø12	_	_	•
	Ø2 Ø3.2 Ø4 Ø6 Ø8	Ø2     ●       Ø3.2     ●       Ø4     ●       Ø6     ●       Ø8     —       Ø10     —	A, B port SY3000 SY5000

#### Inch size (One-touch fitting)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

# A. B port thread type (Thread piping)

	 F	 <u> </u>
Nil	Rc	
F	G	
N	NPT	
Т	NPTF	

* Only Nil is available for M5.

# (B) Type of mounting screw

Nil	Round head combination screw	
B Hexagon socket head cap screw		
K Round head combination screw (Drop prevention		
Н	Hexagon socket head cap screw (Drop prevention type)	

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- Refer to page 283 when the base gaskets and mounting screws are required for maintenance.
- When using an optional spacer assembly. "B" and "H" cannot be selected.

# Wiring specifications (Sub-plate)

WO	Without M12 connector cable		
W1	With M12 connector cable (300 mm)		
W2	With M12 connector cable (500 mm)		
W3	With M12 connector cable (1000 mm)		
W4	With M12 connector cable (2000 mm)		
W7	With M12 connector cable (5000 mm)		

* When ordering a product with M12 connector cable, the connector cable is included.

#### Port location (Sub-plate)

O i dit iddaildii (dan piato)			
	Nil	Side ported	
	В	Bottom ported	
	<b>V</b> *1	Top ported (1P, 5EA, 3EB port: Side ported)	

*1 Only available for the valve piping type "3" top ported

## Port size (Sub-plate)

_	OIT OILO (Oub pi	4.0,
Symbol	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000
03	3/8	SY7000

## Thread type (Sub-plate)

Nil	Rc			
F	G			
N	NPT			
Т	NPTF			


- * When mounting a special order (including Made-to-Order specification) valve or manifold option (spacer, etc.) on the sub-plate, add the valve part number or spacer part number under the sub-plate part number to place an order. For details, refer to the ordering example on page 283.
- When selecting a product with residual pressure release valve or vacuum release valve with restrictor, after selecting a model from page 24 or 26, make selections for items 15 to 18 above.



# **How to Order**

In the case of Sub-plate (Sub-plate single unit part no.)

* Without valve

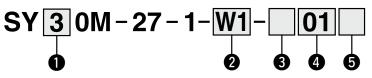



Series

3	SY3000
5	SY5000
7	SY7000

Wiring specifications

WO	Without M12 connector cable		
W1	With M12 connector cable (300 mm)		
W2	With M12 connector cable (500 mm)		
W3	With M12 connector cable (1000 mm)		
W4	With M12 connector cable (2000 mm)		
W7	With M12 connector cable (5000 mm)		

- Refer to the table below for connector cable part numbers.
- When ordering a product with M12 connector cable, the connector cable is included.

3 Port location (Sub-plate)

or for location (out plate)				
Nil Side ported				
B Bottom ported				
V	Top ported [1(P), 5(EA), 3(EB) port: Side ported]			

5 Sub-plate thread type

Sub-plate thread type			
Nil	Rc		
F	G		
N	NPT		
Т	NPTF		

4 Port size

_			
Symbol	Port size	Applicable series	
01	1/8	SY3000	
02	1/4	SY5000	
03	3/8	SY7000	

How to Order when mounting a special order (including Made-to-Order specification) valve on the sub-plate (Ordering example: X90)

SY30M-27-1-W1-01 ····· 1 set (Sub-plate single unit part no.)

*SY3200-5U1-X90······· 1 set (2-position double part no./Main valve fluororubber specification)

Ordering example when mounting a manifold option (spacer, etc.)

SY30M-27-1-W1-01······ 1 set (Sub-plate single unit part no.)


*SY3400-5U1 ··········· 1 set (3-position exhaust center part no.)

*SY30M-60-1A ·············· 1 set (Part no. for double check spacer with residual pressure release valve)

# **⚠** Caution

Due to the properties of the double check spacer, assembly carried out by the customer is not recommended. If a double check spacer is to be used, be sure to order the type that is built in to the sub-plate as shown in the ordering example above.

# Sub-plate Parts Nos.

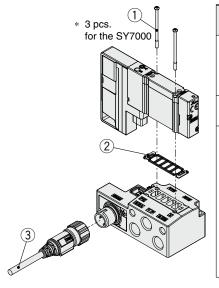

No.	Description		Part no.		Note			
IVO.			SY3000	SY5000	SY7000	Note		
1	Valve	Round head combination screw	<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are for 10 valves		
	mounting screw	Hexagon socket head cap screw	<b>SY3000-222-1A</b> (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	(20 pcs.). (30 pcs. for the SY7000)		
2	Base gasket (for sub-plate)		SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).		
	M12 waterproof connector cable			ZS-37-L		Cable length: 300 mm Cable weight: Approx. 18 g		
						ZS-37-M		Cable length: 500 mm Cable weight: Approx. 23 g
3						ZS-37-N		Cable length: 1000 mm Cable weight: Approx. 36 g
			ZS-37-P			Cable length: 2000 mm Cable weight: Approx. 62 g		
				ZS-37-C		Cable length: 5000 mm Cable weight: Approx. 140 g		



**Tightening torque** 

M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)



Sub-plate

(For E type: 62.2)

Plug-in Single Unit/Sub-plate **Side** Ported **Top Ported** 

2 x ø3.2

5.8

(15.3)

(For mounting)

35.9 32.9

11.9

Dimensions: SY3000 Series

 $SY3 \square 0 ^0_1 \square \square \square \square - \square \square 1 - W \square - 01 \square \text{ (Side ported)}$ 

For "F" marking 1/8 (Thread type) [4(A), 2(B) port] 83.2


Manual override

Push-turn locking slotted type: Press, then rotate it.

4(A) port side: Blue (For rubber seal)


: Gray (For metal seal) 2(B) port side: Yellow


(Light/surge voltage suppressor)

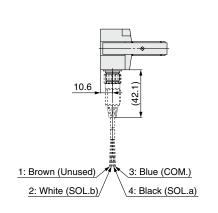

Sub-plate side pin arrangement

(No numeric indication)

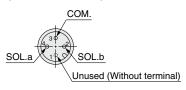

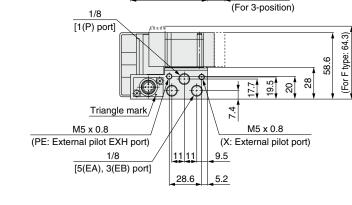

51.1


34.5


52.2

67.9

* These figures show the "SY3200-5Z1-WO-01F."

SY3□3⁰□□□□-□□1-□□-W□-V01□ (Top ported)

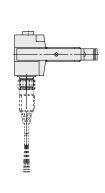

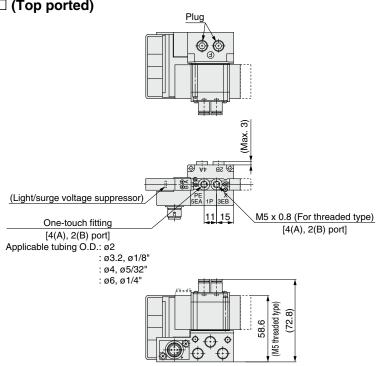

* These figures show the "SY3230-5Z1-C6-WO-V01F."


* 1(P), 5(EA), 3(EB), X, and PE ports are side ported.

Dimensions: SY3000 Series

Plug-in Single Unit/Sub-plate

**Bottom** Ported


 $SY3 \square 0_1^0 \square \square \square - \square \square 1-W \square -B01 \square \text{ (Bottom ported)}$ 

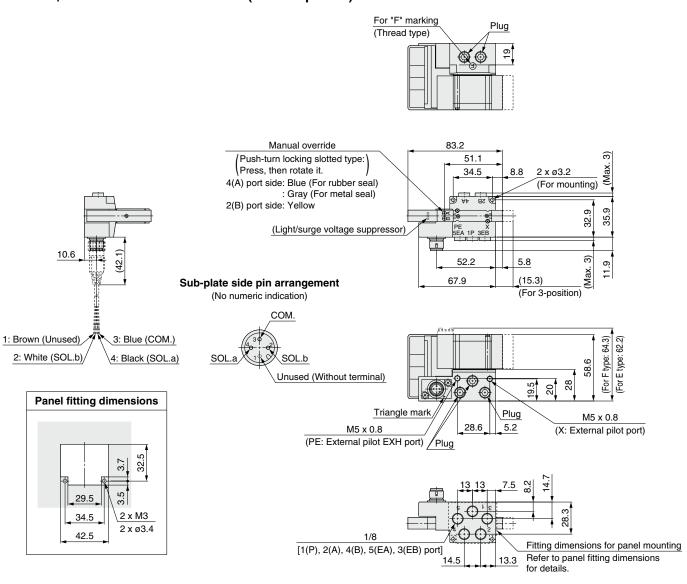


^{*} These figures show the "SY3200-5Z1-WO-B01F."

Sub-plate

Plug-in Single Unit/Sub-plate **Side** Ported Dimensions: SY5000 Series **Top Ported** SY5 $\square$ 0 0_1  $\square$  $\square$ - $\square$ - $\square$ 1-W $\square$ -02 $\square$  (Side ported) For "F" marking 1/4 46.4 10.8 (Thread type) [4(A), 2(B) port]

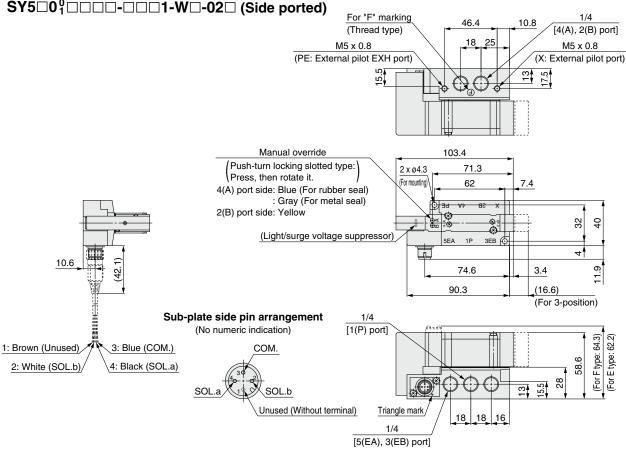

* These figures show the "SY5200-5Z1-WO-02F."

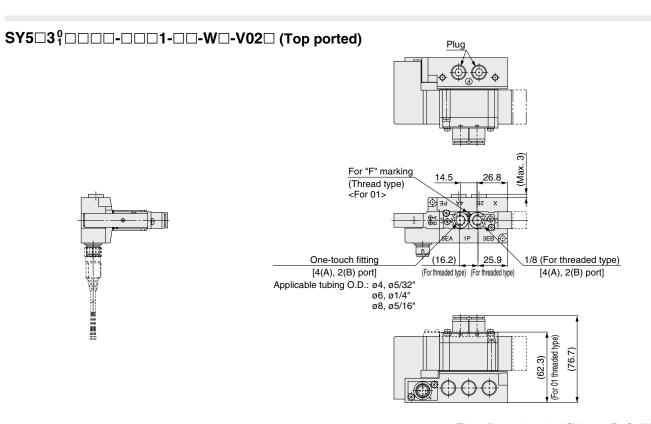


* These figures show the "SY5230-5Z1-C8-WO-V02F."

* 1(P), 5(EA), 3(EB), X, and PE ports are side ported.

Dimensions: SY5000 Series

Plug-in
Single Unit/Sub-plate Botton


**Bottom** Ported

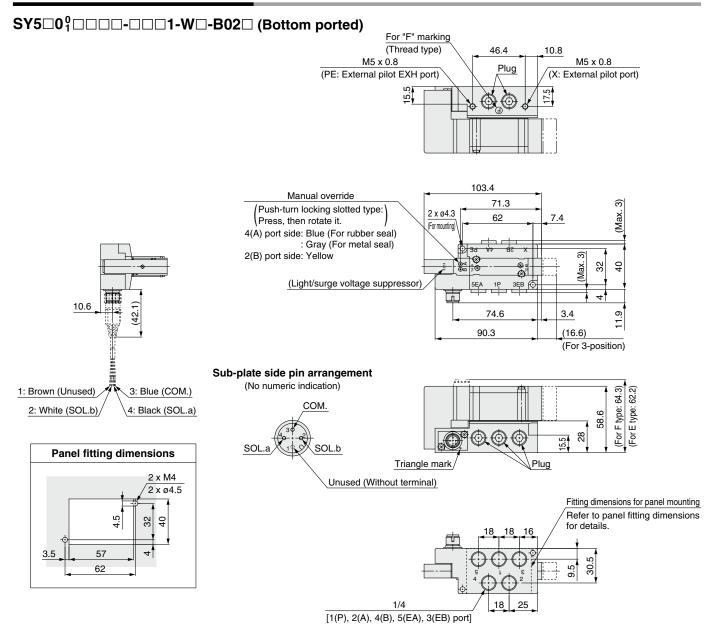

^{*} These figures show the "SY5200-5Z1-WO-B02F."

Sub-plate

#### Plug-in Single Unit/Sub-plate **Side** Ported **Top Ported**

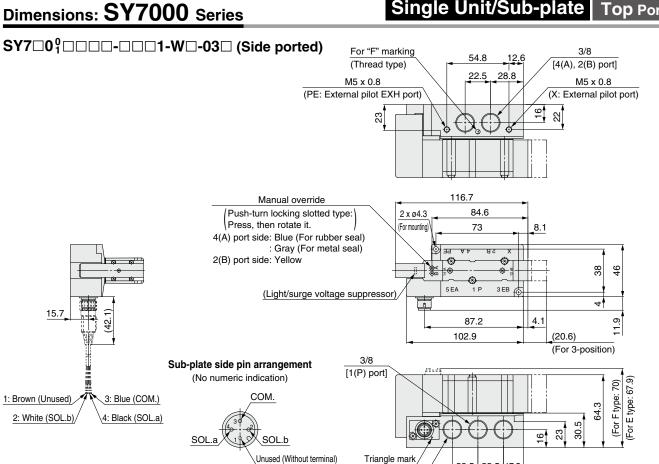


Triangle mark

[5(EA), 3(EB) port]

22.5 22.5

* These figures show the "SY7200-5Z1-WO-03F."

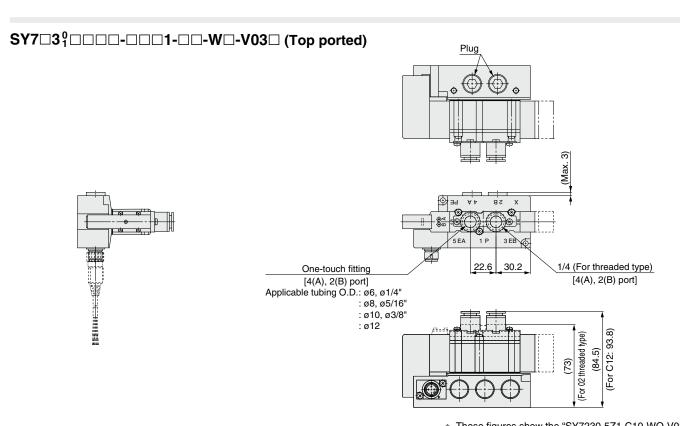

* These figures show the "SY7230-5Z1-C10-WO-V03F."


* 1(P), 5(EA), 3(EB), X, and PE ports are side ported.



Dimensions: SY7000 Series

Plug-in Single Unit/Sub-plate

**Bottom** Ported

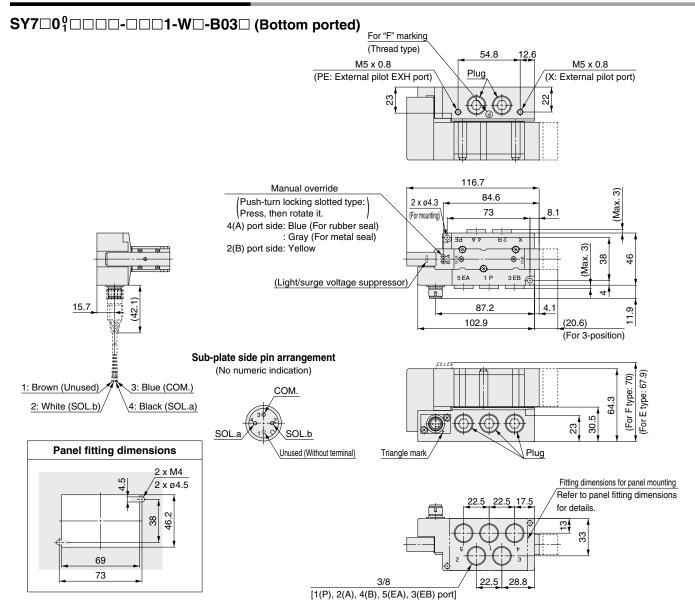

^{*} These figures show the "SY7200-5Z1-WO-B03F."



# SY3000/5000/7000 Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **Environment**

# **Marning**

- Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water, water vapor, or where there is direct contact with any of these.
- Products compliant with IP67 enclosures (based on IEC60529)
  are protected against dust and water, however, these products
  cannot be used in water. If using in an environment that is
  exposed to water and dust splashes, take measures such as
  using a protective cover.
- 3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids.
- The metal seal valve is provided with a hole to discharge the pilot EXH. When using in atmospheres containing water and dust, mount it horizontally.

#### **Valve Mounting**

# **A** Caution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown to the right.

Series	Thread size	Tightening torque
SY3000	M2	0.16 N·m
SY5000/7000	М3	0.8 N·m

## **Manual Override**

# **Marning**

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

■ Non-locking push type


Push down on the manual override button until it stops.



#### ■ Push-turn locking slotted type [D type]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it  $90^{\circ}$  clockwise. The manual override is then locked. To release it, turn it counterclockwise.

If it is not turned, it can be operated the same way as the non-locking push type.  $\mid\mid$ 

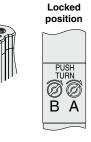


#### **Manual Override**

# **Marning**

### ■ Push-turn locking lever type [E type]

Push down on the manual override by finger until it stops, and then turn it  $60^{\circ}$  clockwise. The manual override is then locked. To release it, turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking push type.

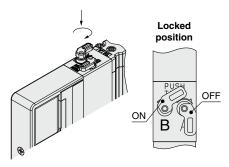

Carefully check the manual override projection amount.

Max. (at OFF): 3.7 mm


# **∧** Caution

Do not apply excessive torque when turning the manual override. [0.1 N·m]  $\,$ 

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

#### ■ Slide locking type (Manual)

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

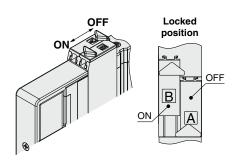







# SY3000/5000/7000 Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **Back Pressure Check Valve**

# **⚠** Caution

•There are two types of back pressure check valves; the type which is built into a valve (rubber seal type only) and the type which is built in on the manifold side with a connector connection. Both types have a check valve built in to prevent back pressure.

Please note that for this reason, even if a valve with an external pilot specification is used, it cannot be pressurized from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow rate characteristics goes down. Please contact SMC for details.

- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. For built-in valve type with rubber seal, the back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

#### **Exhaust Throttle**

# **⚠** Caution

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

#### Used as a 3-Port Valve

# **⚠** Caution

#### ■ In case of using a 5-port valve as a 3-port valve

The SY3000/5000/7000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3-port valve is required.

Plu	g position	B port	A port
Type of actuation		N.C.	N.O.
Number of solenoids	Single	(A)4 2(B) (EA)5 1 3(EB)	(A)4 2(B) (EA)5 1 3(EB) (P)
Number of	Double	(A)4 2(B) (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB) (P)

#### **Valve and Manifold Combination**

The SY series plug-in valve has the common configuration of the valve mounting surface between base-mounted type (SY $\frac{3}{5}$  $\square 0$  $\square$ ) and top-ported type (SY $\frac{3}{5}$  $\square 3$  $\square$ ), therefore, it can be mounted to all manifolds of the side-ported type (Type 50 and Type 10), the bottom-ported type (Type 51 and Type 11), and the top-ported type (Type 52 and Type 12). For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top-ported valve to a side-ported or bottom-ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base-mounted valve is mounted to a top-ported manifold, there will be no output from the A and B port.

Valve Construction



# SY3000/5000/7000 Series Specific Product Precautions 3

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

# Light/Surge Voltage Suppressor


# **⚠** Caution

#### **■** Polar type


Positive common

#### Single solenoid

Light/surge voltage suppressor (□Z)

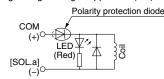

Surge voltage suppressor ( $\square S$ )

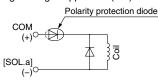


#### Positive common

Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□Z)

[SOL.b]
(-)
(Green)
(Green)
(BOL.a]
(Red)
(Folarity protection diode

Surge voltage suppressor (□S)

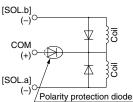

# Negative common

#### Single solenoid


Light/surge voltage suppressor (□NZ)

Polarity protection diode

COM
(¬)

LED
[SOL_a] (Red) , □

Surge voltage suppressor (□NS)

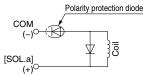

#### **Negative common**

#### Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□NZ)

[SOL.b]

(+)

(Green)

(Green)


(Green)

(Hed)

(SOL.a)

(Polarity protection diode


Surge voltage suppressor (□NS)

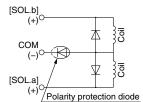


# ■ Non-polar type

With surge voltage suppressor (□R)

#### Single solenoid

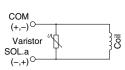


#### Double solenoid

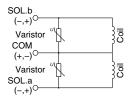


#### With light/surge voltage suppressor (□U)

#### Single solenoid

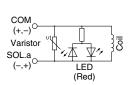


# Double solenoid

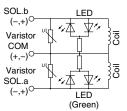

## ■ With power saving circuit


Power consumption is decreased to approx. 1/3 compared with the standard product by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.)

* Be careful of the energizing time, as quick response and high pressure types will become operational when the energizing time is over 40 ms.

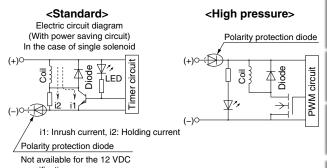

The circuit shown above reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below.

#### <Electrical power waveform with power saving circuit>

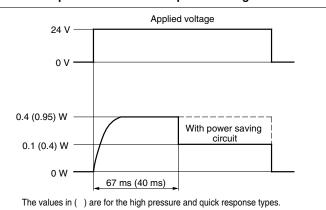

- The 12 VDC specification with power saving circuit (standard specification) does not have the polarity protection diode. Do not make a mistake with the polarity.
- Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

#### Residual voltage of the surge voltage suppressor

* If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the table below and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 16.

#### **Residual Voltage**

Surge voltage	DC		
suppressor	24 V	12 V	
S, Z	Approx. 1 V		
R, U	Approx. 47 V	Approx. 32 V	







# SY3000/5000/7000 Series Specific Product Precautions 4

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **Continuous Duty**

# **⚠** Caution

If a valve is energized continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energized continuously for long periods of time, be sure to use a valve with power saving circuit. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for long periods of time, take special care as the temperature rise will be greater.

#### **UL Approved Product**

# **⚠** Caution

When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a **c Thus** mark on the body.

#### **Countermeasure for Surge Voltage Intrusion**

#### ■ Surge voltage intrusion

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and a valve in a de-energized state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

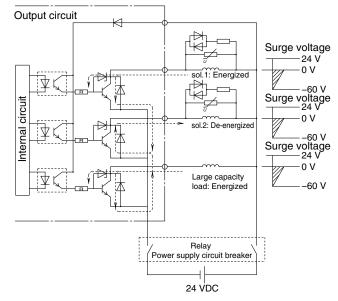


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

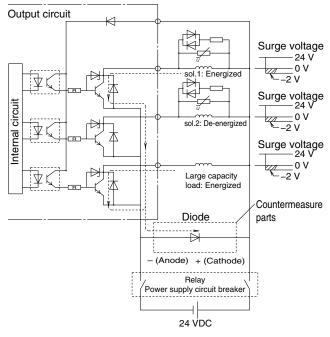


Figure 2. Surge intrusion countermeasure example (NPN outlet example) (24 VDC)



Valve Construction




# SY3000/5000/7000 Series Specific Product Precautions 5

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

# **Light Indication**

When equipped with indicator light and surge voltage suppressor, the light window turns red when solenoid a is energized, and it turns green when solenoid b is energized.

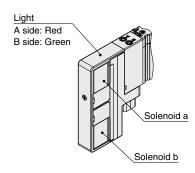


Type 5□ (Metal Base), Type 1□ (Connector Connecting Base) Changing Connector Entry Direction


# **⚠** Caution

Connector direction for electrical entry of D-sub connector <IP40> and flat ribbon cable can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire, etc., to break. Thus, refrain from using in these ways.

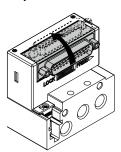

Type 5□ (Metal base)

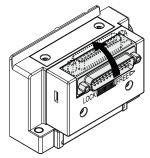


Type 1□ (Connector connecting base)

# **Manifold Indication Symbol**

# **⚠** Caution

The letter "S]" is indicated on manifold blocks for the SY series Type 1□ (connector connecting base) as shown below. This indication refers to the type of substrate assembly (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3-, or 4-position valves cannot be used for manifolds blocks with single wiring specification S.)

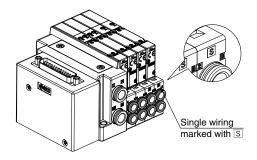

Specific Product Precautions





# SY3000/5000/7000 Series Specific Product Precautions 6

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### Substrate Assemblies inside Manifolds

# **A** Caution

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

## **Fixation of DIN Rail Mounting Type Manifolds**

# **⚠** Caution

- 1. When the manifold is fixed with bolts on a mounting surface, etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 11-15 stations, 5 locations for 16-20 stations, and 6 locations for 21-24 stations.
- 2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.

Port Block Assembly and How to Change Piping Types between Top and Side


# **⚠** Caution

For the top-ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top-ported type port block assembly with the side-ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque.


Refer to pages 22 and 23 for part numbers of port block assembly and body cover assembly for A, B port and page 201 for part numbers of port block assembly and body cover assembly for P, E port.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the One-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

## **⚠** Caution

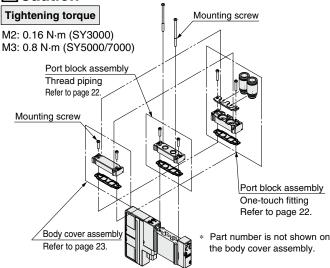

# ■ How to change while mounted on a manifold

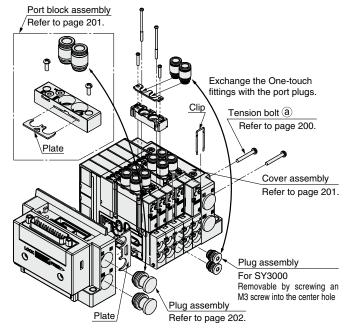





## SY3000/5000/7000 Series **Specific Product Precautions 7**

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com


#### **How to Replace One-touch Fittings**

#### **.** Caution

By replacing One-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.

When replacing the One-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 202 for part numbers of One-touch fittings for valve or manifold.

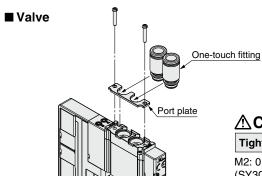


#### **∕** Caution

**Tightening torque** 


M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### ■ Plug-in metal base

•Side ported (Type 50)

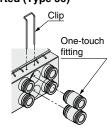

#### Bottom ported (Type 51)

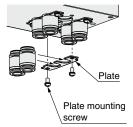

Part no.


SY30M-10-3A

SY50M-10-6A

#### Plate assembly part nos. Clip part nos. (10 pcs. included) (10 pcs. included)

Series	Part no.	
SY3000	SY30M-19-2A	
SY5000	SY50M-19-2A	
SY7000	SY70M-19-2A	

#### ■ Plug-in connector connecting base

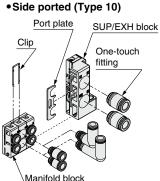

#### SY7000 SY70M-10-7A * Including mounting screw

Series

SY3000

SY5000

Clip part nos. (10 pcs. included							
Series	A, B port size	Part no.					
SY3000	_	SY30M-19-1A					
SY5000	_	SY50M-19-6A					
SY7000	_	SV3000-70-1A					
SY3000/5000 Mixed mounting type	ø2, ø3, ø4 ø6. ø1/8"	SY50M-19-1A					
(For mounting the SY3000)*1	ø5/32", ø1/4"						
1116 3 1 3000)	ø8, ø5/16"	SY50M-19-6A					


- The part number for mounting the SY5000 is SY50M-19-6A.
- The part number for the SY5000/7000 mixed mounting type is SV3000-70-1A.
- If the port plate for the SUP/EXH block is required, please contact SMC.

#### **How to Replace One-touch Fittings**

#### **⚠** Caution

Bottom ported (Type 11)

Secure enough space between the manifold blocks when the plate is detached and attached.

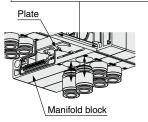

#### Plate part nos. (10 pcs. included)

Series	A, B port size	Part no.
SY5000	_	SY50M-10-4A
SY7000	_	SY70M-10-4A
SY3000/5000	ø2, ø3, ø4	
Mixed mounting type	ø6, ø1/8"	SY50M-10-5A
(For mounting	ø5/32", ø1/4"	
the SY3000)*1	ø8, ø5/16"	SY50M-10-4A

- *1 The part number for mounting the SY5000 is SY50M-10-4A.
- The part number for the SY5000/7000 mixed mounting type is SY70M-10-4A.

#### Other Tube Brands

#### **⚠** Caution

1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

1) Nylon tube within ±0.1 mm 2) Soft nylon tube within ±0.1 mm 3) Polyurethane tube within +0.15 mm -0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

#### **One-touch Fittings**

#### ■ Tube attachment/detachment for One-touch fittings

#### 1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2, or 3. Do not use pliers, nippers, scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- 2. Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- 3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

#### 2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- 2. Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- 3. When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the





## SY3000/5000/7000 Series Specific Product Precautions 8

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **One-touch Fittings**

#### **⚠** Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

#### Applicable Fittings: KQ2H, KQ2S Series

Series	Model	Dining port	Port	Fittings		,	Applica	ble tubir	ıg O.D.		
Selles	iviodei	Piping port	size	Fittings	ø <b>2</b>	ø <b>3.2</b>	ø <b>4</b>	ø <b>6</b>	ø <b>8</b>	ø <b>10</b>	ø <b>12</b>
	CV2D20 DD ME	4A OB	M5	KQ2H							
	SY3□30-□□-M5	4A, 2B	CIVI	KQ2S							
		1D 5EA 3EB	1/0	KQ2H							
		1P, 5EA, 3EB	1/8	KQ2S							
CV2000		V DE	NAT	KQ2H							
SY3000	SS5Y3-50/51/52 (R)	X, PE	M5	KQ2S							
	Manifold base `		4 /0	KQ2H							
		44.00	1/8	KQ2S							
		4A, 2B	N 4 =	KQ2H							
			M5	KQ2S							

Series	Model	Dining nort	Port	Fittings			Applica	able tubir	ng O.D.		
Series	iviodei	Piping port	size	Fittings	ø <b>2</b>	ø <b>3.2</b>	ø <b>4</b>	ø <b>6</b>	ø <b>8</b>	ø <b>10</b>	ø <b>12</b>
	CVE-20 01	44 00	1/0	KQ2H							
	SY5□30-□□-01	4A, 2B	1/8	KQ2S							
		1D 5EA 2EB	1/4	KQ2H							
		1P, 5EA, 3EB	1/4	KQ2S							
CVEOO		V DE M	NAC	KQ2H							
SY5000	SS5Y5-50/51/52 (R)	X, PE	M5	KQ2S							ø12
	Manifold base		1/4	KQ2H							
		4A OB	1/4	KQ2S							
		4A, 2B	1/0	KQ2H							
			1/8	KQ2S							

Series	Model	Piping port Port		Model Bining port		Fittings	Applicable tubing O.D.						
Selles	iviodei	Fibility port	size	Fittings	ø <b>2</b>	ø <b>3.2</b>	ø <b>4</b>	ø <b>6</b>	ø <b>8</b>	ø <b>10</b>	ø <b>12</b>		
	CV7=00 == 00	44.00		KQ2H				I.					
	SY7□30-□□-02	4A, 2B	1/4	KQ2S									
		1D 5EA 2EB	3/8	KQ2H									
SY7000		1P, 5EA, 3EB 3/8 KQ2S											
317000	SS5Y7-50/51/52 (R)	V DE	M5	KQ2H									
	Manifold base	X, PE	CIVI	KQ2S									
		4A 2B	1/4	KQ2H									
		4A, 2B	1/4	KQ2S									

#### ■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc. EtherNet/IP® is a registered trademark of ODVA, Inc. CompoNet® is a registered trademark of ODVA, Inc.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



## Model Index (Alphanumeric Order)

SS5Y□-10	SY Type 10/Side Ported Plug-in Connector Connecting Base: D-sub Connector, Flat Ribbon Cable	p. 41
SS5Y□-10L	SY Type 10/Side Ported Plug-in Connector Connecting Base: Lead Wire	p. 77
SS5Y□-10M	SY Type 10/Side Ported Plug-in Connector Connecting Base: Circular Connector	p. 87
SS5Y -10S	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System 2 (128 Point	
SS5Y - 10S	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System (64 Points	
SS5Y -10S	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX245	p. 124-1
SS5Y□-10S□	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX250	p. 125
SS5Y□-10S□	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX260	p. 133
SS5Y□-10S3	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX120	p. 149
SS5Y□-10S4	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX126	p. 141
SS5Y□-10S6	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX600	p. 113
SS5Y -10T	SY Type 10/Side Ported Plug-in Connector Connecting Base: Terminal Block Box	p. 67
SS5Y□-10TC	SY Type 10/Side Ported Plug-in Connector Connecting Base: Terminal Block Box (Spring Type)	p. 59
SS5Y□-11	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: D-sub Connector, Flat Ribbon Cable	p. 41
SS5Y -11L	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: Lead Wire	p. 77
SS5Y□-11M	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: Circular Connector	p. 87
SS5Y□-11S	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System 2 (128 Points	· •
SS5Y□-11S	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System (64 Points	,
SS5Y□-11S□	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX245	p. 124-1
SS5Y□-11S□	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX250	p. 125
SS5Y□-11S□	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX260	p. 133
SS5Y□-11S3	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX120	p. 149
SS5Y□-11S4	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX126	p. 141
SS5Y□-11S6	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX600	p. 113
SS5Y -11T	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: Terminal Block Box	p. 67
SS5Y□-11TC SS5Y□-12	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: Terminal Block Box (Spring Type)  SY Type 12/Top Ported Plug-in Connector Connecting Base: D-sub Connector, Flat Ribbon Cable	p. 59
SS5Y□-12L	SY Type 12/Top Ported Plug-in Connector Connecting Base: Lead Wire	p. 53 p. 83
SS5Y□-12M	SY Type 12/Top Ported Plug-in Connector Connecting Base: Circular Connector	p. 93
SS5Y□-12S	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System 2 (128 Points	
SS5Y□-12S	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System (64 Points	
SS5Y□-12S□	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX245	p. 124-5
SS5Y□-12S□	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX250	p. 131
SS5Y□-12S□	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX260	p. 139
SS5Y□-12S3	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX120	p. 155
SS5Y□-12S4	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX126	p. 147
SS5Y□-12S6	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX600	p. 123
SS5Y□-12T	SY Type 12/Top Ported Plug-in Connector Connecting Base: Terminal Block Box	p. 73
SS5Y□-12TC	SY Type 12/Top Ported Plug-in Connector Connecting Base: Terminal Block Box (Spring Type)	p. 64
SS5Y□-50	SY Type 50/Side Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable	p. 223
SS5Y□-50S5	SY Type 50/Side Ported Plug-in Metal Base: EX510	p. 251
SS5Y□-51	SY Type 51/Bottom Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable	p. 223
SS5Y□-51S5	SY Type 51/Bottom Ported Plug-in Metal Base: EX510	p. 251
SS5Y□-52	SY Type 52/Top Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable	p. 243
SS5Y□-52S5	SY Type 52/Top Ported Plug-in Metal Base: EX510	p. 261
SS5Y5-M10	SY3000/5000 Type 10/Side Ported Plug-in Mixed Mounting Type Manifold	p. 165
SS5Y5-M11	SY3000/5000 Type 11/Bottom Ported Plug-in Mixed Mounting Type Manifold	p. 165
SS5Y5-M12	SY Type 12/Top Ported Plug-in Mixed Mounting Type Manifold	p. 177
SS5Y7-M10	SY5000/7000 Type 10/Side Ported Plug-in Mixed Mounting Type Manifold	p. 169
SS5Y7-M11	SY5000/7000 Type 11/Bottom Ported Plug-in Mixed Mounting Type Manifold	p. 169
SS5Y7-M12	SY Type 12/Top Ported Plug-in Mixed Mounting Type Manifold	p. 177
SY3000	Plug-in Single Unit/Sub-plate Type [IP67 Compliant]  SY3000 Vacuum Pologoo Valvo with Postriotor (Only for External Pilot)	p. 282
SY3A R	SY3000 Vacuum Release Valve with Restrictor (Only for External Pilot)  SY5000 Valve with Pressure Sensor	p. 26
SY5_31-C6	SY5000 Valve with Pressure Sensor  Plug-in Single Unit/Sub-plate Type (IP67 Compliant)	p. 32
SY5000 SY530-□1-E	Plug-in Single Unit/Sub-plate Type [IP67 Compliant]	p. 282 p. 24
SY5AUR	SY5000 With Residual Pressure Release Valve SY5000 Vacuum Release Valve with Restrictor (Only for External Pilot)	p. 24
SY7□3□-□1-C6	SY7000 Valve with Pressure Sensor	p. 26 p. 32
SY7000	Plug-in Single Unit/Sub-plate Type [IP67 Compliant]	p. 32 p. 282
SY730-□1-E	SY7000 With Residual Pressure Release Valve	p. 262 p. 24
31730-11-E	OT 7000 TYTHIT TOSIGNAL TTOSOUTO TTOTOGOG VALVO	p. 24



#### **Revision History**

- Edition B * The EX260 integrated type (for output) serial transmission system has been added.
  - * EtherNet/IP™ and EtherCAT have been added to the EX600 integrated type (for input/output) serial transmission system (Fieldbus system).
  - * Additional options:
  - $\cdot$  Interface regulator assembly  $\,\cdot$  Dual flow fitting
  - · Individual SUP block assembly · Name plate for manifolds
  - · Individual EXH block assembly
  - * The part numbers for mixed port sizes of the A and B ports have been changed for type 10 (side ported), type 11 (bottom ported), and type 12 (top ported) plug-in connector connecting bases.
  - * The mixed specification of A and B port piping has been deleted from the type 12 (top ported) plug-in connector connecting base.
  - * Number of pages has been increased from 148 to 164.

- Edition C * The SY7000 has been added.
  - * A plug-in sub-plate (SY3000/5000) has been added.
  - * A valve with a residual pressure release valve (SY5000) has been added.
  - * A solenoid valve with a safety slide locking manual override has been added.
  - * A D-sub connector (IP67) manifold has been added.
  - * A PC wiring manifold (with power supply terminal) has been added.
  - * Number of pages has been increased from 164 to 260.

#### SO

- Edition D * A vacuum release valve with a restrictor has been added.
  - * A dual port EX600 EtherNet/IP™ product has been added. * Products for the EX500 gateway decentralized system 2 have been added.
  - * A SUP stop valve spacer (with a residual pressure release valve) has been added.
  - * A valve with a residual pressure release valve (SY7000) has been added.

#### * Number of pages has been increased from 260 to 276.

- Edition E * Flow rate characteristics (for the connector connecting base/manifold options) have been added.
  - * A wireless system (EX600-W) has been added.
  - * A valve with a 4(A)/2(B) port pressure sensor has been added.
  - * A blanking plate with output has been added.
  - * PC wiring has been deleted from the wiring types.
  - * CC-Link has been deleted from the EX250 series.
  - * The main/pilot valve common exhaust (-X16) option has been deleted from the made-to-order specifications.
  - * The order of the catalog contents has been revised.
  - * Number of pages has been increased from 276 to 304.

## **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

-----

Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: Danger indicates a nazaru wiun a nigin level on the first avoided, will result in death or serious injury. **Danger** indicates a hazard with a high level of risk which, *1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

#### **⚠** Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

#### **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

#### Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or
  - replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

#### **⚠** Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.



# Modular Connection Type 5-Port Solenoid Valve









## Can be connected to F.R.L. units


## Flow rate characteristics

C [dm³/(s·bar)]


SY3000: 1.6*1

SY5000: 3.6*1

*1 4/2 ⇒ 3/5 (A/B ⇒ E)

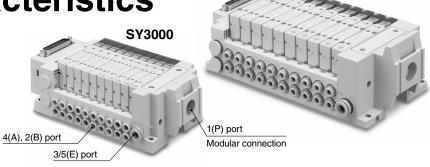


#### Allows for space saving and reduced piping labor.

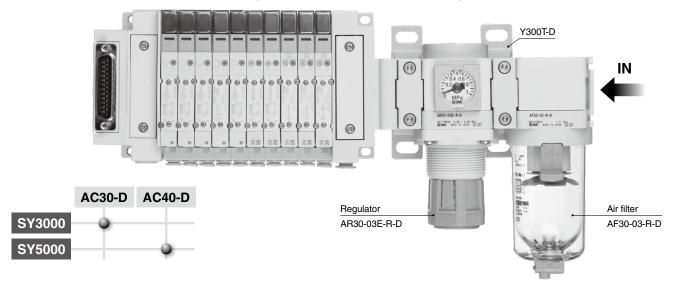

#### **Simple Specials System**

For modular connection units (shipped assembled), the simple specials system can be used.

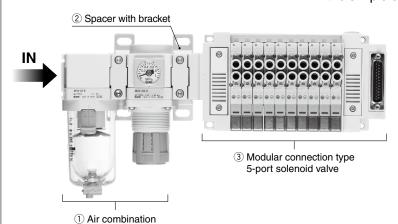

#### Ordering Example

- Products do not come assembled.
   They should be ordered separately and assembled by the customer.
- ① Air combination AC30C-03E-D ··············· 1 pc.
- 2 Spacer with bracket Y300T-D .....1 pc.
- Modular connection type/5-port solenoid valve
   SS5Y3-12F1-10U-X990 · · · · · · · · · · 1 pc.
  - * SY3230-51-C4 ·······10 pcs.

SY3000/5000-X990



# Modular Connection Type SY3000/5000-X990 Manifold Specifications/Weight

#### **Manifold Specifications**

		D-s	sub	Flat	ribbon c	able	Terminal block box (Spring type)	Terminal block box		Circular connector		Serial	wiring		
	Model		Type F	Type FW	Type P	Type PG	Type PH	Type TC	Type T	Type L	Type M	Type S6□ (EX600)	Type SAZ	(EA300)	Tuna Ca
Valve stati	ons			2 to 10 stations 2 to 3 stations 2 to 10 stations											
Port size	Port size 1(P) port SY30								Modular	size: 30					
FUIT SIZE	1(P) port SY5000	SY5000							Modular	size: 40					
Mounted v	alve						0	nly the r	ubber sea	al type is	availabl	e.			

#### **Manifold Weight**

Valve Seal Type: Rubber Seal Side Ported (Type 10)

Manifold model	Valve model	Weight: W [g]*1 (n: stations)
	SY3100/SY3200	
	SY3300	
	SY3400	
SS5Y3	SY3500	28.9n + 433
	SY3A00	
	SY3B00	
	SY3C00	
	SY5100/SY5200	
	SY5300	
	SY5400	
SS5Y5	SY5500	74.7n + 698
	SY5A00	
	SY5B00	
	SY5C00	

## Valve Seal Type: Rubber Seal Top Ported (Type 12)

Manifold model	Valve model	Weight: W [g]*1 (n: stations)
SS5Y3	SY3130/SY3230	25.1n + 465
SS5Y5	SY5130/SY5230	66.3n + 717

^{*1} Weight: W is the value of the internal pilot and D-sub connector manifold with One-touch fitting straight piping type.

 The other specifications are the same as those of the standard model.
 For details, refer to the Web Catalog.






To obtain the weight with valves attached, add the valve weights given in the **Web Catalog** for the appropriate number of stations.

#### **How to Order Manifolds**





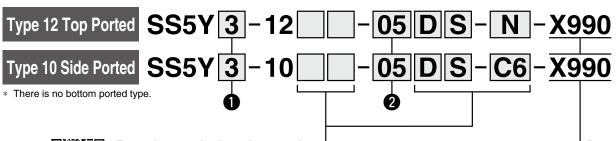

can be viewed here.

Enter the standard product number.

- * The A and B ports are only compatible with straight unions.
- * DIN rail mounting is not supported.

More information

P-port modular connection type SY3000 is 30.

SY5000 is 40.

<b>0</b> s	Series	Modular size
3	SY3000	30
5	SY5000	40



#### Valve stations

F/FW: D-sub connector (25 pins)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
10	10 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)



P: Flat ribbon cable (26 pins)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
10	10 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)



PG: Flat ribbon cable (20 pins)

Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring*1
09	9 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)



PH: Flat ribbon cable (10 pins)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
04	4 stations	
02	2 stations	
:	:	(Up to 8 solenoids
08	8 stations	available)



TC/T: Terminal block box

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
10	10 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)



M: Circular connector

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
8	8 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)



**L1**: Lead wire (0.6 m)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
10	10 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)

**L2**: Lead wire (1.5 m)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)

**L3**: Lead wire (3 m)

Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring*1	
04	4 stations		
02	2 stations	Specified layout*2	
:	:	(Up to 8 solenoids	
08	8 stations	available)	

- *1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- The blanking plate assembly is included in this number.



#### **How to Order Manifolds**




#### **EX500 128 Points: S**□

EX500 64 Points: S□

#### **EX600:** S6□□□


#### 2 Valve stations

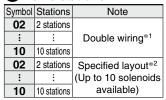

- *1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations.
  - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- 2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * The blanking plate assembly is included in this number.
- * When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet. (Excludes the EX600)

#### **EX250:** S□□□

#### 2 Valve stations

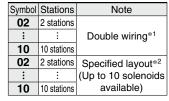

- *1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations.
  - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet.
- (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.
- ·8 in/8 out specification: Max. 8 solenoids
- · 4 in/4 out specification: Max. 4 solenoids
- * The blanking plate assembly is included in this number.
- * For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### EX260: S□

#### 2 Valve stations

#### In the case of the 32-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
10	10 stations	
02	2 stations	
:	:	(Up to 10 solenoids
10	10 stations	available)

#### In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)

- *1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet.
  - (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * The blanking plate assembly is included in this number.
- * For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### EX126: S4□

#### EX120: S3□

#### 2 Valve stations


Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
:	:	(Up to 10 solenoids
10	10 stations	available)

- *1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations.
  - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * The blanking plate assembly is included in this number.
- * Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated. (For the EX120)



#### How to Order Equipped Valves (With mounting screw)

#### **Base Mounted**

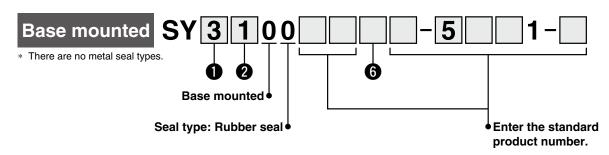



More information can be viewed here.

#### Series

3	SY3000
5	SY5000


Type of actuation	n
-------------------	---

1	2 position	Single					
2	2-position	Double					
3		Closed center					
4	3-position	Exhaust center					
5		Pressure center					
Α		N.C./N.C.					
В	4-position dual 3-port	N.O./N.O.					
С		N.C./N.O.					

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)

#### **Top Ported**

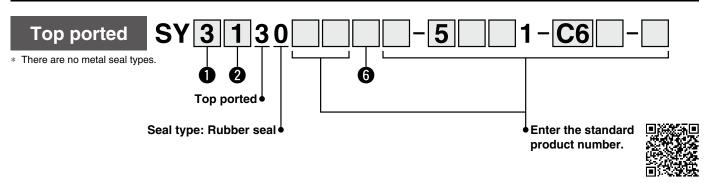

More information can be viewed here.

#### Series

	00103
3	SY3000
5	SY5000

#### 2 Type of actuation

1	2-position	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
Α		N.C./N.C.				
В	4-position dual 3-port	N.O./N.O.				
С		N.C./N.O.				


#### 6 Pilot valve option


Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)




### SY3000/5000-X990

#### Dimensions: **SY3000** Series

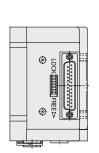

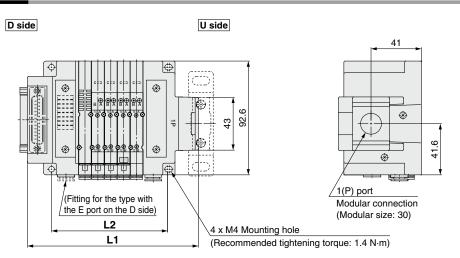

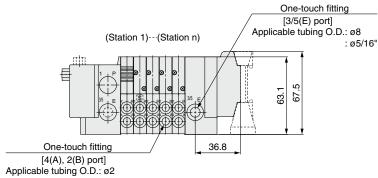

: ø3.2, ø1/8" : ø4_ø5/32"

: ø4, ø5/32" : ø6, ø1/4"

- * These figures show the "SS5Y3-10F2-05U-C6-X990."
- * The other dimensions, as well as those of the top ported type, are the same as those of the standard model. For details, refer to the **Web Catalog**.

#### D-sub, Flat Ribbon (Type F) Refer to the table below for the L1 and L2 dimensions of the D-sub and flat ribbon (Type F). L: Dimensions n: Stations 2 3 4 5 6 8 9 10 L1 107.6 118.1 128.6 139.1 149.6 160.1 170.6 181.1 191.6 63 73.5 84 94.5 105 115.5 126 136.5 147

IP67 D-su	ıb (Type F	W)		Refer to the table below for the L1 and L2 dimensions of the IP67 D-sub (Type FW								
L: Dimensi	ons											
n: Stations	2	3	4	5	6	7	8	9	10			
L1	124.5	135	145.5	156	166.5	177	187.5	198	208.5			
L2	63	73.5	84	94.5	105	115.5	126	136.5	147			



## Modular Connection Type SY3000/5000-X990

Dimensions: SY3000 Series

#### **Terminal Block Box (Type T)** Refer to the table below for the L1 and L2 dimensions of the terminal block box (Type T). L: Dimensions n: Stations 2 3 4 5 6 7 8 9 10 L1 183.3 193.8 204.3 214.8 225.3 235.8 246.3 256.8 267.3 L2 73.5 84 94.5 105 115.5 126 136.5 147 63

Terminal I	Block Box/S	Spring Type	(Type TC)	Refer to the tab	le below for the L	1 and L2 dimensi	ons of the termina	l block box/spring	type (Type TC).
L: Dimensions									
n: Stations	2	3	4	5	6	7	8	9	10
L1	162	172.5	183	193.5	204	214.5	225	235.5	246
L2	63	73.5	84	94.5	105	115.5	126	136.5	147

Lead Wire (L), Circular Connector (M) L: Dimensions				Refer to the ta	able below for the	e L1 and L2 dim	ensions of the le	ad wire and circ	ular connector.
n: Stations	2	3	4	5	6	7	8	9	10
L1	131	141.5	152	162.5	173	183.5	194	204.5	215
L2	63	73.5	84	94.5	105	115.5	126	136.5	147

EX500 (Type SA2)  Refer to the table below for the L1 and L2 dimensions of the EX500 (Type SA)											
L: Dimensi	L: Dimensions										
n: Stations	2	3	4	5	6	7	8	9	10		
L1	122.5	133	143.5	154	164.5	175	185.5	196	206.5		
L2	63	73.5	84	94.5	105	115.5	126	136.5	147		

EX500 (Type SA3)  Refer to the table below for the L1 and L2 dimensions of the EX500 (Type									
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	122.7	133.2	143.7	154.2	164.7	175.2	185.7	196.2	206.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147

L1	122.7	133.2	143.7	154.2	164.7	175.2	185.7	196.2	206.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147

L1 =  $10.5 \times n1 + 154.5 + 47 \times n2$ n1: Valve stations n2: I/O unit stations

EX600 (M12 Connector)

EX600 (7/8 Inch Connector)

Calculate the L1 dimension of the EX600 (7/8 inch connector) using the formula shown below.

Calculate the L1 dimension of the EX600 (M12 connector) using the formula shown below.

L1 =  $10.5 \times n1 + 171 + 47 \times n2$ n1: Valve stations

n2: I/O unit stations



## SY3000/5000-X990

### Dimensions: **SY3000** Series

#### **EX250**

Calculate the L1 dimension of the EX250 using the formula shown below.


L1 = 10.5 x n1 + 154.5 + 21 x n2 n1: Valve stations n2: I/O unit stations


EX260	EX260 Refer to the table below for the L1 and L2 dimensions of the EX26											
L: Dimensi	ons											
n: Stations	2	3	4	5	6	7	8	9	10			
L1	122.7	133.2	143.7	154.2	164.7	175.2	185.7	196.2	206.7			
L2	63	73.5	84	94.5	105	115.5	126	136.5	147			


EX126	EX126 Refer to the table below for the L1 and L2 dimensions of the EX126											
L: Dimensi	ons											
n: Stations	2	3	4	5	6	7	8	9	10			
L1	183.3	193.8	204.3	214.8	225.3	235.8	246.8	256.8	267.3			
L2	63	73.5	84	94.5	105	115.5	126	136.5	147			

EX120	Refer to the table below for the L1 and L2 dimensions of the EX12										
L: Dimension	ons										
n: Stations	2	3	4	5	6	7	8	9	10		
L1	115.9	126.4	136.9	147.4	157.9	168.4	178.9	189.4	199.9		
12	63	73.5	8/1	9/15	105	115.5	126	136.5	1/17		

#### Dimensions: SY5000 Series

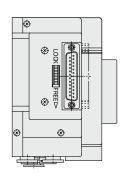

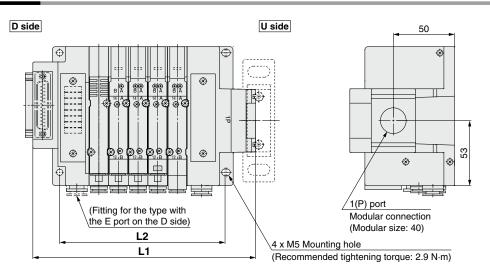

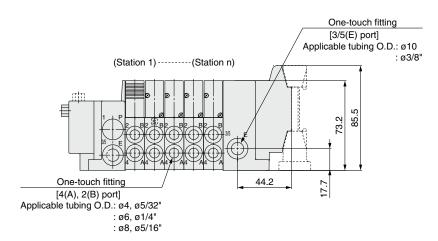

- * These figures show the "SS5Y5-10F2-05U-C8-X990."
- The other dimensions are the same as those of the standard model. For details, refer to the Web Catalog.

#### D-sub, Flat Ribbon (Type F) Refer to the table below for the L1 and L2 dimensions of the D-sub and flat ribbon (Type F). L: Dimensions n: Stations 2 3 4 5 6 7 8 9 10 L1 133.9 149.9 165.9 181.9 197.9 213.9 229.9 245.9 261.9 87 103 119 135 151 167 183 199 215

IP67 D-su	ıb (Type F	W)	Refer to the table below for the L1 and L2 dimensions of the IP67 D-sub (Type FW							
L: Dimensi	ons									
n: Stations	2	3	4	5	6	7	8	9	10	
L1	148	164	180	196	212	228	244	260	276	
L2	87	103	119	135	151	167	183	199	215	



## SY3000/5000-X990

Dimensions: **SY5000** Series

Terminal Block Box (Type T)  Refer to the table below for the L1 and L2 dimensions of the terminal block box (Type										
L: Dimensi	ons									
n: Stations	2	3	4	5	6	7	8	9	10	
L1	206.8	222.8	238.8	254.8	270.8	286.8	302.8	318.8	334.8	
L2	87	103	119	135	151	167	183	199	215	

Terminal E	Block Box/S	Spring Type	(Type TC)	Refer to the tal	ole below for the L	.1 and L2 dimensi	ons of the termina	al block box/spring	type (Type TC).
L: Dimensi	ons								
n: Stations	2	2	1	5	6	7	Q	٥	10

n: Stations	2	3	4	5	6	7	8	9	10
L1	185.5	201.5	217.5	233.5	249.5	265.5	281.5	297.5	313.5
L2	87	103	119	135	151	167	183	199	215

Lead Wir	· //	ular Conn	ector (M)	Refer to the ta	able below for the	e L1 and L2 dim	ensions of the le	ead wire and circ	ular connector.
n: Stations	2	3	4	5	6	7	8	9	10
L1	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5
L2	87	103	119	135	151	167	183	199	215

EX500 (T	EX500 (Type SA2)  Refer to the table below for the L1 and L2 dimensions of the EX500 (Type SA2)											
L: Dimensi	ons											
n: Stations	2	3	4	5	6	7	8	9	10			
L1	146	162	178	194	210	226	242	258	274			
L2	87	103	119	135	151	167	183	199	215			

EX500 (Type SA3)  Refer to the table below for the L1 and L2 dimensions of the EX500 (Type SA3)											
L: Dimensio	ns										
n: Stations	2	3	4	5	6	7	8	9	10		
L1	146.2	162.2	178.2	194.2	210.2	226.2	242.2	258.2	274.2		
12	87	103	110	135	151	167	183	100	215		

EX600 (M12 Connector)	Calculate the L1 and L2 dimensions for the EX600 (M12 connector) using the formula shown below.

L1 =  $16 \times n1 + 167 + 47 \times n2$ L2 =  $16 \times n1 + 55$ n1: Valve stations

n2: I/O unit stations



#### Dimensions: SY5000 Series

#### EX600 (7/8 Inch Connector)

Calculate the L1 and L2 dimensions for the EX600 (7/8 inch connector) using the formula shown below.

L1 = 16 x n1 + 183.5 + 47 x n2 L2 = 16 x n1 + 55 n1: Valve stations

**EX250** 

n2: I/O unit stations

 $\label{lem:calculate} \mbox{ Calculate the L1 and L2 dimensions for the EX250 using the formula shown below.}$ 

L1 = 16 x n1 + 167 + 21 x n2 L2 = 16 x n1 + 55 n1: Valve stations n2: I/O unit stations

#### **EX260**

Refer to the table below for the L1 and L2 dimensions of the EX260.

#### L: Dimensions

n: Stations	2	3	4	5	6	7	8	9	10
L1	146.2	162.2	178.2	194.2	210.2	226.2	242.2	258.2	274.2
L2	87	103	119	135	151	167	183	199	215

#### **EX126**

Refer to the table below for the L1 and L2 dimensions of the EX126.

#### L: Dimensions

n: Stations	2	3	4	5	6	7	8	9	10
L1	206.8	222.8	238.8	254.8	270.8	286.8	302.8	318.8	334.8
L2	87	103	119	135	151	167	183	199	215

#### **EX120**

Refer to the table below for the L1 and L2 dimensions of the EX120.


#### L: Dimensions

n: Stations	2	3	4	5	6	7	8	9	10
L1	142.2	158.2	174.2	190.2	206.2	222.2	238.2	254.2	270.2
L2	87	103	119	135	151	167	183	199	215



## SY3000/5000-X990 Accessories Sold Separately (Spacer with Bracket)

#### Spacer with Bracket

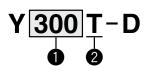

For the spacer with bracket holding screw tightening torque, refer to the AC-D series catalog.

#### Spacer with bracket (Y□T-D)



		Symbol	Description	Body size [App	licable AC size]
		0,20.	2000р	<b>300</b> [SY3000 + AC30]	<b>400</b> [SY5000 + AC40]
2	Bracket	т	Spacer with bracket	•	•

#### Standard Specifications


Fluid	Air
Ambient and fluid temperatures	-5 to 60°C (No freezing)
Proof pressure	1.5 MPa
Max. operating pressure	1.0 MPa

#### **Replacement Parts**

Description	Material	Part number			
Description	Ivialeriai	Y300T-D	Y400T-D		
Seal	HNBR	Y320P-050S	Y420P-050S		

#### **Dimensions**

Spacer with bracket

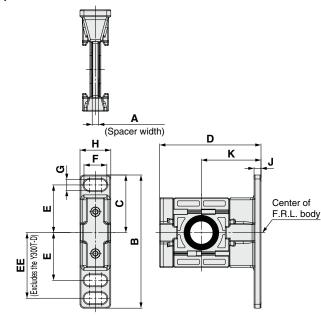

Model	Α	В	С	D	E	EE	Applicable size
Y300T-D	4.2	85	42.5	67.5	35	_	AC30-D
Y400T-D	5.2	115	50	85.5	40	55	AC40-D
					17	A P 11	
Model	F	G	Н	J	K	Applicable	e size
Model Y300T-D	<b>F</b> 14	<b>G</b>	<b>H</b> 20	<b>J</b>	<b>K</b> 41	Applicable AC30	

#### **Specific Product Precautions**

Be sure to read this before handling the products. For safety instructions, 3/4/5-port solenoid valve precautions, SY3000/5000 specific product precautions, and F.R.L. units precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### Mounting

- When connecting other products such as F.R.L. units, use a spacer with a bracket (Y300T/Y400T-D series) to connect the manifold connection part so that no moment is applied.
- Be sure to secure the spacer with a bracket used for connection.
- Avoid excessive torsional moment and bending moment other than those caused by the manifold's own weight, as failure to do so may result in damage.
- Support external piping separately.
- Piping materials without flexibility, such as steel tube piping, are prone to being affected by excess moment loads and vibrations from the piping side. Use flexible tubing in between to avoid such effects.